



 
---

# Service Manual

## Man Platform

---

**(1M Man Platform 220KG) S/N B38G00101 & Above**  
**(2.2M Man Platform 300KG) S/N B3BR00101 & Above**  
**(4M Man Platform 300KG) S/N B3BP00101 & Above**  
**(4M Man Platform 800KG) S/N B35R00101 & Above**

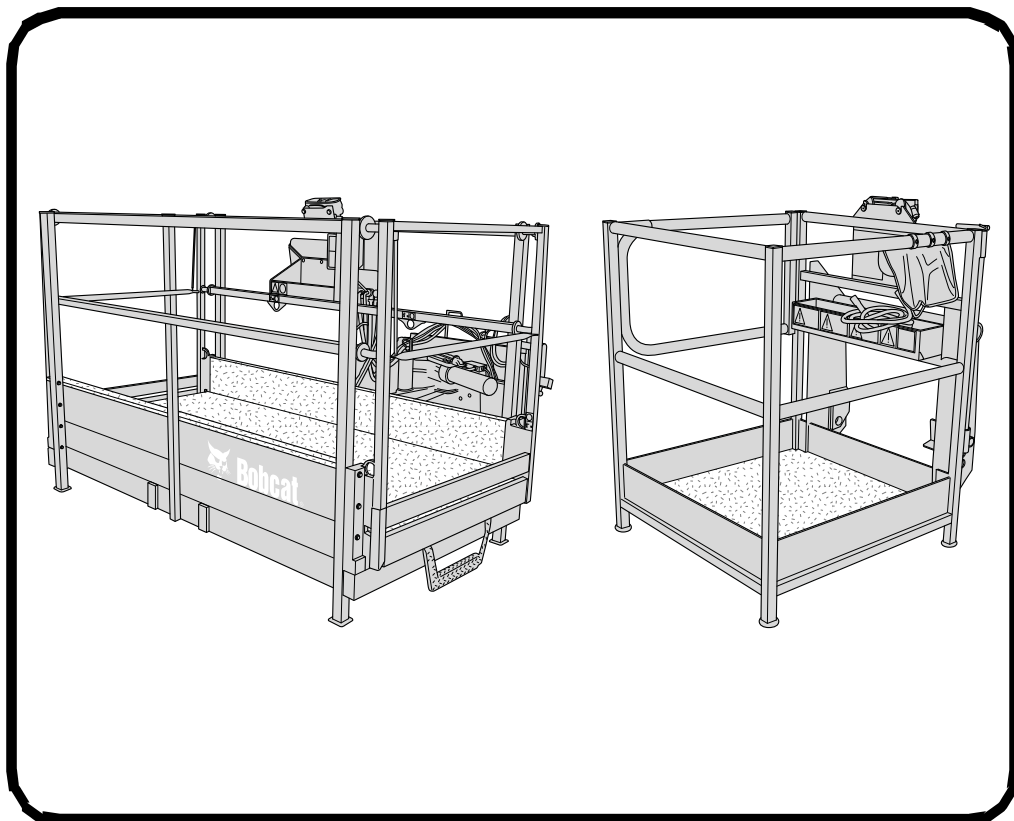



# MAINTENANCE SAFETY



## WARNING


Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807







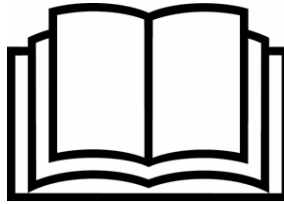



**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT



P-90216

-  **Never service attachments / implements without instructions. See Operation & Maintenance Manual and Attachment / Implement Service Manual.**
-  **Cleaning and maintenance are required daily.**
-  **Never service or adjust attachment / implement with the engine running unless instructed to do so in manual.**
-  **Always lower the attachment / implement to the ground before lubricating or servicing.**
-  **Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate skin or eyes.**
-  **Stop, cool and clean engine of flammable materials before checking fluids.**
-  **Keep body, loose objects and clothing away from moving parts, electrical contacts, hot parts and exhaust.**
-  **Safety glasses are needed for eye protection from electrical arcs, battery acid, compressed springs, fluids under pressure and flying debris or when tools are used. Use eye protection approved for type of welding.**

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**.

Dealer Copy -- Not for Resale

MSW30-EN-0214

**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**



## CONTENTS

SAFETY AND MAINTENANCE .....	10-01
HYDRAULIC SYSTEM .....	20-01
MAINFRAME .....	30-01
ELECTRICAL SYSTEM .....	40-01
SPECIFICATIONS .....	SPEC-01
ALPHABETICAL INDEX .....	INDEX-01



## FOREWORD

SERIAL NUMBER LOCATION .....	1-7
1M Man Platform 220KG .....	1-7
2.2M Man Platform 300KG, 4M Man Platform 300KG And 4M Man Platform 800KG ...	1-7
ATTACHMENT DELIVERY REPORT .....	1-7
ATTACHMENT IDENTIFICATION .....	1-8
1M Man Platform 220KG .....	1-8
2.2M Man Platform 300KG .....	1-9
4M Man Platform 300KG And 4M Man Platform 800KG .....	1-10
ATTACHMENT SIGNS (DECALS) .....	1-11
1M Man Platform 220KG .....	1-11
2.2M Man Platform 300KG .....	1-12
4M Man Platform 300KG .....	1-13
4M Man Platform 800KG .....	1-14






SERIAL NUMBER LOCATION

1M Man Platform 220KG

 Figure 1

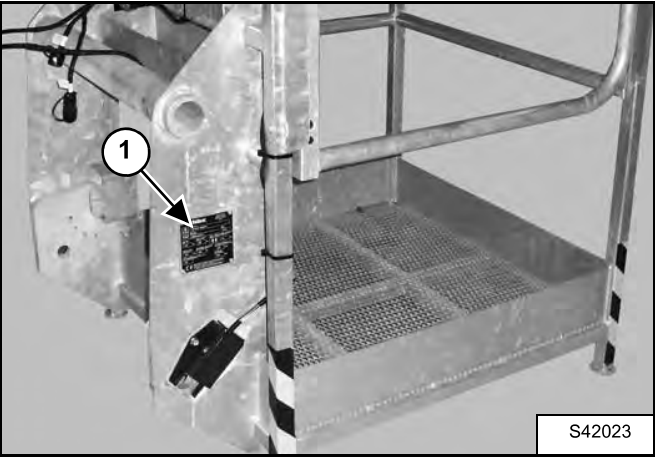


The serial number plate (Item 1) [Figure 1] is located on the right side of the attachment system of the man platform.

Always use the serial number of the man platform when requesting service information or when ordering parts. Early or later models (identification made by serial number) can use different parts, or it can be necessary to use a different procedure in doing a specific service.

2.2M Man Platform 300KG, 4M Man Platform 300KG  
And 4M Man Platform 800KG

 Figure 2

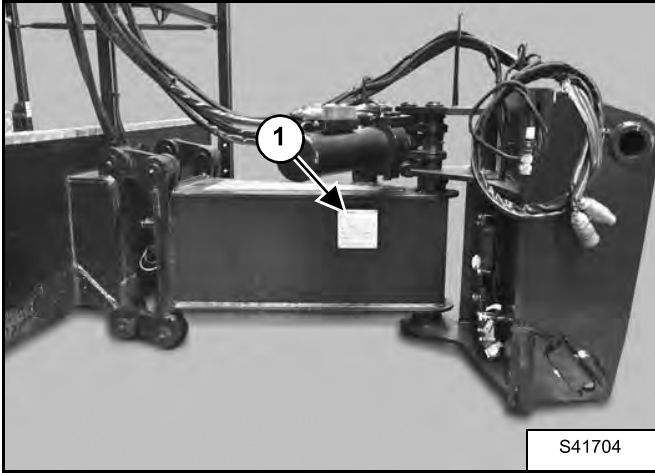


The serial number plate (Item 1) [Figure 2] is located on the left side of the rotation structure of the man platform.

Always use the serial number of the man platform when requesting service information or when ordering parts. Early or later models (identification made by serial number) can use different parts, or it can be necessary to use a different procedure in doing a specific service.

ATTACHMENT DELIVERY REPORT

 
Figure 3

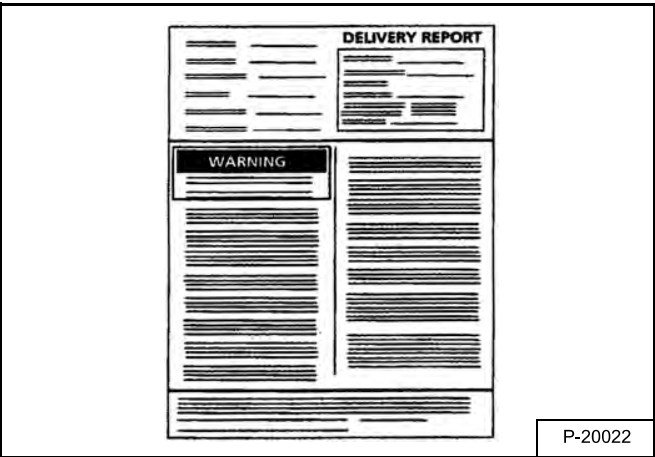

The delivery report [Figure 3] must be completed by the dealer and signed by the owner or operator when the man platform is delivered. An explanation of the form must be given to the owner.

ATTACHMENT IDENTIFICATION

 
1M Man Platform 220KG

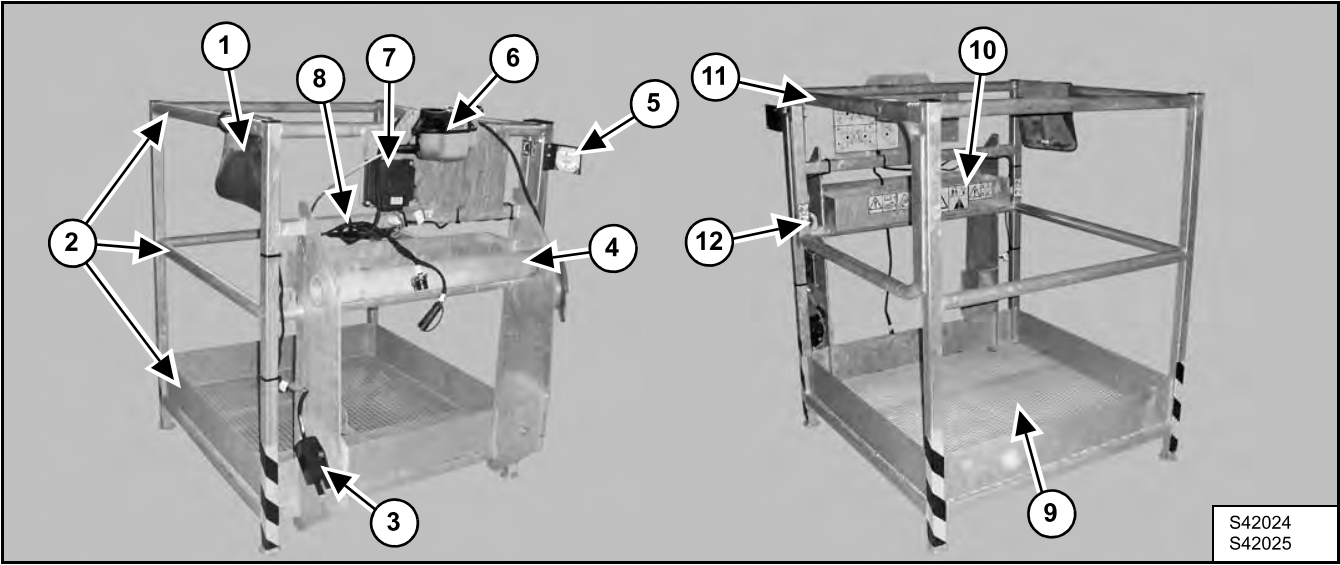

ITEM	DESCRIPTION	ITEM	DESCRIPTION
1	Operation & Maintenance Manual	7	Controller
2	Upper Handrail, Intermediate Handrail And Lower Plinth	8	Electrical Connector
3	Interlocking Sensor	9	Non-Slip Floor
4	Attachment Tool Carrier	10	Tool Storage Box
5	Tilt Indicator	11	Door
6	Remote Control	12	Anchor Point For Operator Safety Harness

ATTACHMENT IDENTIFICATION (CONT'D)

 2.2M Man Platform 300KG

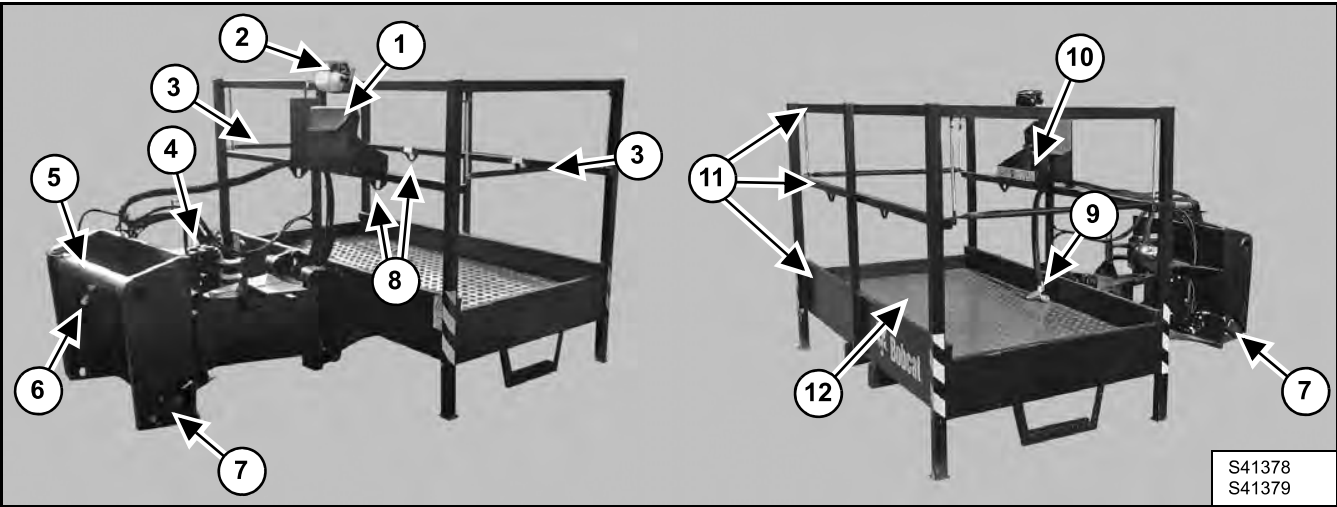


ITEM	DESCRIPTION	ITEM	DESCRIPTION
1	Operation & Maintenance Manual	7	Interlocking Sensor
2	Remote Control	8	Anchor Point For Operator Safety Harness
3	Doors	9	Hydraulic Quick Couplers
4	Rotation Cylinder	10	Tool Storage Box
5	Attachment Tool Carrier	11	Upper Handrail, Intermediate Handrail And Lower Plinth
6	Safety Electrical Connector	12	Non-Slip Floor

Dealer Copy -- Not for Resale

ATTACHMENT IDENTIFICATION (CONT'D)

 4M Man Platform 300KG And 4M Man Platform 800KG

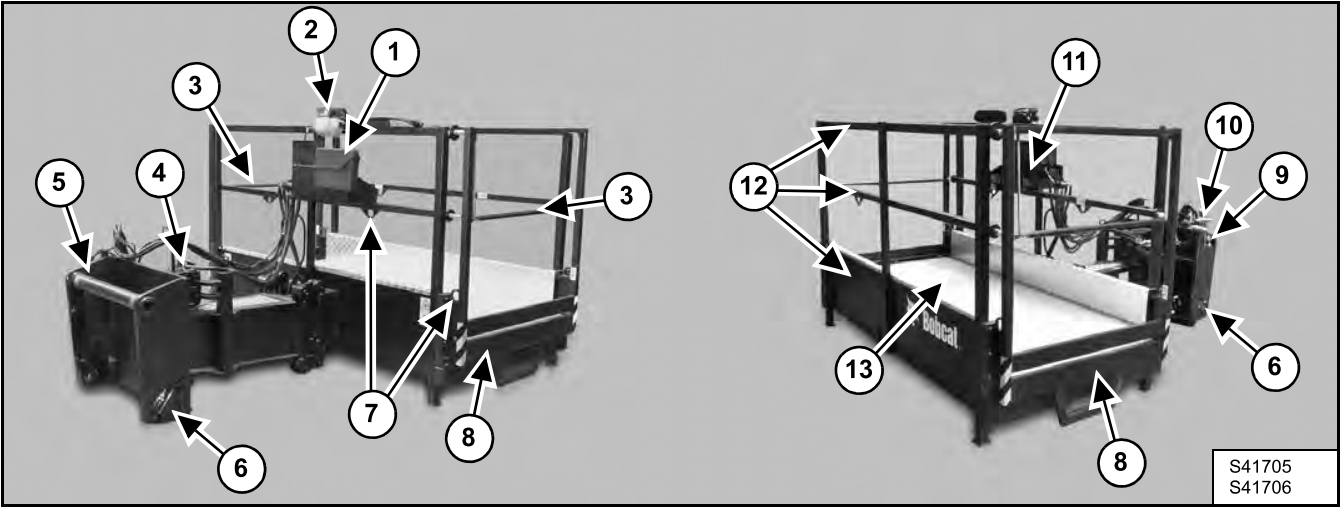


ITEM	DESCRIPTION	ITEM	DESCRIPTION
1	Operation & Maintenance Manual	8	Extension
2	Remote Control	9	Electrical Connector
3	Doors	10	Hydraulic Quick Couplers
4	Rotation Cylinder	11	Tool Storage Box
5	Attachment Tool Carrier	12	Upper Handrail, Intermediate Handrail And Lower Plinth
6	Interlocking Sensor	13	Non-Slip Floor
7	Anchor Point For Operator Safety Harness		

## ATTACHMENT SIGNS (DECALS)

 Follow the instructions on all the Attachment Signs (Decals) that are on the attachment. Replace any damaged attachment signs and be sure they are in the correct locations. Attachment signs are available from your Bobcat attachment dealer.


### 1M Man Platform 220KG

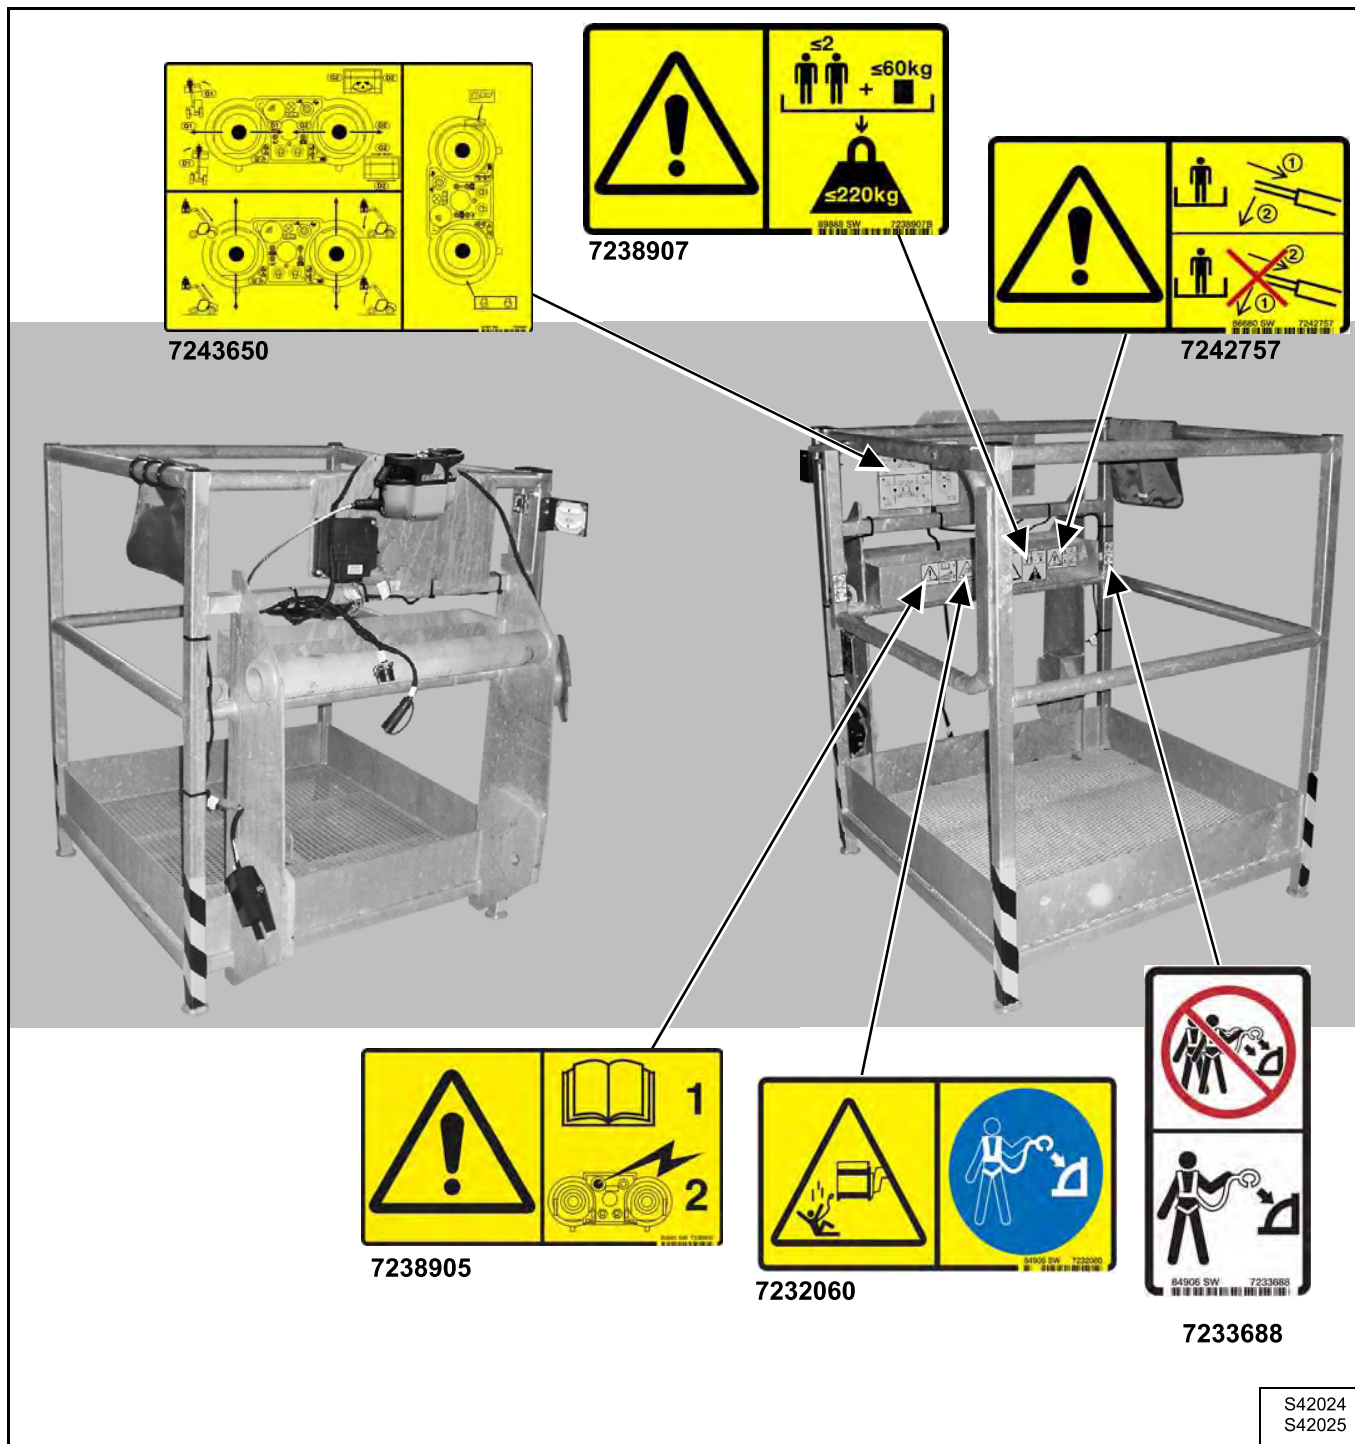

Dealer Copy -- Not for Resale

ATTACHMENT SIGNS (DECALS) (CONT'D)

 2.2M Man Platform 300KG

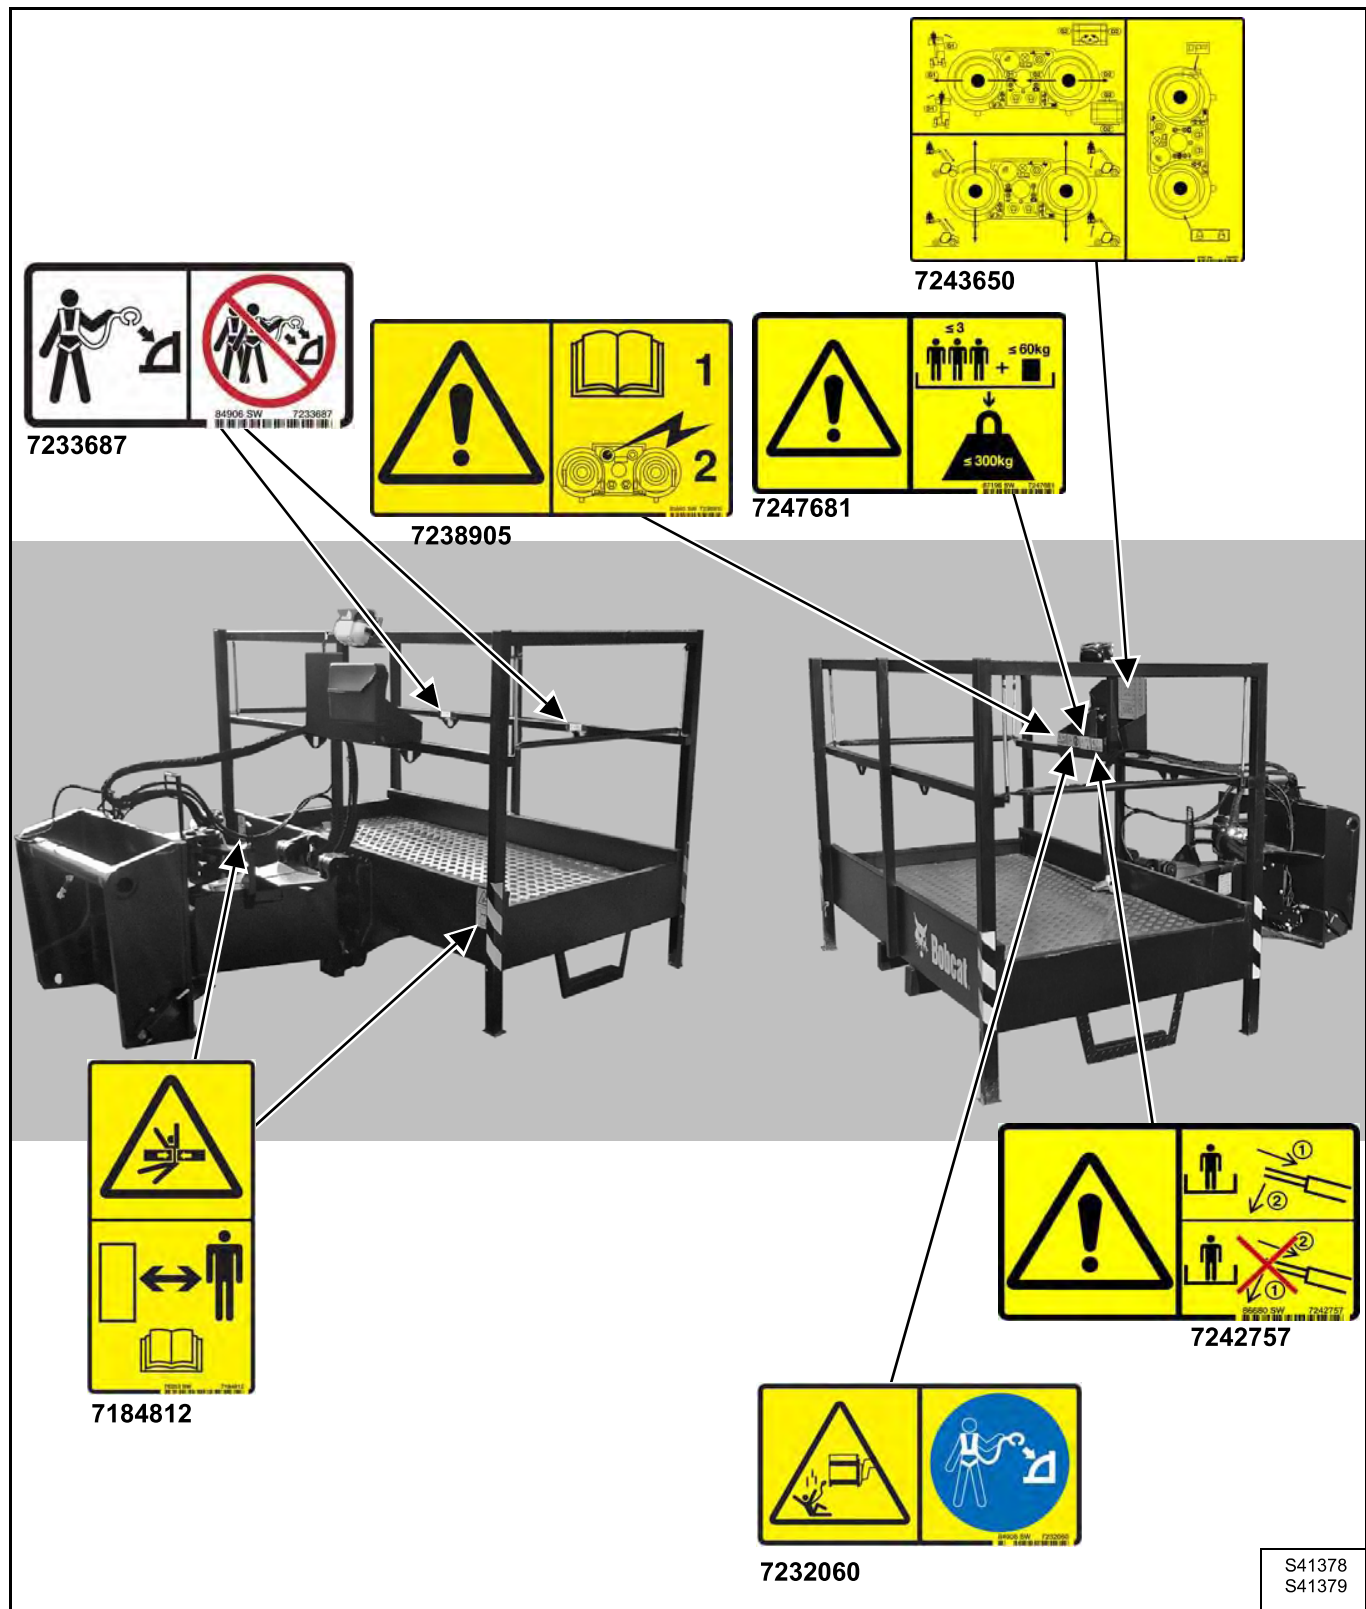


Dealer Copy -- Not for Resale



## ATTACHMENT SIGNS (DECALS) (CONT'D)
 
### 4M Man Platform 300KG

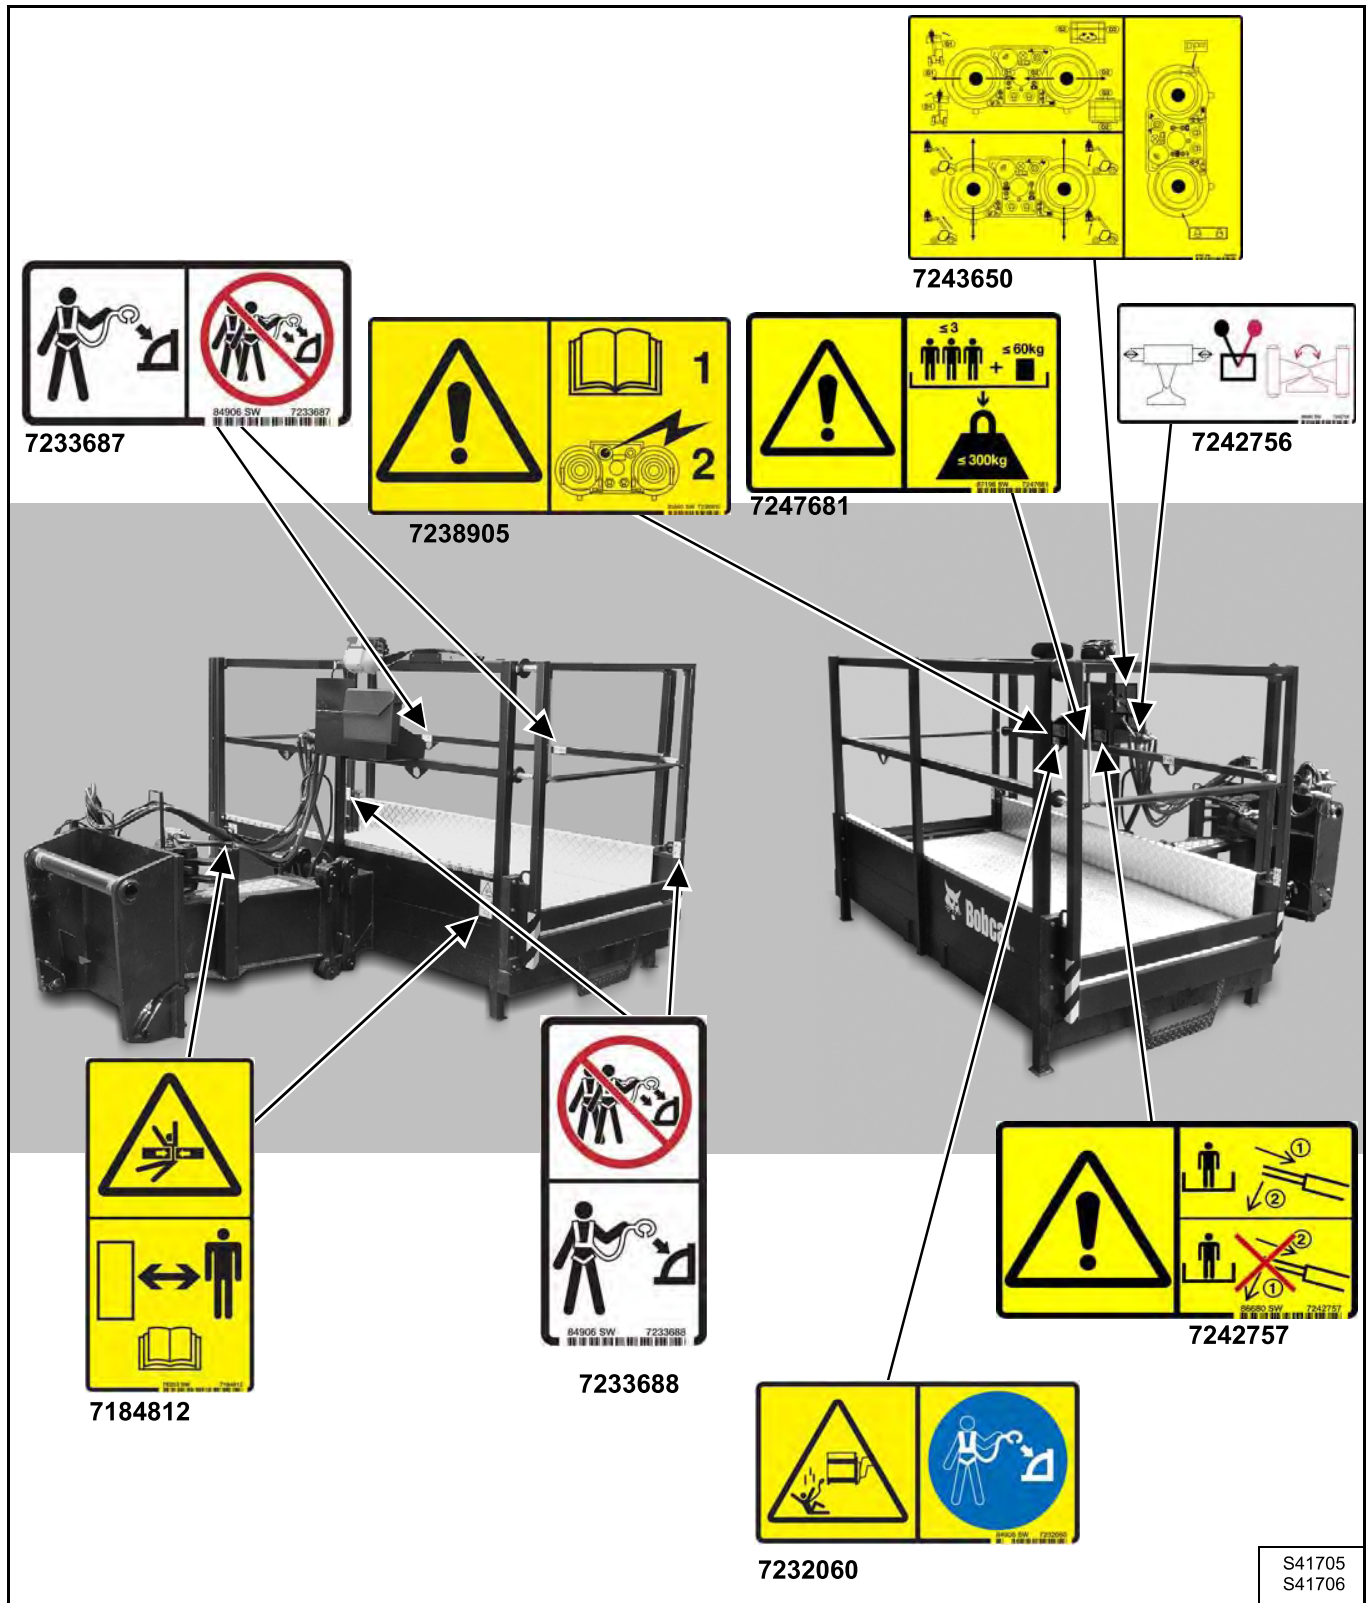


Dealer Copy -- Not for Resale



ATTACHMENT SIGNS (DECALS) (CONT'D)

 4M Man Platform 800KG

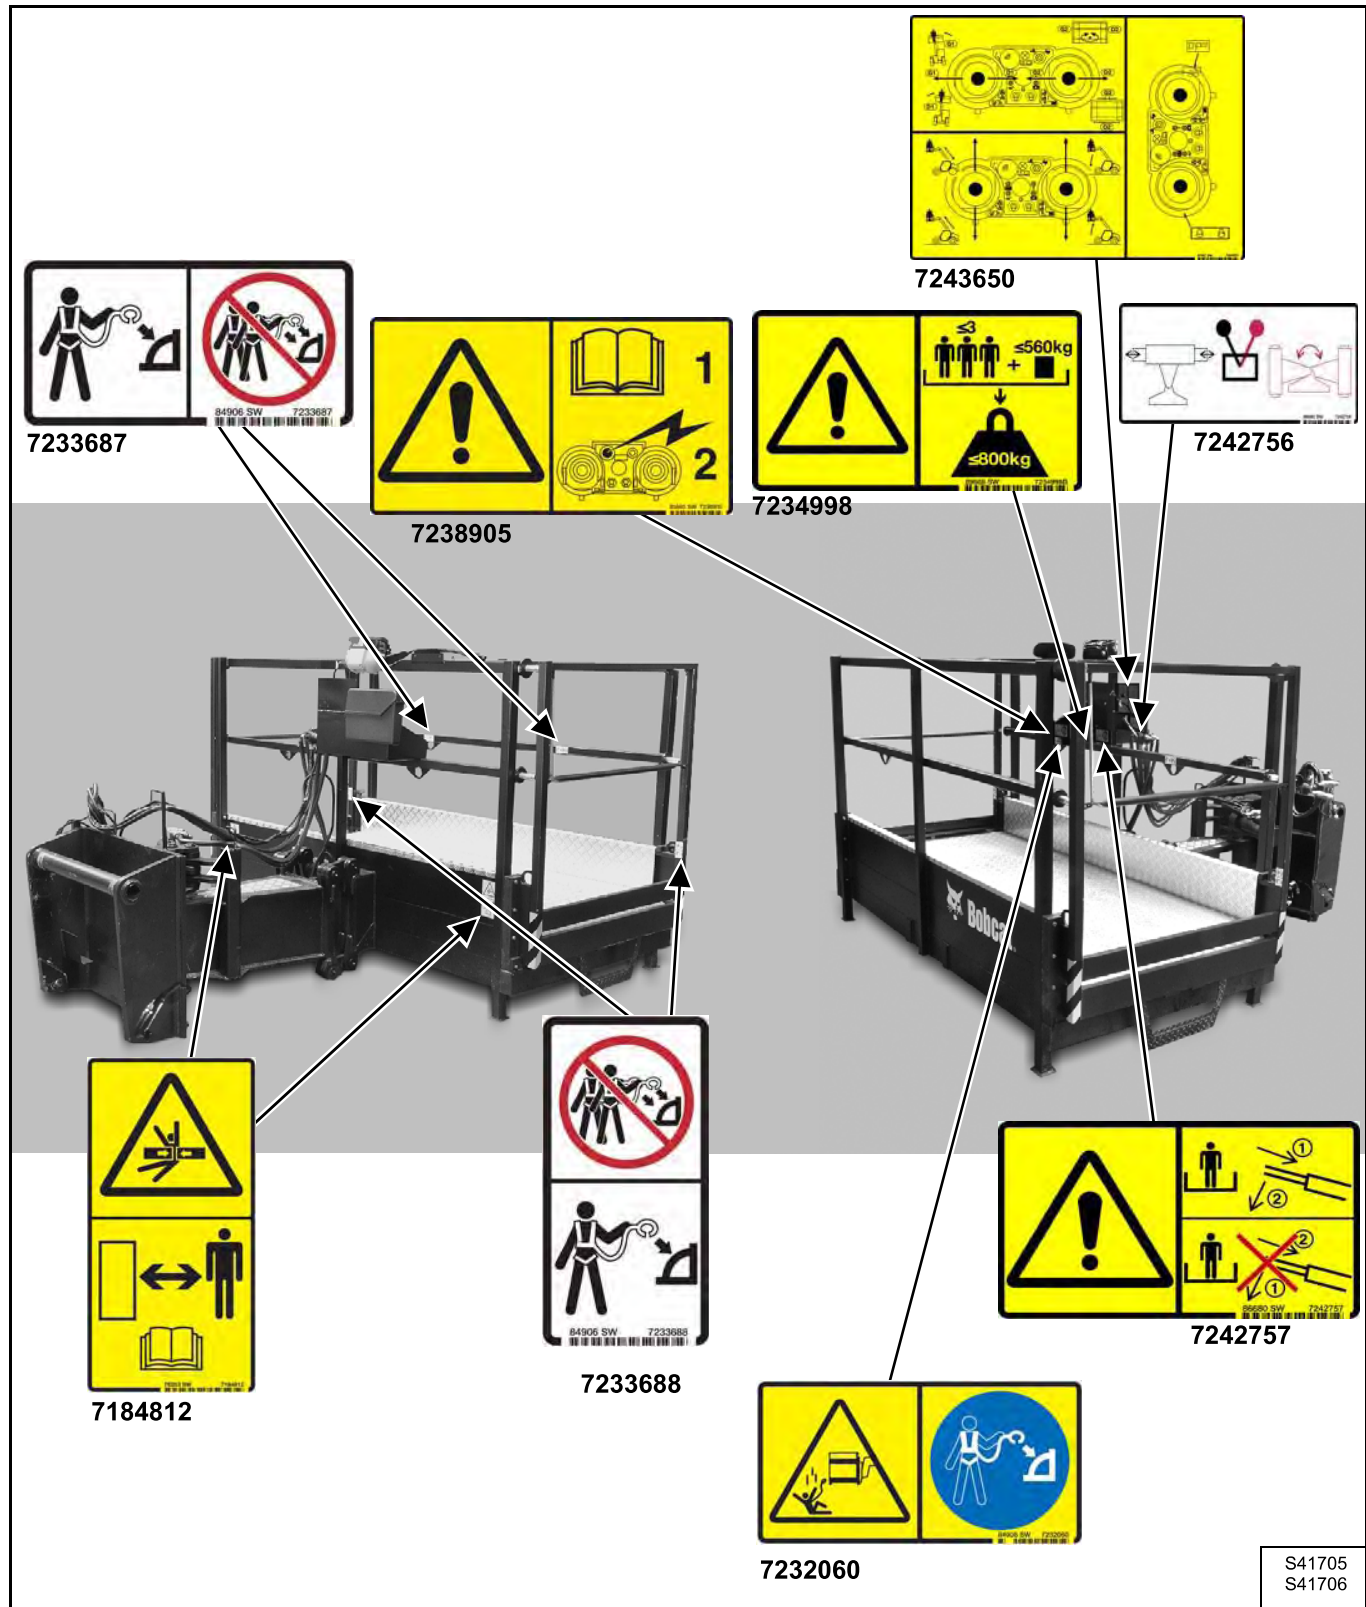

Dealer Copy -- Not for Resale

## SAFETY AND MAINTENANCE

INSPECTION .....	10-10-1
Troubleshooting .....	10-10-1
Diagnostic Service Codes .....	10-10-2
Hydraulic System (2.2M Man Platform 300KG, 4M Man Platform 300KG And 4M Man Platform 800KG) .....	10-10-5
Structure Inspection .....	10-10-6
Electrical Signals Status And Calibration Inspection (With Service Analyzer) .....	10-10-9
LUBRICATION .....	10-20-1
Lubrication Locations .....	10-20-1



**Bobcat®**

Dealer Copy -- Not for Resale