

 


Service Manual

T180 Compact Track Loader


S/N 531411001 - 531459999

S/N 531511001 - 531559999

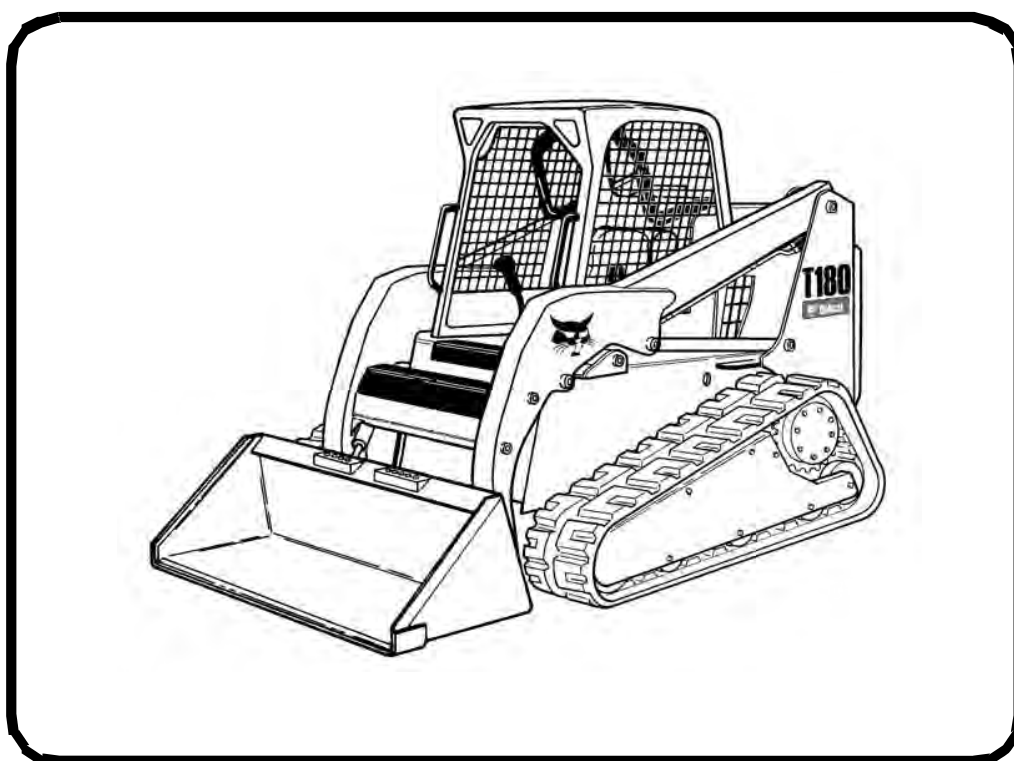

Dealer Copy -- Not for Resale

 **EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)**

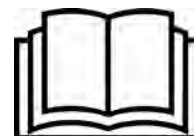

MAINTENANCE SAFETY



WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT

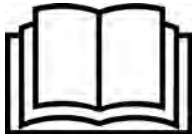

P-90216

- ⚠ Never service the Bobcat Compact Track Loader without instructions.

CORRECT



B-15659

- ⚠ Use the correct procedure to lift or lower operator cab.

CORRECT



B-15660

- ⚠ Cleaning and maintenance are required daily.

 
WRONG



B-15664

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.


WRONG

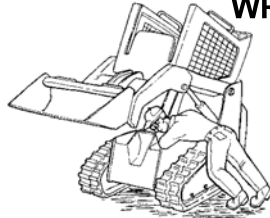

B-15661

- ⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

 
WRONG

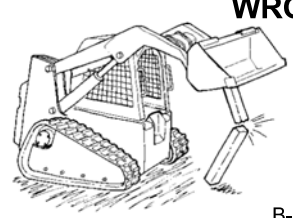

B-15662

- ⚠ Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

 
WRONG

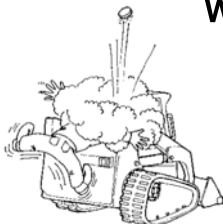

B-15665

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust loader with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

 WRONG

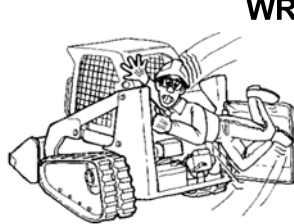

B-15663

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep rear door closed except for service. Close and latch door before operating the loader.

WRONG



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**. The Service Safety Training Course is available from your Bobcat dealer.

MSW09-0409

Dealer Copy -- Not for Resale

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**



ALPHABETICAL INDEX

ACCESS PANEL (INSIDE)	50-01	ELECTRICAL/HYD. CONTROLS	60-01
ACCESS PANEL (INSIDE) (SJC)	50-01	ELECTRICAL/HYD. CONTROLS REFERENCE (SJC)	60-01
AIR CLEANER	70-01	ELECTRICAL SYSTEM INFORMATION	60-01
AIR CLEANER SERVICE	10-01	ENGINE COOLING SYSTEM	10-01
AIR CONDITIONING SYSTEM FLOW	80-01	ENGINE LUBRICATION SYSTEM	10-01
ALTERNATOR	60-01	ENGINE COOLING SYSTEM	70-01
BACK-UP ALARM SYSTEM	60-01	ENGINE INFORMATION	70-01
BATTERY	60-01	ENGINE SPEED CONTROL	70-01
BLOWER FAN	80-01	ENGINE SPEED CONTROL (SJC)	70-01
BOBCAT INTERLOCK CONTROL SYSTEM (BICS)	60-01	EVAPORATOR	80-01
BOBCAT CONTROLLER (ACS)	60-01	EVAPORATOR/HEATER UNIT	80-01
BOBCAT CONTROLLER (MAIN)	60-01	EXPANSION VALVE	80-01
BOBCAT CONTROLLER (SJC) (DRIVE)	60-01	FLYWHEEL AND HOUSING	70-01
BOB-TACH (HAND LEVER)	10-01, 50-01	FLYWHEEL RPM SENSOR	60-01
BOB-TACH (POWER)	50-01	FRONT AUXILIARY HYDRAULIC COUPLER BLOCK	20-01
BOB-TACH (POWER) BLOCK	20-01	FUEL SYSTEM	10-01, 70-01
BRAKE	40-01	FUEL TANK	50-01
BUCKET POSITION VALVE	20-01	HEATER COIL	80-01
CALIBRATION	60-01	HEATER VALVE	80-01
CAMSHAFT AND TIMING GEARS	70-01	HIGH FLOW VALVE	20-01
CASE DRAIN FILTER	30-01	HYDRAULIC CONNECTION SPECS	SPEC-01
CHARGE PRESSURE	30-01	HYDRAULIC CONTROL VALVE (ACS) OR (SJC) ..	20-01
COMPRESSOR	80-01	HYDRAULIC CONTROL VALVE (STANDARD)	20-01
CONDENSER	80-01	HYDRAULIC/HYDROSTATIC FILTERS	20-01
CONTROL HANDLE/LEVER	50-01	HYDRAULIC FLUID RESERVOIR	20-01
CONTROL HANDLE/LEVER (ACS)	50-01	HYDRAULIC/HYDROSTATIC FLUID SPECIFICATIONS	SPEC-01
CONTROL HANDLE/LEVER (SJC)	50-01	HYDRAULIC/HYDROSTATIC SYSTEM	10-01
CONTROL PANEL	50-01	HYDRAULIC PUMP (STANDARD)	20-01
CONTROL PANEL (SJC)	50-01	HYDRAULIC PUMP (STANDARD) (HIGH FLOW) ..	20-01
CONTROL PANEL SETUP	60-01	HYDRAULIC PUMP (SJC)	20-01
CONTROL PEDALS AND LINKAGE	50-01	HYDRAULIC PUMP (SJC) (HIGH FLOW)	20-01
CONTROL PEDALS (ACS)	50-01	HYDRAULIC SYSTEM INFORMATION	20-01
CONTROL SYSTEM (ACS)	60-01	HYDROSTATIC MOTOR	30-01
CONVERSIONS	SPEC-01	HYDROSTATIC PUMP	30-01
CRANKSHAFT AND PISTONS	70-01	HYDROSTATIC PUMP (SJC)	30-01
CYLINDER (LIFT)	20-01	HYDROSTATIC SYSTEM INFORMATION	30-01
CYLINDER (BOB-TACH)	20-01	INSTRUMENT PANELS	60-01
CYLINDER (TILT)	20-01	LIFT ARMS	50-01
CYLINDER HEAD	70-01	LIFT ARM BYPASS CONTROL VALVE	20-01
DIAGNOSTICS SERVICE CODES	60-01	LIFT ARM SUPPORT DEVICE	10-01
DRIVE BELT	30-01	LIFTING AND BLOCKING THE LOADER	10-01
		LIGHTS	60-01
		T180 LOADER SPECIFICATIONS	SPEC-01
		LOADER STORAGE AND RETURN TO SERVICE ..	10-01
		LUBRICATING THE LOADER	10-01
		LUBRICATION SYSTEM	70-01

Dealer Copy -- Not for Resale

ALPHABETICAL INDEX (CONT'D)

MAIN RELIEF VALVE	20-01
MAINTENANCE CLOCK	60-01
MUFFLER.....	70-01
OIL COOLER.....	20-01
OPERATOR CAB.....	10-01, 50-01
OPERATOR SEAT (SUSPENSION).....	50-01
PASSWORD SETUP (IF EQUIPPED WITH KEYLESS START).....	60-01
PIVOT PINS.....	10-01
REAR AUXILIARY DIVERTER VALVE	20-01
REAR DOOR	50-01
REAR GRILLE.....	50-01
RECEIVER/DRIER	80-01
REGULAR MAINTENANCE	80-01
REMOTE START TOOL KIT-MEL1563	10-01
REMOTE START TOOL (SERVICE TOOL) KIT-6689779	10-01
SEAT BAR.....	50-01
SEAT BAR SENSOR.....	60-01
SERVICE PC (LAPTOP COMPUTER)	60-01
SERVICE SCHEDULE.....	10-01
SPARK ARRESTOR MUFFLER.....	10-01
SPEED SENSOR (SJC)	60-01
STARTER	60-01
STEERING DRIFT COMPENSATION	60-01
STOPPING THE ENGINE AND LEAVING THE LOADER	10-01
SYSTEM CHARGING AND RECLAMATION	80-01
TEMPERATURE/PRESSURE	80-01
THERMOSTAT	80-01
TORQUE SPECIFICATIONS FOR BOLTS.....	SPEC-01
TOWING THE LOADER	10-01
TRACK CARRIAGE COMPONENTS	40-01
TRACTION LOCK.....	60-01
TRANSPORTING THE LOADER ON A TRAILER ..	10-01
TROUBLESHOOTING.....	80-01
TURBOCHARGER	70-01
WINDOW (FRONT DOOR)	50-01
WINDOW (REAR).....	50-01
WINDOW (SIDE)	50-01
WINDOW (TOP)	50-01

CONTENTS

FOREWORD..... II

SAFETY INSTRUCTIONS V

FIRE PREVENTION VII

SERIAL NUMBER LOCATIONIX

DELIVERY REPORT..... X

LOADER IDENTIFICATIONXI

SAFETY & MAINTENANCE 10-01

HYDRAULIC SYSTEM20-01

HYDROSTATIC SYSTEM.....30-01

DRIVE SYSTEM40-01

MAIN FRAME50-01

ELECTRICAL SYSTEM & ANALYSIS.....60-01

ENGINE SERVICE70-01

HEATING, VENTILATION, AIR CONDITIONING80-01

SPECIFICATIONS..... SPEC-01

SAFETY &
MAINTENANCE

HYDRAULIC
SYSTEM

HYDROSTATIC
SYSTEM

DRIVE
SYSTEM

MAIN FRAME

ELECTRICAL
SYSTEM &
ANALYSIS

ENGINE
SERVICE

HVAC

 
SPECIFICATIONS

FOREWORD


This manual is for the Bobcat loader mechanic. It provides necessary servicing and adjustment procedures for the Bobcat loader and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the loader has had service or repair:

1. Check that the ROPS/FOPS (Including side screens) is in good condition and is not modified.

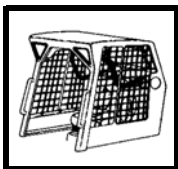

 
2. Check that ROPS mounting hardware is tightened and is Bobcat approved.

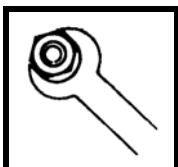

3. The seat belt must be correctly installed, functional and in good condition.



 4. The seat bar must be correctly adjusted, clean and lubricated.

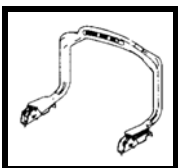


5. Check lift arm support device, replace if damaged.



6. Machine signs (decals) must be legible and in the correct location.



 7. Steering levers, hand controls and foot pedals must return to neutral (as applicable).

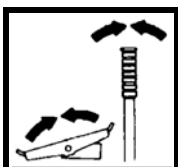


8. Check for correct function of the work lights.




9. The parking brake must function correctly.



 
10. Enclosure door latches must open and close freely.

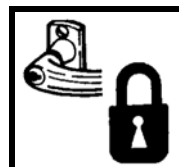

 
11. Bob-Tach wedges and linkages must function correctly and be in good condition.

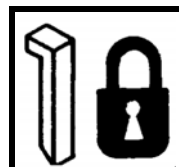

 
12. Safety treads must be in good condition.

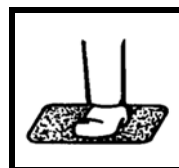

 
13. Check for correct function of indicator lamps.

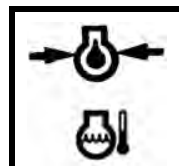

 14. Check hydraulic fluid level, engine oil level and fuel supply.

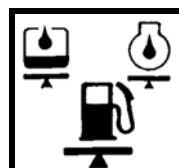

 15. Inspect for fuel, oil or hydraulic fluid leaks.

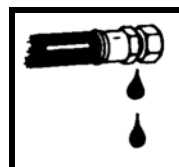


16. Lubricate the loader.




Dealer Copy -- Not for Resale

FW SSL-1008 SM

 
17. Check the condition of the battery and cables.

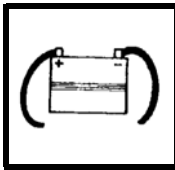

 18. Inspect the air cleaner for damage or leaks. Check the condition of the element.

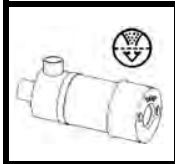

 19. Check the electrical charging system.

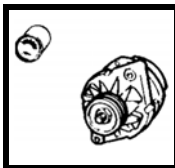

20. Check tires for wear and pressure. Check tracks for wear and tension. Use only approved tires or tracks.



 
21. Inspect for loose or broken parts or connections.



22. Check for any field modification not completed.




23. Operate the machine and check all functions.

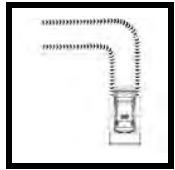

24. Check for correct function of the Bobcat Interlock Control System (BICS™) before the machine is returned to the customer.



 
25. Check for proper function of front horn and back-up alarm (if equipped).

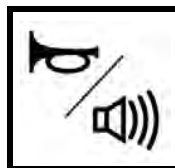

26. Check function or condition of all equipped options and accessories (examples: fire extinguisher, rotating beacon, lift kits, etc.).



 27. Recommend to the owner that all necessary corrections be made before the machine is returned to service.

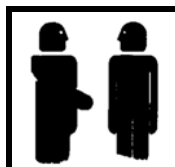

Dealer Copy -- Not for Resale

CALIFORNIA PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects and other reproductive harm.



SAFETY INSTRUCTIONS

	Safety Alert Symbol
This symbol with a warning statement means: “Warning, be alert! Your safety is involved!” Carefully read the message that follows.	



Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284



The signal word **DANGER** on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107



The signal word **WARNING** on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator's Handbook fastened to the operator cab. It's brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Skid-Steer Loader Operator Training Course is available through your local dealer or at **www.training.bobcat.com** or **www.bobcat.com**. This course is intended to provide rules and practices of correct operation of the Skid-Steer Loader. The course is available in English and Spanish versions.
- Service Safety Training Courses are available from your Bobcat dealer or at **www.training.bobcat.com** or **www.bobcat.com**. They provide information for safe and correct service procedures.
- The Skid-Steer Loader Safety Video is available from your Bobcat dealer or at **www.training.bobcat.com** or **www.bobcat.com**.

Dealer Copy -- Not for Resale

SI SSL-1008 SM

SAFETY INSTRUCTIONS (CONT'D)

The dealer and owner / operator review the recommended uses of the product when delivered. If the owner / operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.



Cutting or drilling concrete containing sand or rock containing quartz may result in exposure to silica dust. Do not exceed Permissible Exposure Limits (PEL) to silica dust as determined by OSHA or other job site Rules and Regulations. Use a respirator, water spray or other means to control dust. Silica dust can cause lung disease and is known to the state of California to cause cancer.

Call Before You Dig
Dial 811 (USA Only)
1-888-258-0808 (USA & Canada)

When you call, you will be directed to a location in your state / province, or city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.).

Dealer Copy -- Not for Resale

FIRE PREVENTION



Maintenance

The machine and some attachments have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

The operator's area, engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.

All fuels, most lubricants and some coolants mixtures are flammable. Flammable fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire.

Operation

Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.

Electrical



Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part or wires that are loose or frayed.

Battery gas can explode and cause serious injury. Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting. Do not jump start or charge a frozen or damaged battery. Keep any open flames or sparks away from batteries. Do not smoke in battery charging area.

Hydraulic System

Check hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Hydraulic tubes and hoses must be properly routed and have adequate support and secure clamps. Tighten or replace any parts that show leakage.

Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.

Fueling



Stop the engine and let it cool before adding fuel. No smoking! Do not refuel a machine near open flames or sparks. Fill the fuel tank outdoors.

Starting

Do not use ether or starting fluids on any engine that has glow plugs or air intake heater. These starting aids can cause explosion and injure you or bystanders.

Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.

Spark Arrestor Exhaust System

The spark arrestor exhaust system is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

Check the spark arrestor exhaust system regularly to make sure it is maintained and working properly. Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).

FIRE PREVENTION (CONT'D)

 
Welding And Grinding

Always clean the machine and attachment, disconnect the battery, and disconnect the wiring from the Bobcat controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding.

Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.

Dust generated from repairing nonmetallic parts such as hoods, fenders or covers can be flammable or explosive. Repair such components in a well ventilated area away from open flames or sparks.

Fire Extinguishers

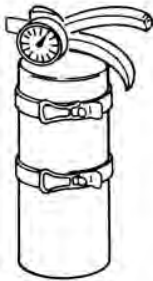


Know where fire extinguishers and first aid kits are located and how to use them. Inspect the fire extinguisher and service the fire extinguisher regularly. Obey the recommendations on the instructions plate.

SERIAL NUMBER LOCATION

Always use the serial number of the loader when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

Loader Serial Number

 Figure 1

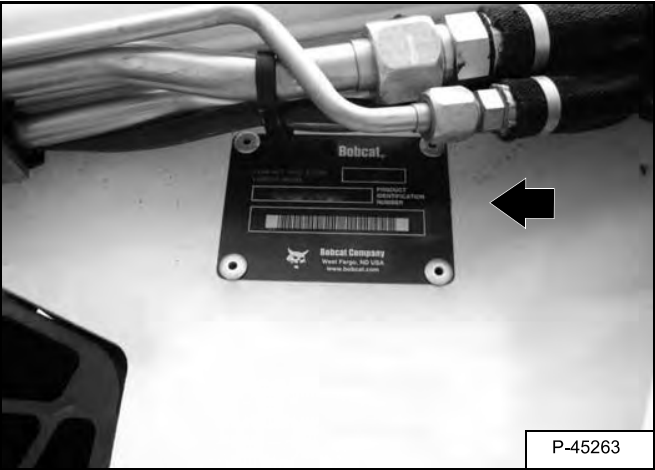

The loader serial number plate is located on the outside of the loader frame [Figure 1].


Explanation of loader Serial Number:

XXXX	XXXXXX
Model 1.-Model/ Engine Combination	Model 2.-Production Sequence (Series)

- 1. The four digit Model/Engine Combination Module number identifies the model number and engine combination.
- 2. The five digit Production Sequence Number identifies the order which the loader is produced.

Engine Serial Number

 Figure 2

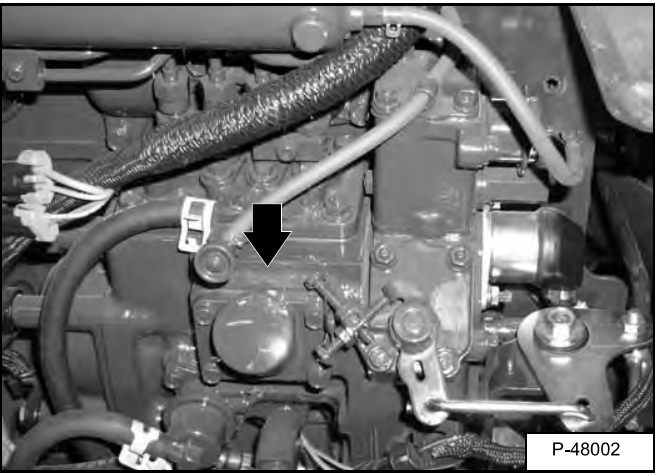

The engine serial number is in the location shown [Figure 2].


DELIVERY REPORT

Figure 3

The diagram shows a form titled "DELIVERY REPORT". It is divided into several sections. The top left section contains several horizontal lines for text entry. To the right of this is a section titled "DELIVERY REPORT" which also contains horizontal lines. Below the top left section is a section titled "WARNING" in a bold box, followed by several lines of text. To the right of the "WARNING" section is another large section with many horizontal lines. At the bottom right of the form, there is a small box containing the text "B-16315".

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the Bobcat loader is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely [Figure 3].

 LOADER IDENTIFICATION

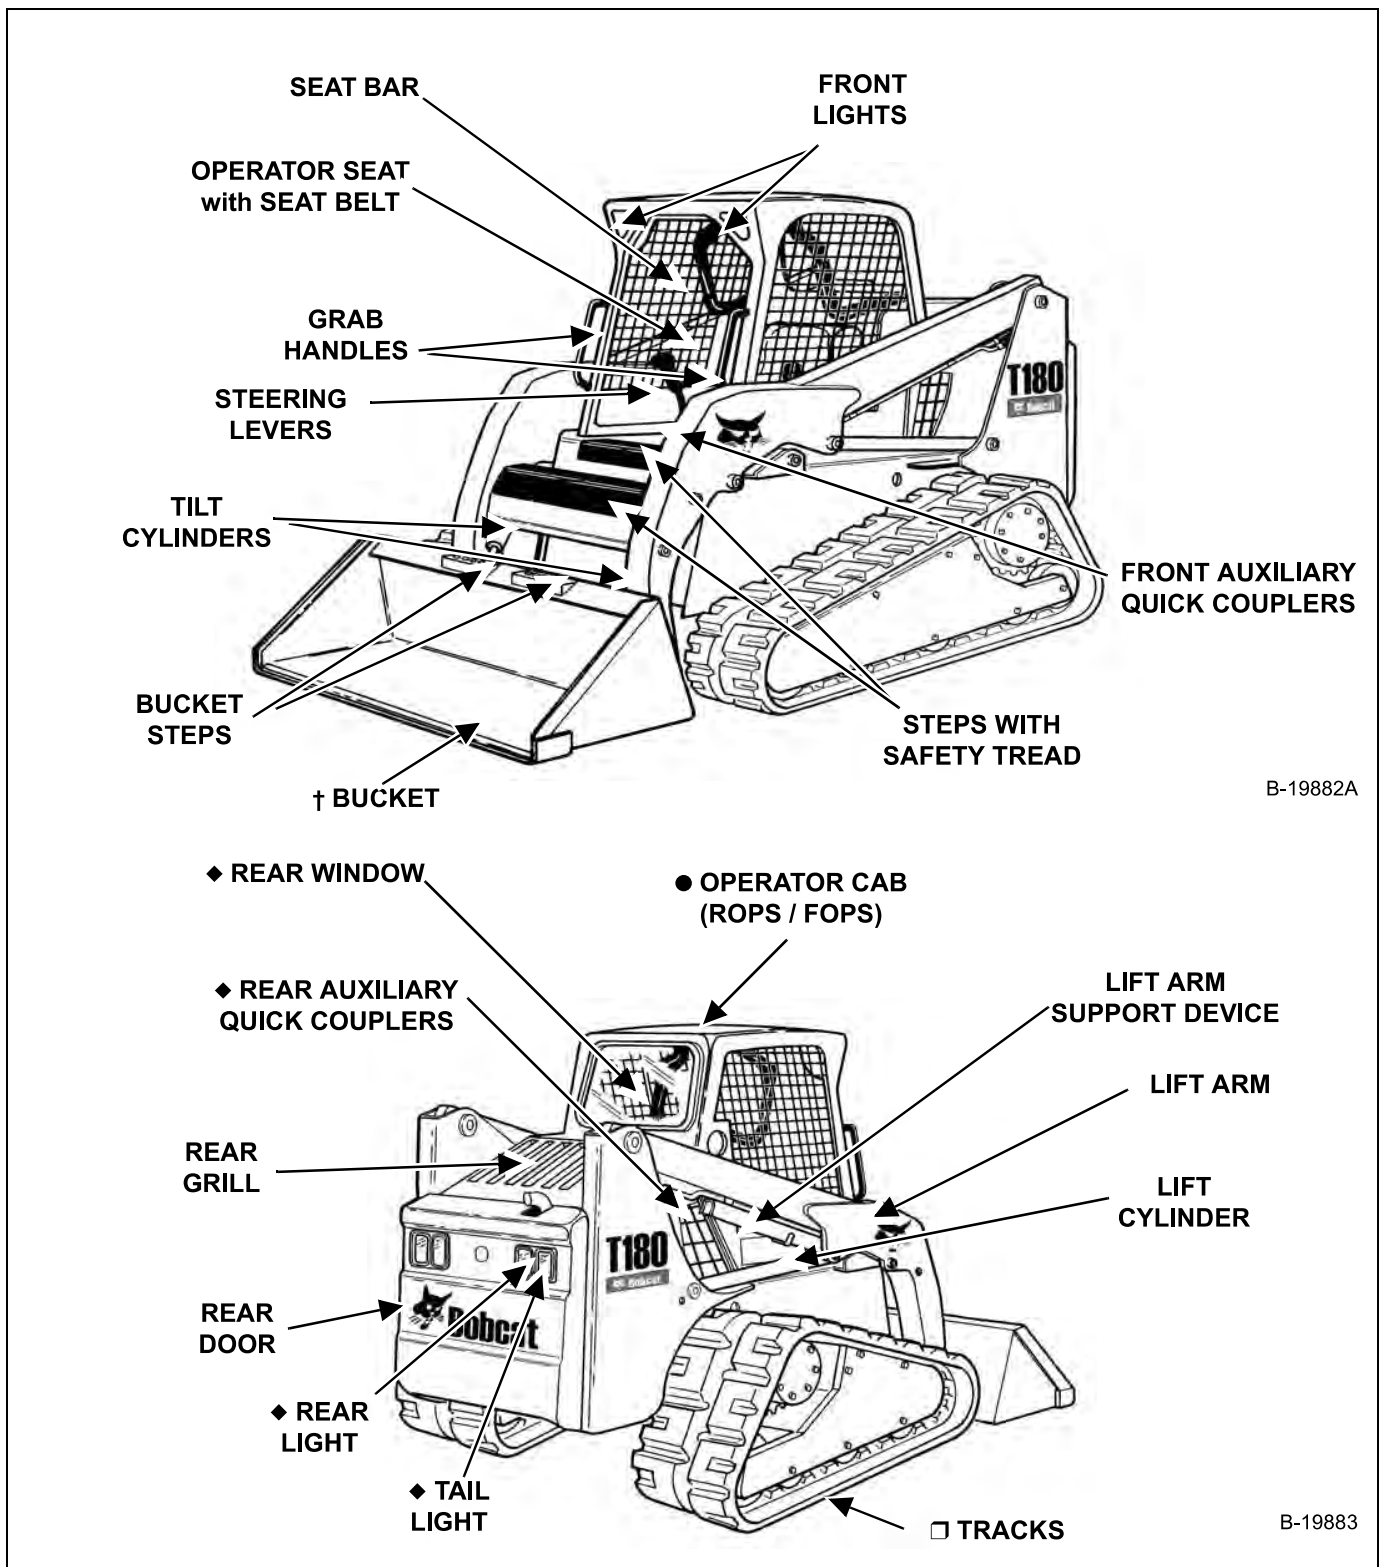

♦ OPTIONAL OR FIELD ACCESSORY (Not Standard Equipment)

□ TRACKS - Optional tracks are available.

† Bucket - Several different buckets and other attachments are available for this machine.

● ROPS, FOPS - Roll Over Protective Structure, per SAE J1040 and ISO 3471, and Falling Object Protective Structure per ISO 3449, Level I. Level II is available. Extra insulated cab is available as an option (Reduced noise level).



Bobcat®