

B100

 


Bobcat®

Service Manual

(S/N 570011001 & Above)

(S/N 570111001 & Above)

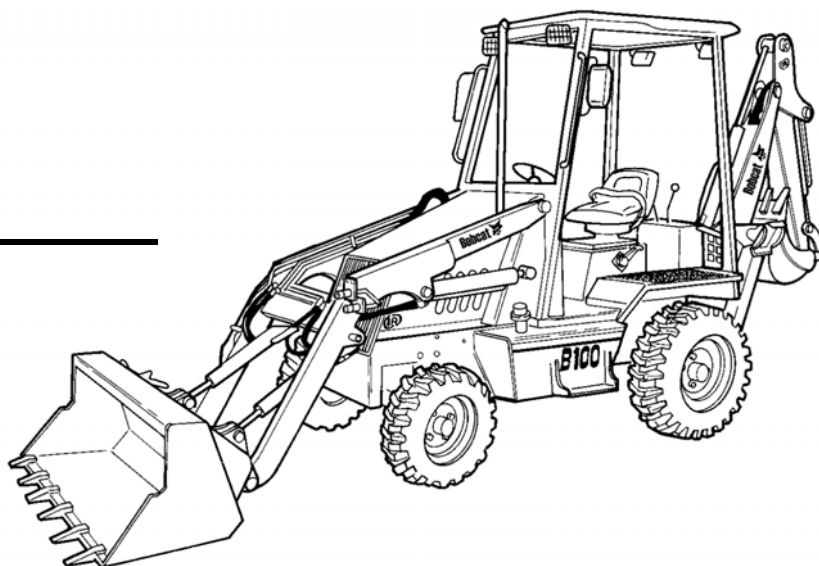

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

MAINTENANCE SAFETY



 
WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

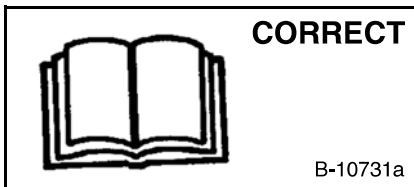

CORRECT

B-10731a

 
- Never service the Bobcat Loader Backhoe without instructions.

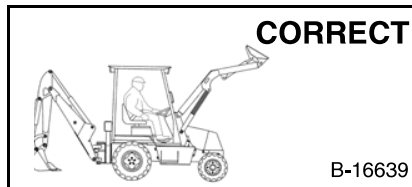

CORRECT

B-16639

 
- Always use an approved lift arm support device when servicing the loader backhoe with the lift arms raised. Replace the lift arm support device if damaged or missing.
- Disconnecting or loosening any hydraulic tubeline, hose, fitting component, or part failure can cause lift arms or backhoe boom to drop.

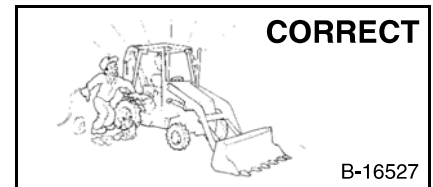

CORRECT

B-16527

 
- Cleaning and maintenance are required daily.
- NEVER modify equipment or add attachments not approved by Bobcat.

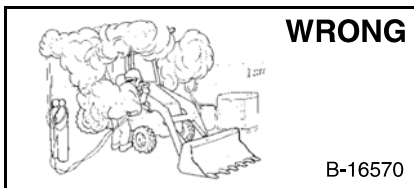

WRONG

B-16570

 
- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

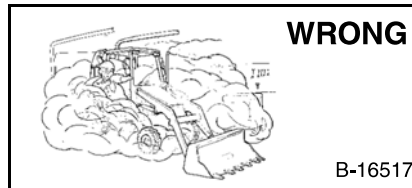

WRONG

B-16517

 
- Vent exhaust to outside when engine must be run for service.
- Exhaust system must be tightly sealed. Exhaust Fumes can kill without warning.

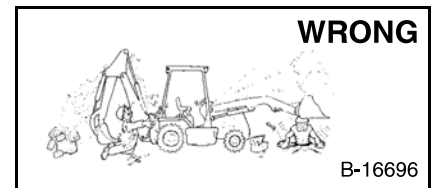

WRONG

B-16696

 
- Never work on loader backhoe with lift arms raised unless supported by an approved lift arm support device.
- Always lower the backhoe bucket to the ground before doing any maintenance.

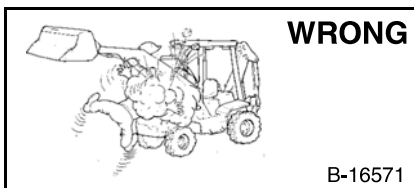

WRONG

B-16571

 - Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust machine with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

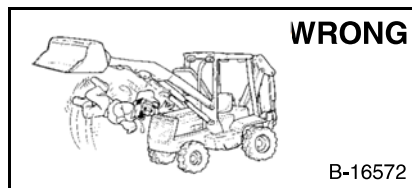

WRONG

B-16572

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used.
- Use eye protection approved for type of welding.
- Keep engine cover closed except for service. Close and latch engine cover before operating the loader backhoe.



WRONG

B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**.

MSW15-0805

Dealer Copy -- Not for Resale

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	70-01	HYDROSTATIC TESTING	30-01
AIR CLEANER SERVICE	10-01	INSTRUMENT PANEL	60-01
ALTERNATOR	60-01	LOADER BACKHOE SPECIFICATIONS	SPEC-01
ALTERNATOR BELT	10-01	LOADER BACKHOE TORQUE	SPEC-01
ARM CYLINDER	20-01	LOADER CONTROL VALVE	20-01
ARM	50-01	LIFT ARMS	50-01
AXLE AND DIFFERENTIAL	40-01	LIFT ARM SUPPORT DEVICE	10-01
AXLE HUB (FRONT)	50-01	LIFT CYLINDER	20-01
AXLE TOE-IN	10-01	LIFTING AND BLOCKING THE LOADER BACKHOE	10-01
BACKHOE BOOM LOCK	10-01	LUBRICATING THE LOADER BACKHOE	10-01
BACKHOE CONTROL VALVE	20-01	MAIN RELIEF VALVE	20-01
BATTERY	60-01	MUFFLER	70-01
BOB-TACH	50-01	OIL COOLER	30-01
BOB-TACH HAND LEVER	10-01	OPERATOR CAB	50-01
BOOM	50-01	OPERATOR SEAT	50-01
BOOM CYLINDER	20-01	PARKING BRAKE	40-01
BRAKE CALIPER	40-01	PORT RELIEF VALVE (BACKHOE CONTROL VALVE)	20-01
BUCKET	50-01	PORT RELIEF VALVE (LOADER CONTROL VALVE)	20-01
BUCKET CYLINDER	20-01	RADIATOR	70-01
CAB LIGHTS	60-01	REAR AXLE	10-01, 40-01
CONVERSIONS	SPEC-01	REAR AXLE AND DIFFERENTIAL	40-01
ELECTRICAL SYSTEM INFORMATION	60-01	RECONDITIONING THE ENGINE	70-01
ENGINE	70-01	RUBBER DRIVE COUPLER	70-01
ENGINE COMPONENTS AND TESTING	70-01	SERVICE SCHEDULE	10-01
ENGINE COOLING SYSTEM	10-01	SPINDLE	50-01
ENGINE COVER	10-01, 50-01	STABILIZER	50-01
ENGINE LUBRICATION SYSTEM	10-01	STABILIZER CYLINDER	20-01
ENGINE SIDE COVERS	50-01	STEERING CYLINDER	20-01
ENGINE SPECIFICATIONS	SPEC-01	STARTER	60-01
ENGINE SPEED CONTROL	70-01	STEERING PUMP	20-01
FENDER	50-01	SWING CYLINDER	20-01
FLOOR PANELS	50-01	SWING FRAME	50-170
FLYWHEEL	70-01	TILT CYLINDER	20-01
FLYWHEEL HOUSING	70-01	TIRE MAINTENANCE	10-01
FRONT AXLE	50-01	TORQUE SPECIFICATIONS FOR BOLTS	SPEC-01
FUEL LEVEL SENDER	60-01	TOWING THE LOADER BACKHOE	10-01
FUEL SYSTEM	10-01	TRANSPORTING THE LOADER BACKHOE	10-01
FUEL TANK	50-01	TRAVEL PEDAL	20-01
GEAR PUMP	20-01	TROUBLESHOOTING	40-01, 70-01
GRILL	50-01	TURBOCHARGER	70-01
GRILL FRAME	50-01	X-CHANGE™	50-01
HYDRAULIC FLUID RESERVOIR	20-01		
HYDRAULIC FILTER HOUSING	20-01		
HYDRAULIC/HYDROSTATIC FLUID SPECIFICATIONS	SPEC-01		
HYDRAULIC/HYDROSTATIC SYSTEM	10-01		
HYDRAULIC SYSTEM INFORMATION	20-01		
HYDROSTATIC DRIVE MOTOR	30-01		
HYDROSTATIC PUMP	30-01		
HYDROSTATIC SYSTEM INFORMATION	30-01		

Dealer Copy -- Not for Resale



CONTENTS

FOREWORD	II
SAFETY INSTRUCTIONS	V
SERIAL NUMBER LOCATIONS	IX
DELIVERY REPORT	IX
BOBCAT LOADER IDENTIFICATION	X
SAFETY & MAINTENANCE	10-01
HYDRAULIC SYSTEM	20-01
HYDROSTATIC SYSTEM	30-01
DRIVE SYSTEM	40-01
MAIN FRAME	50-01
ELECTRICAL SYSTEM AND ANALYSIS	60-01
ENGINE SERVICE	70-01
SPECIFICATIONS	SPEC-01

**SAFETY &
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

**DRIVE
SYSTEM**

MAIN FRAME

**ELECTRICAL
SYSTEM &
ANALYSIS**

**ENGINE
SERVICE**

SPECIFICATIONS

FOREWORD

This manual is for the Bobcat loader mechanic. It provides necessary servicing and adjustment procedures for the Bobcat loader and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, Starting procedure, daily checks, etc.

A general inspection of the following items must be made after the loader has had service or repair:

 
1. Check that ROPS mounting hardware is tightened and is Bobcat approved.



2. The seat belt must be correctly installed, functional and in good condition.




3. Check lift arm support device, replace if damaged.

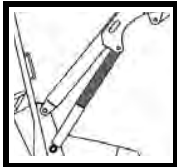

4. Machine signs must be legible and in the correct location.



 5. Foot pedal must return to neutral.

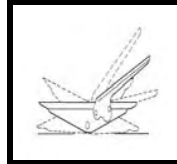


6. Check for correct function of the work lights




7. The parking brake must function correctly.



 
8. Enclosure door latches must open and close freely.

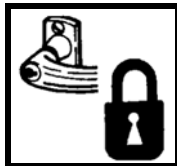

 
9. Bob-Tach wedges and linkages must function correctly and be in good condition.

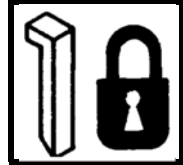

 10. Safety treads must be in good condition.

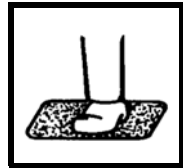

 
11. Check for correct function of indicator lamps (Optional on some models).

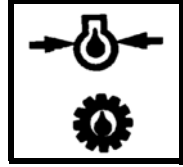

12. Check hydraulic fluid level, engine oil level and fuel supply.



 
13. Inspect for fuel, oil or hydraulic fluid leaks.

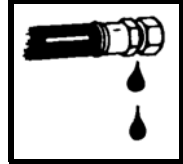


14. Lubricate the loader backhoe.



 15. Check the condition of the battery and cables.

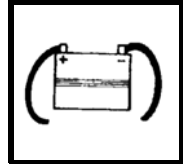


 16. Inspect the air cleaner for damage or leaks. Check the condition of the element.

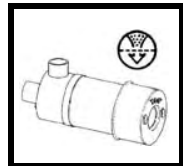

Dealer Copy -- Not for Resale


17. Check the electrical charging system.

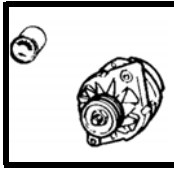

20. Operate the loader and check all functions.



 
18. Check tires for wear and pressure.

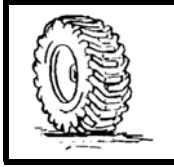

21. Check for any field modification not completed.



 19. Inspect for loosen or broken parts or connections.

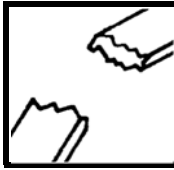

22. Recommend to the owner that all necessary corrections be made before the machine is returned to service.



**CALIFORNIA
PROPOSITION 65 WARNING**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.



Dealer Copy -- Not for Resale

SAFETY INSTRUCTIONS

	Safety Alert Symbol
This symbol with a warning statement means: “Warning, be alert! Your safety is involved!” Carefully read the message that follows.	



Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285



This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator's Handbook fastened to the operator cab. It's brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Loader Backhoe Operator Training Course is available through your local dealer or at **www.training.bobcat.com** or **www.bobcat.com**. This course is intended to provide rules and practices of correct operation of the Loader Backhoe.
- The Loader Backhoe Safety Video is available from your Bobcat dealer or at **www.training.bobcat.com** or **www.bobcat.com**.

Dealer Copy -- Not for Resale

SI LB-0206 SM

SAFETY INSTRUCTIONS (CONT'D)

The dealer and owner/operator review the recommended uses of the product when delivered. If the owner/operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.



Call Before You Dig

1-888-258-0808

When you call, you will be directed to a location in your state/city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.)

Dealer Copy -- Not for Resale

SI LB-0206 SM

**B100 Bobcat Loader Backhoe
Service Manual**

SAFETY INSTRUCTIONS (CONT'D)

Fire Prevention

The machine and attachments have components that are at high temperature under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.


Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it will increase fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential hazard.

The spark arrestor muffler is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

- Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.
- The operator cab, engine compartment, and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazard and overheating.
- Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part.
- Check fuel and hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Tighten or replace any parts that show leakage. Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.
- Do not use ether or starting fluids on any engine which has glow plugs. These starting aids can cause explosion and injure you or bystanders.
- Always clean the machine, disconnect the battery, and disconnect the wiring from the controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding. Have good ventilation when grinding or welding painted parts. Wear a dust mask when grinding painted parts. Toxic dust or gas can be produced.
- Stop the engine and let it cool before adding fuel. **NO SMOKING!**

- Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.
- Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).

 Figure 1

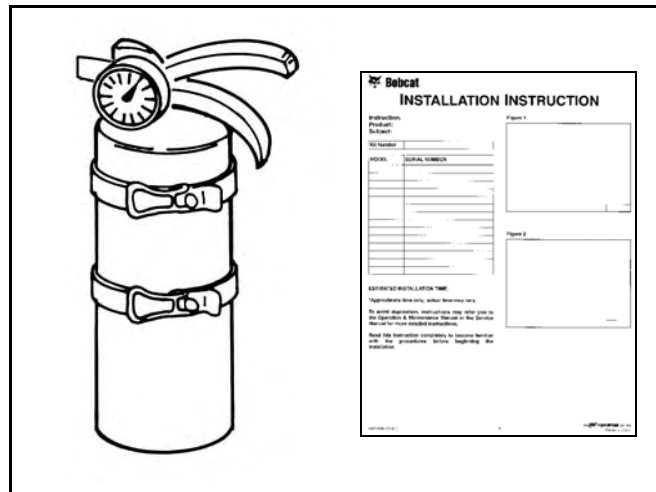

- Know where fire extinguishers and first aid kits are located and how to use them. Fire extinguishers are available from your Bobcat dealer [Figure 1].

Dealer Copy -- Not for Resale



Dealer Copy -- Not for Resale

SERIAL NUMBER LOCATIONS

Always use the serial number of the loader backhoe when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

Loader Backhoe Serial Number

Figure 2



The loader backhoe serial number plate is located under the fender in front of the left rear tire [Figure 2].


Explanation of loader Serial Number:

XXXX	XXXXX
Model 1.-Model/ Engine Combination	Model 2.-Production Sequence (Series)

1. The four digit Model/Engine Combination Module number identifies the model number and engine combination.
2. The five digit Production Sequence Number identifies the order which the loader is produced.

Engine Serial Number

 Figure 3

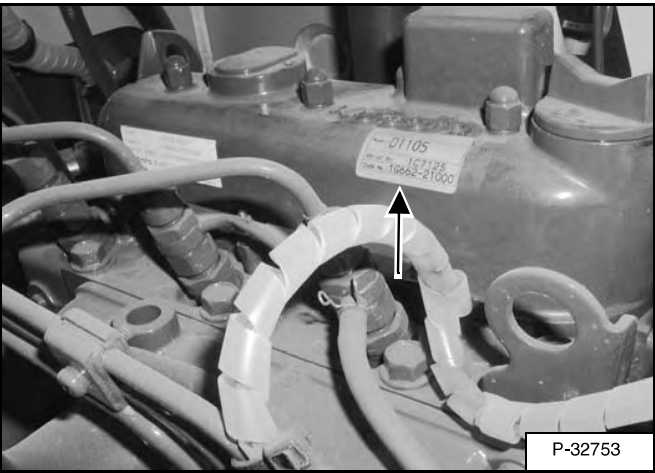

The engine serial number is located on the valve cover at the right side of the engine [Figure 3].


DELIVERY REPORT

Figure 4

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the Bobcat loader backhoe is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely [Figure 4].

Dealer Copy -- Not for Resale

 BOBCAT LOADER IDENTIFICATION

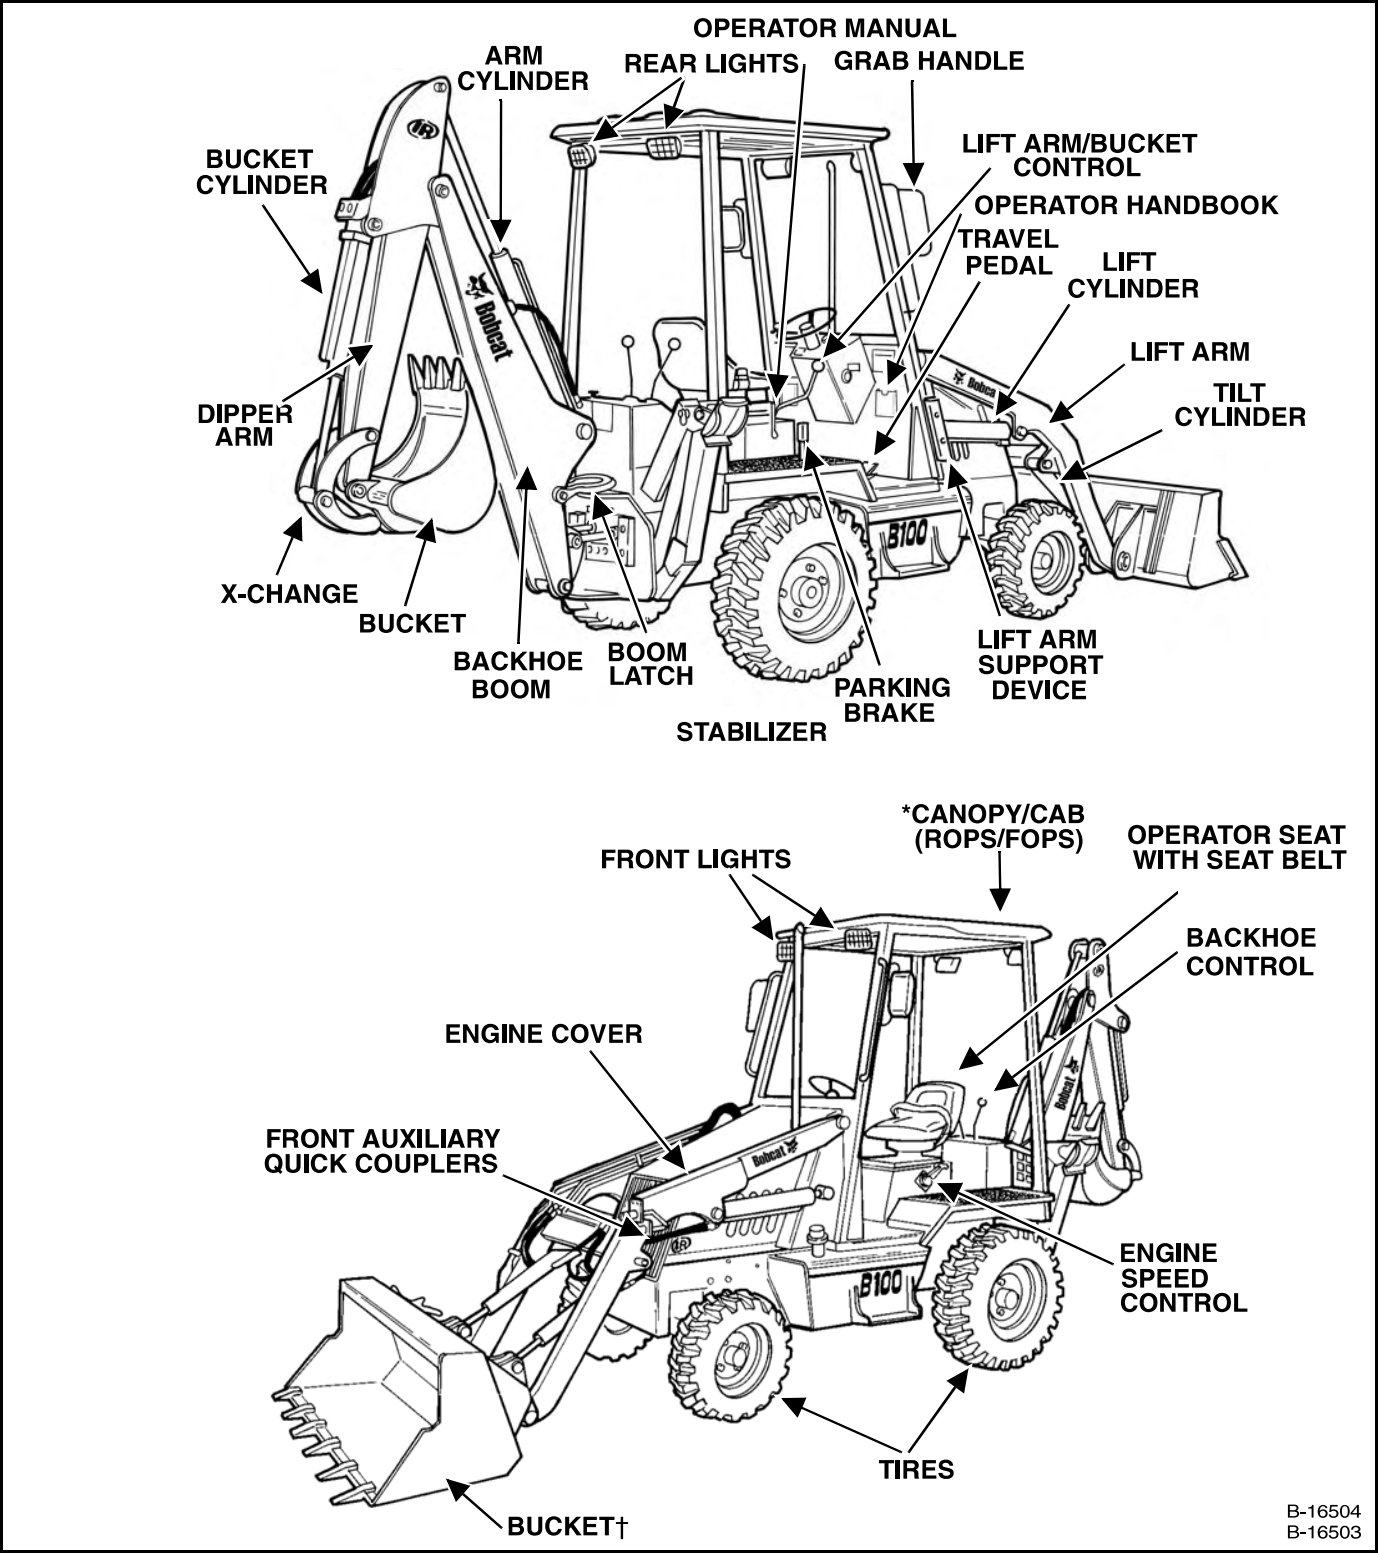

† BUCKET - Several different buckets and other attachments are available for the Bobcat loader backhoe.
* ROPS, FOPS - Roll Over Protective Structure, Falling Object Protective Structure, per SAE j1040 and ISO 3471 and Falling Object Protective Structure per SAE J1043 and ISO 3449, Level 1.

Dealer Copy -- Not for Resale

B-16504
B-16503

SAFETY & MAINTENANCE

SAFETY & MAINTENANCE

AIR CLEANER SERVICE	10-80-1
Replacing Filter Element	10-80-1
ALTERNATOR BELT	10-160-1
Adjusting The Alternator Belt	10-160-1
AXLE TOE-IN	10-60-1
Adjustment	10-60-1
BACKHOE BOOM LOCK	10-140-1
Disengaging The Boom Lock	10-140-1
Engaging Boom Lock	10-140-2
BOB-TACH HAND LEVER	10-150-1
Inspection And Maintenance	10-150-1
ENGINE COOLING SYSTEM	10-90-1
Coolant Replacement	10-90-1
ENGINE COVER	10-30-1
ENGINE LUBRICATION SYSTEM	10-110-1
Checking Engine Oil	10-110-1
Oil Chart	10-110-1
Replacing Oil And Filter	10-110-2
FUEL SYSTEM	10-100-1
Filling The Fuel Tank	10-100-1
Fuel Filter	10-100-2
Fuel Specifications	10-100-1
Removing Air From The Fuel System	10-100-2
HYDRAULIC/HYDROSTATIC SYSTEM	10-120-1
Checking And Adding Fluid	10-120-1
Cleaning The Cooler	10-120-1
Replacing Hydraulic Fluid	10-120-3
Replacing Hydraulic Fluid	10-120-3
LIFT ARM SUPPORT DEVICE	10-20-1
Installing The Lift Arm Support Device	10-20-1
Removing The Lift Arm Support Device	10-20-2
LIFTING AND BLOCKING THE LOADER BACKHOE	10-10-1
Procedure	10-10-1
LUBRICATING THE LOADER BACKHOE	10-170-1

Continued On Next Page

Dealer Copy -- Not for Resale

SAFETY & MAINTENANCE (CONT'D)

REAR AXLE	10-130-1
Checking Oil Level	10-130-1
Draining Oil	10-130-1
SERVICE SCHEDULE	10-70-1
Chart	10-70-1
TIRE MAINTENANCE	10-180-1
Mounting	10-180-1
Tire Pressure	10-180-1
Wheel Nuts	10-180-1
TOWING THE LOADER BACKHOE	10-50-1
TRANSPORTING THE LOADER BACKHOE	10-40-1
Procedure	10-40-1