

**Dear**

**Thanks very much for your visiting and  
patience.**

**Want to get more information,**

**Please click here, Go back to the page.**

**After your payment, you will have instant access to  
your download.**

**The Download Link will also be sent to your e-mail.**

**You will get the complete manual**

**Have any questions**

**please write to me**

**[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**

# T300

**TURBO**

# T300

**TURBO**

**HIGH FLOW**

 


# Bobcat®

## Service Manual

S/N 525411001 & Above

S/N 525511001 & Above

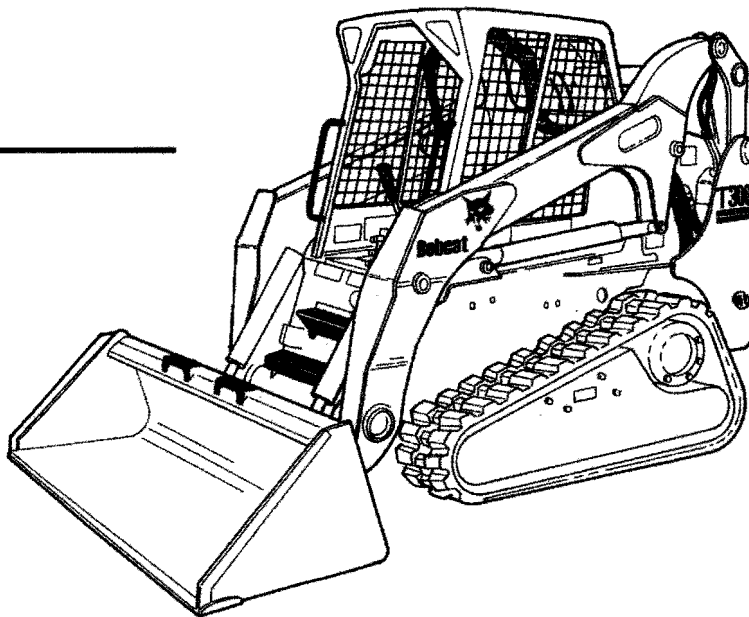

EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)

6902726 (10-03)



Printed in U.S.A.

© Bobcat Company 2003

# MAINTENANCE SAFETY

## **WARNING**

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


### **CORRECT**

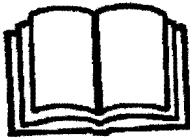

B-10731a

- ⚠ Never service the Bobcat® Skid Steer Loader without instructions.


### **CORRECT**

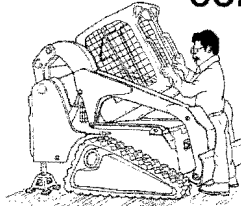 

B-19110

- ⚠ Use the correct procedure to lift to lower operator cab.


### **CORRECT**

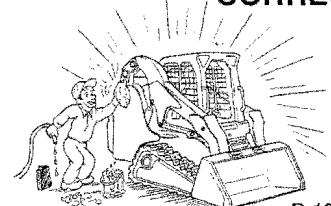 

B-19109

- ⚠ Cleaning and maintenance are required daily.


### **WRONG**

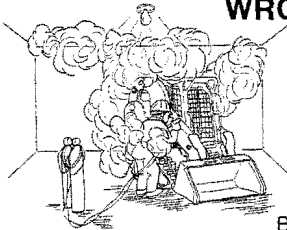 

B-19108

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.


### **WRONG**

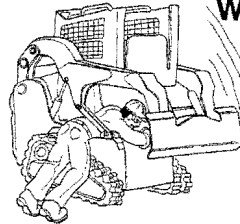 

B-19111

- ⚠ Disconnecting or loosening any hydraulic tube line, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.


### **WRONG**

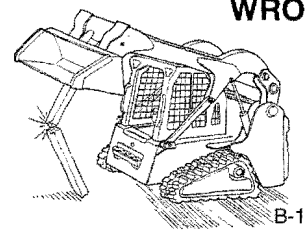 

B-19107

- ⚠ Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- ⚠ Never modify equipment or add attachments not approved by


### **WRONG**

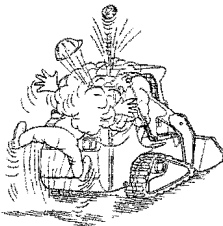 

B-19106

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust loader with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

### **WRONG**

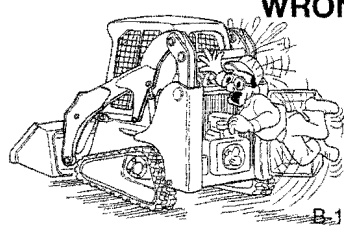 

B-19105

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep rear door closed except for service. Close and latch door before operating the loader.

### **WRONG**



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are not in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW24-0903



**Bobcat®**

## ALPHABETICAL INDEX

ADVANCED CONTROL SYSTEM (ACS) .....	60-01	EVAPORATOR .....	80-01
AIR CLEANER .....	70-01	EVAPORATOR/HEATER UNIT.....	80-01
AIR CLEANER SERVICE .....	10-01	EXPANSION VALVE.....	80-01
AIR CONDITIONING SERVICE.....	80-01		
AIR CONDITIONING SYSTEM FLOW .....	80-01	FAN GEARBOX.....	10-01
ALTERNATOR .....	60-01	FLYWHEEL AND HOUSING .....	70-01
		FLYWHEEL RPM SENSOR .....	60-01
BASIC TROUBLESHOOTING .....	80-01	FRONT AUXILIARY HYD. COUPLER BLOCK .....	20-01
BATTERY.....	60-01	FUEL SYSTEM.....	10-01
BOBCAT CONTROLLER.....	60-01	FUEL TANK .....	50-01
BICS™ SYSTEM .....	60-01		
BLOWER FAN .....	80-01	GENERAL AIR CONDITIONING SERVICE	
BOB-TACH.....	10-01, 50-01	GUIDELINES.....	80-01
BRAKE.....	40-01		
BUCKET POSITION VALVE .....	20-01	HEATER COIL .....	80-01
		HEATER VALVE .....	80-01
CHARGE PRESSURE.....	30-01	HYDRAULIC CONNECTION SPECIFICATIONS..	SPEC-01
COMPONENTS .....	80-01	HYDRAULIC CONTROL VALVE (ADVANCED	
COMPRESSOR.....	80-01	CONTROL SYSTEM) (ACS) .....	20-01
CONDENSER.....	80-01	HYDRAULIC CONTROL VALVE (FOOT CONTROL) ..	20-01
CONTROL HANDLE.....	50-01	HYDRAULIC FILTER HOUSING.....	20-01
CONTROL HANDLE (ADVANCED CONTROL		HYDRAULIC FLUID RESERVOIR .....	20-01
SYSTEM) (ACS) SELECTABLE HAND/FOOT		HYDRAULIC FLUID SPECIFICATIONS .....	SPEC-01
CONTROL .....	50-01	HYDRAULIC/HYDROSTATIC SYSTEM.....	10-01
CONTROL HANDLE (SELECTABLE JOYSTICK		HYDRAULIC PUMP .....	20-01
CONTROL) (SJC) .....	50-01	HYDRAULIC PUMP (CHARGE).....	20-01
CONTROL PANEL.....	50-01	HYDRAULIC PUMP (HI FLOW) .....	20-01
CONTROL PANEL (SELECTABLE JOYSTICK		HYDRAULIC PUMP (SELECTABLE JOYSTICK	
CONTROL) (SJC) .....	50-01	CONTROL) (SJC).....	20-01
CONTROL PEDALS .....	50-01	HYDRAULIC PUMP (HI FLOW) (SELECTABLE	
CONTROL PEDALS (ACS) .....	50-01	JOYSTICK CONTROL) (SJC) .....	20-01
CONTROLLER (SELECTABLE JOYSTICK		HYDRAULIC/HYDROSTATIC FILTER .....	20-01
CONTROL) (SJC) .....	60-01	HYDRAULIC SYSTEM INFORMATION .....	20-01
CONVERSIONS .....	SPEC-01	HYDROSTATIC MOTOR .....	30-01
COOLING FAN .....	70-01	HYDROSTATIC MOTOR (SELECTABLE JOYSTICK	
CYLINDER (LIFT) .....	20-01	CONTROL) (SJC).....	30-01
CYLINDER (POWER BOB-TACH).....	20-01	HYDROSTATIC PUMP .....	30-01
CYLINDER (TILT) .....	20-01	HYDROSTATIC SYSTEM INFORMATION .....	30-01
DIAGNOSTICS .....	60-01	INSTRUMENT PANEL.....	60-01
DRIVE BELT .....	30-01	INSIDE ACCESS PANEL .....	50-01
DRIVE COMPONENTS .....	40-01	INSIDE ACCESS PANEL (SELECTABLE JOYSTICK	
		CONTROL) (SJC).....	50-01
ELECTRICAL/HYDRAULIC CONTROLS			
REFERENCE.....	60-01	LIFT AND TILT ACTUATOR CALIBRATION	
ELECTRICAL/HYDRAULIC CONTROLS		(SELECTABLE JOYSTICK CONTROL) (SJC) .....	60-01
REFERENCE (SELECTABLE JOYSTICK		LIFT ARM .....	50-01
CONTROL) (SJC) .....	60-01	LIFT ARM BY-PASS CONTROL VALVE .....	20-01
ELECTRICAL SYSTEM INFORMATION .....	60-01	LIFT ARM SUPPORT DEVICE .....	10-01
ENGINE .....	70-01	LIFTING AND BLOCKING THE LOADER.....	10-01
ENGINE COOLING SYSTEM.....	10-01	LIGHTS .....	60-01
ENGINE LUBRICATION SYSTEM.....	10-01	LOADER SPECIFICATIONS.....	SPEC-01
ENGINE SPECIFICATIONS .....	SPEC-01	LUBRICATING THE LOADER.....	10-01
ENGINE SPEED CONTROL .....	70-01		
ENGINE SPEED CONTROL (SELECTABLE			
JOYSTICK CONTROL) (SJC).....	70-01		

## ALPHABETICAL INDEX (CONT'D)

MAIN RELIEF VALVE (ACS) .....	20-01
MAIN RELIEF VALVE (FOOT CONTROL) .....	20-01
MAIN RELIEF VALVE (SELECTABLE JOYSTICK CONTROL) (SJC) .....	20-01
MUFFLER .....	70-01
 OIL COOLER (SEAL TO CONNECT) (STC) .....	30-01
OPERATOR CAB .....	10-01, 50-01
OPERATOR SEAT .....	50-01
OPERATOR SEAT (SUSPENSION) .....	50-01
 POWER BOB-TACH .....	10-01, 50-01
POWER BOB-TACH BLOCK .....	20-01
PRESSURE RELIEF VALVE .....	80-01
PRESSURE SWITCH .....	80-01
 RADIATOR .....	70-01
REAR AUXILIARY DIVERTER VALVE .....	20-01
REAR DOOR .....	50-01
REAR GRILL .....	50-01
RECEIVER/DRYER .....	80-01
RECONDITIONING THE ENGINE .....	70-01
REGULAR MAINTENANCE .....	80-01
REMOTE START .....	10-01
 SAFETY .....	80-01
SEAT BAR .....	50-01
SEAT BAR SENSOR .....	60-01
SERVICE PC (LAPTOP COMPUTER) .....	60-01
SERVICE SCHEDULE .....	10-01
SPEED SENSOR (SELECTABLE JOYSTICK CONTROL) (SJC) .....	60-01
STARTER .....	60-01
SYSTEM CHARGING AND RECLAMATION .....	80-01
SYSTEM TROUBLESHOOTING CHART .....	80-01
 TEMPERATURE/PRESSURE .....	80-01
THERMOSTAT .....	80-01
TORQUE SPECIFICATIONS FOR BOLTS .....	SPEC-01
TOWING THE LOADER .....	10-01
TRACTION LOCK .....	60-01
TRANSPORTING THE BOBCAT LOADER .....	10-01
TROUBLESHOOTING .....	70-01

ACS- ADVANCED CONTROL SYSTEM

AHC- ADVANCED HAND CONTROL SYSTEM

BICS™-BOBCAT INTERLOCK CONTROL SYSTEM

## CONTENTS

FOREWORD .....	ii
SAFETY INSTRUCTIONS .....	v
SERIAL NUMBER LOCATIONS .....	vii
DELIVERY REPORT .....	viii
BOBCAT LOADER IDENTIFICATION .....	ix
SAFETY AND MAINTENANCE .....	10-01
HYDRAULIC SYSTEM .....	20-01
HYDROSTATIC SYSTEM .....	30-01
DRIVE SYSTEM .....	40-01
MAIN FRAME .....	50-01
ELECTRICAL SYSTEM & ANALYSIS .....	60-01
ENGINE SERVICE .....	70-01
HEATING, VENTILATION, AIR CONDITIONING .....	80-01
SPECIFICATIONS .....	SPEC-01

**SAFETY &  
MAINTENANCE**

**HYDRAULIC  
SYSTEM**

**HYDROSTATIC  
SYSTEM**

**DRIVE  
SYSTEM**

**MAIN FRAME**

**ELECTRICAL  
SYSTEM &  
ANALYSIS**

**ENGINE  
SERVICE**

**HVAC**

 
**SPECIFICATIONS**

# FORWORD


This manual is for the Bobcat loader mechanic. It provides necessary servicing and adjustment procedures for the Bobcat loader and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, Starting procedure, daily checks, etc.

A general inspection of the following items must be made after the loader has had service or repair:


1. Check that the ROPS/FOPS (Including side screens) is in good condition and is not modified.

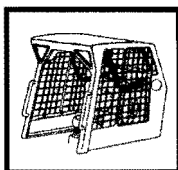

 
2. Check that ROPS mounting hardware is tightened and is Bobcat approved.

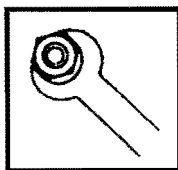

 
3. The seat belt must be correctly installed, functional and in good condition.

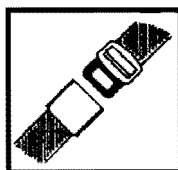

 
4. The seat bar must be correctly adjusted, clean and lubricated.

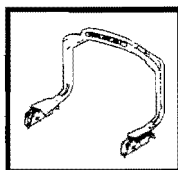

 
5. Check lift arm support device, replace if damaged.

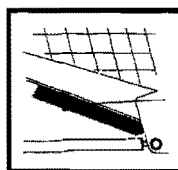

 6. Machine signs must be legible and in the correct location.

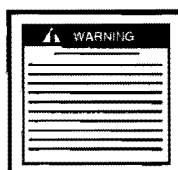

 
7. Steering levers and foot pedals must return to neutral.

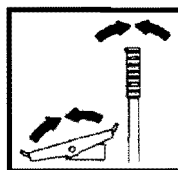


8. Check for correct function of the work lights



 
9. The parking brake must function correctly.

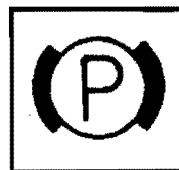

 
10. Enclosure door latches must open and close freely.

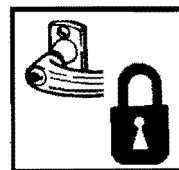

 
11. Bob-Tach wedges and linkages must function correctly and be in good condition.

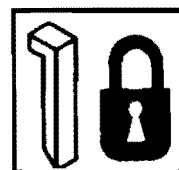

 
12. Safety treads must be in good condition.

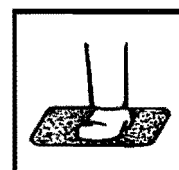

 
13. Check for correct function of indicator lamps (Optional on some models).

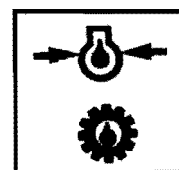

 
14. Check hydraulic fluid level, engine oil level and fuel supply.

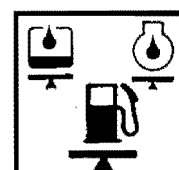

 15. Inspect for fuel, oil or hydraulic fluid leaks.

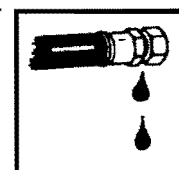


 16. Lubricate the loader.

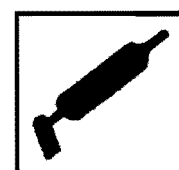




 
17. Check the condition of the battery and cables.

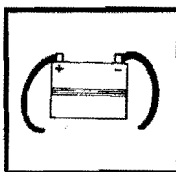

 22. Operate the loader and check all functions.

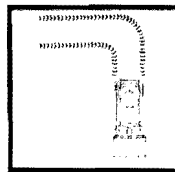

 
18. Inspect the air cleaner for damage or leaks. Check the condition of the element.

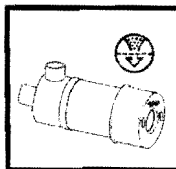


23. Check for any field modification.



 19. Check the electrical charging system.

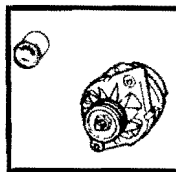

 
24. Check for correct function of the Bobcat Interlock Control System (BICS™) before the machine is returned to the customer.

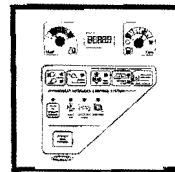

20. Check tracks for wear and tension.



 25. Recommend to the owner that all necessary corrections be made before the machine is returned to service.

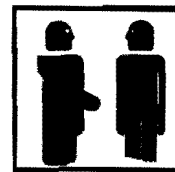

21. Inspect for loose or broken parts or connections.



**CALIFORNIA  
PROPOSITION 65 WARNING**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.



**Bobcat®**

## SAFETY INSTRUCTIONS



Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

## IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

The following publications provide information on the safe use and maintenance of the loader and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the loader gives operating information as well as routine maintenance and service procedures. It is a part of the loader and must stay with the machine when it is sold. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat loader dealer.
- The loader has machine signs (decals) which instruct on the safe operation and care. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat loader dealer.

- The loader has a plastic Operator's Handbook fastened to the operator cab. Its brief instructions are convenient to the operator. The Handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The EMI Safety Manual (available in Spanish) delivered with the loader gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work
- The Skid-Steer Loader Operator Training Course is available through your local dealer. This course is intended to provide rules and practices for correct operation of the Bobcat loader. The course is available in English and Spanish version.
- The Service Safety Training Course is available from your Bobcat dealer. This course provides information for safe and correct service procedures for Bobcat Skid-Steer loaders.
- The Bobcat Skid-Steer Loader Safety Video is available from your Bobcat Dealer.



**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

SI05-0299

## FIRE PREVENTION

The loader has several components that are at high temperature under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it will increase fire hazard. The loader must be cleaned as often as necessary to avoid this accumulation. Flammable debris in the engine compartment is a fire hazard when the loader is parked with a hot engine.

The spark arrestor muffler is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

- Do not use the Bobcat loader where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.
- The engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazard and overheating.
- Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part.
- Check fuel and hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Tighten or replace any parts that show leakage. Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.
- Do not use ether or starting fluids on any engine which has glow plugs. These starting aids can cause explosion and injure you or bystanders.
- Always clean the loader and disconnect the battery before doing any welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the loader when welding. Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.
- Stop the engine and let it cool before adding fuel. No smoking!
- Use the procedure in the Operation & Maintenance Manual for connecting the battery.

- Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler.
- Know where fire extinguishers and first aid kits are located and how to use them.

Figure 1




A fire extinguisher is available for your Bobcat dealer. The fire extinguisher can be installed in the location shown in [Figure 1]

## SERIAL NUMBER LOCATION

Always use the serial number of the loader when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

### Loader Serial Number

 Figure 2

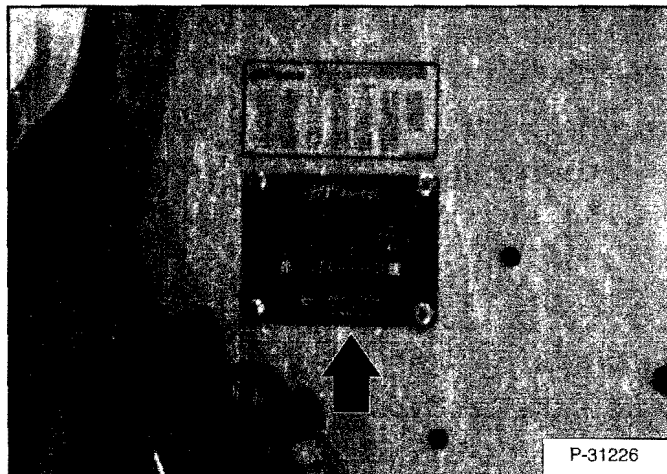

The loader serial number plate is located on the outside of the loader frame [Figure 2].


Explanation of loader Serial Number:

XXXX	XXXXX
Model 1.-Model/ Engine Combination	Model 2.-Production Sequence (Series)

1. The four digit Model/Engine Combination Module number identifies the model number and engine combination.
2. The five digit Production Sequence Number identifies the order which the loader is produced.

### Engine Serial Number

 Figure 3

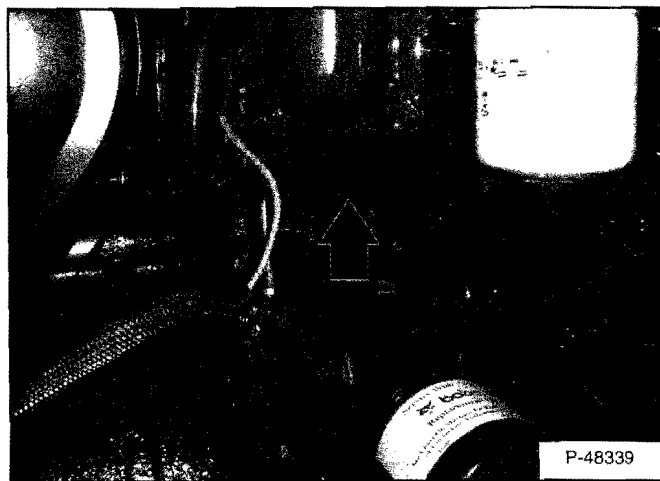

The engine serial number is located on the engine block [Figure 3].

## Delivery Report

Figure 4

 
 
DELIVERY REPORT

WARNING

B-16315

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the Bobcat loader is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely [Figure 4].

## LOADER IDENTIFICATION

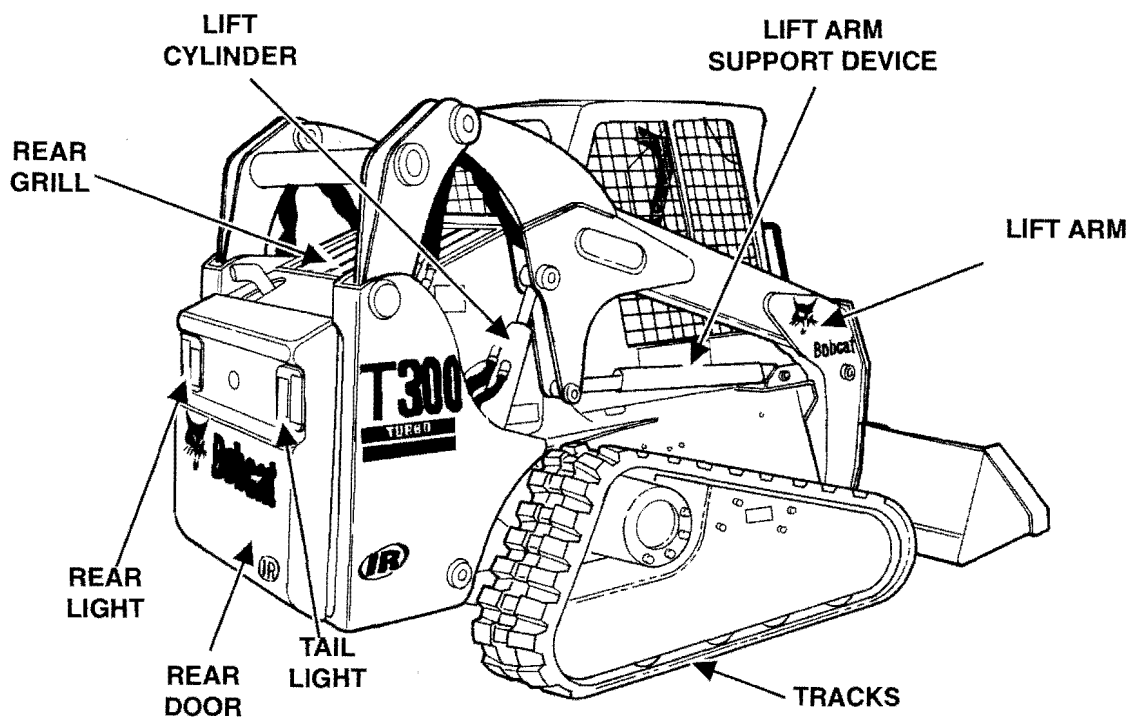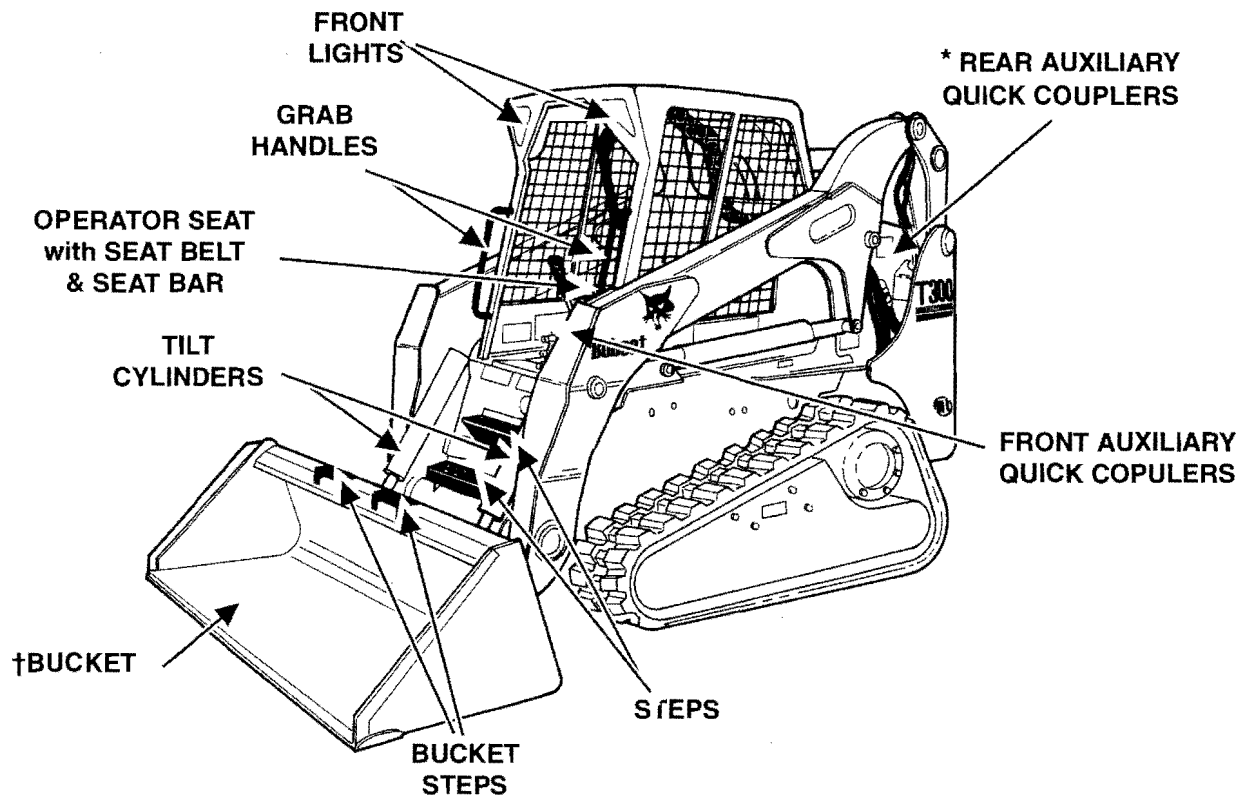

B-16951a  
B-16950

\* Option or Field Accessory

† Many buckets and other attachments are available.



**Bobcat®**