

**Utility Vehicle  
2100  
2100S**




**Bobcat®**

# **Service Manual**



**S/N 522711001 & ABOVE**

**S/N 524411001 & ABOVE**

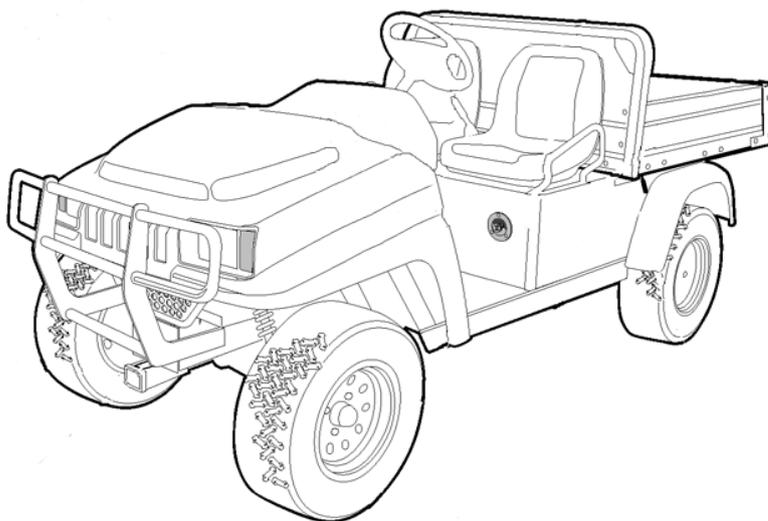



## FOREWORD

---

Bobcat vehicles are designed and built to provide the ultimate in performance efficiency; however, proper maintenance and repair are essential for achieving maximum service life and continued safe and reliable operation.

This manual provides detailed information for the maintenance and repair of the Bobcat 1200 and Bobcat 1200S vehicles, and should be thoroughly reviewed prior to servicing the vehicles. The procedures provided must be properly implemented, and the DANGER, WARNING, and CAUTION statements must be heeded.

This manual was written for the trained technician who already possesses knowledge and skills in electrical and mechanical repair. *If the technician does not have such knowledge and skills, attempted service or repairs to the vehicle may render the vehicle unsafe.* For this reason, Bobcat Company advises that all repairs and/or service be performed by an authorized Bobcat 2100 and 2100S distributor/dealer representative or by a Bobcat factory-trained technician.

It is the policy of Bobcat Company to assist its distributors and dealers in continually updating their service knowledge and facilities so they can provide prompt and efficient service for vehicle owners. Regional technical representatives, vehicle service seminars, periodic service bulletins, maintenance and service manuals, and other service publications also represent Bobcat Company's continuing commitment to customer support.

This manual covers all aspects of typical vehicle service; unique situations, however, do sometimes occur when servicing a vehicle. If it appears that a service question is not answered in this manual, you may **write to us at: P.O. Box 204658; Augusta, Georgia 30917; Attention: Technical Services, or contact a Club Car Technical Service Representative at (706) 863-3000, ext. 3580.**

Copyright © 2003 Bobcat Company.

This manual effective August, 2003.

## **WARNING**

- Read SECTION 1–SAFETY before attempting any service on this vehicle.
- Before servicing vehicle, read complete section(s) and any referenced information that may be relevant to the service or repair to be performed.

**NOTE:** *This manual represents the most current information at the time of publication. Bobcat Company is continually working to further improve our vehicles and other products. These improvements may affect servicing procedures. Any modification and/or significant change in specifications or procedures will be forwarded to all Bobcat 2100 and 2100S dealers and will, when applicable, appear in future editions of this manual.*

*Bobcat Company reserves the right to change specifications and designs at any time without notice and without the obligation of making changes to units previously sold.*

*There are no warranties expressed or implied in this manual. See the limited warranty found in the vehicle Operation and Maintenance Manual.*

# CONTENTS

---

## SECTION 1 – SAFETY

---

General Warning .....	1-1
-----------------------	-----

## SECTION 2 – VEHICLE SPECIFICATIONS

---

## SECTION 3 – GENERAL INFORMATION

---

General Information .....	3-1
Serial Number Identification .....	3-1
Storage .....	3-2
Preparing the Vehicle for Extended Storage .....	3-2
To Return Vehicle to Service .....	3-2

## SECTION 4 – BODY AND TRIM

---

Cleaning the Vehicle .....	4-1
Front Body Repair .....	4-1
Abrasions and Haze .....	4-1
Light Scratches .....	4-2
Large Scratches and Abrasions .....	4-2
Front Body Components .....	4-2
Dashboard Removal .....	4-2
Dashboard Installation .....	4-2
Front Body Removal .....	4-3
Front Fender Removal .....	4-3
Front Fender Installation .....	4-4
Front Body Installation .....	4-4
Seat .....	4-4
Seat Adjustment .....	4-4
Front Seat Support .....	4-6
Front Seat Support Removal .....	4-6
Front Seat Support Installation .....	4-7
Rear Seat Support .....	4-7
Rear Seat Support Removal .....	4-7
Rear Seat Support Installation .....	4-7

Cargo Bed .....	4-9
Cargo Bed Removal .....	4-9
Cargo Bed Installation .....	4-9
Bed Stop Bumper Adjustment .....	4-11
Rear Fender Removal .....	4-12
Rear Fender Installation .....	4-12
Tailskirt .....	4-12
Tailskirt Removal .....	4-12
Tailskirt Installation .....	4-12
Receiver Hitch .....	4-12
Receiver Hitch Removal .....	4-12
Receiver Hitch Installation .....	4-13
Floor Mat .....	4-14
Floor Mat Removal .....	4-14
Floor Mat Installation .....	4-14

## **SECTION 5 – ACCELERATOR AND BRAKE PEDAL ASSEMBLIES**

---

Brake Pedal .....	5-1
Brake Pedal Removal .....	5-1
Brake Pedal Installation .....	5-1
Brake Pedal Adjustment .....	5-2
Accelerator Pedal .....	5-4
Accelerator Pedal Removal .....	5-4
Accelerator Pedal Installation .....	5-5
Accelerator Pedal Adjustment .....	5-5

## **SECTION 6 – MC012C-AS00 TRANSAXLE: HYDRAULIC AND PARK BRAKE SYSTEMS**

---

Brake System Inspection .....	6-1
Brake System Troubleshooting .....	6-3
Brake Drum Removal .....	6-6
Front Wheel Brake Drum Removal .....	6-6
Rear Wheel Brake Drum Removal .....	6-8
Brake Shoe Removal .....	6-8
Front Brake Shoe Removal .....	6-8
Rear Brake Shoe Removal .....	6-9
Brake Cluster Inspection and Cleaning .....	6-10
Brake Shoe Installation .....	6-11
Front Brake Shoe Installation .....	6-12
Rear Brake Shoe Installation .....	6-12

Brake Drum Installation .....	6-14
Front Wheel Brake Drum Installation .....	6-14
Rear Wheel Brake Drum Installation .....	6-16
Brake Cluster Assembly Replacement .....	6-17
Front Brake Cluster Assembly Removal .....	6-17
Front Brake Cluster Assembly Installation .....	6-17
Rear Brake Cluster Assembly Removal .....	6-18
Rear Brake Cluster Assembly Installation .....	6-19
Wheel Cylinder Replacement .....	6-19
Front Wheel Cylinder Removal .....	6-19
Front Wheel Cylinder Installation .....	6-20
Rear Wheel Cylinder Removal .....	6-20
Rear Wheel Cylinder Installation .....	6-20
Brake Shoe Adjuster Replacement .....	6-21
Front Brake Shoe Adjuster Removal .....	6-22
Front Brake Shoe Adjuster Installation .....	6-22
Rear Brake Shoe Adjuster Removal .....	6-22
Rear Brake Shoe Adjuster Installation .....	6-22
Hydraulic Line and Hose Replacement .....	6-23
Front Brake Line Removal .....	6-23
Front Brake Line Installation .....	6-23
Front Brake Hose Assembly Removal .....	6-24
Front Brake Hose Assembly Installation .....	6-24
Rear Brake Line Removal .....	6-24
Rear Brake Line Installation .....	6-26
Rear Brake Hose Removal .....	6-26
Rear Brake Hose Installation .....	6-27
Master Cylinder And Bell Crank Replacement .....	6-27
Bell Crank Removal .....	6-27
Bell Crank Installation .....	6-27
Master Cylinder Removal .....	6-29
Master Cylinder Installation .....	6-29
Bleeding the Hydraulic Brake System .....	6-31
Purging the Hydraulic System .....	6-32
Filling the Hydraulic System .....	6-32
Park Brake System .....	6-33
Park Brake Cable Removal .....	6-33
Park Brake Cable Installation .....	6-34
Park Brake Handle Removal .....	6-35
Park Brake Handle Installation .....	6-35
Park Brake Adjustment .....	6-35

## **SECTION 7 – STEERING AND FRONT SUSPENSION**

---

Steering Wheel .....	7-1
Steering Wheel Removal .....	7-1
Steering Wheel Installation .....	7-3
Steering Column .....	7-3
Steering Column Removal .....	7-3
Steering Column Disassembly .....	7-3
Steering Column Assembly .....	7-4
Steering Column Installation .....	7-4
Rack and Pinion .....	7-5
Rack and Pinion Removal .....	7-5
Rack and Pinion Disassembly .....	7-6
Rack and Pinion Assembly .....	7-9
Rack and Pinion Installation .....	7-10
Front Suspension .....	7-12
Lubrication .....	7-12
Wheel Alignment .....	7-12
Front Suspension Components .....	7-14
Kingpin and Steering Spindle Removal .....	7-14
Kingpin and Steering Spindle Installation .....	7-14
A-Arm Removal .....	7-15
A-Arm Installation .....	7-17
Shock Absorber Removal .....	7-17
Shock Absorber Installation .....	7-18
Front Wheel Bearings and Hubs .....	7-18
Front Wheel Free Play Inspection .....	7-18
Front Wheel Bearings and Hub Removal .....	7-19
Front Wheel Bearings and Hub Installation .....	7-19

## **SECTION 8 – WHEELS AND TIRES**

---

General Information .....	8-1
---------------------------	-----

## **SECTION 9 – REAR SUSPENSION**

---

Shock Absorbers .....	9-1
Shock Absorber Removal and Inspection .....	9-1
Shock Absorber Installation .....	9-1
Multi-Leaf Springs .....	9-1
Multi-Leaf Spring Removal .....	9-1
Multi-Leaf Spring Installation .....	9-3

Snubber .....	9-4
Snubber Removal .....	9-4
Snubber Installation .....	9-4

## **SECTION 10 – PERIODIC MAINTENANCE**

---

Periodic Service Schedule .....	10-1
Periodic Lubrication Schedule .....	<b>10-2</b>
Master Cylinder .....	10-3
Brake Fluid .....	10-4
Engine Oil .....	10-4
Engine Oil Level Check .....	10-4
Engine Oil and Filter Change .....	10-5
Oil Viscosity .....	10-7
Fueling Instructions .....	10-7
Battery .....	10-8

## **SECTION 11 – TROUBLESHOOTING AND ELECTRICAL SYSTEM: FE400 ENGINE**

---

Troubleshooting Guide .....	11-1
Electrical System .....	11-5
Wiring Diagram .....	11-6
Electrical Circuits .....	11-8
Starter Circuit .....	11-8
Generator Circuit .....	11-8
Engine Ignition Circuit .....	11-9
Engine Kill Circuit .....	11-9
Reverse Buzzer Circuit .....	11-10
Low Oil Warning Circuit .....	11-10
Lockout Cam Circuit .....	11-11
Fuel Gauge and Sending Unit Circuit .....	11-12
Hour Meter Circuit .....	11-13
Lighting Circuit .....	11-13
Circuit Testing .....	11-13
Testing the Starter Circuit and Generator Circuit .....	11-14
Testing the Engine Ignition Circuit .....	11-15
Testing the Engine Kill Circuit .....	11-15
Testing the Reverse Buzzer Circuit .....	11-16
Testing the Low Oil Warning Circuit .....	11-17
Testing the Lockout Cam Circuit .....	11-18
Testing the Fuel Gauge and Sending Unit Circuit .....	11-18
Testing the Lighting Circuit .....	11-19

Test Procedures .....	11-19
Index of Test Procedures .....	11-19

## **SECTION 12 – ELECTRICAL COMPONENTS: FE400 ENGINE**

---

Starter/Generator .....	12-1
Voltage Regulator .....	12-11
Diode .....	12-12
Key Switch .....	12-14
Solenoid .....	12-15
Fuse .....	12-15
Lockout Cam Limit Switch .....	12-17
Lockout Cam .....	12-17
Reverse Warning Buzzer .....	12-18
Reverse Buzzer Limit Switch .....	12-19
Low Oil Warning Light .....	12-20
Fuel Gauge/Hour Meter .....	12-21
Fuel Level Sending Unit .....	12-22
RPM Limiter .....	12-22
Ignition Coil .....	12-23
Oil Level Sensor .....	12-26
Headlights .....	12-26
Headlight Diode .....	12-27
Light Switch .....	12-28
Testing the Light Switch .....	12-28
Battery .....	12-28
General Information .....	12-29
Ground Straps .....	12-33

## **SECTION 13 – FE400 ENGINE**

---

General Information .....	13-1
Before Servicing .....	13-1
Lubrication System .....	13-1
Spark Plug .....	13-1
Cylinder .....	13-3
Breather Valve (Reed Valve) .....	13-3
Valve Clearance Check and Adjustment .....	13-3
Crankcase .....	13-3
Engine Removal .....	13-3
Crankcase Cover Removal .....	13-4
Oil Level Sensor .....	13-5

Ignition Coil and Flywheel .....	13-6
Crankcase Cover Installation .....	13-7
Flywheel Installation .....	13-7
Engine Installation .....	13-8
Torque Specifications .....	13-9
Adjustment and Settings .....	13-9

## **SECTION 14 – FUEL SYSTEM**

---

General Information .....	14-1
Carburetor .....	14-1
Main Jet Elevation/Size Chart .....	14-1
Changing the Main Jet .....	14-2
Engine Control Linkage .....	14-5
General Information .....	14-5
Accelerator Rod .....	14-6
Governor Cable .....	14-7
Accelerator Cable .....	14-8
Closed Throttle or Idle Adjustment .....	14-10
Engine RPM Adjustment .....	14-10
Choke and Air Intake System .....	14-11
Choke Cable Removal .....	14-11
Choke Cable Installation .....	14-11
Air Box Removal .....	14-11
Air Box Installation .....	14-12
Intake Duct Repair .....	14-13
Intake Duct Removal .....	14-13
Intake Duct Installation .....	14-15
Air Filter .....	14-16
Fuel Filter Removal .....	14-17
Fuel Filter Installation .....	14-17
Fuel Pump .....	14-17
General Information .....	14-17
Fuel Pump Removal .....	14-20
Fuel Pump Disassembly .....	14-20
Fuel Pump Cleaning and Inspection .....	14-20
Fuel Pump Assembly .....	14-21
Fuel Pump Installation .....	14-21
Fuel Tank .....	14-22
Fuel Tank Removal .....	14-22
Fuel Tank Storage or Disposal .....	14-26
Fuel Tank Installation .....	14-26

Fuel Lines .....	14-27
Fuel Shut-Off Valve .....	14-28

## **SECTION 15 – EXHAUST SYSTEM**

---

Muffler .....	15-1
Muffler Removal .....	15-1
Muffler Installation .....	15-1

## **SECTION 16 – MC012C-AS00 UNITIZED TRANSAXLE WITH DIFFERENTIAL LOCK**

---

General Information .....	16-1
Lubrication .....	16-2
Axle Shaft .....	16-3
Axle Shaft, Bearing, and Oil Seal Removal .....	16-3
Axle Bearing Removal .....	16-5
Axle Shaft, Bearing, and Oil Seal Installation .....	16-5
Unitized Transaxle Removal .....	16-6
Unitized Transaxle Installation .....	16-16
Forward/Reverse Shifter Cable .....	16-24
Forward/Reverse Shifter Cable Removal .....	16-24
Forward/Reverse Shifter Cable Installation .....	16-24
Forward/Reverse Shifter Cable Adjustment .....	16-25
Differential Lock System .....	16-26
Differential Lock System Inspection .....	16-26
Differential Lock Cable Removal .....	16-26
Differential Lock Cable Installation .....	16-27

## **SECTION 17 – TORQUE CONVERTER**

---

General Information .....	17-1
Drive Belt .....	17-3
Drive Belt Removal .....	17-3
Drive Belt Installation .....	17-4
Drive Clutch .....	17-4
Drive Clutch Removal .....	17-4
Drive Clutch Cleaning and Inspection .....	17-5
Drive Clutch Disassembly .....	17-6
Inspection of Drive Clutch Parts .....	17-7
Drive Clutch Assembly .....	17-9
Drive Clutch Installation .....	17-12

Driven Clutch .....	17-13
Driven Clutch Removal .....	17-13
Driven Clutch Disassembly .....	17-13
Driven Clutch Inspection .....	17-13
Driven Clutch Assembly .....	17-15
Driven Clutch Installation .....	17-17

## **SECTION 18 – RECONDITIONING THE FE400 ENGINE**

---

General Information .....	18-1
Recommended Replacement Parts For Engine Teardown .....	18-2
Before Servicing .....	18-2
Mechanical Systems .....	18-2
Cylinder Components .....	18-4
Cylinder Head .....	18-4
General Information .....	18-4
Cylinder Shroud Removal .....	18-5
Rocker Arm and Push Rod Removal .....	18-7
Cylinder Head Removal .....	18-8
Valve Removal .....	18-8
Breather Valve (Reed Valve) .....	18-9
Cylinder Head Cleaning and Inspection .....	18-9
Valve Guides .....	18-10
Valve Seats .....	18-11
Valves .....	18-13
Rocker Arm and Rocker Shaft inspection .....	18-15
Push Rod Inspection .....	18-16
Cylinder Head Installation .....	18-16
Valve Clearance Check and Adjustment .....	18-17
Breather Valve (Reed Valve) .....	18-17
Installation of Remaining Engine Components .....	18-18
Crankcase Components .....	18-20
Crankcase Cover Removal .....	18-20
Camshaft and Hydraulic Lifters .....	18-22
Piston and Connecting Rod .....	18-24
Cylinder Block .....	18-26
Ignition Coil and Flywheel .....	18-28
Oil Pump .....	18-29
Oil Pressure Relief Valve .....	18-31

Crankshaft and Counterbalance .....	18-32
Counterbalance Weight .....	18-35
Oil Screen .....	18-38
Ball Bearing .....	18-38
Oil Seals .....	18-39
Crankshaft Axial Play Adjustment .....	18-42
Crankcase Cover Installation .....	18-44
Engine Assembly .....	18-45
Engine Installation .....	18-46
Service Specifications .....	18-47
Specifications for Resizing Cylinder Bore .....	18-48
Torque Specifications .....	18-48
Adjustment and Settings .....	18-49

**SECTION 19 – RECONDITIONING THE MC012C-AS00 UNITIZED TRANSAXLE WITH DIFFERENTIAL LOCK**

---

Transaxle Model and Identification .....	19-1
Lubrication .....	19-2
Axle Shaft .....	19-3
Unitized Transaxle Removal .....	19-3
Unitized Transaxle Disassembly .....	19-5
Component Disassembly .....	19-7
Differential Gear Lock Housing Disassembly .....	19-7
Governor Gear Disassembly .....	19-9
Differential Gear Case Disassembly .....	19-9
Shifter Fork Disassembly .....	19-12
Synchronizer Gear Disassembly .....	19-12
Intermediate Gear Disassembly .....	19-13
Idler Shaft Disassembly .....	19-14
Unitized Transaxle Component Inspection .....	19-15
Idler Shaft Assembly .....	19-15
Intermediate Gear Assembly .....	19-16
Synchronizer Gear Assembly .....	19-16
Shifter Fork Assembly .....	19-18
Differential Gear Case Assembly .....	19-19
Governor Gear Assembly .....	19-21
Differential Gear Lock Housing Assembly .....	19-21
Unitized Transaxle Assembly .....	19-22
Unitized Transaxle Installation .....	19-29

**SECTION i – INDEX**

---

# SECTION 1 – SAFETY

---

To ensure the safety of those servicing Bobcat Company vehicles, and to protect the vehicles from damage resulting from improper service or maintenance, the procedures in this manual must be followed. It is important to note that throughout this manual there are statements contained within headings labeled DANGER, WARNING, CAUTION, or NOTE. These special statements relate to specific safety issues, and must be read, understood, and heeded before proceeding.

## **DANGER**

- A DANGER indicates an immediate hazard that will result in severe personal injury or death.

## **WARNING**

- A WARNING indicates an immediate hazard that could result in severe personal injury or death.

## **CAUTION**

- A CAUTION indicates a hazard or unsafe practice that could result in product or property damage or minor personal injury.

## **CAUTION**

- A CAUTION without the safety alert symbol indicates a potentially hazardous situation that could result in property damage.

## GENERAL WARNING

---

The following safety procedures must be followed whenever the vehicle is being operated, repaired, or serviced. Service technicians should become familiar with these general statements, which can be found throughout this manual. Also, other specific warnings appear throughout this manual and on the vehicle.

## **DANGER**

- **Battery – Explosive gases! Do not smoke. Keep sparks and flames away from the vehicle and service area. Ventilate when charging or operating vehicle in an enclosed area. Wear a full face shield and rubber gloves when working on or near batteries.**
- **Battery – Poison! Contains acid! Causes severe burns. Avoid contact with skin, eyes, or clothing. Antidotes:**
  - **External: Flush with water. Call a physician immediately.**
  - **Internal: Drink large quantities of milk or water. Follow with milk of magnesia or vegetable oil. Call a physician immediately.**
  - **Eyes: Flush with water for 15 minutes. Call a physician immediately.**
- **Gasoline – Flammable! Explosive! Do not smoke. Keep sparks and flames away from the vehicle and service area. Service only in a well-ventilated area.**
- **Do not operate gasoline vehicle in an enclosed area without proper ventilation. The engine produces carbon monoxide, which is an odorless, deadly poison.**

** WARNING**

- Follow the procedures exactly as stated in this manual, and heed all DANGER, WARNING, and CAUTION statements in this manual as well as those on the vehicle.
- Only trained technicians should service or repair the vehicle. Anyone doing even simple repairs or service should have knowledge and experience in electrical and mechanical repair. The appropriate instructions must be used when performing maintenance, service, or accessory installation.
- Prior to servicing the vehicle or leaving the vehicle unattended, turn the key switch OFF, remove the key, and place the Forward/Reverse handle in the NEUTRAL position. Chock the wheels when servicing the vehicle.
- To avoid unintentionally starting the vehicle:
  - Disconnect battery cables, negative (–) cable first (Figure 1-1, Page 1-3).
  - Disconnect the spark plug wire from the spark plug.
- Frame ground – Do not allow tools or other metal objects to contact frame when disconnecting battery cables or other electrical wiring. Do not allow a positive wire to touch the vehicle frame, engine, or any other metal component.
- Wear safety glasses or approved eye protection when servicing the vehicle. Wear a full face shield and rubber gloves when working on or near batteries.
- Do not wear loose clothing or jewelry such as rings, watches, chains, etc., when servicing the vehicle.
- Moving parts! Do not attempt to service the vehicle while it is running.
- Hot! Do not attempt to service hot engine or exhaust system. Failure to heed this warning could result in severe burns.
- Use insulated tools when working near batteries or electrical connections. Use extreme caution to avoid shorting of components or wiring.
- Check the vehicle Operation and Maintenance manual for proper location of all vehicle safety and operation decals and make sure they are in place and are easy to read.
- Any modification or change to the vehicle that affects the stability or handling of the vehicle, or increases maximum vehicle speed beyond factory specifications, could result in severe personal injury or death.
- Lift only one end of the vehicle at a time. Use a suitable lifting device (chain hoist or hydraulic floor jack) with 1000 lb. (454 kg) minimum lifting capacity. Do not use lifting device to hold vehicle in raised position. Use approved jack stands of proper weight capacity to support the vehicle and chock the wheels that remain on the floor. When not performing a test or service procedure that requires movement of the wheels, lock the brakes.
- If wires are removed or replaced, make sure wiring and wire harness are properly routed and secured. Failure to properly route and secure wiring could result in vehicle malfunction, property damage, personal injury, or death.
- For vehicles with cargo beds, remove all cargo before raising the bed or servicing the vehicle. If the vehicle is equipped with a prop rod, ensure that it is securely engaged while bed is raised. Do not close bed until all persons are clear of cargo bed area. Keep hands clear of all crush areas. Do not drop cargo bed; lower gently and keep entire body clear. Failure to heed this warning could result in severe personal injury or death.
- Improper use of the vehicle or failure to properly maintain it could result in decreased vehicle performance, severe personal injury, or death.
- Do not leave children unattended on vehicle.

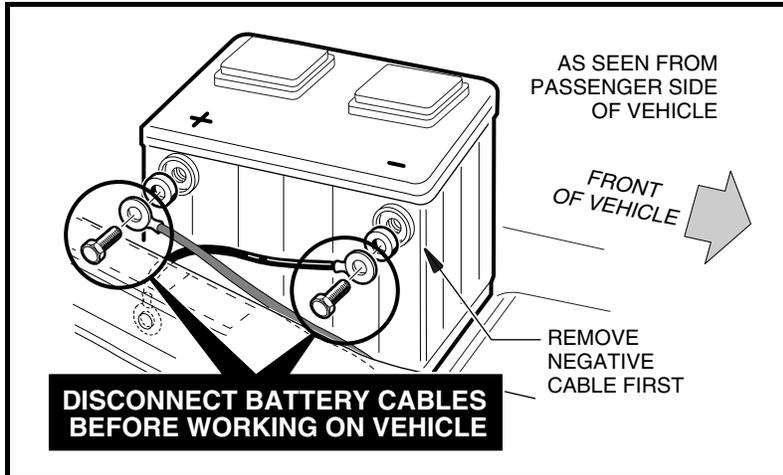


Figure 1-1 Battery

**Dear**

**Thanks very much for your visiting and  
patience.**

**Want to get more information,**

**Please click here, Go back to the page.**

**After your payment, you will have instant access to  
your download.**

**The Download Link will also be sent to your e-mail.**

**You will get the complete manual**

**Have any questions**

**please write to me**

**[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**