

V623



Bobcat[®]
VersaHANDLER

Service Manual

(S/N 367111001 - 367113000)

(S/N 367211001 - 367213000)



MAINTENANCE SAFETY

 


WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

CORRECT

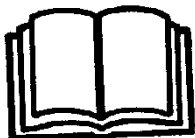


B-10731a

- ⚠ Never service the Bobcat VersaHANDLER without instructions.



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

 
CORRECT

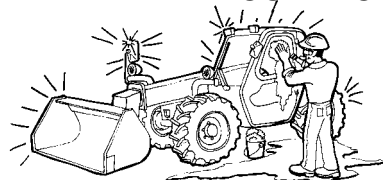

B-16082

- ⚠ Cleaning and maintenance are required daily.

 
WRONG

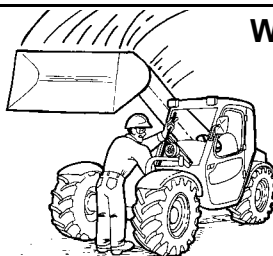

B-16080

- ⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause boom to drop. Do not go under boom when raised unless supported by an approved boom stop. Replace if damaged.

 
WRONG

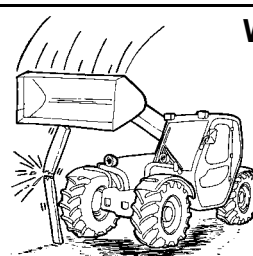

B-16079

- ⚠ Never work on VersaHANDLER with boom up unless boom is held by an approved boom stop. Replace if damaged.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

 
WRONG

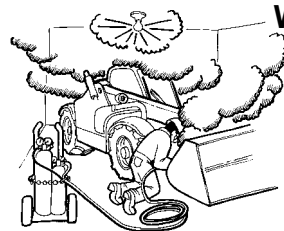

B-16081

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

 WRONG

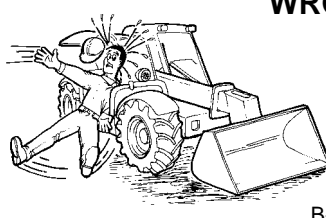

B-16078

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.

WRONG



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**.



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	70-01	HYDRAULIC CONNECTION SPECIFICATION	SPEC-01
AIR CLEANER SERVICE	10-01	HYDRAULIC CONTROL VALVE	20-01
AIR CONDITIONING SERVICE	80-01	HYDRAULIC/HYDROSTATIC FLUID	
AIR CONDITIONING SYSTEM FLOW	80-01	SPECIFICATIONS	SPEC-01
ALTERNATOR	60-01	HYDRAULIC/HYDROSTATIC SYSTEM.....	10-01
AXLE AND DIFFERENTIAL.....	40-01	HYDRAULIC RESERVOIR.....	20-01
AXLE PIVOT FRAME	40-01	HYDRAULIC SYSTEM INFORMATION	20-01
AXLES (FRONT AND REAR)	10-01	HYDROSTATIC DRIVE MOTOR	30-01
AXLE TOE-IN.....	40-01	HYDROSTATIC PUMP	30-01
		HYDROSTATIC SYSTEM INFORMATION.....	30-01
BASIC TROUBLESHOOTING	80-01		
BATTERY	60-01	INCHING SWITCH	60-01
BOOM ASSEMBLY	50-01	INNER BOOM	50-01
BOOM STOP	10-01	INSTRUMENT PANEL.....	60-01
BRAKE LIGHT SWITCH	60-01		
BRAKE VALVE	20-01	JOYSTICK.....	20-01, 60-01
BUCKET POSITIONING CYLINDER.....	20-01	JOYSTICK PANEL.....	60-01
COMPONENTS	80-01	LIFT CYLINDER	20-01
COMPRESSOR	80-01	LIFTING AND BLOCKING THE VersaHANDLER ...	10-01
CONDENSER	80-01	LIGHTS.....	60-01
CONVERSIONS	SPEC-01	LUBRICATION.....	10-01
DASH COVERING/STEERING COLUMN COVER	60-01	MACHINE TORQUE SPECIFICATIONS	SPEC-01
DRIVE BOX	20-01	MAIN RELIEF VALVE	20-01
DRIVE SHAFT	40-01	MUFFLER.....	70-01
ELECTRICAL SYSTEM INFORMATION	60-01	OIL COOLER.....	30-01
ENGINE AND ENGINE MOUNTS	70-01	OPERATOR CAB	10-01, 50-01
ENGINE COOLING SYSTEM.....	10-01	OPERATOR SEAT	50-01
ENGINE COMPONENTS AND TESTING	70-01		
ENGINE COVER	10-01, 50-01	PARKING BRAKE.....	40-01
ENGINE/HYDROSTAT ASSEMBLY	70-01	PEDAL ASSEMBLY	60-01
ENGINE LUBRICATION SYSTEM.....	10-01	PIVOT LINK.....	50-01
ENGINE SPECIFICATIONS.....	SPEC-01	PRESSURE SWITCH.....	80-01
ENGINE SPEED CONTROL	70-01		
EVAPORATOR/BLOWER UNIT.....	80-01	QUICK TACH.....	50-01
EXPANSION VALVE	80-01	QUICK TACH CYLINDER.....	20-01
EXTENSION CYLINDER	20-01		
FAN MOTOR.....	20-01	RADIATOR	70-01
FENDER	50-01	REAR WEIGHTS.....	50-01
FLYWHEEL AND HOUSING.....	70-01	REAR WIPER MOTOR.....	60-01
FRAME LEVELING CYLINDER.....	20-01	RECEIVER/DRIER	80-01
FRONT AXLE	40-01	RECONDITIONING THE ENGINE	70-01
FRONT AXLE WITH FRAME LEVELING	40-01	REGULAR MAINTENANCE	80-01
FRONT WIPER MOTOR.....	60-01		
FUEL SYSTEM	10-01	SAFETY.....	80-01
FUEL TANK.....	50-01	SERVICE SCHEDULE	10-01
		SPARK ARRESTOR MUFFLER.....	10-01
GEAR PUMP	20-01	STARTER	60-01
GENERAL AIR CONDITIONING SERVICE		STEERING ANGLE ADJUSTMENTS	40-01
GUIDELINES	80-01	STEERING CYLINDER	20-01
		STEERING MODE VALVE BLOCK	20-01
HEATER ASSEMBLY.....	80-01	STEERING VALVE	20-01
		SWITCH PANEL.....	60-01
		SYSTEM CHARGING & RECLAMATION	80-01

ALPHABETICAL INDEX (CONT'D)

SYSTEM TROUBLESHOOTING.....	80-01
TEMPERATURE/PRESSURE	80-01
TIRE MAINTENANCE	10-01
TILT CYLINDER	20-01
TOP WIPER MOTOR	60-01
TORQUE SPECIFICATIONS FOR BOLTS.....	SPEC-01
TOWING THE VersaHANDLER	10-01
TRANSPORTING THE VersaHANDLER.....	10-01
TRAVEL/SIGNAL LEVER	60-01
TROUBLESHOOTING.....	40-01, 70-01
 VersaHANDLER SPECIFICATIONS.....	 SPEC-01
 WEAR PADS (FRONT).....	 50-01
WEAR PADS (REAR)	50-01

CONTENTS

FOREWORD.....	II
SAFETY INSTRUCTIONS	V
SERIAL NUMBER LOCATIONS	IX
DELIVERY REPORT.....	X
BOBCAT VERSAHANDLER IDENTIFICATION	X
SAFETY AND MAINTENANCE.....	10-01
HYDRAULIC SYSTEM	20-01
HYDROSTATIC SYSTEM.....	30-01
DRIVE SYSTEM	40-01
MAIN FRAME	50-01
ELECTRICAL SYSTEM AND ANALYSIS	60-01
ENGINE SERVICE	70-01
HEATING, VENTILATION, AIR CONDITIONING	80-01
SPECIFICATIONS.....	SPEC-01

**SAFETY &
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

**DRIVE
SYSTEM**

MAIN FRAME

**ELECTRICAL
SYSTEM &
ANALYSIS**

**ENGINE
SERVICE**

HVAC

SPECIFICATIONS

FOREWORD

This manual is for the Bobcat VersaHANDLER mechanic. It provides necessary servicing and adjustment procedures for the Bobcat VersaHANDLER and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, Starting procedure, daily checks, etc.

A general inspection of the following items must be made after the VersaHANDLER has had service or repair:

 
1. Check that ROPS/FOPS (including right side window) is in good condition and is not modified.




2. Check that ROPS mounting hardware is tightened and is Bobcat approved.



3. The seat belt must be correctly installed, functional and in good condition.

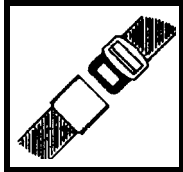

 
4. Check boom support device, replace if damaged.

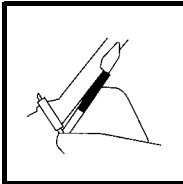

5. Machine signs must be legible and in the correct location.



 
6. Check tires for wear and pressure. Use only approved tires.

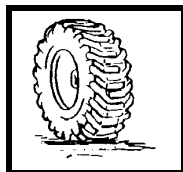


7. Check for correct function of the work lights.



 
8. The parking brake must function correctly.

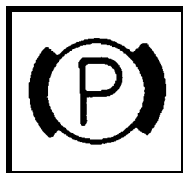

 
9. Enclosure door latches must open and close freely.

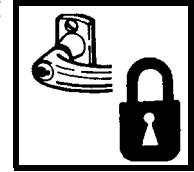


10. Attachment locking pins must function correctly and be in good condition.

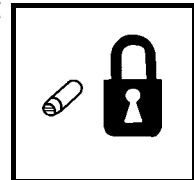 

 
11. Safety treads must be in good condition.

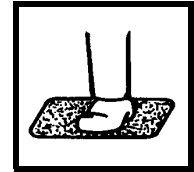

 
12. Check for correct function of indicator lamps and gauges.

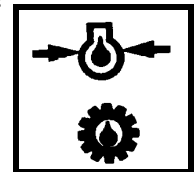

 13. Check hydraulic fluid level, engine oil level and fuel supply.

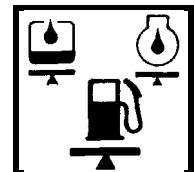

 
14. Inspect for fuel, oil or hydraulic fluid leaks.

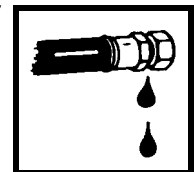


15. Lubricate the VersaHANDLER.



 
16. Check the condition of the battery and cables.

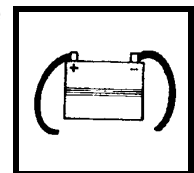

 
17. Inspect the air cleaner for damage or leaks. Check the condition of the element.

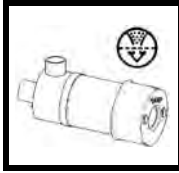

 
18. Check the electrical charging system.

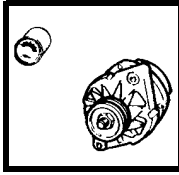

 19. Inspect for loosen or broken parts or connections.

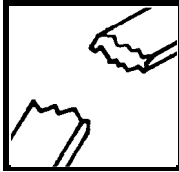

 20. Operate the VersaHANDLER and check all functions.

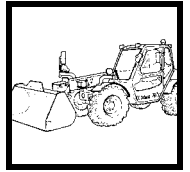

21. Check for any field modification not completed.



22. Recommend to the owner that all necessary corrections be made before the machine is returned to service.



**CALIFORNIA
PROPOSITION 65 WARNING**
Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.



Bobcat®

SAFETY INSTRUCTIONS



Safety Alert Symbol

This symbol with a warning statement means:
“Warning, be alert! Your safety is involved!”
Carefully read the message that follows.



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator's Handbook fastened to the operator cab. It's brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The VersaHANDLER Operator Training Course is available through your local dealer or at www.training.bobcat.com or www.bobcat.com. This course is intended to provide rules and practices of correct operation of the VersaHANDLER.
- The VersaHANDLER Safety Video is available from your Bobcat dealer or at www.training.bobcat.com or www.bobcat.com.

SI VH-0206 SM

SAFETY INSTRUCTIONS (CONT'D)

The dealer and owner/operator review the recommended uses of the product when delivered. If the owner/operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.



Call Before You Dig

1-888-258-0808

When you call, you will be directed to a location in your state/city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.)

SAFETY INSTRUCTIONS (CONT'D)

Fire Prevention

The machine and attachments have components that are at high temperature under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.


Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it will increase fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential hazard.

The spark arrestor muffler is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

- Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.
- The operator cab, engine compartment, and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazard and overheating.
- Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part.
- Check fuel and hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Tighten or replace any parts that show leakage. Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.
- Do not use ether or starting fluids on any engine which has glow plugs. These starting aids can cause explosion and injure you or bystanders.
- Always clean the machine, disconnect the battery, and disconnect the wiring from the controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding. Have good ventilation when grinding or welding painted parts. Wear a dust mask when grinding painted parts. Toxic dust or gas can be produced.
- Stop the engine and let it cool before adding fuel. **NO SMOKING!**

- Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.
- Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).

 Figure 1

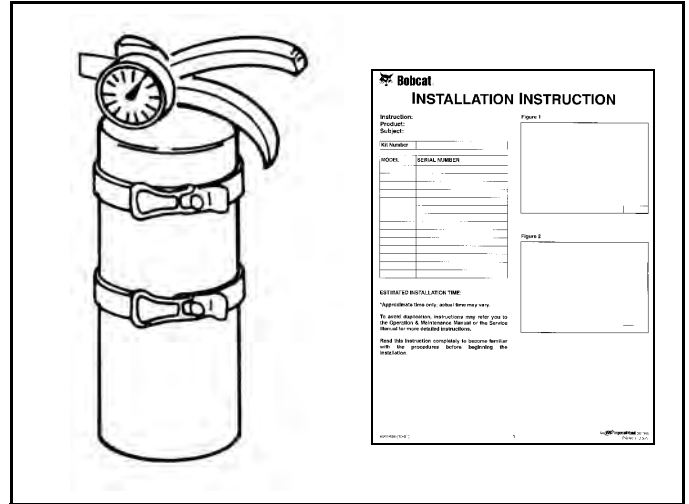

- Know where fire extinguishers and first aid kits are located and how to use them. Fire extinguishers are available from your Bobcat dealer [**Figure 1**].



Bobcat®

SERIAL NUMBER LOCATIONS

Always use the serial number of the VersaHANDLER when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

VersaHANDLER Serial Number


Figure 2



The front, on the right side of the chassis [Figure 2].

Engine Serial Number

 Figure 3

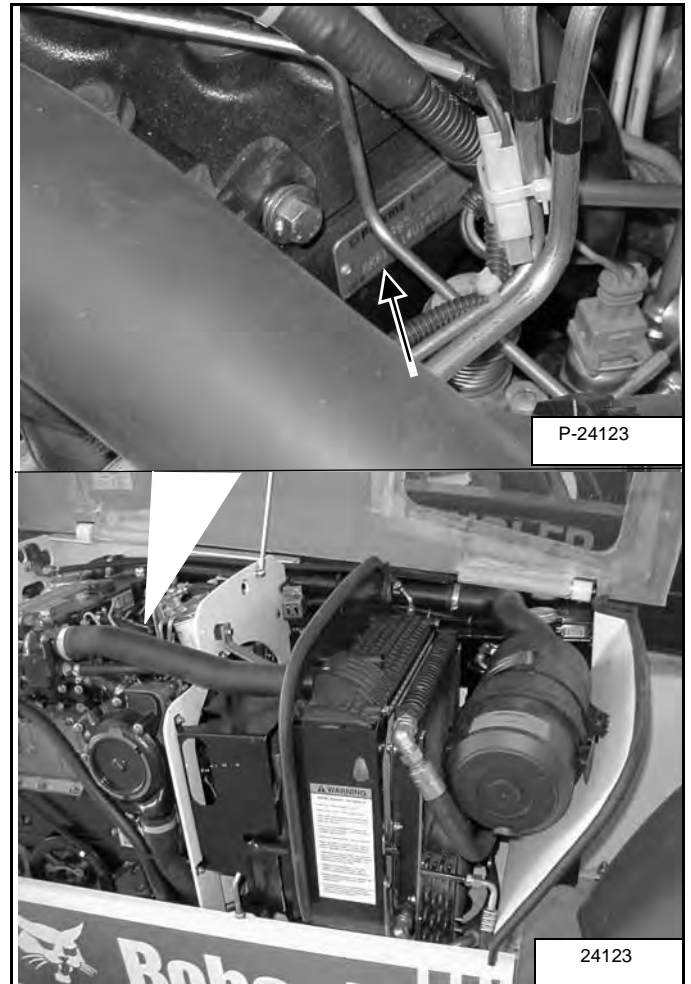

The engine serial number is stamped on a plate near the injection pump or at the rear of the cylinder block [Figure 3]. Always use the full number when ordering replacement parts.

Other Serial Numbers


Some components may also have serial numbers. Always use these serial numbers when requesting parts.

DELIVERY REPORT

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the VersaHANDLER is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely [Figure 4].

Figure 4

 BOBCAT VersaHANDLER IDENTIFICATION

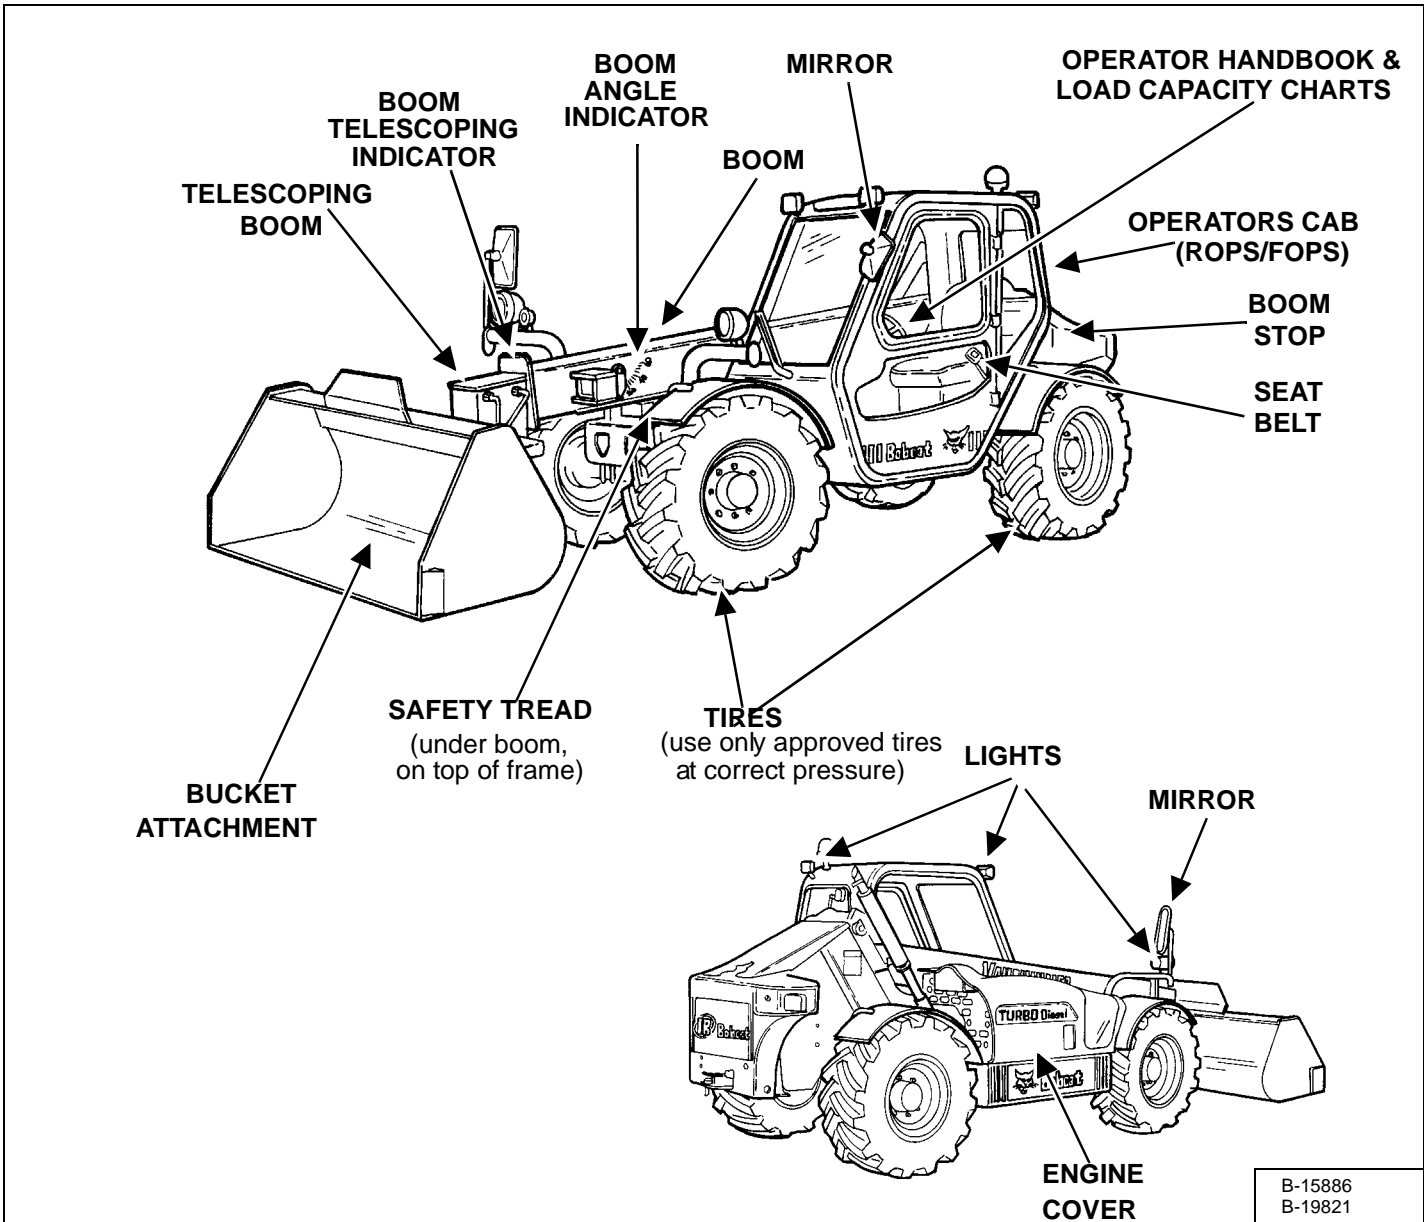

SAFETY AND MAINTENANCE

AIR CLEANER SERVICE 10-60-1
 Replacing Filter Element 10-60-1

AXLES (FRONT AND REAR) 10-110-1
 Checking Oil Level (Front Differential) 10-110-2
 Checking Oil Level (Planetary Carrier) 10-110-1
 Checking Oil Level (Rear Differential) 10-110-2
 Draining Oil (Front Differential) 10-110-2
 Draining Oil (Planetary Carrier) 10-110-1
 Draining Oil (Rear Differential) 10-110-2

BOOM STOP 10-150-1
 Installing Boom Stop 10-150-1
 Removing Boom Stop 10-150-1

ENGINE COOLING SYSTEM 10-70-1
 Checking The Coolant Level 10-70-1
 Cleaning The Cooling System 10-70-1
 Replacing The Coolant 10-70-2

ENGINE COVER 10-160-1
 Adjusting The Latch 10-160-1
 Opening And Closing The Engine Cover 10-160-1

ENGINE LUBRICATION SYSTEM 10-90-1
 Checking Engine Oil 10-90-1
 Oil Chart 10-90-1
 Replacing Oil And Filter 10-90-1

FUEL SYSTEM 10-80-1
 Filling The Fuel Tank 10-80-1
 Fuel Filter 10-80-1
 Fuel Specifications 10-80-1

HYDRAULIC/HYDROSTATIC SYSTEM 10-100-1
 Checking And Adding Fluid 10-100-1
 Replacing Hydraulic Fluid 10-100-2
 Replacing Hydraulic/Hydrostatic Filter 10-100-1

LIFTING AND BLOCKING THE VERSAHANDLER 10-10-1
 Procedure 10-10-1

LUBRICATION 10-120-1
 Procedure 10-120-1

Continued On Next Page

SAFETY AND MAINTENANCE (CONT'D)

OPERATOR CAB	10-20-1
Cab Door	10-20-1
Cab Door Window	10-20-1
Emergency Exit	10-20-1
SERVICE SCHEDULE	10-50-1
Chart	10-50-1
SPARK ARRESTOR MUFFLER	10-140-1
TIRE MAINTENANCE	10-130-1
Tire Mounting	10-130-1
Tire Rotation	10-130-1
Wheel Nuts	10-130-1
TOWING THE VERSAHANDLER	10-40-1
Procedure	10-40-1
TRANSPORTING THE VERSAHANDLER	10-30-1
Procedure	10-30-1

Dear

**Thanks very much for your visiting and
patience.**

Want to get more information,

Please click here, Go back to the page.

**After your payment, you will have instant access to
your download.**

The Download Link will also be sent to your e-mail.

You will get the complete manual

Have any questions

please write to me

admin@servicemanualperfect.com