

# **SideHill 9500 Combine Repair Operation And Tests**

**For complete service information also see:**

**9400, 9500 and 9600 Maximizer  
Combines—Repair . . . . . TM1401  
9400, 9500 and 9600 Maximizer  
Combines—Operation and Tests . . . . . TM1402  
6076 Engine . . . . . CTM42  
Cam Lobe Motors . . . . . CTM19**

**John Deere Harvester Works  
TM1545 (04JAN01)**

LITHO IN U.S.A.  
ENGLISH

## FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

This technical manual covers information unique to the SideHill 9500 Combine:

- Tune Up and Adjustment
- Electrical System
- Power Train Repair
- Power Steering and Brakes
- Header Repair
- Feeder House Repair

See TM1401; 9400, 9500 and 9600 Combines—Repair—for information on the following:

Engine . . . . .	Section 20
Fuel and Air . . . . .	Section 30
Electrical (Except Leveling) . . . . .	Section 40
Power Train Repair (Except Removing and Installing Transmission and Remove and Install Final Drive) . . . . .	Section 50
Power Steering and Brakes (Except Removing and Installing Brake Drum . . . . .	Section 60
Hydraulic Repair (Except Remove and Install Valve Block Solenoid, . . . . . Repair Check Valve, Remove and Install Right- and Left-Hand Cylinders) . . . . .	Section 70
Air Conditioning . . . . .	Section 90
Headers (Except Cutter Bar, 200 and 900 Series Cutting Platform) . . . . .	Section 100
Feeder House (Except for Remove and Install Feeder House, Conveyor, Floor Plate, Conveyor Drum, Shaft Slip Clutch) . . . . .	Section 110
Separator . . . . .	Section 120
Grain Tank Unloading . . . . .	Section 130
Engine Gearcase . . . . .	Section 140
Dial-A-Matic Header Height Control . . . . .	Section 160

**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**



# Contents

## SECTION 10—GENERAL

- Group 05—Safety
- Group 10—Identification Number Location
- Group 15—Specifications

## SECTION 40—ELECTRICAL SYSTEM

- Group 05—Circuit Breakers and Relays
- Group 10—Leveling System Repair

## SECTION 50—POWER TRAIN REPAIR

- Group 05—Transmission and Differential
- Group 10—Ring and Pinion Final Drive

## SECTION 60—POWER STEERING AND BRAKES

- Group 05—Brakes

## SECTION 70—HYDRAULIC REPAIR

- Group 05—Hydraulic Valves

## SECTION 100—HEADER DRIVE REPAIR

- Group 05—Header Drive Shaft Repair

## SECTION 110—FEEDER HOUSE REPAIR

- Group 05—Feeder House/Conveyor
- Group 10—Feeder House Conveyor Drum
- Group 15—Conveyor Shaft and Slip Clutch

## SECTION 350—SIDEHILL 9500 LEVELING SYSTEM—DIAGNOSTICS

- Group 05—SideHill Leveling System
- Group 10A—SideHill 9500 Leveling  
System—Electrical Diagnostics
- Group 20A—SideHill 9500 Leveling  
System—Hydraulic Diagnostics
- Group 20B—SideHill 9500 Leveling  
System—Theory of Operation

## Index

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

TM1545-19-04JAN01

COPYRIGHT© 1993  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION® Manual  
Previous Editions  
Copyright 1992 Deere & Company

Contents

10

40

50

60

70

100

110

350

INDX

Contents	
	Page
Group 05—Safety . . . . .	10-05-1
Group 10—Identification Number	
Location . . . . .	10-10-1
Group 15—Specifications . . . . .	10-15-1





## HANDLE FLUIDS SAFELY—AVOID FIRES

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



DX,FLAME -19-04JUN90

10  
05  
1  
-UN-23AUG88  
TS227

## PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



DX,SPARKS -19-03MAR93

 
-UN-23AUG88  
TS204

## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

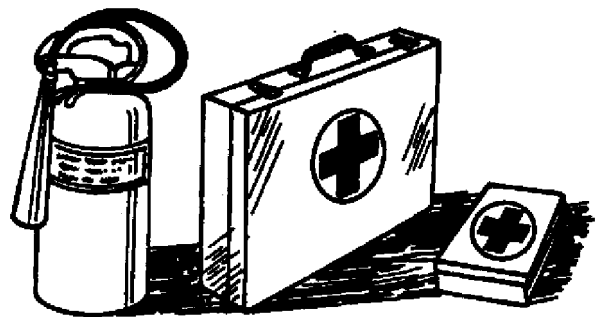

DX,FIRE2 -19-03MAR93

-UN-23AUG88  
TS291

## PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:

 
1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 quarts).
3. Get medical attention immediately.

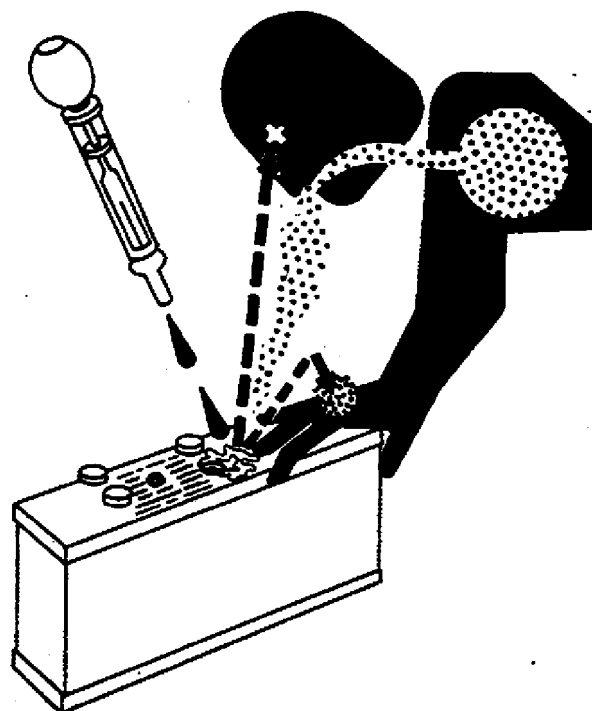

DX,POISON -19-21APR93

TS203 -UN-23AUG88


## AVOID HIGH-PRESSURE FLUIDS

 Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

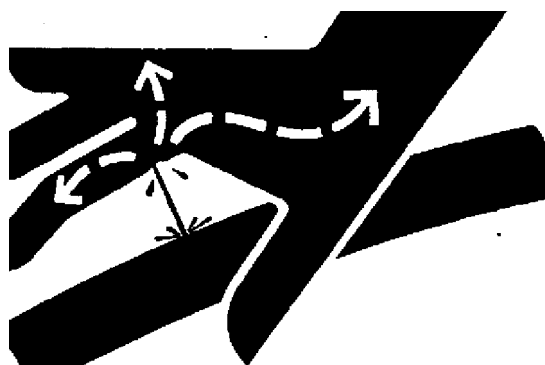

DX,FLUID -19-03MAR93


X9811 -UN-23AUG88

10  
05  
3

## PARK MACHINE SAFELY

 Before working on the machine:

- Lower all equipment to the ground.
- Stop the engine and remove the key.
- Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.

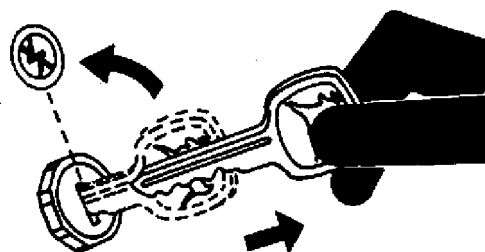


DX,PARK -19-04JUN90

TS230 -UN-24MAY89

## SUPPORT MACHINE PROPERLY

 Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

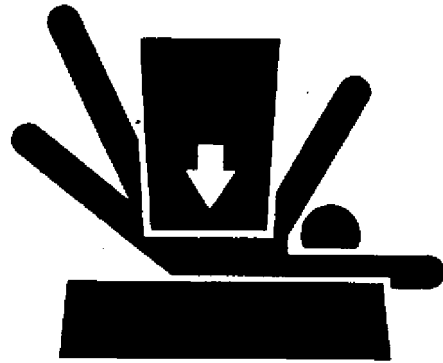

DX, LOWER -19-04JUN90

-UN-23AUG88  
TS229


## WEAR PROTECTIVE CLOTHING

 Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

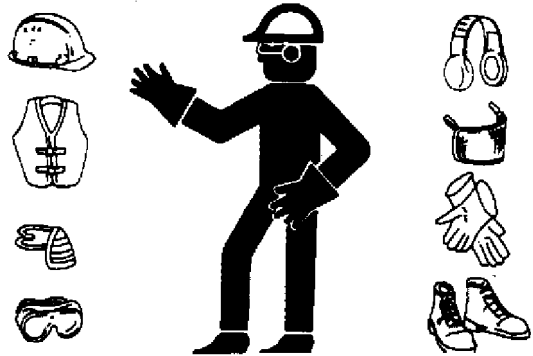


DX, WEAR -19-10SEP90

-UN-23AUG88  
TS206

## WORK IN CLEAN AREA

 Before starting a job:

- Clean work area and machine.
- Make sure you have all necessary tools to do your job.
- Have the right parts on hand.
- Read all instructions thoroughly; do not attempt shortcuts.

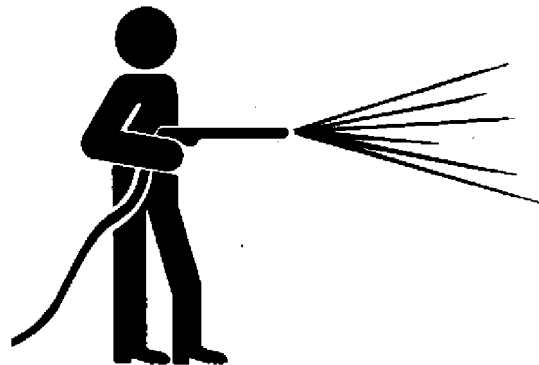


DX, CLEAN -19-04JUN90

-UN-18OCT88  
T6642EU

## SERVICE MACHINES SAFELY

 Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

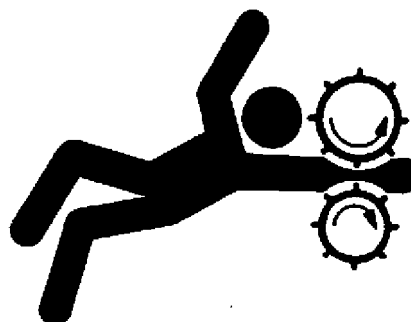


DX, LOOSE -19-04JUN90

TS228 -UN-23AUG88

## WORK IN VENTILATED AREA

 Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

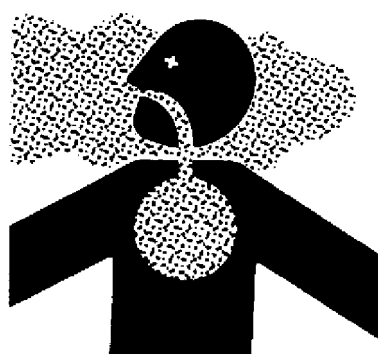

DX, AIR -19-04JUN90

TS220 -UN-23AUG88

## ILLUMINATE WORK AREA SAFELY

Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.




DX, LIGHT -19-04JUN90

TS223 -UN-23AUG88

## REPLACE SAFETY SIGNS

 Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.

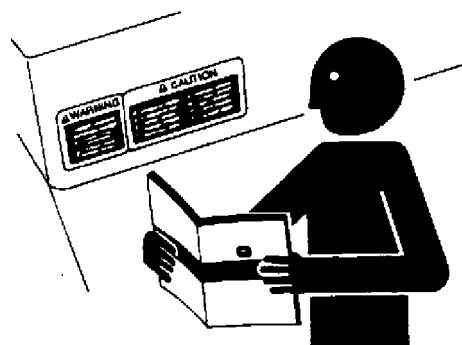


DX, SIGNS1 -19-04JUN90

TS201 -UN-23AUG88

## USE PROPER LIFTING EQUIPMENT

 Lifting heavy components incorrectly can cause severe injury or machine damage.

Follow recommended procedure for removal and installation of components in the manual.

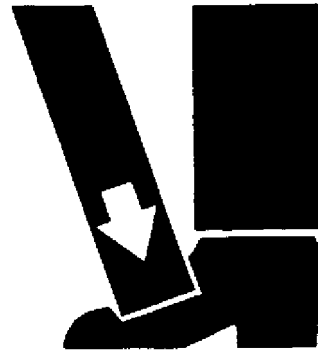

DX, LIFT -19-04JUN90

TS226 -UN-23AUG88

## SERVICE TIRES SAFELY

 
Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

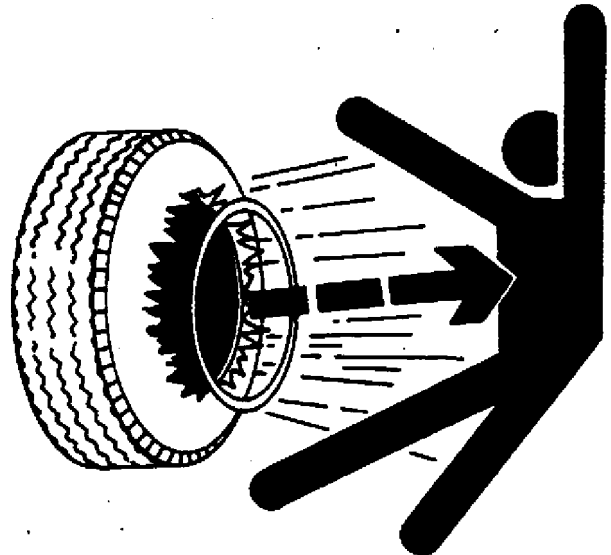

DX, RIM -19-24AUG90

TS211 -UN-23AUG88

## AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX, TORCH -19-03MAR93

TS953 -UN-15MAY90

## REMOVE PAINT BEFORE WELDING OR HEATING

 
Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

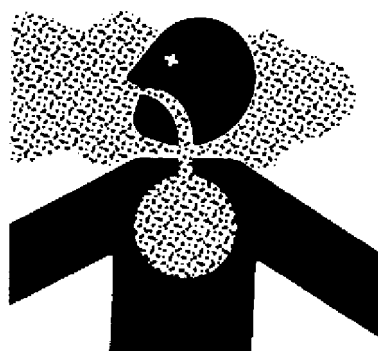

DX,PAINT -19-03MAR93

## USE PROPER TOOLS

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards.

Use power tools only to loosen threaded parts and fasteners.

For loosening and tightening hardware, use the correct size tools. DO NOT use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches.

Use only service parts meeting John Deere specifications.



DX,REPAIR -19-04JUN90