

**2254, 2256, 2258,
2264 and 2266
Combines
From Ser. No. 067766
Part 2**

(Sections 240 to 340)

For complete service information also see:

6068 Engine - (2254)	CTM104
6081 Engine - (2256, 2258, 2264, 2266)	
Repair.	CTM86
Operation and Tests.	CTM134
Cam-Lobe Motor (available in English only).	CTM19
Alternator and Starter Motor (avail- able in English only)	CTM77

**John Deere Werke Zweibrücken
TM4594 (27DEC00)**

**European Version
Printed in Germany
ENGLISCH**

FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and operation and tests. Repair sections tell how to repair the components. Operation and tests sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the

beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Technical Manuals are concise guides for specific machines. They are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

“Right-hand” and “left-hand” refer to the machine as seen in forward travel.

Fundamental service information is available from other sources covering basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes.

Note

**TECHNICAL MANUAL TM4594 (MARCH 99)
2254, 2256, 2258, 2264 AND 2266 COMBINES
(FROM SERIAL NUMBER 067766)**

This Technical Manual is divided into two parts.

This part includes Sections 05 to 230.

Sections 240 to 340 are included in Part 2.

ZX,DLR1,TM4593 -19-28FEB99

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

Note

Note

**TECHNICAL MANUAL TM4594 (MARCH 99)
2254, 2256, 2258, 2264 AND 2266 COMBINES
(FROM SERIAL NUMBER 067766)**

This Technical Manual is divided into two parts.

This part includes Sections 240 to 340.

Sections 05 to 230 are included in Part 1.

ZX,DLR2,TM4593 -19-28FEB99

Note

Contents

SECTION 05—Safety

Group 05—Safety Information

SECTION 10—General

Group 05—Lubricants and Coolant
Group 10—Torques for Hardware
Group 15—Type Plates
Group 20—Serial Numbers

SECTION 20—Engine

Group 05—Special Tools
Group 10—Engine on 2200 Series Combines
Group 15—Removing and Installing Engine

SECTION 30—Fuel, Air Intake and Cooling Systems

Group 05—Fuel System
Group 10—Air Intake System
Group 15—Cooling System

SECTION 40—Electrical System

Group 05—Connectors
Group 10—Alternator
Group 15—Starting Motor
Group 20—Main Electrical System
Group 25—Hillmaster Control
Group 26—Automatic Header Control (Lateral Tilt)
Group 30—Low Shaft-Speed Monitor System
Group 35—Harvest Performance Monitor

SECTION 50—Power Train

Group 05—Intermediate Transmission
Group 10—Transmission and Differential
Group 15—Planetary Final Drives
Group 20—Final Drives
Group 25—Hydrostatic Drive, Variable Pump
Group 30—Hydrostatic Drive, Fixed-Displacement Motor
Group 35—Hydrostatic Drive, Oil Change
Group 40—Cam Lobe Motor

SECTION 60—Brakes, Steering, Rear Axle

Group 05—Brake Operating Assembly
Group 10—Brakes

Group 15—Hydrostatic Steering

Group 20—Rear Axle

SECTION 70—Hydraulic System

Group 05—Hydraulic Reservoir and Lines
Group 10—Triple Hydraulic Pump
Group 15—Electro-Magnetic Control Valve
Group 20—Hydraulic Cylinders
Group 21—Hillmaster Hydraulic Cylinder
Group 25—Accumulators

SECTION 80—Miscellaneous

Group 05—Bearings and Shafts
Group 10—Drive Belts
Group 15—Drive Chains
Group 20—Side Guard

SECTION 90—Operator's Cab and Air Conditioning

Group 05—Air Conditioning System - R134a
Group 10—Operator's Cab Heating System
Group 15—Gear Shift Mechanism

SECTION 110—Feeder House

Group 05—Removing the Feeder House
Group 10—Bottom Feeder Drum
Group 15—Upper Feeder Shaft and Slip Clutch
Group 20—Drives
Group 25—Reverser
Group 30—Pivoting Shield

SECTION 120—Separator and Cleaning Unit

Group 05—Stone Trap
Group 10—Threshing Cylinder and Concave
Group 15—Beater/Second Cylinder and Second Concave
Group 20—Electric Clutch
Group 25—Countershaft, L.h. Drive Belt Pulley and Belt Guide
Group 30—Variable Cylinder Drive
Group 35—Cylinder Drive and Reduction Gear

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM4594-19-27DEC00

COPYRIGHT© 1999
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual

- Group 40—Countershaft for Straw Walker and Cleaning Shoe Drive
- Group 45—Straw Walkers and Straw Walker Crankshaft
- Group 50—Cleaning Fan and Fan Drive

SECTION 130—Grain Recovery and Unloading System

- Group 05—Tailings Elevator
- Group 10—Clean Grain Elevator
- Group 15—Filling the Grain Tank
- Group 20—Unloading the Grain Tank
- Group 25—Unloading Auger

SECTION 140—Special Equipment

- Group 05—Straw Chopper
- Group 10—Chaff Spreader

SECTION 210—General

- Group 05—Specifications

SECTION 220—Engine

- Group 05—Specifications

SECTION 230—Fuel, Air Intake and Cooling Systems

- Group 05—Fuel System

SECTION 240—Electrical System to Serial Number 068568

- Group 05—General
- Group 06—Test Equipment
- Group 10—Functional Schematic and Harness Diagrams
- Group 15A—Current Supply/Starting Motor
- Group 15B—Cold Weather Starting Aid
- Group 15C—Engine Shut-Off Device
- Group 15E—Instruments
- Group 15F—Chopper Distributor Adjustment
- Group 15G—Windshield Wiper/Washer System
- Group 15H—Radio, Interior Lighting
- Group 15L—Cigarette Lighter, Seat Compressor
- Group 15M—Lighting System
- Group 15N—Flasher Functions
- Group 15O—Beacon Lights
- Group 15P—Fan, Air Conditioning System
- Group 15Q—Electrical Mirror Adjustment
- Group 15R—Work Lights
- Group 15S—Straw Warning Device
- Group 15T—Reel Speed Adjustment
- Group 15V—Separator, Header
- Group 15W—Infotrak Monitor
- Group 15X—Harvest Performance Monitor
- Group 15Y—Hillmaster Leveling System

- Group 15Z—Separator Adjustment
- Group 15AA—Separator Adjustment, Combine Data Center
- Group 15AB—Header Adjustments
- Group 15AC—Grain Tank Unloading System
- Group 15AD—Four-Wheel Drive
- Group 15AF—Header Float Control
- Group 15AG—Header Float Control
- Group 15AH—Header Float Control
- Group 20—ContourMaster System

SECTION 241—Electrical System from Serial Number 068569

- Group 05—General
- Group 06—Test Equipment
- Group 10—Functional Schematic and Harness Diagrams
- Group 15A—Current Supply/Starting Motor
- Group 15B—Cold Weather Starting Aid
- Group 15C—Engine Shut-Off Device
- Group 15D—Fuse Tester
- Group 15E—Instruments
- Group 15F—Chopper Distributor Adjustment
- Group 15G—Windshield Wiper/Washer System
- Group 15H—Radio, Interior Lighting
- Group 15L—Cigarette Lighter, Seat Compressor
- Group 15M—Lighting System
- Group 15N—Flasher Functions
- Group 15O—Beacon Lights
- Group 15P—Fan, Air Conditioning System
- Group 15Q—Electrical Mirror Adjustment
- Group 15R—Work Lights
- Group 15S—Straw Warning Device
- Group 15T—Reel Speed Adjustment
- Group 15V—Separator, Header
- Group 15W—Infotrak Monitor
- Group 15X—Harvest Performance Monitor
- Group 15Y—Hillmaster Levelling System
- Group 15Z—Separator Adjustment
- Group 15AA—Separator Adjustment, Combine Data Center
- Group 15AB—Header Adjustments
- Group 15AC—Grain Tank Unloading System
- Group 15AD—Four-Wheel Drive
- Group 15AF—Header Float Control
- Group 15AG—Header Float Control
- Group 15AH—Header Float Control
- Group 20—ContourMaster System

SECTION 250—Power Train

- Group 05—Hydrostatic System
- Group 10—Testing Hydrostatic System
- Group 15—Inspect Parts Subject to Wear
- Group 20—Three-Speed Transmission

Continued on next page

SECTION 260—Brakes, Steering, Rear Axle

- Group 05—Brake Operating System
- Group 10—Drum Brakes

SECTION 270—Hydraulic System

- Group 05—General Information
- Group 10—Solenoid Valves
- Group 15—Hillmaster Leveling System
- Group 20—Hydraulic Tests

SECTION 290—Operator's Cab

- Group 05—Operator's Cab and Seat
- Group 10—Air Conditioning and Heating
- Group 15—Troubleshooting - Ventilation and Heating Systems
- Group 20—Operational Tests and Troubleshooting
- Group 25—Operation — Air Conditioning System

SECTION 340—Optional Equipment

- Group 05—Chaff Spreader

Index

Contents

Section 05 Safety

Contents

Page

Group 05—Safety Information 05-05-1

Contents

LIVE WITH SAFETY

Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.




DX,LIVE -19-15APR98

TS231 -19-07OCT88

SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

 Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

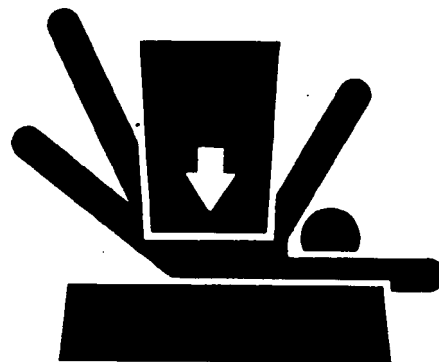

DX,LOWER -19-04JUN90

TS229 -UN-23AUG88

 
WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

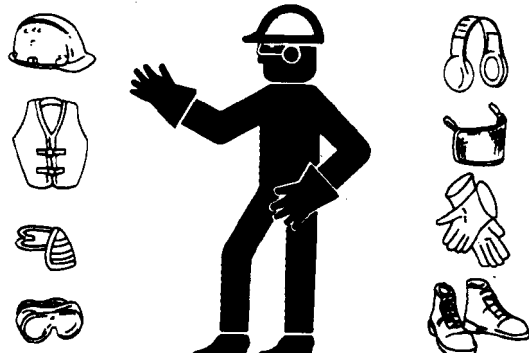

DX,WEAR -19-10SEP90

TS206 -UN-23AUG88

 
Safety Information

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

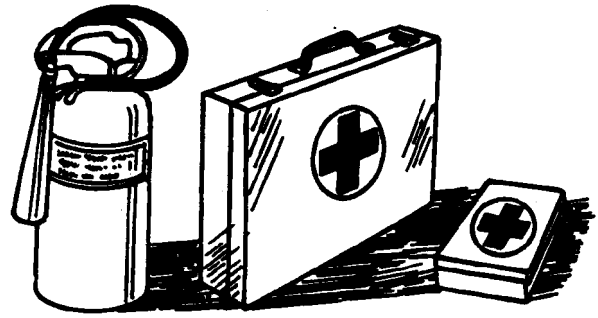


DX,FIRE2 -19-03MAR93

TS291
-UN-23AUG68

PARK MACHINE SAFELY

Before working on the machine:

 - Lower all equipment to the ground.
- Stop the engine and remove the key.
- Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.

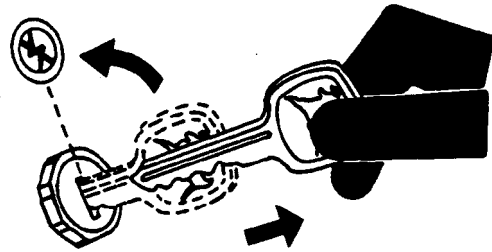

DX,PARK -19-04JUN90

TS230
-UN-24MAY89

USE PROPER TOOLS

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards.

Use power tools only to loosen threaded parts and fasteners.

For loosening and tightening hardware, use the correct size tools. DO NOT use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches.

Use only service parts meeting John Deere specifications.



DX,REPAIR -19-04JUN90


TS779
-UN-08NOV89

Safety Information

WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

 If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

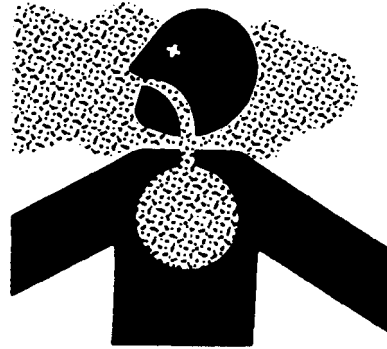


DX,AIR -19-04JUN90

TS220
-UN-23AUG88

WORK IN CLEAN AREA

Before starting a job:

 - Clean work area and machine.
- Make sure you have all necessary tools to do your job.
- Have the right parts on hand.
- Read all instructions thoroughly; do not attempt shortcuts.

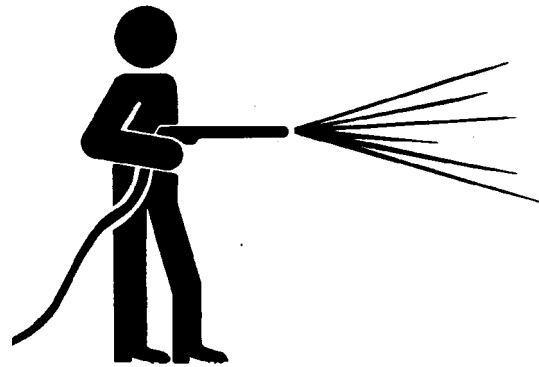

DX,CLEAN -19-04JUN90

T6642EJ
-UN-18OCT88

HANDLE FLUIDS SAFELY—AVOID FIRES

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



DX,FLAME -19-04JUN90

TS227
-UN-23AUG88

REMOVE PAINT BEFORE WELDING OR HEATING

Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.



DX,PAINT -19-03MAR93

TS220 -UN-23AUG88

 
AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

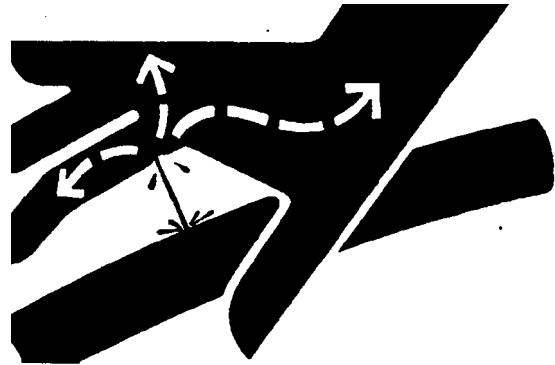

DX,FLUID -19-03MAR93

X9811 -UN-23AUG88

Safety Information

PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



DX.SPARKS -19-03MAR93

TS204 -UN-23AUG88

PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:

 
1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 quarts).
3. Get medical attention immediately.

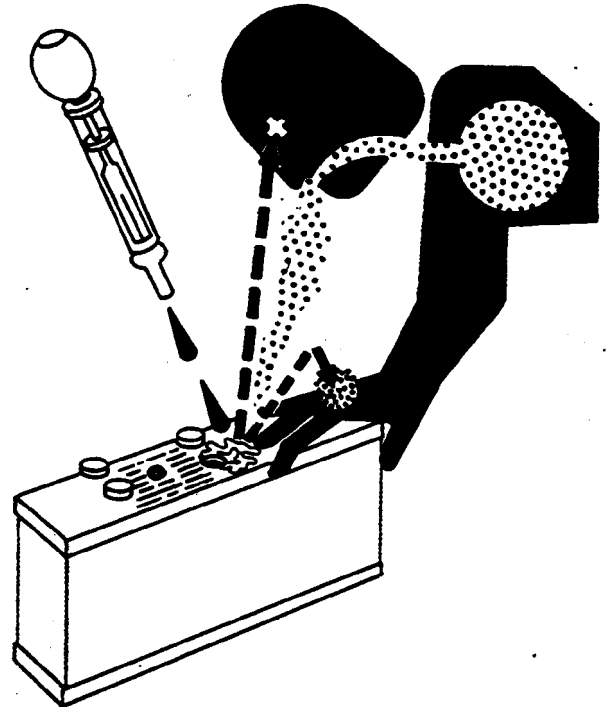

DX.POISON -19-21APR93

TS203 -UN-23AUG88

Safety Information

AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.




DX,TORCH -19-03MAR93

TS953 -UN-15MAY90

ILLUMINATE WORK AREA SAFELY

 Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.

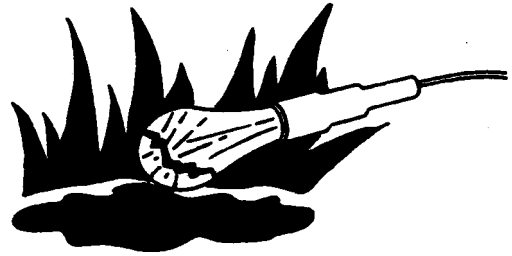

DX,LIGHT -19-04JUN90

TS223 -UN-23AUG88

REPLACE SAFETY SIGNS

Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.




DX,SIGNS1 -19-04JUN90

TS201 -UN-23AUG88

USE PROPER LIFTING EQUIPMENT

Lifting heavy components incorrectly can cause severe injury or machine damage.

 Follow recommended procedure for removal and installation of components in the manual.

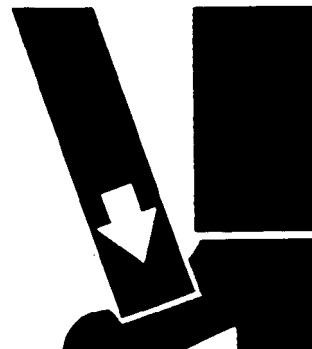

DX,LIFT -19-04JUN90

TS226 -UN-23AUG88