

# **675 and 675B Skid Steer Loaders**

## **TECHNICAL MANUAL**

**John Deere  
Lawn & Grounds Care Division  
TM1374 (Sept 94)**

P

R

675 Skid-Steer Loader

F

P

R

TM1374 (24APR90)

F

# Contents

## SECTION 10—GENERAL INFORMATION

- Group 05—Introduction and Safety
- Group 10—General Specifications
- Group 15—Cap Screw Torque
- Group 20—Tune-Up
- Group 25—Fuel and Lubrication
- Group 30—Serial Numbers

## SECTION 20—ENGINE

- Group 05—Engine Removal and Installation
- Group 10—Cooling System

## SECTION 30—FUEL AND AIR SYSTEM

- Group 05—Throttle Control Linkage
- Group 10—External Fuel Supply

## SECTION 40—ELECTRICAL

- Group 05—Seat Lockout Switch

## SECTION 50—POWER TRAIN

- Group 05—Hydrostatic Pumps
- Group 10—Hydrostatic Motor
- Group 15—Drive Chains and Axles
- Group 20—Drive Shaft

## SECTION 60—STEERING AND BRAKES

- Group 05—Park Brake
- Group 10—Steering Neutralizer

## SECTION 70—HYDRAULICS

- Group 05—Hydraulic Charge Pump
- Group 10—Main Control Valve
- Group 12—Auxiliary Control Valves
- Group 15—Hydraulic Cylinders
- Group 20—Oil Cooler
- Group 25—Miscellaneous Hydraulics
- Group 30—Lift Arms and Stops

## SECTION 210—SPECIFICATIONS/OPERATIONAL CHECKOUT PROCEDURE

- Group 01—Specifications
- Group 05—Operational Checkout Procedure

## SECTION 220—ENGINE/FUEL SYSTEM OPERATION AND TESTS

- Group 05—675 Engine System Checkout
- Group 10—675 Engine System Diagnosis

## SECTION 240—ELECTRICAL OPERATION AND TESTS

- Group 05—Electrical System Checkout
- Group 10—Electrical System Diagnosis
- Group 15—Component Locations/Wiring Diagrams

## SECTION 250—POWER TRAIN OPERATION AND TESTS

- Group 05—Power Train System Checkout
- Group 10—Power Train System Diagnosis

## SECTION 270—HYDRAULIC OPERATION AND TESTS

- Group 05—Hydraulic System Checkout
- Group 10—Hydraulic System Diagnosis

## Index

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

TM1374-19-24APR90

COPYRIGHT© 1987  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION™ Manual

**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**

10

R

20

O

30

O

40

F

50

60

P

70

R

210

O

220

240

O

R

250

O

270

O

INDX

F

P

R

O

O

250

270

INDX

R

O

O

F

P

R

O

O



# Section 10

# GENERAL INFORMATION

## Contents

Page

### Group 05—Introduction and Safety

|                        |         |
|------------------------|---------|
| Introduction . . . . . | 10-05-1 |
| Safety . . . . .       | 10-05-3 |



### Group 10—General Specifications

|                                 |         |
|---------------------------------|---------|
| Loader Specifications . . . . . | 10-10-1 |
| Bucket Specifications . . . . . | 10-10-2 |



### Group 15—Cap Screw Torque

|   |         |
|---|---------|
| Bolt Torque Chart . . . . .                     | 10-15-1 |
| Metric Hardware Torque Specifications . . . . . | 10-15-2 |

### Group 20—Tune-Up

|                                 |         |
|---------------------------------|---------|
| 675 Skid-Steer Loader . . . . . | 10-20-1 |
|---------------------------------|---------|



### Group 25—Fuel and Lubrication

|                                  |         |
|----------------------------------|---------|
| Fuel . . . . .                   | 10-25-1 |
| Fuel Specifications . . . . .    | 10-25-1 |
| Fuel Storage . . . . .           | 10-25-2 |
| Diesel Engine Oil . . . . .      | 10-25-3 |
| General Purpose Grease . . . . . | 10-25-4 |
| Hydraulic Oil . . . . .          | 10-25-4 |

### Group 30—Serial Numbers

|   |         |
|---|---------|
| Product Identification Number . . . . . | 10-30-1 |
|---|---------|





R

O

O

F

P

R

O

O

**INTRODUCTION**

This manual is part of a total service support program.

FOS MANUALS—REFERENCE

TECHNICAL MANUALS—MACHINE SERVICE

COMPONENT MANUALS—COMPONENT SERVICE

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic types of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise service guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed by an experienced service technician.

Component Technical Manuals are concise service guides for specific components. Component Technical Manuals are written as stand alone manuals covering multiple machine applications.



RW15559 -JUN-23AUG88

10  
05  
1

O53,INTRO2 -19-03JUL85



## FEATURES OF THIS TECHNICAL MANUAL

John Deere ILLUSTRATION format emphasizing illustrations and concise instructions in easy-to-use modules.



Emphasis on diagnosis, analysis, and testing so you can understand the problem and correct it.

Diagnostic information presented with the most logical and easiest to isolate problems first to help you identify the majority of routine failures quickly.



Step-by-step instructions for teardown and assembly.

Summary listing at the beginning of each group of all applicable specifications, wear tolerances, torque values, essential tools, and materials needed to do the job.



An emphasis throughout on safety—so you do the job right without getting hurt.



This technical manual was planned and written for you—an experienced service technician. Keep it in a permanent binder in the shop where it is handy. Refer to it when you need to know correct service procedures or specifications.



-UN-23AUG88  
RW5560



O53.INTRO3 -19-07OCT85



10  
05  
2

### SAFETY AND YOU

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.




10  
05  
3  
T81389 -UN-07DEC68

### PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

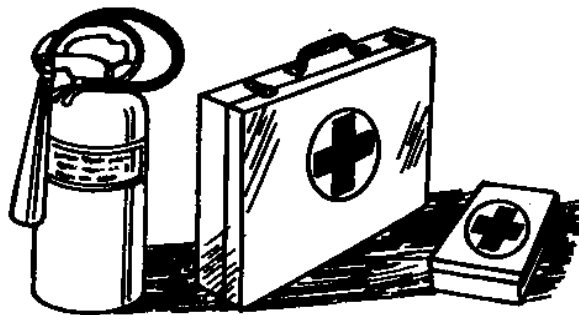

O53,FIRE2 -19-26JAN90


TS291 -UN-23AUG88

### HANDLE FUEL SAFELY—AVOID FIRES

 Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.



O53,FIRE1 -19-26JAN90


TS202 -UN-23AUG88

### LEARN MACHINE SAFETY

 Carefully read this manual. Learn how to operate the machine and how to use the controls properly.

Do not let anyone operate this machine without proper instruction.

Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.



O53,READ1 -19-08JUL85


M55220 -UN-29AUG88

### WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

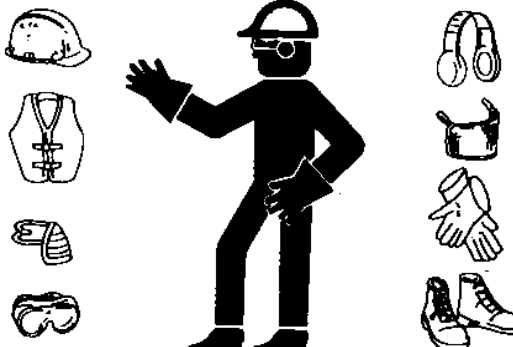

O53,WEAR -19-26JAN90

TS206 -UN-23AUG88

### PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.



O53,NOISE -19-26JAN90

TS207 -UN-23AUG88

10  
575

### AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury may call the Deere & Company Medical Department in Moline, Illinois, or other knowledgeable medical source.



O53,FLUID -19-26JAN90

X9811 -UN-23AUG88


10  
05  
6

### SERVICE LOADER SAFELY

Do not work under lift arms unless they are resting on lift arm stops.



Before you work on loader or any attached equipment:  
—Lower attachments to ground, or  
—Rest lift arms on lift arm stops.

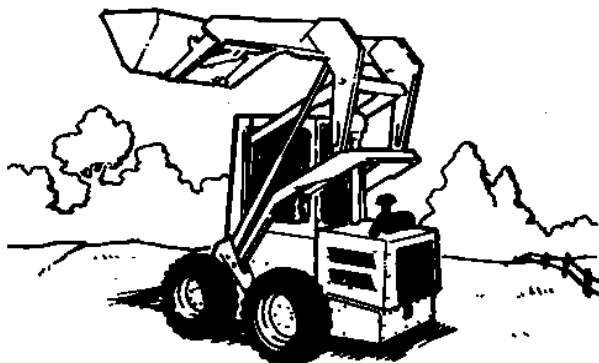

M38809 -UN-25APR89

Lower lift arms all the way and stop engine before you install or remove attachments.



Before you make repairs or adjustments, stop the engine.



Do not change engine governor settings or overspeed engine.

Keep the loader and attachments in good operating condition.



Keep safety devices in place and in working condition.

Keep all nuts, bolts, and screws tight so equipment is in safe working condition.

Before you work on any part of the engine, stop the engine, and let it cool. Hot engine parts can burn skin on contact.

Do not run engine unless park brake is locked.



Be careful to prevent clothing, jewelry, or long hair from getting caught in the fan blades, belts, or any other moving parts.



M21,SAU,I -19-09SEP85

### PREVENT BATTERY EXPLOSIONS


Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.



Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.



Always remove grounded (-) battery clamp first and replace it last.

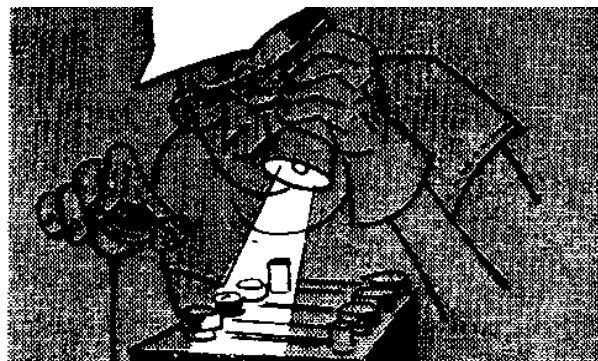

TS181 -UN-23AUG88

O53,EXPLO -19-29JAN86

**CAUTION:** Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 10—15 minutes. Get medical attention immediately.

If acid is swallowed:

1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
3. Get medical attention immediately.

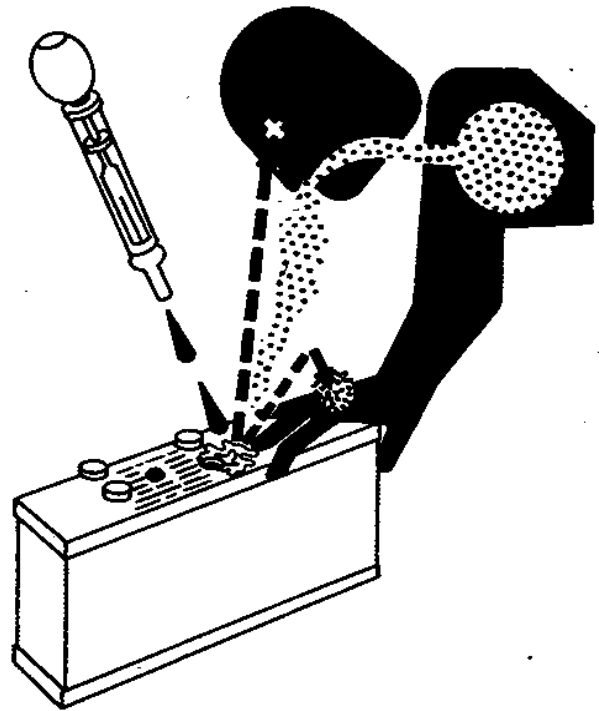

10  
05  
7

-UN-23AUG88

T5203

O53.ACID -19-29JAN86