 


# 4055, 4255, and 4455 Tractors Operation and Tests

## TECHNICAL MANUAL

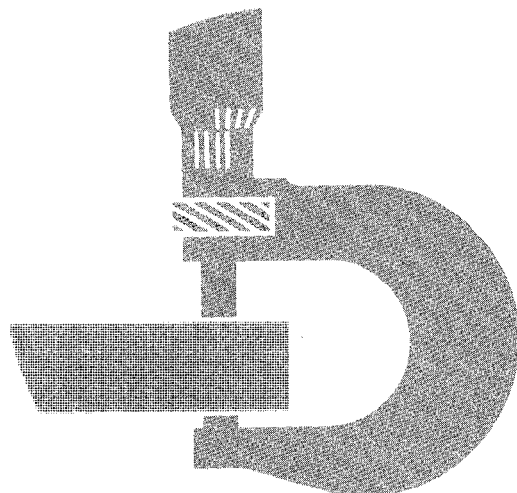

For complete service information also see:

4055, 4255, and 4455 Tractors	
Repair .....	TM1458
6076 Engine .....	CTM6
Radial Piston Pumps .....	CTM7
Engine Accessories .....	CTM11
MFWD Axles, 1100 Series .....	CTM17

**TM1459 (01NOV90)**

LITHO IN U.S.A.



# Introduction

## FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.



This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and diagnostics. Repair sections tell how to repair the components. Diagnostic sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances, and torque values.

Binders, binder labels, and tab sets can be ordered by John Deere dealers direct from the John Deere Distribution Service Center.

This manual is part of a total product support program.

## FOS MANUALS—REFERENCE

## TECHNICAL MANUALS—MACHINE SERVICE

## COMPONENT MANUALS—COMPONENT SERVICE

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Component Technical Manuals are concise service guides for specific components. Component technical manuals are written as stand-alone manuals covering multiple machine applications.

**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**



# Notice to Dealers

## NOTICE TO DEALERS

**IMPORTANT: The changes listed below make your current Tech Manual obsolete. Discard TM-1459 dated Jun-89. Please remove this page and route through your service department.**

The following revisions were made to this Tech Manual:

**SECTION 240:** Radar sensor calibration information (for early and late versions) has been added to Group 10D. Tachometer calibration and performance monitor operation has been moved from Group 20 into Group 10D. Group 20 has been deleted.

**SECTION 250:** The MFWD circuit has been revised to reflect the new "brake assist" feature. The wall chart reflects the new MFWD circuit. The early version MFWD circuit schematic is covered in Section 250.

**SECTION 255:** The MFWD circuit has been revised to reflect the new "brake assist" feature. The wall chart reflects the new MFWD circuit. The early version MFWD circuit schematic is covered in Section 255. Art showing "PST Control Valve Test Port Locations" has been added (Group 10).

*Notice to Dealers*

# Contents

## **SECTION 210—GENERAL INFORMATION**

- Group 05—Safety
- Group 10—Machine Operational Checkout
- Group 15—General Reference Information
- Group 20—Test Equipment Calibration

## **SECTION 220—ENGINE OPERATION AND TESTS**

- Group 05—General Information
- Group 10—System Diagnosis

## **SECTION 230—FUEL AND AIR OPERATION AND TESTS**

- Group 05—Fuel System

## **SECTION 240—ELECTRICAL OPERATION AND TESTS**

- Group 05—Operational Checks
- Group 10A—Diagnosis Introduction
- Group 10B—Starting Circuit
- Group 10C—Charging Circuit
- Group 10D—INTELLITRAK® System
- Group 10E—Lighting Circuits
- Group 10F—Accessory Circuits
- Group 25—Reference Diagrams and Charts

## **SECTION 250—QUAD-RANGE TRANSMISSION**

- Group 05—QUAD-RANGE Operational Checks
- Group 10—QUAD-RANGE Diagnosis
- Group 25—QUAD-RANGE Theory of Operation

## **SECTION 255—POWER SHIFT TRANSMISSION**

- Group 05—Power Shift Operational Checks
- Group 10—Power Shift Diagnosis
- Group 25—Power Shift Theory of Operation

## **SECTION 256—PTO, AXLES AND DIFFERENTIALS**

- Group 05—PTO, Axles and Differentials Operational Checks
- Group 10—PTO, Axles and Differentials Diagnosis
- Group 15—PTO, Axles and Differentials Tests

- Group 25—PTO, Axles and Differentials Theory of Operation

## **SECTION 260—STEERING AND BRAKES**

- Group 05—Steering and Brakes Operational Checks
- Group 10—Steering and Brakes Diagnosis
- Group 25—Steering and Brakes Theory of Operation

## **SECTION 270—HYDRAULIC SYSTEM**

- Group 05—Hydraulic System Operational Checks
- Group 10—Hydraulic System Diagnosis
- Group 15—Hydraulic System Tests
- Group 25—Hydraulic System Theory of Operation

## **SECTION 290—OPERATOR STATION**

- Group 05—Operational Checks
- Group 10—System Diagnosis
- Group 25—Theory of Operation

## **SECTION 299—DEALER FABRICATED TOOLS**

- Group 05—Dealer Fabricated Tools

## **Alphabetical Index**

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

TM1459-19-01NOV90

COPYRIGHT® 1990  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION™ Manual  
Previous Editions  
Copyright® 1989 Deere & Company



*Contents*

# Section 210 GENERAL INFORMATION

## Contents

### Page

#### Group 05—Safety

Safety ..... 210-05-1

#### Group 10—Machine Operational Checkout

Machine Operational Checkout ..... 210-10-1

#### Group 15—General Reference Information

Cross Reference Fitting Guide For  
Hydraulic Flow Testing ..... 210-15-1

Cross Reference For Consumer Product  
Test Kit ..... 210-15-3

Cross Reference For Universal Pressure  
Test Kit ..... 210-15-4

Inch Cap Screw Torque Values ..... 210-15-5

Metric Cap Screw Torque Values ..... 210-15-6

JIC Hydraulic Symbols ..... 210-15-7

Abbreviations ..... 210-15-8

#### Group 20—Test Equipment Calibration

JDG282 Temperature Gauge Check ... 210-20-1

##### Flow Meters

Nuday and OTC Flow Meters ..... 210-20-1

Method No. 1 ..... 210-20-2

Method No. 2 ..... 210-20-3

Pressure Gauge Calibration Checker ... 210-20-5

 
*Contents*

### **PREVENT MACHINE RUNAWAY**

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

**NEVER** start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

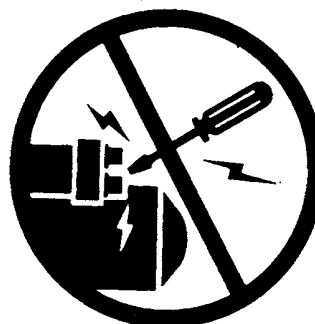

DX,BYPAS1 -19-04JUN90

TS177 -JUN-11JAN89

### **HANDLE FLUIDS SAFELY—AVOID FIRES**

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



DX,FLAME -19-04JUN90

TS227 -JUN-28AUG88

### **PREVENT BATTERY EXPLOSIONS**

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



DX,SPARKS -19-04JUN90


TS204 -JUN-23AUG88

## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

 Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

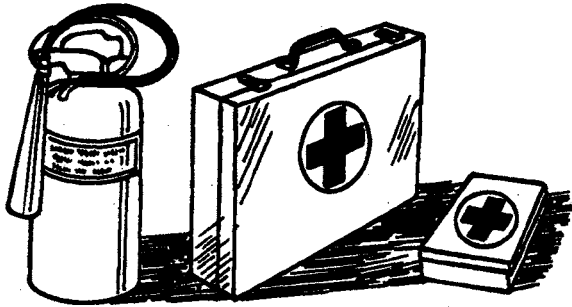

-JUN-23AUG88  
TS291

DX,FIRE2 -19-04JUN90

## PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:

 
1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 10—15 minutes. Get medical attention immediately.

If acid is swallowed:

1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
3. Get medical attention immediately.

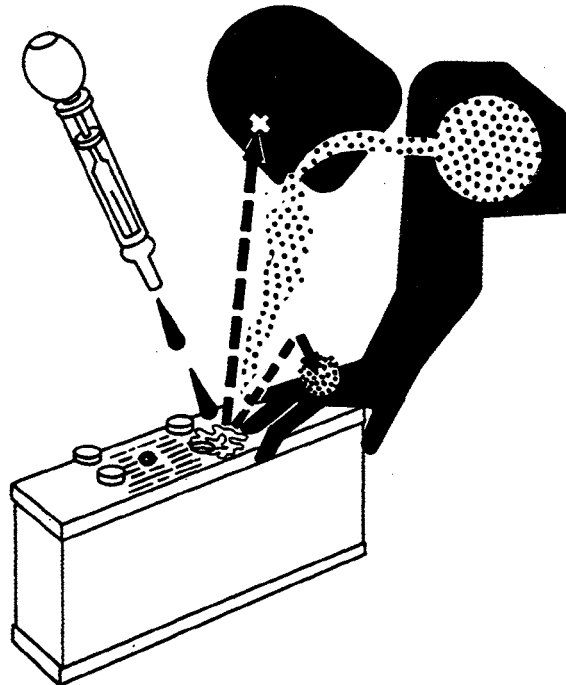

-JUN-23AUG88  
TS203

DX,POISON -19-04JUN90


### AVOID HIGH-PRESSURE FLUIDS

 Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury may call the Deere & Company Medical Department in Moline, Illinois, or other knowledgeable medical source.

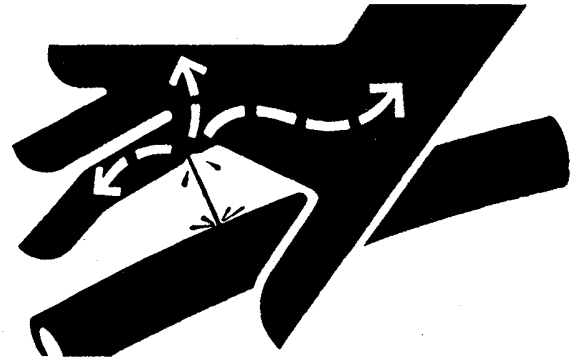

-JUN-23AUG88


X9811

DX,FLUID,NA -19-11JUN90

### PARK MACHINE SAFELY

 Before working on the machine:

- Lower all equipment to the ground.
- Stop the engine and remove the key.
- Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.

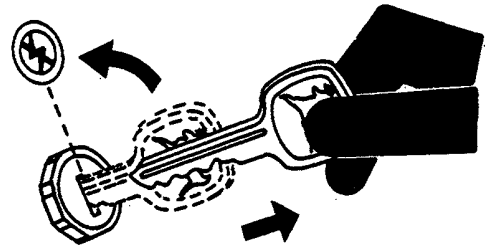

-JUN-24MAY89


T5230

DX,PARK -19-04JUN90

### SUPPORT MACHINE PROPERLY

 Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

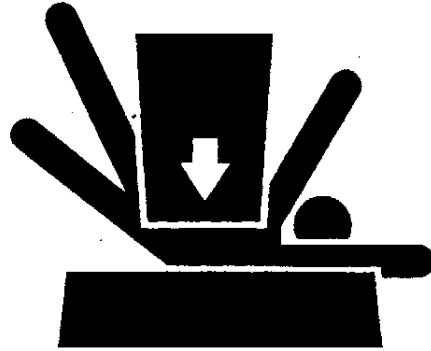

DX,LOWER -19-04JUN90

-UN-23AUG88  
TS229


### WEAR PROTECTIVE CLOTHING

 Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

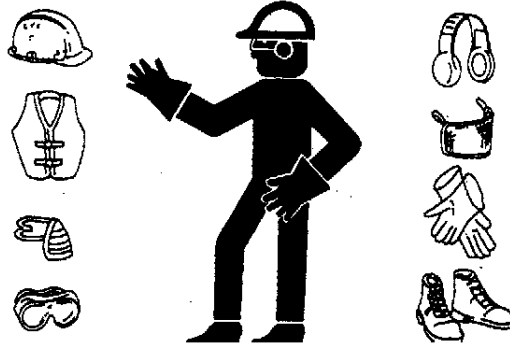


DX,WEAR -19-10SEP90

-UN-23AUG88  
TS206

### WORK IN CLEAN AREA

 Before starting a job:

- Clean work area and machine.
- Make sure you have all necessary tools to do your job.
- Have the right parts on hand.
- Read all instructions thoroughly; do not attempt shortcuts.

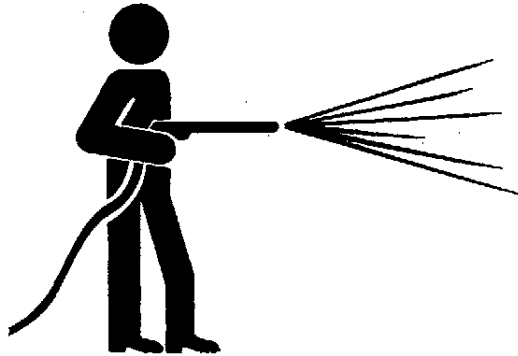


DX,CLEAN -19-04JUN90

-UN-18OCT88  
T6648EJ

### SERVICE MACHINES SAFELY

 Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

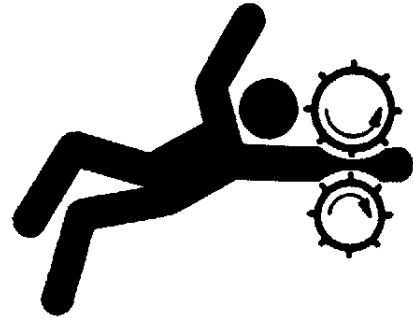


DX, LOOSE -19-04JUN90

-JUN-23AUG88  
TS228

### WORK IN VENTILATED AREA

 Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

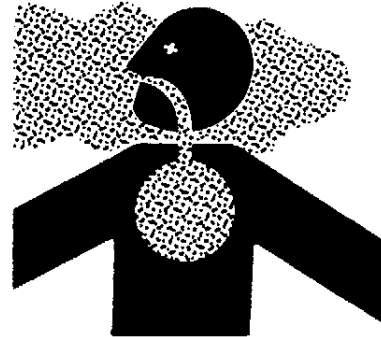

DX, AIR -19-04JUN90

-JUN-23AUG88  
TS220

### ILLUMINATE WORK AREA SAFELY

Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.

 


DX, LIGHT -19-04JUN90

-JUN-23AUG88  
TS223

### REPLACE SAFETY SIGNS

Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.

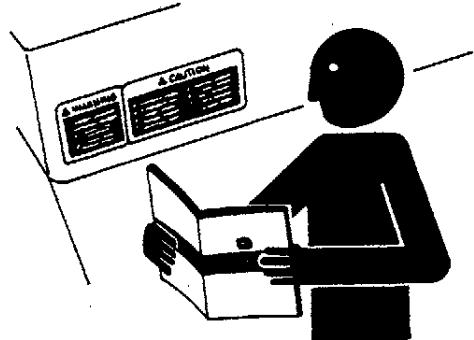

DX, SIGNS1 -19-04JUN90


-JUN-23AUG88  
TS201



### USE PROPER LIFTING EQUIPMENT

 Lifting heavy components incorrectly can cause severe injury or machine damage.

Follow recommended procedure for removal and installation of components in the manual.

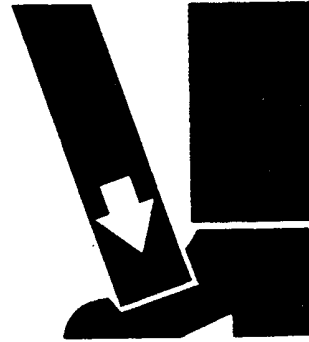


DX,LIFT -19-04JUN90

TS226  
-UN-23AUG88

### KEEP ROPS INSTALLED PROPERLY

 Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.

The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

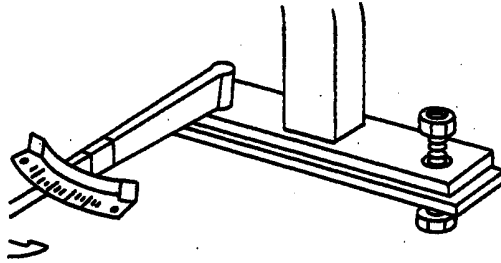

DX,ROPS3 -19-04JUN90

TS212  
-UN-23AUG88

### SERVICE TIRES SAFELY

 
Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

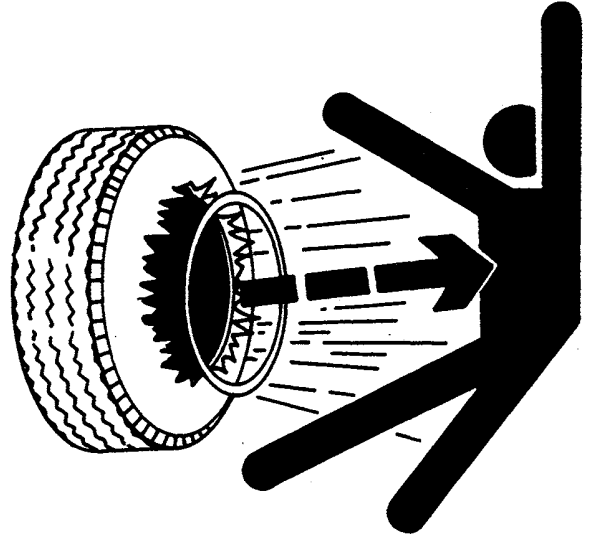

DX,RIM -19-24AUG90

JUN-23AUG88  
TS211


### AVOID HARMFUL ASBESTOS DUST

 Avoid breathing dust that may be generated when handling components containing asbestos fibers. Inhaled asbestos fibers may cause lung cancer.

Components in products that may contain asbestos fibers are brake pads, brake band and lining assemblies, clutch plates, and some gaskets. The asbestos used in these components is usually found in a resin or sealed in some way. Normal handling is not hazardous as long as airborne dust containing asbestos is not generated.

Avoid creating dust. Never use compressed air for cleaning. Avoid brushing or grinding of asbestos containing materials. When servicing, wear an approved respirator. A special vacuum cleaner is recommended to clean asbestos. If not available, wet the asbestos containing materials with a mist of oil or water.

Keep bystanders away from the area.

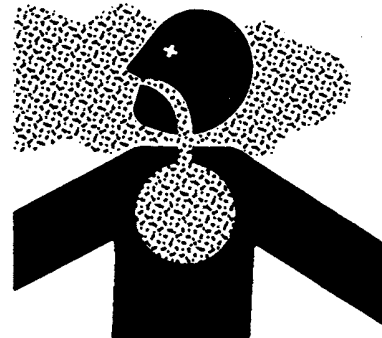

DX,DUST -19-27AUG90

JUN-23AUG88  
TS220

### AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-05OCT90

TS953 -JUN-15MAY90

### REMOVE PAINT BEFORE WELDING OR HEATING

 
Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

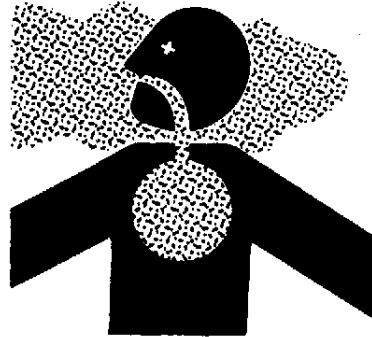

DX,PAINT -19-04JUN90

TS220 -JUN-23AUG88