 


**2155 and
2355N Tractors
- Repair -**

**TECHNICAL
MANUAL**

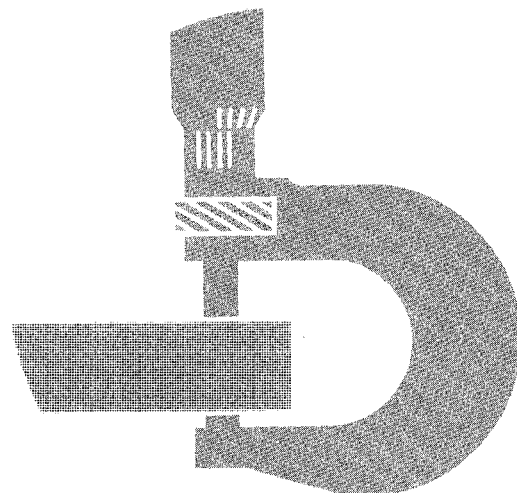

John Deere Werke Mannheim
TM4435 (Dec-89)
Litho in U.S.A.

Introduction

FOREWORD

This manual is written for experienced technicians. Essential tools required to perform certain service operations are identified in this manual and are recommended for use.

Live with safety: Read the safety messages on the first pages of this manual as well as the cautions presented throughout the text of the manual.



This is the safety alert symbol. When you see this symbol on the machine or in this manual, be alert to the risk of personal injury.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, service equipment and tools, other materials needed to do the job, service parts kits, specifications, wear tolerances and torque values.

Binders, binder labels and tab sets can be ordered by John Deere dealers direct from the John Deere Distribution Service Center.

This manual is part of a total product support program.

FOS Manuals – Reference

Technical Manuals – Machine service

Component Technical Manuals – Component service

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance and the basic types of failures and their causes. FOS Manuals are for the training of new personnel and for reference by experienced technicians.

Technical Manuals are concise guides for specific machines. Technical Manuals are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing and repair.

Component Technical Manuals are concise service guides for specific components. Component technical manuals are written as stand-alone manuals covering multiple machine applications.

The following Component Technical Manuals will be required to properly service these tractors:

- CTM-4, 300 Series Engines
- CTM-4422, MFWD Axles

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

Contents

2155 AND 2355 N TRACTORS TECHNICAL MANUAL TM4435 (DEC-89)

SECTION CONTENTS IN GROUPS – REPAIR

05 – SAFETY

10 – GENERAL

- 05 – Specifications
- 10 – Predelivery, delivery and after-sales inspections
- 15 – Lubrication and service
- 20 – Tune-up
- 25 – Tractor separation

20 – ENGINE

- 05 – Radiator, viscous fan drive and fan

30 – FUEL AND AIR INTAKE SYSTEM

- 05 – Fuel tank and water trap
- 10 – Cold weather starting aids
- 15 – Speed control linkage
- 20 – Air cleaner

40 – ELECTRICAL SYSTEM

- 05 – Wiring harnesses
- 10 – Controls and instruments
- 15 – Lighting system
- 20 – Starting motor
- 25 – Alternator

50 – POWER TRAIN

- 05 – Clutch operating systems
- 10 – Engine single-stage clutch (without Reverser)
- 15 – Engine single-stage clutch (with Reverser)
- 20 – Engine dual-stage clutch
- 25 – Hi-Lo shift unit
- 30 – Reverser
- 35 – Creeper transmission
- 40 – Transmission – center shift
- 45 – Synchronized transmission and transmission oil pump
- 50 – Collar-shift transmission and transmission oil pump
- 55 – Differential
- 60 – Final drives
- 65 – Independent PTO shafts
- 70 – Continuous-running PTO's
- 75 – Front wheel drive u.j. drive shaft and disk clutch

60 – STEERING SYSTEM AND BRAKES

- 05 – Power steering
- 10 – Hydraulic brakes
- 15 – Handbrake

70 – HYDRAULIC SYSTEM

- 05 – Valves
- 10 – Hydraulic pumps
- 15 – Rockshaft
- 20 – Selective control valves (spool type)
- 25 – Selective control valves (poppet valve type)

COPYRIGHT © 1989 DEERE & Co.
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION™ Manual
PREVIOUS EDITIONS
COPYRIGHT © 1987

INHALT-LB801AE-010489

SECTION CONTENTS IN GROUPS – REPAIR

70 – HYDRAULIC SYSTEM (CONTD.)

- 30 – ISO breakaway couplers
- 35 – ISO quick couplers
- 40 – Remote cylinder







 
 
 

90 – OPERATOR'S STATION

- 05 – Operator's seats
- 10 – 2-post ROLL-GARD
- 15 – 2-post telescopic ROLL-GARD

80 – MISCELLANEOUS

- 05 – Front axle
- 10 – Front and rear wheels

INHALT-LB802AE-010787
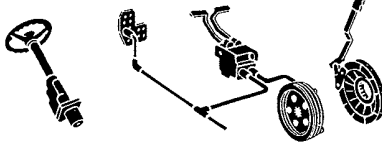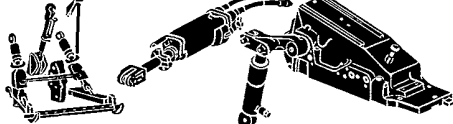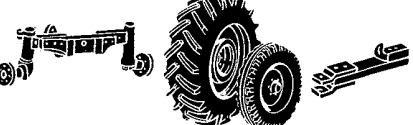
<p>SAFETY</p>		<p>05</p>
<p>GENERAL</p>		<p>10</p>
<p>ENGINE</p>		<p>20</p>
<p>FUEL AND AIR INTAKE SYSTEM</p>		<p>30</p>
<p>ELECTRICAL SYSTEM</p>		<p>40</p>
<p>POWER TRAIN</p>		<p>50</p>
<p>STEERING SYSTEM AND BRAKES</p>		<p>60</p>
<p>HYDRAULIC SYSTEM</p>		<p>70</p>
<p>MISCELLANEOUS</p>		<p>80</p>
<p>OPERATOR'S STATION</p>		<p>90</p>

FX 100 000 19

Contents

SAFETY AND YOU

This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.



T 81389

T81389;053;TMSAFE 19 07OCT85

IMPORTANT

The IMPORTANT message identifies potential problems which may cause consequential damage to machine. Following recommended procedure will instruct technician how to avoid problem.

A68;N01;0000 19 U 05NOV82

NOTES

The word NOTE is followed by a statement that identifies a qualification or exception to a previous statement. A "NOTE" may also identify nice-to-know information pertinent to, but not directly related to previous statement.

A68; N01;0000 19 V 05NOV82



OBSERVE SAFETY RULES

Avoid loose clothing that can catch in moving parts and put you out of work.

Wear your safety glasses while on the job.

Avoid working on equipment with the engine running. If it is necessary to make checks with the engine running, **ALWAYS USE TWO PEOPLE** – with the operator, at the controls, able to see the person doing the checking. Also, put the transmission in neutral, set the brake, and apply safety locks provided. **KEEP HANDS AWAY FROM MOVING PARTS.**

Keep transmission and brake control units properly adjusted at all times. Before making adjustments, stop engine.

Before removing any housing covers, stop engine. Take all objects from your pockets which could fall into the opened housings. Don't let adjusting wrenches fall into opened housings.

Don't attempt to check belt tension while the engine is running.

Don't adjust the fuel system while the machine is in motion.

Before repairing the electrical system, or performing a major overhaul, make sure the batteries are disconnected.

 
A6B; N01:0000 19 S 05NOV82

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital and fire department near your telephone.

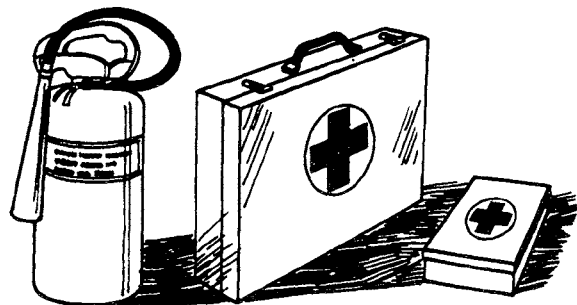

L 114 052

L114052;053;FIR2 19 15MAR89



HANDLE FLUIDS SAFELY – AVOID FIRES

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease and debris.

Do not store oily rags; they can ignite and burn spontaneously.



TS 227

 
TS227;053;FLAME 19 05JAN88

PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).

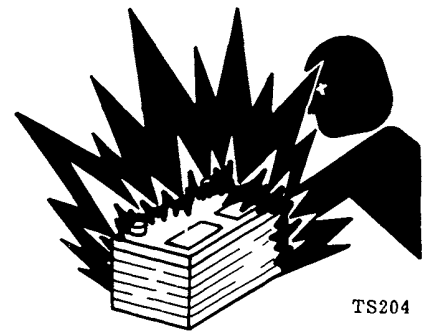

TS204

TS204;053;SPARKS 19 28JUN88

PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing and cause blindness if splashed into eyes.

Avoid the hazard by:

1. Filling the batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
 2. Apply baking soda or lime to help neutralize the acid.
 3. Flush your eyes with water for 10 – 15 minutes.
- Get medical attention immediately.

If acid is swallowed:

1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs or vegetable oil.
3. Get medical attention immediately.



TS203

 
TS203;053;POISON 19 21DEC87



AVOID HIGH-PRESSURE FLUIDS

Escaping fluid (fuel or hydraulic oil) under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure. Use a piece of cardboard to search for leaks.

If ANY fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type of injury, or gangrene may result.

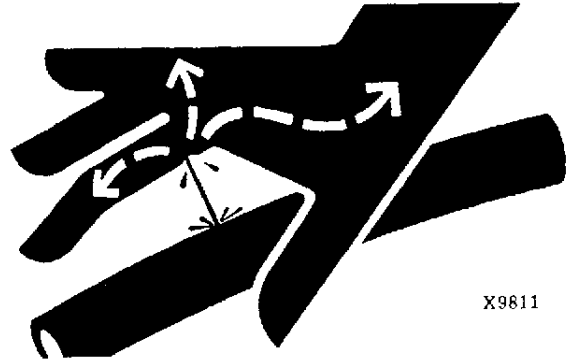

X9811

X9811;053;FLUID 19 18SEP87

AVOID HARMFUL ASBESTOS DUST

 
Avoid breathing dust that may be generated when handling components containing asbestos fibers. Inhaled asbestos fibers may cause lung cancer.

Components in John Deere products that may contain asbestos fibers are brake pads, brake band and lining assemblies, clutch plates and some gaskets. The asbestos used in these components is usually found in a resin or sealed in some way. Normal handling is not hazardous as long as airborne dust containing asbestos is not generated.

Avoid creating dust. Never use compressed air for cleaning. Avoid brushing or grinding of asbestos-containing materials. When servicing, wear an approved respirator. A special vacuum cleaner is recommended to clean asbestos. If not available, wet the asbestos-containing materials with a mist of oil or water.

Keep bystanders away from the area.

Please note designations on spare parts.

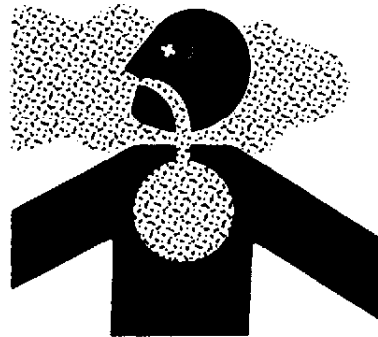

TS 220



L114 051

 
TS220,L114051;053;DUST 19 14APR88



WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

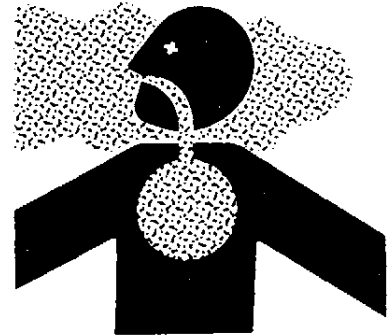


TS 220

TS220;053;AIR 19 05JAN88

WORK IN CLEAN AREA

Before starting a job:

 - Clean work area and machine.
- Make sure you have all necessary tools to do your job.
- Have the right parts on hand.
- Read all instructions thoroughly; do not attempt shortcuts.

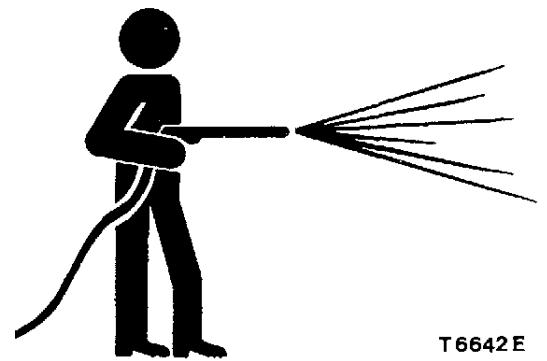


T 6642 E

T6642E;053;CLEAN 19 19JAN88

PARK MACHINE SAFELY

Before working on the machine:

 - Lower all equipment to the ground.
- Stop the engine and remove the key.
- Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.

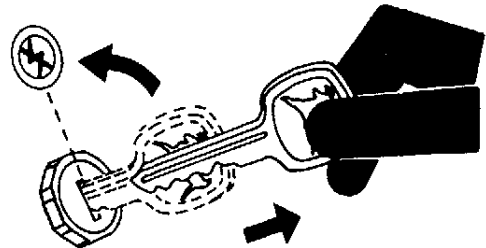

TS 230

TS230;053;PARK 19 05JAN88

PREVENT MACHINE RUNAWAY

Avoid possible injury or death from a machine runaway.

Do not start the engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with the transmission in neutral or "Park".




TS177

TS177;053;BYPAS1 19 21MAY85



SERVICE FRONT-WHEEL DRIVE TRACTOR SAFELY

 When servicing front-wheel drive tractor with the rear wheels supported off the ground and rotating wheels by engine power, always support front wheels in a similar manner. Loss of electrical power or transmission/hydraulic system pressure will engage the front driving wheels, pulling the rear wheels off the support if front wheels are not raised. Under these conditions, front drive wheels can engage even with switch in disengaged position.

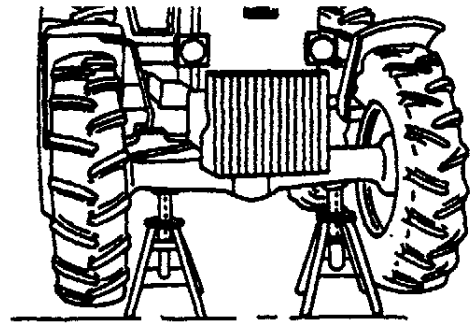


L114050

L114050-ESPDAE-140388

SERVICE MACHINE SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

 Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

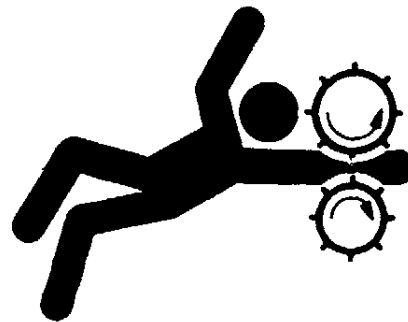


TS228

TS228;053;LOOSE 19 21DEC87

UNDERSTAND CORRECT SERVICE

 Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.

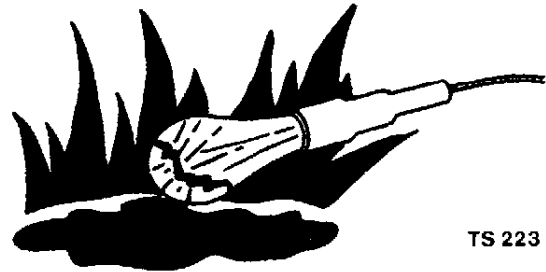

TS 223

Catch draining fuel, oil, or other fluids into suitable containers. Do not use food or beverage containers that may mislead someone into drinking from them. Wipe up spills at once.

 
TS223;053;LIGHT 19 23FEB88

USE TOOLS PROPERLY

Use tools appropriate to the work. Makeshift tools, parts, and procedures will not make good repairs.

Use pneumatic and electric tools only to loosen threaded parts and fasteners. Never use such tools to tighten fasteners, especially on light alloy parts.

Use only replacement parts meeting John Deere specifications.

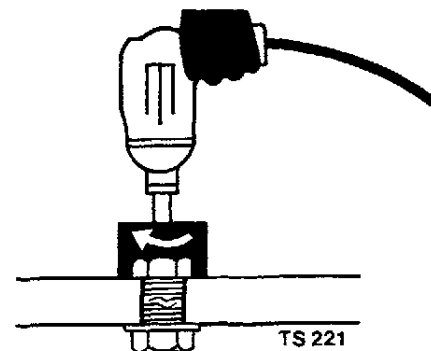

TS 221

 
TS221;053;REPAIR 19 21DEC87



SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

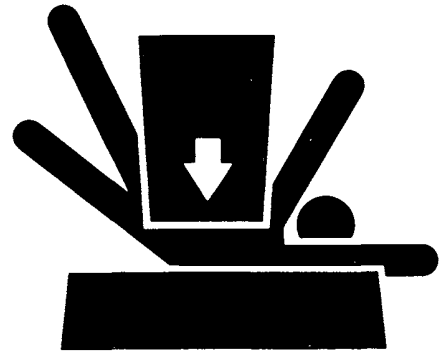


TS 229

TS229;053;LOWER 19 21DEC87

USE PROPER LIFTING EQUIPMENT

Lifting heavy components incorrectly can cause severe injury or machine damage.

 Follow recommended procedure for removal and installation of components in the manual.

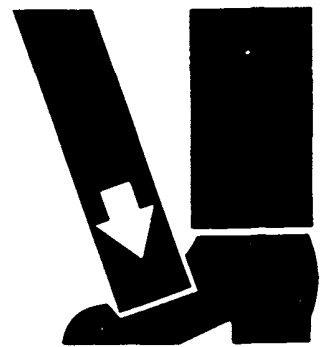

TS 226

TS226;053;LIFT 19 05JAN88

SERVICE TIRES SAFELY

 
Explosive separation of a tire and rim parts can cause serious injury or death.

Only attempt to mount a tire if you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate tires above the recommended pressure.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.

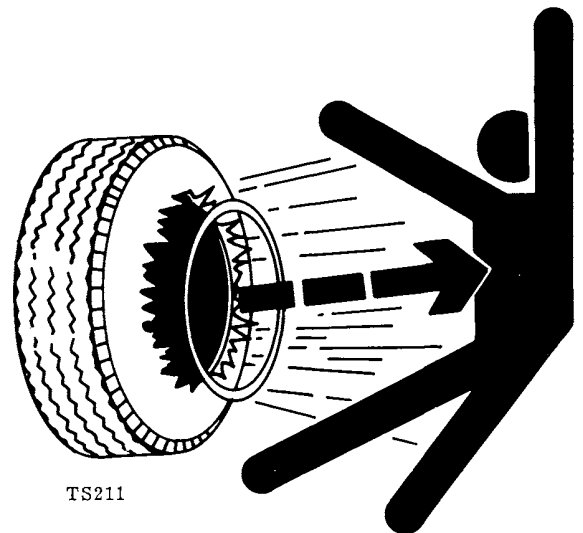

TS211

 
TS211;053;RIM 19 21DEC87



DO NOT MODIFY TRACTOR

Unauthorized modification to the machine may impair the function and/or safety and affect machine life.

Never modify structural members of ROLL-GARD protective frame by welding, bending, drilling or cutting as this might weaken the structure. If any structural member is damaged, replace the entire structure. Do not attempt repairs.

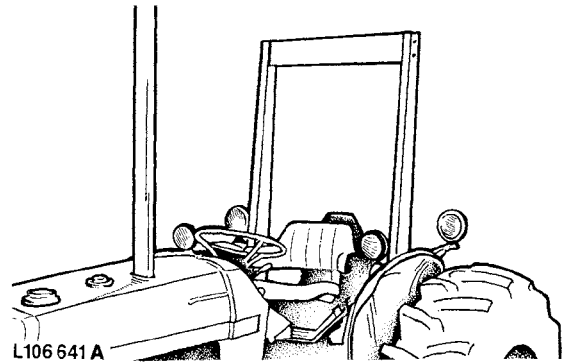


L106 641 A

L106641A-2155ALE-011286

REPLACE SAFETY SIGNS

 Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.

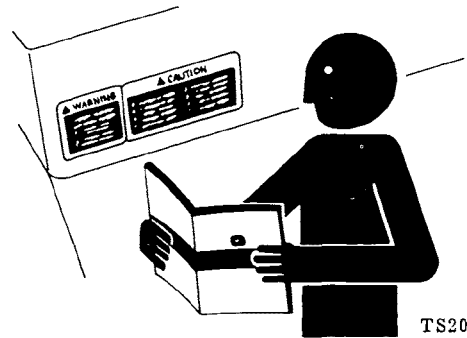

TS201

 
TS201;053;SIGNS1 19 22DEC87

OBSERVE ENVIRONMENTAL PROTECTION REGULATIONS

Be mindful of the environment and ecology.

Before draining any fluids, find out the correct way of disposing of them.

Observe the relevant environmental protection regulations when disposing of oil, fuel, coolant, brake fluid, filters and batteries.

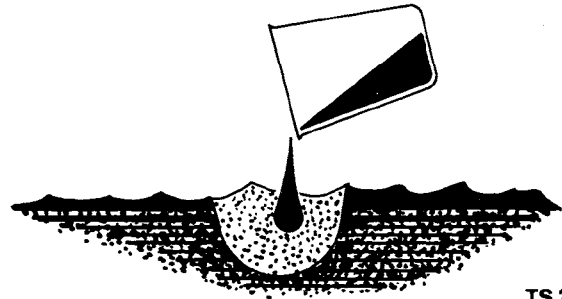

TS 222

TS222-ESPDAE-140388

LIVE WITH SAFETY

Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.



TS231

TS231;053;LIVE 19 05JAN88

Section 10 GENERAL

05 – SPECIFICATIONS

		2155	2355N
Specifications	05-1	x	x
– Serial number plates	05-1	x	x
– Product identification number plate	05-1	x	x
– Engine serial number plate	05-1	x	x
– Transmission serial number plate	05-2	x	x
– Front wheel drive axle serial number plate	05-2	x	x
– Model serial numbers	05-2	x	x
– Engine	05-3	x	x
– Engine clutch	05-4	x	x
– Cooling system	05-4	x	x
– Fuel system	05-4	x	x
– Electrical system	05-5	x	x
– Synchronized transmission	05-5	x	x
– Collar shift transmission	05-5	x	x
– Hi-Lo shift unit	05-5	x	x
– Reverser transmission	05-5	x	x
– Creeper transmission	05-5	x	x
– Differential and final drives	05-6	x	x
– Differential lock	05-6	x	x
– PTO	05-6	x	x
– Continuous-running PTO	05-6	x	x
– PTO speeds	05-6	x	x
– Front wheel drive	05-7	x	x
– Power steering	05-7	x	x
– Foot brakes	05-7	x	x
– Handbrake	05-7	x	x
– Hydraulic system	05-7	x	x
– Rockshaft	05-7	x	x
– Ground travel speeds	05-7	x	x
– Front and rear wheels	05-7	x	x
– Dimensions and weights	05-7	x	x
– Capacities	05-8	x	x
– Standard torques for hardware	05-9	x	x

ALLGEM-LB81001AE-010489

10 – PREDELIVERY, DELIVERY AND AFTER-SALES INSPECTIONS

	2155	2355N
Special tools	x	x
Specifications	x	x
Capacities	x	x
Torques for hardware	x	x
Pre-delivery inspection	x	x
Delivery inspection	x	x
After-sales inspection	x	x

15 – LUBRICATION AND SERVICE

Capacities and service intervals	x	x
Lubricants and service intervals	x	x
General	x	x
Diesel engine oil	x	x
Transmission/hydraulic oil	x	x
Front wheel drive axle oil	x	x
EP multi-purpose grease	x	x
Storing lubricants	x	x
Engine coolant	x	x
Checking engine oil level	x	x
Changing engine oil	x	x
Changing engine oil filter	x	x
Checking fuel filter	x	x
Replacing fuel filter	x	x
Replacing coolant	x	x
Checking transmission/hydraulic system oil level	x	x
Changing transmission/hydraulic oil	x	x
Replacing transmission/hydraulic oil filter	x	x
Replacing hydraulic oil return flow filter	x	x
Cleaning hydraulic pump filter strainer	x	x
Checking oil level in axle housing	x	x
Checking oil level in wheel hub housings	x	x
Changing front axle oil	x	x
Cleaning lubricating points	x	x
Lubricating clutch throw-out bearing	x	x
Lubricating front axle and front wheels	x	x
Lubricating universal-jointed drive shaft (tractors with front wheel drive)	x	x
Lubricating rear axle bearings	x	x
Lubricating three-point hitch	x	x

20 – TUNE-UP

	2155	2355N
Specifications	x	x
Preliminary engine testing	x	x
Checking air cleaner element	x	x
Checking air intake system connections for leaks	x	x
Checking crankcase vent tube for clogging	x	x
Cleaning radiator side panels and grille screens	x	x
Cleaning radiator and oil cooler	x	x
Checking radiator cap	x	x
Checking cooling system for leaks	x	x
Checking thermostat	x	x
Checking fuel transfer pump	x	x
Checking fuel filter	x	x
Checking fuel tank	x	x
Cleaning water trap	x	x
Checking fuel injection pump adjustment	x	x
Checking slow and fast engine idle speeds	x	x
Checking speed control linkage adjustment	x	x
Checking batteries	x	x
Checking fan belt tension	x	x
Checking neutral start system	x	x
Checking operation of starting motor	x	x
Checking lighting system	x	x
Final engine check	x	x
Checking tractor operation	x	x