


JD 550 Crawler Bulldozer

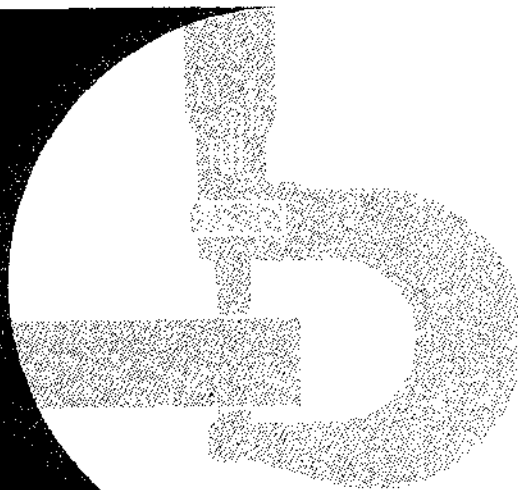

TECHNICAL MANUAL

John Deere Dubuque Works
TM-1108 (Nov-86)

JD550 Crawler Bulldozer

Technical Manual
TM-1108 (Nov-86)

SECTIONAL CONTENTS OF THIS MANUAL

Section I - General Information	I
Section 1 - Wheels and Tires and Tracks	1
Section 2 - Axles and Suspension System	2
Section 3 - Transmission	3
Section 4 - Engine	4
Section 5 - Engine Auxiliary Systems	5
Section 6 - Torque Converter	6
Section 7 - Traction or Disconnect Clutch	NOT USED
Section 8 - Transfer Drive	NOT USED
Section 9 - Steering Systems	9
Section 10 - Service Brakes	NOT USED
Section 11 - Parking - Emergency Brakes	NOT USED
Section 13 - Miscellaneous Vehicle	NOT USED
Section 15 - Equipment Attaching	15

Continued on page 3

Copyright© 1986
DEERE & COMPANY
Moline, Illinois
All Rights Reserved
Previous Editions
Copyright© 1984 DEERE & COMPANY
Copyright© 1983 DEERE & COMPANY
Copyright© 1979 DEERE & COMPANY
Copyright© 1976 DEERE & COMPANY

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

SECTIONAL CONTENTS (Continued)

Section 16 - Electrical Systems	16
Section 17 - Frame, Chassis or Supporting Structure	17
Section 18 - Operator's Station	18
Section 19 - Sheet Metal and Styling	19
Section 21 - Main Hydraulic System	21
Section 22 - Pneumatic Systems	NOT USED
Section 30 - Winch	30
Section 31 - Loader	NOT USED
Section 32 - Dozer	32
Section 33 - Backhoe and Excavator	33
Section 34 - Grading Device	NOT USED
Section 35 - Scraper and Haulage Device	NOT USED
Section 36 - Conveyor and Elevating Device	NOT USED
Section 37 - Arch or Boom	37
Section 38 - Grapple or Clamp	NOT USED
Section 39 - Shear	NOT USED
Section 40 - PTO or Winch Drive	40

Continued on page 5

SECTIONAL CONTENTS (Continued)

Section 41 - Misc. Function Mechanical Drive _____	NOT USED
Section 42 - Ground Conditioning Tool _____	42
Section 43 - Swing, Rotation or Pivoting System _____	NOT USED
Section 44 - Cutting Mechanism _____	NOT USED
Section 45 - Forklifts _____	NOT USED
Section 90 - System Testing _____	90

The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with ICED and SAE standards.

I

SECTION AND GROUP CONTENTS OF THIS MANUAL

SECTION I - GENERAL INFORMATION

- Group I - Contents
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery Services
- Group V - Lubrication

SECTION 1 - TRACKS

- Group 0130 - Track Systems
- Group 0199 - Specifications and Special Tools

SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0201 - Drive Axle Housing
- Group 0210 - Bevel Drive
- Group 0225 - Input Drive Shafts
- Group 0250 - Axle Shaft, Bearings and Reduction Gears
- Group 0299 - Specifications and Special Tools

SECTION 3 - TRANSMISSION

- Group 0315 - Controls
- Group 0341 - Housings and Covers
- Group 0350 - Gears, Shafts, Bearings and Power Shift Clutch
- Group 0360 - Transmission Hydraulics
- Group 0399 - Specifications and Special Tools

SECTION 4 - ENGINE

- Group 0400 - Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block (Liners)
- Group 0407 - Engine Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0415 - Engine Balancer
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housing and Piping
- Group 0419 - Engine Oil Cooler
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting System
- Group 0433 - Flywheel, Housing and Fasteners
- Group 0499 - Specifications and Special Tools

SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Engine Cooling Systems
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0560 - External Fuel Supply Systems
- Group 0599 - Specifications and Special Tools

SECTION 6 - TORQUE CONVERTER

- Group 0641 - Converter Housing and Cover
- Group 0651 - Converter Turbine, Gears and Shafts
- Group 0660 - Converter Hydraulics
- Group 0699 - Specifications and Special Tools

SECTION 9 - STEERING SYSTEMS

- Group 0960 - Power Steering
- Group 0999 - Specifications and Special Tools

SECTION 15 - EQUIPMENT ATTACHING

- Group 1511 - Drawbar

SECTION 16 - ELECTRICAL SYSTEMS

- Group 1671 - Batteries, Support and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1676 - Instruments and Indicators
- Group 1699 - Specifications and Special Tools

SECTION 17 - FRAME, CHASSIS OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1746 - Frame Bottom Guard
- Group 1749 - Chassis Weights

SECTION AND GROUP CONTENTS OF THIS MANUAL (Continued)

SECTION 18 - OPERATOR'S STATION

- Group 1806 - Safety Equipment
- Group 1808 - Comfort and Convenience Items
- Group 1810 - Operator Enclosure
- Group 1821 - Seat
- Group 1899 - Specifications and Special Tools

SECTION 19 - SHEET METAL

- Group 1910 - Hood or Engine Enclosure
- Group 1921 - Grille and Grille Housing

SECTION 21 - MAIN HYDRAULIC SYSTEM

- Group 2160 - Hydraulic System
- Group 2199 - Specifications and Special Tools

SECTION 30 - WINCH

- Group 3015 - Controls Linkage
- Group 3041 - Winch Housing and Mounting Structure
- Group 3050 - Winch Drive and Clutches
- Group 3060 - Winch Hydraulic System
- Group 3099 - Specifications and Special Tools

SECTION 32 - DOZER

- Group 3201 - Blade
- Group 3215 - Controls Linkage
- Group 3241 - Main Frame
- Group 3243 - Moveable Frames
- Group 3260 - Hydraulic System
- Group 3299 - Specifications and Special Tools

SECTION 33 - BACKHOE 9300

- Group 3302 - Bucket
- Group 3315 - Controls Linkage
- Group 3340 - Frames
- Group 3360 - Hydraulic System
- Group 3399 - Specifications and Special Tools

SECTION 33A - BACKHOE 9550

- Group 3302 - Bucket
- Group 3315 - Controls Linkage
- Group 3340 - Frames
- Group 3360 - Hydraulic System
- Group 3399 - Specifications and Special Tools

SECTION 37 - LOG ARCH

- Group 3740 - Arch Frames

SECTION 40 - WINCH DRIVE

- Group 4051 - Gears, Shafts and Bearings

SECTION 42 - GROUND CONDITIONING TOOL

- Group 4201 - Teeth and Shanks
- Group 4240 - Frame
- Group 4260 - Hydraulic System
- Group 4299 - Specifications and Special Tools

SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information - Seven Basic Steps of Testing and Diagnosis
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9020 - Power Train
- Group 9025 - Hydraulic System
- Group 9025A - Hydraulic System (Analyzer)
- Group 9030 - Miscellaneous Components
- Group 9035 - Specifications and Special Tools

ALPHABETICAL INDEX

A

Adapter line and nozzle, starting aid 0505-4
 Adjuster, hydraulic track
 tension 0130-22 - 0130-23
 After-sale inspection I-IV-24 - I-IV-38
 Accessible hardware
 torque values I-IV-38
 Air cleaner I-IV-32
 Backhoe grease fittings I-IV-31
 Battery I-IV-37
 Brake band adjustment I-IV-36
 Bulldozer control lever lubrication I-IV-31
 Bulldozer cylinders and pivot points I-IV-30
 Charging system I-IV-38
 Engine crankcase oil and
 filter element I-IV-25
 Final drives I-IV-28
 Fluid leakage I-IV-38
 Fuel filter I-IV-33
 Fuel tank sump I-IV-32
 Gauge operation I-IV-37
 Hydraulic reservoir oil
 and return line filter
 element I-IV-27
 Lights I-IV-36
 Pre-cleaner I-IV-32
 Radiator I-IV-29
 Steering adjustment I-IV-35 - I-IV-36
 Track tension adjustment I-IV-33 - I-IV-34
 Track wear adjustment I-IV-34
 Track alignment I-IV-34
 Track shoe cap screws I-IV-37
 Transmission oil and
 filter element I-IV-26
 Winch fairlead I-IV-31
 Winch housing oil level I-IV-28
 Air cleaner and piping 0520-1
 Alternator and regulator 1672-1 - 1672-11
 Alternator component tests 1672-7 - 1672-8
 Brush assembly insulation test 1672-7
 Rectifier diode test 1672-7
 Rotor tests 1672-8
 Stator tests 1672-8
 Assembly 1672-9 - 1672-10
 Angling cylinder assembly 3260-12
 Auxiliary valve lever and linkage, dozer 3215-2
 Axle shaft, bearings and
 reduction gears 0250-1 - 0250-13
 Control linkage 0250-11 - 0250-13
 Flanged axle and components 0250-1 - 0250-3
 Steering clutches and brakes 0250-4 - 0250-10

B

Backhoe, 9300 - Section 33
 Bucket 3302-3
 Controls linkage 3315-1
 Frames 3340-1 - 3340-6
 Hydraulic system 3360-1 - 3360-14
 Backhoe, 9550 - Section 33A
 Bucket 3302-3 - 3302-4
 Controls linkage 3315-1
 Frames 3340-1 - 3340-6
 Hydraulic system 3360-1 - 3360-13
 Backhoe bucket,
 9300 - Section 33 3302-3
 Backhoe bucket,
 9550 - Section 33A 3302-3 - 3302-4
 Backhoe (9300 and 9550) dimensions I-III-4
 Backhoe hydraulics,
 9300 - Section 33 3360-1 - 3360-14
 Control valve 3360-1 - 3360-4
 Cylinders 3360-5 - 3360-14
 Backhoe hydraulics, 9550 -
 Section 33A 3360-1 - 3360-13
 Control valve 3360-1 - 3360-6
 Cylinders 3360-7 - 3360-13
 Backhoe seat 1821-1 - 1821-2
 Balancer shaft, engine 0415-1 - 0415-2
 Batteries 1671-3 - 1671-7, 9015-1
 Charging 1671-7
 General Information 9015-1
 Inspection 1671-4
 Installation 1671-7
 Precautions 1671-4
 Removal 1671-4
 Testing 1671-5 - 1671-6
 High-rate discharge test 1671-6
 Specific gravity cell comparison test 1671-5
 Battery box 1671-8
 Battery disconnect 1674-1 - 1674-2
 Bevel drive 0210-1 - 0210-8
 Blade 3201-3 - 3201-4
 Boom and dipperstick, backhoe,
 9300 - Section 33 3340-3 - 3340-4, 3340-6
 Boom and dipperstick, backhoe,
 9550 - Section 33A 3340-3 - 3340-4, 3340-6
 Boom cylinder, backhoe,
 9300 - Section 33 3360-5, 3360-10 - 3360-12,
 3360-14
 Boom cylinder, backhoe,
 9550 - Section 33A 3360-7, 3360-9
 3360-11 - 3360-13
 Boom pivot, backhoe,
 9300 - Section 33 3340-3

Boom pivot, backhoe,
9550 - Section 33A 3340-3
Bottom guards 1746-1
Brake anchor 0250-5 - 0250-6
Brand band winch 3050-1, 3050-6 - 3050-7
Adjustment 3050-7
Brake linkage 0250-11
Brakes, steering 0250-4 - 0250-10
Bucket, backhoe,
9300 - Section 33 3302-3
Bucket, backhoe,
9550 - Section 33A 3302-3 - 3302-4
Bucket cylinder, backhoe,
9300 - Section 33 3360-5, 3360-7,
3360-10 - 3360-11, 3360-14
Bucket cylinder, backhoe,
9550 - Section 33A 3360-7 - 3360-9,
3360-11 - 3360-13
Bulldozer control valves 3260-1 - 3260-9
Bulldozer controls linkage 3215-1 - 3215-2
Bulldozer cylinders 3260-10 - 3260-15
Bulldozer dimensions I-III-3 - I-III-4
Bulldozer hydraulic system 3260-1 - 3260-15
Bulldozer main frame 3241-1
Bulldozer movable frames 3243-1 - 3243-2
Bushing and shaft wear
Track front idler 0130-20
Track rollers 0130-15 - 0130-16

C

Cab 1810-2 - 1810-3
Camshaft and valve actuating
means 0402-1 - 0402-6
Chain, track 0130-11 - 0130-23
Charging circuit 9015-5 - 9015-6
Charging system wiring 1672-12
Chassis weights 1749-1
Cigar lighter 1808-1
Circuit breaker 1672-12
Circuit breaker, light 1674-2
Circuit, charging 9015-5 - 9015-6
Circuit, starting 9015-1, 9015-5
Clutch assembly, winch 3050-1 - 3050-4
3050-6
Clutch, first range 0350-8 - 0350-11
Clutch, forward directional 0350-4 - 0350-7
Clutch, reverse directional 0350-4 - 0350-7
Clutch, second range 0350-8 - 0350-11
Clutch, third range 0350-12 - 0350-14
Clutches and drive, winch 3050-1 - 3050-7
Clutches, steering 0250-4 - 0250-9
Cold weather starting aids 0505-3 - 0505-4
Starting aid adapter line and nozzle 0505-4
Starting aid solenoid 0505-3
Starting aid switch 0505-3 - 0505-4

Cone point adjustment 0210-5 - 0210-6
Connecting rods and pistons 0403-1 - 0403-3
Control linkage, axle 0250-11 - 0250-13
Control linkage, power steering 0960-3 - 0960-5
Control valve, backhoe,
9300 - Section 33 3360-1 - 3360-4
Control valve, backhoe,
9550 - Section 33A 3360-1 - 3360-6
Control valve lever and linkage, dozer 3215-2
Control valve linkage assembly,
dozer 3215-1 - 3215-2
Control valve, transmission 0360-4 - 0360-7
Control valve, winch 3060-3 - 3060-5
Controls linkage, backhoe,
9300 - Section 33 3315-1
Controls linkage, backhoe,
9550 - Section 33A 3315-1
Controls linkage, dozer 3215-1 - 3215-2
Controls linkage, winch 3015-3
Controls, transmission 0315-3
Converter housing and cover 0641-3 - 0641-5
Converter hydraulics 0660-1
Converter inlet relief valve 0360-5
Converter turbine, gears
and shafts 0651-1 - 0651-7
Cooling system, engine 0510-1 - 0510-2
Fan and fan drive 0510-2
Radiator, oil cooler and fan shroud 0510-2
Countershaft 0350-15 - 0350-16
Counterweight, rear 1749-1
Cover and housing, converter 0641-3 - 0641-5
Cowl and cowl support 1810-2
Crankshaft and main bearings 0401-1 - 0401-6
Crankshaft end play 0401-3 - 0401-4
Crankshaft gear 0401-4
Crawler, main frame 1741-3 - 1741-4
Side frames 1741-3 - 1741-4
Crawler seat 1821-1 - 1821-2
Crowd cylinder, backhoe,
9300 - Section 33 3360-13 - 3360-14
Crowd cylinder, backhoe,
9550 - Section 33A 3360-8, 3360-10 - 3360-13
Cylinder block 0401-1 - 0404-3
Cylinder, boom, backhoe,
9300 - Section 33 3360-5, 3360-8
3360-10 - 3360-11, 3360-14
Cylinder, boom, backhoe,
9550 - Section 33A 3360-7, 3360-9,
3360-11 - 3360-13
Cylinder, bucket, backhoe,
9300 - Section 33 3360-5, 3360-7,
3360-10 - 3360-11, 3360-14
Cylinder, bucket, backhoe,
9550 - Section 33A 3360-7, 3360-9,
3360-11 - 3360-13

Cylinder, crowd, backhoe,
 9300 - Section 33 3360-6,
 3360-9 - 3360-11, 3360-14

Cylinder, crowd, backhoe,
 9550 - Section 33A ... 3360-8, 3360-10 - 3360-13

Cylinder head and valves 0409-1 - 0409-5

Cylinder liners 0404-1 - 0404-3

Cylinder, stabilizer, backhoe,
 9300 - Section 33 3360-6 - 3360-7,
 3360-10 - 3360-11, 3360-14

Cylinder, stabilizer, backhoe,
 9550 - Section 33A ... 3360-8, 3360-11 - 3360-13

Cylinder, swing, backhoe,
 9300 - Section 33 3360-6, 3360-12 - 3360-14

Cylinder, swing, backhoe,
 9550 - Section 33A ... 3360-8, 3360-10, 3360-13

Cylinders, backhoe,
 9300, Section 33 3360-5 - 3360-14

Cylinders, backhoe,
 9550 - Section 33A 3360-7 - 3360-13

Cylinders, dozer 3260-13 - 3260-18

Cylinders, ripper 4260-1 - 4260-3

D

Deliver Service I-IV-25

Dimensions I-III-6 - I-III-7

Backhoe (9300 and 9550) I-III-4

Bulldozer I-III-3 - I-III-4

Ripper I-III-5

Diodes 1672-1 - 1672-2,
 1672-5 - 1672-7, 1672-10

Dipperstick and boom, backhoe,
 9300 - Section 33 3340-3 - 3340-4, 3340-6

Dipperstick and boom, backhoe,
 9550 - Section 33A 3340-3 - 3340-4, 3340-6

Directional clutches 0350-4 - 0350-7

Components 0350-4 - 0350-5

Dozer control valves 3260-1 - 3260-9

Dozer controls linkage 3215-1 - 3215-2

Dozer cylinders 3260-10 - 3260-15

Dozer hydraulics 3260-1 - 3260-15

Control valves 3260-1 - 3260-9

Cylinders 3260-10 - 3260-15

Dozer main frame 3241-1

Dozer movable frames 3243-1 - 3243-2

Drawbar 1511-3

Components 1511-3

Drive and clutches, winch 3050-1 - 3050-7

Drive axle housing 0201-3 - 0201-5

Drive sprockets, track 0130-7 - 0130-8

Drum winch 3041-2 - 3041-3

E

Electrical instruments
 and indicators 1676-3 - 1676-5

Engine water temperature
 gauge and sender 1676-4

Gauge lights 1676-4

Hour meter 1676-4

Installation 1676-5

Key switch 1676-3

Removal 1676-5

Repair 1676-5

Start switch 1676-3

Transmission oil temperature
 gauge and sender 1676-3

Voltmeter 1676-3 - 1676-4

Electrical system testing 9015-1 - 9015-30

Block diagram 9015-10

Component location 9015-2 - 9015-4

Component wire routing 9015-12 - 9015-15

Diagnosing malfunctions 9015-16 - 9015-17

Precautions 9015-8

Schematic 9015-11

Testing and adjustment 9015-18 - 9015-30

Visual inspection 9015-9

Engine

Camshaft and valve actuating
 means 0402-1 - 0402-6

Connecting rods and pistons ... 0403-1 - 0403-3

Crankshaft and main bearings ... 0401-3 - 0401-7

Cylinder block 0404-1 - 0404-3

Cylinder head and valves 0409-1 - 0409-5

Engine balancer 0415-1 - 0415-2

Engine oil cooler 0419-1 - 0419-2

Engine oiling system 0407-1 - 0407-3

Exhaust manifold 0410-1

Flywheel, housing, and fasteners 0433-1

Fuel filter 0420-1

Fuel injection system 0413-1 - 0413-5

Fuel transfer pump 0421-1

Starting system 0422-1 - 0422-11

Thermostats, housings, and piping 0418-1

Turbocharger 0416-1 - 0416-7

Ventilating system 0408-1

Water pump 0417-1 - 0417-2

Engine auxiliary systems

Cold weather starting aids 0505-3 - 0505-4

Engine cooling system 0510-1 - 0510-2

External fuel supply systems 0560-1

Intake system 0520-1 - 0520-2

Speed controls 0515-1

Engine balancer shaft 0415-1 - 0415-2

Engine cooling system 0510-1 - 0510-2

Fan and fan drive 0510-2

Radiator, oil cooler and
 fan shroud 0510-1 - 0510-2

Engine oil cooler	0419-1 - 0419-2
Engine oil filter	0407-3
Engine oil pressure gauge	1676-2
Engine oil pump	0407-1 - 0407-2
Engine oiling system	0407-1 - 0407-4
Oil filter	0407-4
Oil pressure control valve	0407-3
Oil pump	0407-1 - 0407-2
Engine side shields	1910-3
Engine testing	9010-1 - 9010-15
Diagnosing malfunctions	9010-5 - 9010-7
Testing and adjustment	9010-10 - 9010-15
Visual inspection	9010-8 - 9010-9
Engine water temperature gauge	1676-4
Engine water temperature sender	1676-4
Exhaust manifold	0410-1
External fuel supply system	0560-1

F

Fan and fan drive	0510-2
Fan shroud	0510-1 - 0510-2
Filter assembly, transmission	0360-21 - 0360-22
Filter, engine oil	0407-3
Filter, fuel	0420-1
Filter, hydraulic	2160-8 - 2160-9
First and second range clutches	0350-8 - 0350-11
Flanged axle	0250-1 - 0250-3
Flow divider	3260-12
Flywheel, housing and fasteners	0433-1
Forward directional clutch	0350-4 - 0350-7
Frame bottom guards	1746-1
Frame, main - backhoe, 9300 - Section 33	3340-1 - 3340-2
Frame, main - backhoe, 9550 - Section 33A	3340-1 - 3340-2
Frame, main - dozer	3241-1
Frame, ripper	4240-1 - 4240-2
Frame, track	0130-3 - 0130-6
Frames, crawler side	1741-3 - 1741-4
Frames, log arch	3740-3 - 3740-4
Frames, movable - backhoe, 9300 - Section 33	3340-3 - 3340-6
Frames, movable - backhoe, 9550 - Section 33A	3340-3 - 3340-6
Frames, movable - dozer	3243-1 - 3243-2
Front idlers, track	0130-31 - 0130-34
Fuel filter	0420-1
Fuel injection nozzles	0413-4 - 0413-5
Fuel injection pump	0413-1 - 0413-3
Fuel injection system	0413-1 - 0413-5
Fuel injection nozzles	0413-4 - 0413-5
Fuel injection pump	0413-1 - 0413-3
Fuel supply system, external	0560-1
Fuel tank	0560-1
Fuel transfer pump	0421-1

G

Gauge, engine oil pressure	1676-2
Gauge, engine water temperature	1676-4
Gauge lights	1676-4
Gauge, track wear	0130-8, 0130-15, 0130-19
Gauge, transmission oil pressure	1676-1
Gauge, transmission oil temperature	1676-3
Gear, crankshaft	0401-4
Gear train backlash	0402-4
Gears, shafts and bearings, winch drive	4051-3 - 4051-4
Gears, shafts, bearings and power shift clutch, transmission	0350-1 - 0350-18
Greases	I-V-2
Grille and grille housing	1921-1

H

Heavy duty bucket, backhoe, 9300 - Section 33	3302-2
Heavy duty bucket, backhoe, 9550 - Section 33A	3302-3 - 3302-4
Hood	1910-3 - 1910-4
Horn	1806-3
Hour meter	1676-4
Housing and cover, converter	0641-3 - 0641-5
Housing, axle	0201-3 - 0201-5
Housing, power shift	0350-2 - 0350-3, 0350-16 - 0350-18
Housings and covers, transmission	0341-1 - 0341-4
Hydraulic filter	2160-8
Hydraulic pump	2160-3 - 2160-7
Hydraulic reservoir	2160-7
Hydraulic system (analyzer)	9025A-1 - 9025A-16
Hydraulic system, main	2160-3 - 2160-8
Filter	2160-8
Pump	2160-3 - 2160-8
Reservoir	2160-7
Hydraulic system testing	9025-1 - 9025-34
Block diagrams	9025-9, 9025-20
Circuit diagrams	9025-1 - 9025-8
Component location	9025-2 - 9025-4
Diagnosing malfunctions	9025-21 - 9025-24
Schematics	9025-12 - 9025-19
Testing and adjustment	9025-25 - 9025-31
Visual inspection	9025-25
Hydraulic track tension adjuster	0130-36 - 0130-37
Hydraulics, backhoe, 9300 - Section 33	3360-1 - 3360-20
Hydraulics, backhoe, 9550 - Section 33A	3360-1 - 3360-13
Hydraulics, dozer	3260-1 - 3260-15
Control valves	3260-1 - 3260-9
Cylinders	3260-10 - 3260-15
Hydraulics, ripper	4260-1 - 4260-3

Hydraulics, torque converter 0660-1 - 0660-2
Hydraulics, transmission 0360-1 - 0360-23

I

Idler, front track 0130-19 - 0130-20
Input drive shafts 0225-1 - 0225-2
Inspection, after-sale I-IV-25 - I-IV-38
Instrument and control mounting structure . . . 1810-2
Instrument panel 1676-1
Instruments and indicators 1676-1 - 1676-5
 Electrical instruments
 and indicators 1676-3 - 1676-5
 Mechanical instruments
 and indicators 1676-1 - 1676-2
Intake system, engine 0520-1 - 0520-2
 Air cleaner and piping 0520-1
 Pre-cleaner 0520-2

K

Key switch 1676-3

L

Lever, steering 0960-3 - 0960-6
Lever steering linkage 0250-13
Lift cylinder assembly 3260-10, 3260-13
Light circuit breaker 1674-2
Light switch 1673-1 - 1673-2
Lighter, cigar 1808-1
Lights 1673-1
Lights, gauge 1676-4
Linkage, brake 0250-11
Linkage, control 0250-11 - 0250-13
Linkage, lever steering 0250-13
Linkage, pedal steering 0250-12
Linkage, winch controls 3015-3
Log arch frames 3740-3 - 3740-4
 Components 3740-4
Lube relief valve 0360-5
Lubricants I-V-1 - I-V-2

M

Main bearing caps 0404-2 - 0404-3
Main bearings and crankshaft 0401-3 - 0401-7
Main frame, backhoe,
 9300 - Section 33 3340-1 - 3340-2
Main frame, backhoe,
 9550 - Section 33A 3340-1 - 3340-2
 Components 3340-2
Main frame, crawler 1741-3 - 1741-4
Main frame, dozer 3241-1
Main regulator relief valve 0360-4 - 0360-5

Malfunctions, diagnosing
 Electrical system 9015-16 - 9015-17
 Engine 9010-5 - 9010-7
 Hydraulic system 9025-21 - 9025-24
 Miscellaneous components 9030-1 - 9030-2
 Power train 9020-7
Manifold, exhaust 0410-1
Mechanical instruments
 and indicators 1676-1 - 1676-2
 Engine oil pressure gauge 1676-2
 Transmission oil pressure gauge 1676-1
Miscellaneous components testing . 9030-1 - 9030-5
 Adjustment 9030-3 - 9030-4
 Diagnosing malfunctions 9030-1 - 9030-2
Motor, engine starting 0422-1 - 0422-11
Mounting structure, instruments and
 control 1810-2
Movable frames, backhoe,
 9300 - Section 33 3340-3 - 3340-6
 Components 3340-4 - 3340-4
Movable frames, backhoe,
 9550 - Section 33A 3340-3 - 3340-6
Movable frames, dozer 3243-1 - 3243-2

N

Neutral start switch 1674-3
Nozzles, fuel injection 0413-4 - 0413-5

O

Oil cooler, engine 0419-1 - 0419-2
Oil cooler, transmission 0360-23
Oil filter, engine 0407-3
 Components 0407-3
Oil filter, transmission 0360-21 - 0360-22
Oil lines, transmission 0360-15 - 0360-20
Oil pressure gauge, engine 1676-2
Oil pressure gauge, transmission 1676-1
Oil pressure regulating valve 0407-2
Oil pump, engine 0407-1 - 0407-2
 Assembly and installation 0407-2
Oil pump, transmission 0360-1 - 0360-3
Oil reservoir, clutch housing and
 transmission case 0250-8 - 0250-9
Oil temperature gauge, transmission 1823-3
Operator enclosure 1810-1 - 1810-4
 Cab 1810-2 - 1810-3
 Platforms 1810-4
 Rollover protective structure 1810-1

P

Panel, instrument 1676-1
Pedal steering linkage 0250-12
Periodic service chart I-V-1
Piston cooling orifices 0404-2 - 0404-3
Piston V-packing, backhoe,
 9300 - Section 33 3260-15, 3360-11, 4260-3

Piston V-packing, backhoe, 9550 - Section 33A	3260-15, 3360-12 - 3360-13, 4260-3
Pistons and connecting rods	0403-1 - 0403-3
Platforms	1810-2
Components	1810-2
Power shift clutch, gears, shafts and bearings - transmission	0350-1 - 0350-18
Power shift housing assembly	0350-2 - 0350-3, 0350-16 - 0350-18
Power steering	0960-3 - 0960-7
Control linkage	0960-3 - 0960-5
Steering valve	0960-6 - 0960-7
Power train testing	9020-1 - 9020-10
Block diagram	9020-1
Diagnosing malfunctions	9020-7
Testing and adjustments	9020-8 - 9020-10
Visual inspection	9020-7
Pre-cleaner	0520-2
Pre-delivery service	I-IV-1 - I-IV-24
Air cleaner	I-IV-1 - I-IV-2
Air intake hoses	I-IV-4
Alternator belt tension	I-IV-3
Attaching cable to winch drum	I-IV-17
Attachment control lever	I-IV-14
Backhoe tapered pins torque	I-IV-23
Batteries	I-IV-2 - I-IV-3
Boom and swing control lever	I-IV-15
Brakes	I-IV-9
Bucket and dipperstick control lever	I-IV-15
Bulldozer control lever	I-IV-12 - I-IV-14
Crankcase oil level	I-IV-4
Engine speed controls	I-IV-7
Final drives	I-IV-6
Front idler, track carrier roller and track roller oil level	I-IV-21 - I-IV-22
Fuel filter	I-IV-2
Fuel tank	I-IV-3
Fuel tank sump	I-IV-5
Gauge operation	I-IV-8 - I-IV-9
Hydraulic reservoir oil level	I-IV-4
Lights	I-IV-6
Lubrication	I-IV-18 - I-IV-22
Pre-cleaner	I-IV-2
Radiator	I-IV-3
Stabilizer control levers	I-IV-15
Steering adjustment	I-IV-10 - I-IV-11
Steering clutch housing oil level	I-IV-6
Torque values	I-IV-23
Track tension adjustment	I-IV-17
Track alignment	I-IV-18
Transmission oil level	I-IV-5
Transmission shifting	I-IV-8
Winch control lever	I-IV-16
Winch housing oil level	I-IV-5

Pump, engine oil	0407-1 - 0407-2
Pump, engine water	0417-1 - 0417-2
Pump, fuel injection	0413-1 - 0413-3
Pump, fuel transfer	0421-1
Pump, hydraulic	2160-3 - 2160-7
Pump, transmission oil	0360-1 - 0360-3
Pump, water	0417-1 - 0417-2
Pump, winch hydraulic	3060-1 - 3060-2

R

Radiator	0510-1 - 0510-2
Rear counterweight	1749-1
Rectifier assembly	1672-1
Regulator and alternator	1672-1 - 1672-11
Relay, starting circuit	1674-2
Relief valve, backhoe 9300 - Section 33	3360-4
Relief valve, backhoe 9550 - Section 33A	3360-6
Relief valve, converter inlet	0360-5
Relief valve, lube	0360-5
Relief valve, main regulator	0360-4 - 0360-5
Reservoir, hydraulic	2160-7
Reverse directional clutch	0350-4 - 0350-7
Ring gear and pinion adjustment	3050-4 - 3050-5
Ring gear bearing preload adjustment	0210-4 - 0210-5
Ripper	4240-1 - 4240-2
Ripper cylinders	4260-1 - 4260-3
Ripper dimensions	I-III-5
Ripper hydraulics	4260-1 - 4260-3
Rocker arm assembly	0402-4 - 0402-5, 0409-2
Rod guide	3260-14, 3360-10, 4260-2
Rollers, track	0130-24 - 0130-27
Rollers, track carrier	0130-28 - 0130-30
Rollover protective structure	1810-1
Rotor assembly	1672-1, 1672-6 - 1672-9

S

Safety information	I-II-2 - I-II-7
Seat, backhoe	1821-1 - 1821-2
Seat, crawler	1821-1 - 1821-2
Second range clutch	0350-8 - 0350-11
Selector valve, bulldozer	3260-11
Selector valve, transmission	0360-8 - 0360-14
Sender, engine water temperature	1676-4
Service, delivery	I-IV-25
Service, pre-delivery	I-IV-1 - I-IV-24
Shaft, engine balancer	0415-1 - 0415-2
Shaft, input drive	0225-1 - 0225-2
Shanks and teeth	4201-3
Shift control linkage	0315-3
Shoes, track	0130-9 - 0130-10
Side frames, crawler	1741-3 - 1741-4

Side shields, engine	1910-3	Cylinder block	0499-10
Solenoid	0422-4, 0422-10 - 0422-11	Cylinder head and valves	0499-12
Solenoid, starting aid	0505-3	Cylinders	3399-3 - 3399-5
Special tools		Dozer hydraulics	3299-1 - 3299-5
Alternator, regulator and		Control valve	3299-1 - 3299-3
charging system wiring	1699-5 - 1699-6	Cylinders	3299-4 - 3299-5
Axle shafts, bearings and		Electrical system	9035-6 - 9035-7
reduction gears	0299-5	Engine	9035-1 - 9035-2
Backhoe hydraulics,		Engine balancer	0499-19
9300 - Section 33	3399-6 - 3399-10	Engine break-in	0499-1
Backhoe hydraulics,		Engine cooling system	0599-1
9550 - Section 33A	3399-6	Engine oil cooler	0499-21
Batteries, supports and cables	1699-4	Engine oiling system	0499-11
Camshaft and valve actuating		External fuel supply system	0599-2
means	0499-28	Flywheel housing and fasteners	0499-24
Connecting rods and pistons	0499-29	Fuel injection system	0499-15
Converter housing and covers	0699-3 - 0699-4	Gear, shafts, bearings	
Crankshaft and main bearings	0499-26	and power shift clutch	0399-1 - 0399-2
Cylinder block	0499-31	General	I-III-1 - I-III-5
Cylinder head and valves	0499-32	Additional standard equipment	I-III-2
Dozer hydraulics	3299-6	Backhoe (9300 and 9550)	
Drive axle housing	0299-4	dimensions	I-III-6 - I-III-7
Electrical system	9035-6	Bulldozer dimensions	I-III-3 - I-III-4
Engine	9035-1 - 9035-2	Bulldozer hydraulic cylinders	I-III-1
Engine balancer	0499-36	Capacities	I-III-2
Fuel injection system	0499-35	Engine	I-III-1
Hydraulic system (analyzer)	9035-14	Hydraulic system	I-III-1
Removal and installation	0499-25	Ripper dimensions	I-III-5
Starting system	0499-38	Special equipment	I-III-2
Track systems	0199-5 - 0199-7	Steering	I-III-1
Turbocharger	0499-36	Tracks	I-III-2
Water pump	0499-38	Transmission	I-III-1
Winch drive and clutches	3099-5	Travel speeds	I-III-1
Specifications		Winch specifications	I-III-5
Alternator, regulator and		Hydraulic filter	2199-1
charging system wiring	1699-1 - 1699-2	Hydraulic pump	2199-1 - 2199-2
Axle shafts, bearings and		Hydraulic system	9035-10 - 9035-11
reduction gears	0299-3 - 0299-4	Hydraulic system (analyzer)	9035-12 - 9035-13
Backhoe hydraulics,		Input drive shaft	0299-2
9300 - Section 33	3399-1 - 3399-5	Instruments and indicators	1899-2
Backhoe hydraulics,		Lighting system	1699-3
9550 - Section 33A	3399-1 - 3399-5	Miscellaneous components	9035-15 - 9035-16
Control valve	3399-1 - 3399-2	Front idler	9035-15
Cylinders	3399-3 - 3399-5	Track	9035-15
Batteries, supports and cables	1699-1	Winch brake band	9035-16
Bevel drive	0299-1	Ripper hydraulics	4299-1
Camshaft and valve actuating		Rollover protective structure	1899-1
means	0499-4 - 0499-7	Seat	1899-1
Cold weather starting aid	0599-1	Starting system	0499-22
Connecting rods and pistons	0499-8	Steering and brake assembly	9035-9
Control valve	3399-1 - 3399-2	Steering valve	0999-1
Converter housing and cover	0699-1	Thermostats, housing, and piping	0499-20
Converter turbine, gears and shafts	0699-2	Track systems	0199-1 - 0199-11
Crankshaft and main bearings	0499-3	Transmission hydraulics	0399-3 - 0399-4

Specifications—Continued

General—Continued

Turbocharger	0499-19
Water pump	0499-20
Winch drive and clutches	03099-2 - 03099-3
Winch housing and mounting structure	3099-1
Winch hydraulic system	3099-4
Wiring harness and switches	1699-3
Speed controls	0515-1
Spiral bevel pinion and ring gear backlash	0210-6 - 0210-8
Spring, track idler recoil	0130-35 - 0130-36
Sprocket, track drive	0130-7 - 0130-8
Stabilizer cylinders, backhoe, 9300 - Section 33	3360-6 - 3360-7, 3360-10 - 3360-11, 3360-14
Components	3360-7
Stabilizer cylinder, backhoe, 9550 - Section 33A	3360-8, 3360-11 - 3360-13
Components	3360-8
Stabilizers, backhoe, 9300 - Section 33	3340-6
Components	3340-6
Stabilizers, backhoe, 9550 - Section 33A	3340-6
Components	3340-6
Start switch	1676-3
Starting aids, cold weather	0505-3 - 0505-4
Starting aid adapter line and nozzle	0505-4
Starting aid solenoid	0505-3
Starting aid switch	0505-3 - 0505-4
Starting circuit	9015-1, 9015-5
Starting circuit relay	1674-2
Starting motor	0422-1 - 0422-11
Testing and diagnosis	0422-4 - 0422-5
No load test	0422-4
Solenoid pull-in test	0422-4
Solenoid return test	0422-4
Solenoid return test	0422-4
Starting solenoid	0422-4, 0422-10 - 0422-11
Starting system	0422-1 - 0422-11
Stator assembly	1672-1, 1672-4, 1672-8, 1672-10
Steering clutches and brakes	0250-4 - 0250-10
Steering lever	0960-3, 0960-6
Steering valve	0960-6 - 0960-7
Storage, temporary	I-IV-1
Swing, cylinder, backhoe, 9300 - Section 33	3360-6, 3360-12 - 3360-14
Swing cylinder, backhoe, 9550 - Section 33A	3360-8, 3360-10, 3360-13
Swinging drawbar	1511-3
Switch, key	1676-3
Switch, light	1673-1 - 1673-2
Switch, start	1676-3
Switch, start-neutral	0360-14

Switch, starting aid	0505-3 - 0505-4
System testing	
Electrical	9015-1 - 9015-32
Engine	9010-1 - 9010-15
Hydraulic	9025-1 - 9025-34
Hydraulic system (analyzer)	9025A-1 - 9025A-16
Power train	9020-1 - 9020-10

T

Teeth and shanks	4201-3
Temperature sending unit, transmission	1823-3
Temporary storage	I-IV-1
Testing and adjustments	
Air restriction indicator	9010-15
Alternator belt adjustment	9015-27
Basic engine	9010-10
Batteries	9015-18
Charging circuit	9015-23 - 9015-27
Cigar lighter	9015-30
Control lever adjustment	9025-33
Control valve	9025-25
Converter inlet relief valve	9025-31
Cylinders	9025-26
Engine lubrication system	9010-10
Fan belt	9010-12
Flow meter	9025-27
Fuel injection pump solenoid	9015-31
Fuel system	9010-12
Gauges	9015-29 - 9015-30
Horn	9015-30
Hydraulic pump	9025-26 - 9025-27, 9025-33
Injection pump cam advance	9010-13
Intake manifold	9010-15
Lights	9015-28
Main regulator relief valve	9025-31
Pump idle adjustment	9010-14
Radiator	9010-11
Rate of shift valve test	9025-31
Ripper teeth adjustment	9030-5
Seat adjustment	9030-5
Shift linkage adjustment	9025-34
Speed control linkage	9010-14
Starting aid	9015-30
Starting circuit	9015-19 - 9015-22
Steering clutch and brake assembly	9020-8
System relief valve	9025-26
System short test	9015-18
Track alignment	9030-3 - 9030-4
Track tension	9030-3
Transmission	9025-28 - 9025-30
Transmission pump test	9025-31 - 9025-32
Voltmeter	9015-30
Winch brake band adjustment	9030-4
Winch pressure tests	9025-33

Testing, general	
Alternator component tests	1672-7 - 1672-8
Brush assembly insulation test	1672-7
Rectifier diode test	1672-7
Rotor tests	1672-8
Stator tests	1672-8
Armature	0422-7 - 0422-8
Ground circuit test	0422-7 - 0422-8
Open circuit test	0422-8
Short circuit test	0422-7
Batteries	1671-5 - 1671-6
High-rate discharge test	1671-6
Specific gravity cell comparison test	1671-5
Brushes	0422-9
Brush holder insulation test	0422-9
Field windings and shunt windings	0422-8 - 0422-9
Ground circuit test	0422-8
Open circuit test	0422-8 - 0422-9
Solenoid	0422-4, 0422-10 - 0422-11
No load test	0422-4
No load test (after assembly)	0422-10 - 0422-11
Pull-in test	0422-4
Return test	0422-4
Steering clutch	0250-8
Clutch leakage test	0250-8
Turbocharger	0416-1 - 0416-2
Axial end play bearing test	0416-2
Radial bearing test	0416-1 - 0416-2
Testing, system	
Electrical	9015-1 - 9015-30
Engine	9010-1 - 9010-15
Hydraulic	9025-1 - 9025-34
Power Train	9020-1 - 9020-10
Thermostats, housings, and piping	0418-1
Components	0418-1
Third range clutch	0350-12 - 0350-14
Components	0350-12
Tilt cylinder assembly	3260-11, 3260-13
Timing gear train	0402-2 - 0402-6
Checking backlash	0402-4
Components	0402-2
Tooth assembly, backhoe bucket, 9300 - Section 33	3302-3
Tooth assembly, backhoe bucket, 9550 - Section 33A	3302-4
Torque chart	I-IV-23, I-IV-38
Torque converter	
Housing and cover	0641-3 - 0641-5
Hydraulics	0660-1 - 0660-2
Turbine, gears and shafts	0651-1 - 0651-7
Track carrier rollers	0130-28 - 0130-30
Track chains	0130-11 - 0130-23
Track drive sprockets	0130-7 - 0130-8
Track frame channel wear strips	0130-5 - 0130-6
Track frames and undercarriages	0130-3 - 0130-6
Track front idlers	0130-31 - 0130-34
Track idler recoil spring	0130-35 - 0130-36
Track rollers	0130-24 - 0130-27
Track shoes	0130-9 - 0130-10
Track tension adjuster, hydraulic	0130-36 - 0130-37
Transmission control valve	0360-4 - 0360-7
Components	0360-7
Transmission controls	0315-3
Components	0315-3
Transmission filter assembly	0360-21 - 0360-22
Transmission gears, shafts, bearings and power shift-clutch	0350-1 - 0350-18
Countershaft	0350-15 - 0350-16
Directional clutches	0350-4 - 0350-7
First and second range clutches	0350-8 - 0350-11
Power shift housing	0350-2 - 0350-3, 0350-16 - 0350-18
Third range clutch	0350-12 - 0350-14
Transmission housings and covers	0341-1 - 0341-4
Components	0341-2 - 0341-3
Transmission hydraulics	0360-1 - 0360-23
Transmission oil cooler	0360-23
Transmission oil lines	0360-15 - 0360-20
Components	0360-16 - 0360-17
Transmission oil pressure gauge	1676-1
Transmission oil pump and drive	0360-1 - 0360-3
Components	0360-2
Transmission oil temperature gauge	1676-3
Transmission selector valve	0360-8 - 0360-14
Components	0360-11
Schematic information	0360-8 - 0360-10
Transmission temperature sending unit	1676-3
Tube, ventilator outlet	0408-1
Turbine, gears and shafts, converter	0651-1 - 0651-7
Turbocharger	0416-1 - 0416-7
Components	0416-3
Axial end play bearing test	0416-2
Radial bearing test	0416-1 - 0416-2
U	
Undercarriage, track	0130-3 - 0130-6
V	
Valve clearance adjustment	0402-7
Valve, converter inlet relief	0360-5
Valve guides	0409-3 - 0409-4
Valve, lube relief	0360-5
Valve, main regulator relief	0360-4 - 0360-5
Valve, oil pressure regulating	0407-2