

TM

Technical Manual

John Deere JD670 Motor Grader

TM-1134



TO JOHN DEERE DEALERS

IMPORTANT: PLEASE REMOVE THIS PAGE AND ROUTE THROUGH YOUR SERVICE DEPARTMENT.

This is a partial revision for TM-1134, JD670 Motor Grader. The new pages are dated (Jun-87). Listed below is a brief explanation of "WHAT" was changed and "WHY" it was changed.

This manual was revised to clarify installation of plates in C1 and C2 clutches. The flat plate must be installed against the piston. The wavy plates must be installed in pack so the punch marked side is installed alternately.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

JD670 MOTOR GRADER

Technical Manual
TM-1134 (Jun-87)

SECTIONAL CONTENTS OF THIS MANUAL

Section I—General Information	1
Section 1—Wheels and Tires and Tracks	1
Section 2—Axles and Suspension System	2
Section 3—Transmission	3
Section 4—Engine	4
Section 5—Engine Auxiliary Systems	5
Section 6—Torque Converter	NOT USED
Section 7—Traction or Disconnect Clutch	NOT USED
Section 8—Transfer Drive	8
Section 9—Steering Systems	9
Section 10—Service Brakes	
Section 11—Parking-Emergency Brakes	
Section 13—Miscellaneous Vehicle	NOT USED
Section 15—Equipment Attaching	

Previous Editions
Copyright ©1980 Deere & Company
Copyright ©1979 Deere & Company
Copyright ©1977 Deere & Company
Copyright ©1976 Deere & Company
Copyright ©1975 Deere & Company

Continued on page 3

Copyright ©1987
DEERE & COMPANY
Moline, Illinois
All Rights Reserved



SECTIONAL CONTENTS—Continued

Section 16—Electrical Systems _____	16
Section 17—Frame, Chassis or Supporting Structure _____	17
Section 18—Operator's Station _____	18
Section 19—Sheet Metal and Styling _____	19
Section 21—Main Hydraulic System _____	21
Section 22—Pneumatic Systems _____	NOT USED
Section 30—Winch _____	NOT USED
Section 31—Loader _____	NOT USED
Section 32—Bulldozer _____	NOT USED
Section 33—Backhoe and Excavator _____	NOT USED
Section 34—Grading Device _____	34
Section 35—Scraper and Haulage Device _____	NOT USED
Section 36—Conveyor and Elevating Device _____	NOT USED
Section 37—Arch or Boom _____	NOT USED
Section 38—Grapple or Clamp _____	NOT USED
Section 39—Shear _____	NOT USED
Section 40—PTO or Winch Drive _____	NOT USED

Continued on page 5



SECTIONAL CONTENTS—CONTINUED

Section 41—Misc. Function Mechanical Drive	NOT USED
Section 42—Ground Conditioning Tool	42
Section 43—Swing, Rotation or Pivoting System	NOT USED
Section 44—Cutting Mechanism	NOT USED
Section 46—Automatic Controls	NOT USED
Section 90—System Testing	90

The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice.



SECTION AND GROUP CONTENTS OF THIS MANUAL

SECTION I - GENERAL INFORMATION

- Group I - Contents, Index and Page List
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery and After-Sale Services
- Group V - Lubrication

SECTION 1 - WHEELS AND TIRES

- Group 0110 - Powered Wheels, Tires and Fastenings
- Group 0120 - Non-Powered Wheels, Tires and Fastenings
- Group 0199 - Specifications and Special Tools

SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0201 - Drive Axle Housings
- Group 0210 - Differential
- Group 0230 - Non-Powered Wheel Axles
- Group 0250 - Axle Shaft, Bearings and Reduction Gears
- Group 0299 - Specifications and Special Tools

SECTION 3 - TRANSMISSION

- Group 0315 - Controls
- Group 0341 - Housings and Covers
- Group 0350 - Gears, Shafts, Bearings and Power Shift Clutch
- Group 0360 - Transmission Hydraulics
- Group 0370 - Clutch Disconnect and Controls
- Group 0399 - Specifications and Special Tools

SECTION 4 - ENGINES

- Group 0400 - Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshafts and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Engine Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housings and Piping
- Group 0419 - Engine Oil Cooler
- Group 0420 - Fuel Filter and Primer Pump
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting System
- Group 0433 - Flywheel, Housing and Fasteners
- Group 0499 - Specifications and Special Tools

SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Engine Cooling Systems
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0560 - External Fuel Supply Systems
- Group 0599 - Specifications and Special Tools

SECTION 8 - TRANSFER DRIVE

- Group 0841 - Housings and Covers
- Group 0851 - Gears, Shafts and Bearings
- Group 0899 - Specifications and Special Tools

SECTION 9 - STEERING SYSTEM

- Group 0960 - Power Steering
- Group 0999 - Specifications and Special Tools

SECTION 10 - SERVICE BRAKES

- Group 1011 - Service Brakes Active Elements
- Group 1015 - Controls Linkage
- Group 1066 - Brakes Hydraulics
- Group 1099 - Specifications and Special Tools

SECTION 11 - PARKING-EMERGENCY BRAKES

- Group 1111 - Parking Brake Active Elements
- Group 1115 - Controls Linkage
- Group 1199 - Specifications and Special Tools

SECTION 15 - EQUIPMENT ATTACHING

- Group 1511 - Drawbar

SECTION 16 - ELECTRICAL SYSTEMS

- Group 1671 - Batteries, Support and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Vehicle Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1675 - Automatic Control Systems and Controls
- Group 1676 - Instrument and Indicators
- Group 1699 - Specifications and Special Tools

SECTION 17 - FRAME, CHASSIS OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1746 - Bottom Guards
- Group 1799 - Specifications and Special Tools

SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued

SECTION 18 - OPERATOR'S STATION

- Group 1806 - Safety Equipment
- Group 1808 - Comfort and Convenience Items
- Group 1810 - Operator Enclosure
- Group 1821 - Seat
- Group 1830 - Heating
- Group 1899 - Specifications and Special Tools

SECTION 19 - SHEET METAL

- Group 1910 - Hood or Engine Enclosure
- Group 1921 - Grille and Grille Housing

SECTION 21 - MAIN HYDRAULIC SYSTEM

- Group 2160 - Hydraulic System
- Group 2199 - Specifications and Special Tools

SECTION 34 - GRADING DEVICE

- Group 3401 - Blade
- Group 3415 - Controls Linkage
- Group 3440 - Grading Device Frames
- Group 3450 - Circle Gear Box
- Group 3460 - Hydraulic System
- Group 3499 - Specifications and Special Tools

SECTION 42 - GROUND CONDITIONING TOOLS

- Group 4201 - Teeth and Shanks
- Group 4215 - Controls Linkage
- Group 4240 - Frames
- Group 4260 - Hydraulic System
- Group 4299 - Specifications and Special Tools

SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information - Seven Basic Steps of Testing and Diagnosis
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9020 - Power Train
- Group 9025 - Hydraulic System
- Group 9030 - Miscellaneous Components
- Group 9032 - Automatic Blade Control
- Group 9035 - Specifications and Special Tools

ALPHABETICAL INDEX

- A**
- Accessory relay 1676-7
 - Accumulator 1060-7
 - Accumulator, bladder-type 2160-21
 - Accumulator, noise suppression 2160-12
 - After-sale inspection I-IV-15
 - Alternator indicator light 1676-5
 - Alternator, regulator and charging system wiring 1672-1
 - Automatic blade control testing 9032-1
 - Automatic control linkages 4615-3
 - Automatic controls 4615-1
 - Axle shafts, bearings, and reduction gears .. 0250-1
 - Axles, non-powered wheel 0230-1
- B**
- Bail assembly linkages 4615-7
 - Batteries, supports and cables 1671-3
 - Bench seat 1821-3
 - Bevel drive 0210-1
 - Bladder-type accumulator 2160-12
 - Blade 3401-3
 - Blade lift control valve linkage 3415-1
 - Blade rotation and blade side-shift control valve linkage 3415-4
 - Blade tilt control valve linkage 3415-6
 - Block, cylinder 0404-1
 - Bottom guard 1746-1
 - Brake caliper assembly 1111-7
 - Brake pressure indicator light 1676-4
 - Brake valve 1060-1
 - Bumper 1910-6
 - Bypass valve 2160-19
- C**
- Camshaft 0402-3
 - Case and covers, transmission 0341-4
 - Cigar lighter 1808-1
 - Circle and blade tilt assemblies 3440-5
 - Circle drive motor 3460-16
 - Circle gear box 3450-1
 - Circle linkages 4615-3
 - Circle side-shift control valve linkage 3415-5
 - Clutch elements, transmission 0370-4
 - Clutch housing, transmission 0341-1
 - Clutch linkage, transmission 0370-1
 - Clutch pedal valve linkage, transmission 0315-3
 - Clutch pedal valve, transmission 0360-8
 - Clutch shaft and carrier assembly, transmission 0370-3
 - Clutch valve linkage, transmission 0315-3
 - Cold weather starting aids 0505-3
 - Comfort and convenience items 1808-1
 - Connecting rods 0403-3
 - Console, control 4670-2
 - Control console 4670-2
 - Control mounting structure 1810-7
 - Control valve assembly, transmission 0360-4
 - Controls linkage 3415-1
 - Controls linkage, parking and emergency brakes 1115-1
 - Controls linkage, service brakes 1015-1
 - Controls, speed 0515-1
 - Cooler, oil 2160-19
 - Crankshaft 0401-1
 - Crankshaft front oil seal 0401-3, 0402-3
 - Crankshaft gear 0401-2
 - Crankshaft rear wear sleeve 0401-5
 - Crossover relief valve 3460-8
 - Cylinder block 0404-1
 - Cylinder head and valves 0409-1
 - Cylinder liner 0404-2
 - Cylinder, rear steer 0960-17
 - Cylinder, ripper 4260-18
 - Cylinder, scarifier 4260-17
 - Cylinder, wheel lean 0960-20
 - Cylinders, front steer and rear steer 0960-20
 - Cylinders, hydraulic 3460-20
 - Cylinders, steering 0960-16
- D**
- Damper, vibration 0401-3
 - Defroster fan 1810-9
 - Delco-Remy starting motor 0422-1
 - Delivery service I-IV-15
 - Diagnosis and testing 9005-3
 - Differential 0210-1
 - Differential lock valve 0210-14
 - Differential pinion shaft 0210-8
 - Direction selector lever and linkage, transmission 0315-5
 - Disconnect and controls, transmission 0370-1
 - Draft frame 3440-4
 - Drawbar 1511-3
 - Drive axle housing and support 0201-3
 - Drive chain 0250-2
- E**
- Electrical components automatic controls 4670-1
 - Electrical system 1671-1
 - Electrical system automatic controls 1675-1
 - Electrical system testing 9015-1
 - Engine 0400-1
 - Engine auxiliary systems 0505-1
 - Engine cooling system 0510-1

Engine enclosure	1910-3
Engine frame	1740-3
Engine oil cooler	0419-1
Engine oil filters and housing	0407-3
Engine oil pressure gauge	1676-6
Engine oil pressure regulating valve	0407-3
Engine oil pump	0407-1
Engine oiling system	0407-1
Engine removal and installation	0400-3
Engine shields	1910-3
Engine testing	1910-1
Engine water temperature gauge	1676-5
Equipment attaching	1511-1
Exhaust manifold	0410-1
External fuel supply system	0560-1

F

Fan	0510-1
Fan, defroster	1810-9
Filter, fuel	0420-1
Filter, hydraulic return	2160-21
Final drive assembly	0250-7
Final drive housing	0201-6
Flywheel, housing and fastenings	0433-1
Forward and reverse modulator, transmission	0360-12
Frame, chassis or supporting structure	1740-1
Frame, draft	3440-4
Frame, engine	1740-3
Frame installation	1740-3
Frame, main	1740-6
Frames and housings, automatic controls	4640-1
Frames, grading device	3440-1
Frames, ripper	4240-3
Frames, scarifier	4240-1
Front oil seal and wear sleeve	0401-3
Front steer and rear steer cylinders	0960-20
Front windshield wiper	1810-10
Fuel filter	0420-1
Fuel gauge	1676-6
Fuel injection nozzles	0413-5
Fuel injection pump	0413-1
Fuel injection system	0413-1
Fuel lines	0560-3
Fuel supply system, external	0560-1
Fuel tank	0560-2
Fuel transfer pump	0421-1
Function control valves	3460-1

G

Gauge, engine oil pressure	1676-6
Gauge, engine water temperature	1676-5
Gauge, fuel	1676-6
Gauge, transmission oil pressure	1676-3

Gauge, transmission oil temperature	1676-6
Gear box, circle	3450-1
Gears, shafts, bearings and power shift clutch	0350-1
General specifications	III-1
Grade height jack	4615-6
Grade sensor	4670-3
Grading device	3401-1
Grading device frames	3440-1
Grille	1921-1
Ground conditioning tools	4201-1
Guard, bottom	1746-1

H

Head and valves, cylinder	0409-1
Heater	1830-1
High beam indicator light	1676-4
Hood	1910-3
Housing, final drive	0201-6
Housings and covers, transfer drive	0841-3
Housings and covers, transmission	0341-1
Hydraulic components automatic controls	4660-1
Hydraulic cylinders	3460-20
Hydraulic return filter	2160-21
Hydraulic system, main	2160-1
Hydraulic system testing	9025-1
Hydraulics, transmission	0360-1
Hydraulics, vehicle	2199-9

I

Idler gear assembly, upper and lower	0851-5
Input gear assembly	0851-4
Instrument and indicators	1676-1
Intake manifold	0414-1
Intake system	0520-1

J

John Deere starting motor	0422-11
---------------------------------	---------

K

Key switch	1676-7
------------------	--------

L

Lift arm assembly	3440-1
Lift arm locking valve and pin	3460-9
Light, alternator indicator	1676-5
Light, brake pressure indicator	1676-4
Light, high beam indicator	1676-4
Light, lock pin indicator	1676-4
Light, transmission filter restriction indicator light	1676-5
Lighting system	1673-1
Lights	1673-3
Lights, turn indicator	1676-4
Lines, fuel	0560-3

Linkage, blade lift control valve	3415-1
Linkage, blade rotation and blade side-shift control valve	3415-4
Linkage, blade tilt control valve	3415-6
Linkage, circle side-shift control valve	3415-5
Linkage, controls	3415-1
Linkage, rear steer	0960-12
Linkage, rear steering control valve	3415-2
Linkage, scarifier valve	4215-1
Linkages, automatic control	4615-3
Locking pin indicator light	1676-4

M

Main bearings	0401-1
Main frame	1740-6
Main hydraulic pump	2160-3
Main hydraulic system	2160-1
Malfunctions:	
Automatic blade control	9032-10
Electrical system	9015-11
Engine	9010-5
Hydraulic system	9025-31
Power train	9020-12
Manifold, exhaust	0410-1
Manifold, intake	0414-1
Manifold, rotary	3460-14
Manual steering	0960-7
Meter, service	1676-3
Miscellaneous components testing	9030-1
Motor, circle drive	3460-16

N

Neutral start switch	1674-4
Noise suppression accumulator	2160-12
Non-powered wheels	0120-1
Non-powered wheel axles	0230-1
Nozzles, fuel injection	0413-5

O

Oil cooler, engine	0419-1
Oil cooler, hydraulic	2160-19
Oil filter assembly, transmission	0360-14
Oil filter, engine	0407-1
Oil filter nipple, engine	0407-2
Oil pressure control valve	0407-2
Oil pressure regulating valve, transmission	0360-10
Oil pump, engine	0407-2
Oil pump, transmission	0360-1
Oiling system, engine	0407-1
Operator enclosure	1810-1
Operator's station	1806-1
Output gear assembly	0851-6

P

Panels, rear	1910-6
Parking brake active elements	1111-3
Parking emergency brakes	1111-1
Pistons	0403-2
Platform	1810-6
Power train testing	9020-1
Powered, wheels	0110-3
Pre-cleaner	0520-2
Pre-delivery	I-IV-1
Pressure control valve	2160-16
Pump drive assembly	2160-10
Pump, fuel injection	0413-1
Pump, fuel transfer	0421-1
Pump, main hydraulic	2160-3
Pump, water	0417-1

R

Radiator	0510-1
Rear crankshaft oil seal, housing, and wear sleeve	0401-3
Rear panels	1910-6
Rear steer cylinder	0960-17
Rear steer linkage	0960-12
Rear steer valve	0960-12
Rear steering control valve linkage	3415-2
Rear steering indicator	1676-3
Rear wiper	1810-9
Reverse warning switch	1674-4
Ripper cylinder	4260-18
Ripper frames	4240-3
Ripper valve	4260-5
Ripper teeth and shanks	4201-4
Rocker arms and push rods	0402-15
Rotary manifold	3460-14

S

Safety equipment	1806-3
Scarifier cylinder	4260-17
Scarifier frames	4240-1
Scarifier teeth and shanks	4201-3
Scarifier valve	4260-1
Scarifier valve linkage	4215-1
Seat	1821-1
Seat, bench	1821-3
Seat, suspension	1821-1
Service brakes	1011-1
Service brakes active elements	1011-3
Service meter	1676-3
Shaft and tube, steering	0960-11
Sheet metal	1910-1
Shields, engine	1910-3
Shift lever and linkage, transmission	0315-7
Solenoid, starting aid	0505-3

Special tools:

Alternator, regulator and charging system wiring	1699-7
Automatic blade control testing	9035-21
Batteries, supports and cables	1699-5
Camshaft and valve actuating means	0499-34
Connecting rods and pistons	0499-35
Crankshaft and main bearings	0499-32
Cylinder block	0499-37
Cylinder head and valves	0499-40
Electrical system testing	9035-12
Engine frame	1799-1
Engine removal and installation	0499-31
Engine testing	9035-3
Flywheel, housing and fastenings	0499-50
Fuel injection system	0499-42
Ground conditioning tools hydraulic system	4299-4
Hydraulic system	9035-18
Linkages	4699-1
Power steering	0999-4
Starting motor and fastenings	0499-46
Transmission clutch disconnect and controls	0399-14
Transmission gears, shafts, bearings and power shift clutch	0399-13
Transmission hydraulics	0399-13
Turbocharger	0499-43
Vehicle hydraulics	2199-9
Water pump	0499-45

Specifications:

Alternator, regulator and charging system wiring	1699-1
Axle shafts, bearings and reduction gears	0299-9
Batteries, supports and cables	1699-1
Brakes hydraulics	1099-1
Cab	1899-1
Camshaft and valve actuating means	0499-3
Connecting rods and pistons	0499-7
Crankshaft and main bearings	0499-2
Cylinder block	0499-12
Cylinder head and valves	0499-14
Differential or bevel drive	0299-3
Drive axle housing and support	0299-1
Electrical system testing	9035-6
Engine break-in	0499-1
Engine cooling system	0599-1
Engine oil cooler	0499-23
Engine oiling system	0499-13
Engine testing	9035-1
External fuel supply system	0599-2
Flywheel housing and fasteners	0499-30
Fuel injection system	0499-16
Grading device hydraulic system	3499-3

Specifications—Continued

Ground conditioning tools hydraulic system	4299-1
Hydraulic system testing	9035-14
Instruments and indicators	1699-4
Lift arm assembly	3499-1
Lighting system	1699-3
Linkages	4699-1
Miscellaneous components testing	9035-19
Non-powered wheel axles	0299-8
Parking brake active elements	1199-1
Parking brake controls linkage	1199-2
Power steering	0999-1
Power train testing	9035-13
Speed controls	0599-2
Starting motor and fastenings	0499-24
Suspension seat	1899-2
Thermostats, housing and piping	0499-22
Transfer drive gears, shafts, and bearings	0899-3
Transfer drive housings and covers	0899-1
Transmission clutch disconnect and controls	0399-12
Transmission, gears, shafts, bearings and power shift clutch	0399-2
Transmission housing and covers	0399-1
Transmission hydraulics	0399-8
Turbocharger	0499-21
Vehicle hydraulics	2199-1
Water pump	0499-21
Wiring harness and switches	1699-3
Speed controls	0515-1
Start circuit relay	1674-3
Start switch	1676-7
Starting aid adapter, line and nozzle	0505-4
Starting aid solenoid	0505-3
Starting aid switch	0505-3
Starting aids, cold weather	0505-3
Starting motor, Delco-Remy	0422-1
Starting system	0422-1
Steering cylinders	0960-16
Steering indicator, rear	1676-3
Steering, manual	0960-7
Steering shaft and tube	0960-11
Steering system	0960-1
Steering valve	0960-3
Storage	I-IV-1
Suspension seat	1821-1
Switch, key	1676-7
Switch, neutral start	1674-4
Switch, reverse warning	1674-4
Switch, start	1676-7
Switch, starting aid	0505-3
Switch, transmission filter restriction	0360-15
System testing	9005-1

T

Tandem housing	0201-5
Tandem pivot housing	0201-6
Tank, fuel	0560-2
Teeth and shanks, Ripper	4201-4
Teeth and shanks, scarifier	4201-3
Thermostats, housings and piping	0418-1
Timing gear cover	0402-2
Timing gear train	0402-8
Tools, ground conditioning	4201-1
Transfer drive	0841-1
Transfer drive housing and covers	0841-3
Transmission case and covers	0341-4
Transmission clutch elements	0370-4
Transmission clutch housing	0341-1
Transmission clutch linkage	0370-1
Transmission clutch pedal valve	0360-8
Transmission clutch pedal valve linkage	0315-3
Transmission clutch shaft and carrier assembly	0370-3
Transmission clutch valve linkage	0315-3
Transmission control valve assembly	0360-4
Transmission controls	0315-3
Transmission direction selector lever and linkage	0315-5
Transmission disconnect and controls	0370-1
Transmission filter restriction indicator light	1676-5
Transmission filter restriction switch	0360-15
Transmission forward and reverse modulator	0360-12
Transmission gears, shafts, bearings and power shift clutch	0350-1
Transmission housings and covers	0341-1
Transmission hydraulics	0360-1
Transmission oil filter assembly	0360-14
Transmission oil pressure gauge	1676-3
Transmission oil pressure regulating valve	0360-10
Transmission oil pump	0360-1

Transmission oil temperature gauge	1676-6
Transmission shift lever and linkage	0315-7
Turbocharger	0416-1
Turn indicator lights	1676-4

U

Upper and lower idler gear assembly	0851-5
---	--------

V

Valve and pin, lift arm locking	3460-9
Valve, brake	1060-1
Valve, bypass	2160-19
Valve, crossover relief	3460-8
Valve, differential lock	0210-14
Valve, engine oil pressure regulating	0407-3
Valve lift check	0402-1
Valve, pressure control	2160-16
Valve, rear steer	0960-12
Valve, ripper	4260-5
Valve, scarifier	4260-1
Valve, steering	0960-3
Valve, wheel lean	0960-13
Valves, function control	3460-1
Vehicle hydraulics	2199-9
Ventilating system	0408-1
Vibration damper	0401-3

W

Water pump	0417-1
Wheel axle assemblies	0250-4
Wheel axle housing	0201-4
Wheel lean cylinder	0960-20
Wheel lean valve	0960-13
Wheels, non-powered	0120-1
Wheels, powered	0110-3
Windshield wiper, front	1810-10
Wiper, rear	1810-9
Wiring harness	4670-4
Wiring harness and switches	1674-1



PAGE LIST

The following list contains all page numbers with latest date lines for this technical manual. If a page does not have the date line indicated, the page is obsolete.

I-I-1, 2	(Nov-79)	2-0210-5, 6	(Nov-79)	3-0360-9, 10	(Nov-79)
I-I-3, 4	(Aug-76)	2-0210-7, 8	(Nov-79)	3-0360-11, 12	(Aug-75)
I-I-5, 6	(Aug-76)	2-0210-9, 10	(Nov-79)	3-0360-13, 14	(Nov-79)
I-I-7, 8	(Nov-79)	2-0210-11, 12	(Nov-79)	3-0360-15, 16	(Nov-79)
I-I-9, 10	(Mar-80)	2-0210-13, 14	(Nov-79)	3-0370-1, 2	(Nov-79)
I-I-11, 12	(Mar-80)	2-0210-15, 16	(Nov-79)	3-0370-3, 4	(Nov-79)
I-I-13, 14	(Mar-80)	2-0230-1, 2	(Nov-79)	3-0370-5, 6	(Nov-79)
I-I-15, 16	(Mar-80)	2-0230-3, 4	(Nov-79)	3-0399-1, 2	(Nov-79)
I-I-17, 18	(Mar-80)	2-0230-5, 6	(Nov-79)	3-0399-3, 4	(Nov-79)
I-II-1, 2	(Nov-79)	2-0230-7, 8	(Nov-79)	3-0399-5, 6	(Mar-80)
I-II-3, 4	(Nov-79)	2-0230-9, 10	(Nov-79)	3-0399-7, 8	(Nov-79)
I-III-1, 2	(Nov-79)	2-0250-1, 2	(Nov-79)	3-0399-9, 10	(Nov-79)
I-III-3, 4	(Nov-79)	2-0250-3, 4	(Nov-79)	3-0399-11, 12	(Nov-79)
I-IV-1, 2	(Nov-79)	2-0250-5, 6	(Nov-79)	3-0399-13, 14	(Mar-80)
I-IV-3, 4	(Nov-79)	2-0250-7, 8	(Nov-79)		
I-IV-5, 6	(Nov-79)	2-0250-9, 10	(Nov-79)	4-0400-1, 2	(Mar-80)
I-IV-7, 8	(Jan-77)	2-0299-1, 2	(Nov-79)	4-0400-3, 4	(Mar-80)
I-IV-9, 10	(Jan-77)	2-0299-3, 4	(Nov-79)	4-0400-5, 6	(Nov-79)
I-IV-11, 12	(Nov-79)	2-0299-5, 6	(Nov-79)	4-0401-1, 2	(Nov-79)
I-IV-13, 14	(Jan-77)	2-0299-7, 8	(Nov-79)	4-0401-3, 4	(Mar-80)
I-IV-15, 16	(Nov-79)	2-0299-9, 10	(Nov-79)	4-0401-5, 6	(Nov-79)
I-IV-17, 18	(Nov-79)			4-0402-1, 2	(Nov-79)
I-IV-19, 20	(Nov-79)	3-0315-1, 2	(Mar-80)	4-0402-3, 4	(Nov-79)
I-IV-21, 22	(Nov-79)	3-0315-3, 4	(Mar-80)	4-0402-5, 6	(Nov-79)
I-IV-23, 24	(Nov-79)	3-0315-5, 6	(Mar-80)	4-0402-7, 8	(Nov-79)
I-IV-25, 26	(Nov-79)	3-0315-7, 8	(Mar-80)	4-0402-9, 10	(Nov-79)
I-IV-27, 28	(Nov-79)	3-0341-1, 2	(Nov-79)	4-0402-11, 12	(Nov-79)
I-IV-29, 30	(Nov-79)	3-0341-3, 4	(Nov-79)	4-0402-13, 14	(Nov-79)
I-IV-31, 32	(Nov-79)	3-0341-5, 6	(Nov-79)	4-0402-15, 16	(Nov-79)
I-IV-33, 34	(Nov-79)	3-0341-7, 8	(Nov-79)	4-0402-17, 18	(Nov-79)
I-V-1, 2	(Nov-79)	3-0350-1, 2	(Nov-79)	4-0403-1, 2	(Mar-80)
		3-0350-3, 4	(Nov-79)	4-0403-3, 4	(Mar-80)
1-0110-1, 2	(Nov-79)	3-0350-5, 6	(Nov-79)	4-0403-5, 6	(Mar-80)
1-0110-3, 4	(Nov-79)	3-0350-7, 8	(Mar-80)	4-0404-1, 2	(Nov-79)
1-0120-1, 2	(Nov-79)	3-0350-9, 10	(Nov-79)	4-0404-3, 4	(Nov-79)
1-0199-1, 2	(Nov-79)	3-0350-11, 12	(Mar-80)	4-0407-1, 2	(Nov-79)
		3-0350-13, 14	(Mar-80)	4-0407-3, 4	(Mar-80)
2-0201-1, 2	(Nov-79)	3-0350-15, 16	(Mar-80)	4-0408-1, 2	(Aug-75)
2-0201-3, 4	(Nov-79)	3-0350-17, 18	(Nov-79)	4-0409-1, 2	(Aug-75)
2-0201-5, 6	(Nov-79)	3-0350-19, 20	(Nov-79)	4-0409-3, 4	(Mar-80)
2-0201-7, 8	(Nov-79)	3-0350-21, 22	(Nov-79)	4-0409-5, 6	(Nov-79)
2-0201-9, 10	(Nov-79)	3-0350-23, 24	(Nov-79)	4-0410-1, 2	(Mar-80)
2-0201-11, 12	(Nov-79)	3-0350-25, 26	(Nov-79)	4-0413-1, 2	(Nov-79)
2-0201-13, 14	(Nov-79)	3-0360-1, 2	(Nov-79)	4-0413-3, 4	(Mar-80)
2-0201-15, 16	(Nov-79)	3-0360-3, 4	(Nov-79)	4-0413-5, 6	(Nov-79)
		3-0360-5, 6	(Nov-79)	4-0413-7, 8	(Nov-79)
2-0210-1, 2	(Nov-79)	3-0360-7, 8	(Aug-75)	4-0414-1, 2	(Nov-79)
2-0210-3, 4	(Nov-79)				

Vertical lines indicate pages included in this revision.