



Technical Manual

John Deere 762 Scraper

**John Deere Dubuque Works
TM-1135**



Litho in U.S.A.

JD762 SCRAPER

Technical Manual
TM-1135 (Sep-75)

SECTIONAL CONTENTS OF THIS MANUAL

Section I - General Information	1
Section 1 - Wheels and Tires and Tracks	1
Section 2 - Axles and Suspension System	2
Section 3 - Transmission	3
Section 4 - Engine	4
Section 5 - Engine Auxiliary Systems	5
Section 6 - Torque Converter	6
Section 7 - Traction or Disconnect Clutch	NOT USED 7
Section 8 - Transfer Drive	NOT USED 8
Section 9 - Steering Systems	9
Section 10 - Service Brakes	10
Section 11 - Parking-Emergency Brakes	11
Section 13 - Miscellaneous Vehicle	13
Section 15 - Equipment Attaching	NOT USED 15

Continued on page 3

Copyright 1975
Deere & Company
Moline, Illinois
All Rights Reserved

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

SECTIONAL CONTENTS—Continued

Section 16 - Electrical Systems _____		16
Section 17 - Frame, Chassis or Supporting Structure _____		17
Section 18 - Operator's Station _____		18
Section 19 - Sheet Metal and Styling _____		19
Section 21 - Main Hydraulic System _____		21
Section 22 - Pneumatic Systems _____	NOT USED	22
Section 30 - Winch _____	NOT USED	30
Section 31 - Loader _____	NOT USED	31
Section 32 - Dozer _____	NOT USED	32
Section 33 - Backhoe and Excavator _____	NOT USED	33
Section 34 - Grading Device _____	NOT USED	34
Section 35 - Scraper and Haulage Device _____		35
Section 36 - Conveyor and Elevating Device _____		36
Section 37 - Arch or Boom _____	NOT USED	37
Section 38 - Grapple or Clamp _____	NOT USED	38
Section 39 - Shear _____	NOT USED	39
Section 40 PTO or Winch Drive _____	NOT USED	40

Continued on page 5

SECTIONAL CONTENTS—Continued

Section 41 - Misc. Function Mechanical Drive _____	NOT USED 41
Section 42 - Ground Conditioning Tool _____	NOT USED 42
Section 43 - Swing, Rotation or Pivoting System _____	NOT USED 43
Section 44 - Cutting Mechanism _____	NOT USED 44
Section 45 - Forklifts _____	NOT USED 45
Section 90 - System Testing _____	90

The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.

SECTION AND GROUP CONTENTS OF THIS MANUAL

SECTION I - GENERAL INFORMATION

- Group I - Contents, Index and Page Listing
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery and After-Sale Services
- Group V - Lubrication

SECTION 1 - WHEELS AND TIRES

- Group 0110 - Powered Wheels, Tires and Fastenings
- Group 0199 - Specifications and Special Tools

SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0201 - Drive Axle Housing and Support
- Group 0210 - Differential
- Group 0225 - Input Drive Shafts and U-Joints
- Group 0230 - Non-Powered Wheel Axles
- Group 0250 - Axle Shaft, Bearings and Reduction Gears
- Group 0299 - Specifications and Special Tools

SECTION 3 - TRANSMISSION

- Group 0315 - Controls
- Group 0325 - Input Drive Shafts and U-Joints
- Group 0341 - Housings and Covers
- Group 0350 - Gears, Shafts, Bearings and Power Shift Clutch
- Group 0360 - Transmission Hydraulics
- Group 0399 - Specifications and Special Tools

SECTION 4 - ENGINES

- Group 0400 - Engine Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshafts and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block (Liners)
- Group 0407 - Engine Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housings and Piping
- Group 0419 - Engine Oil Cooler
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting System
- Group 0433 - Flywheel, Housing and Fasteners
- Group 0499 - Specifications and Special Tools

SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Engine Cooling Systems
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0560 - External Fuel Supply Systems
- Group 0599 - Specifications and Special Tools

SECTION 6 - TORQUE CONVERTER

- Group 0641 - Converter Housing and Cover
- Group 0651 - Converter Turbine, Gears, Shafts and Bearings
- Group 0699 - Specifications and Special Tools

SECTION 9 - STEERING SYSTEM

- Group 0960 - Power Steering Hydraulic System
- Group 0999 - Specifications and Special Tools

SECTION 10 - SERVICE BRAKES

- Group 1011 - Service Brakes Active Elements
- Group 1060 - Brakes Hydraulics
- Group 1099 - Specifications and Special Tools

SECTION 11 - PARKING-EMERGENCY BRAKES

- Group 1111 - Parking Brake Active Elements
- Group 1115 - Controls Linkage
- Group 1199 - Specifications and Special Tools

SECTION 13 - MISCELLANEOUS VEHICLE

- Group 1370 - Central Lubrication System for Sliding Floor Lever Pivots

SECTION 16 - ELECTRICAL SYSTEMS

- Group 1671 - Batteries, Support and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Vehicle Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1676 - Instruments and Indicators
- Group 1699 - Specifications and Special Tools

SECTION 17 - FRAME, CHASSIS, OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1799 - Specifications and Special Tools

SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued

SECTION 18 - OPERATOR'S STATION

- Group 1806 - Safety Equipment
- Group 1810 - Operator Enclosure
- Group 1821 - Seat
- Group 1822 - Steps and Handholds
- Group 1830 - Heating and Air Conditioning
- Group 1899 - Specifications and Special Tools

SECTION 19 - SHEET METAL

- Group 1910 - Hood or Engine Enclosure
- Group 1921 - Grille and Grille Housing
- Group 1927 - Fenders

SECTION 21 - MAIN HYDRAULIC SYSTEM

- Group 2160 - Hydraulic System
- Group 2199 - Specifications and Special Tools

**SECTION 35 - SCRAPER AND HAULAGE
DEVICE**

- Group 3501 - Cutting Edge
- Group 3515 - Controls Linkage
- Group 3540 - Scraper and Haulage Device
- Group 3560 - Hydraulic System
- Group 3599 - Specifications and Special Tools

**SECTION 36 - CONVEYOR AND ELEVATING
DEVICE**

- Group 3615 - Controls Linkage
- Group 3640 - Conveyor and Elevating
Device Frame
- Group 3650 - Gearbox
- Group 3660 - Hydraulic System
- Group 3699 - Specifications and Special Tools

SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information - Seven Basic
Steps of Testing and Diagnosis
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9020 - Power Train
- Group 9025 - Hydraulic System
- Group 9025A - Hydraulic System (Analyzer)
- Group 9030 - Miscellaneous Components
- Group 9035 - Specifications and Special Tools

ALPHABETICAL INDEX

A	
Accelerator pedal	0515-1
Accessory solenoid	1676-8
Accumulator, hydraulic oil, brake	1060-7
Accumulator, hydraulic oil, main	2160-20
Accumulator, pre-charging	1060-9, 2160-21
Active elements, parking brake	1111-3
Active elements, service brake	1011-3
Adapter, transmission to elevator pump	0360-10
After-sale inspection	I-IV-18
Air cleaner	I-IV-20
Air conditioner	I-IV-35
Air intake hoses	I-IV-20
Batteries	I-IV-19
Belt tension	I-IV-22
Bleeding fuel system	I-IV-22
Cab equipment	I-IV-36
Cap screw torque	I-IV-29
Cold weather starting aid	I-IV-23
Crankcase oil level and filter	I-IV-20
Drive axle oil level	I-IV-24
Electric fuel pump	I-IV-26
Elevator chain	I-IV-25
Elevator drive filter	I-IV-25
Elevator gearbox oil level	I-IV-24
Elevator to cutting edge distance	I-IV-25
Engine coolant conditioner filter	I-IV-21
Fluid leakage	I-IV-44
Fuel filters	I-IV-22
Fuel tank	I-IV-26
Gauges	I-IV-32
Grease fittings	I-IV-27
Hydraulic oil filter	I-IV-23
Hydraulic system testing	I-IV-37
Indicator lights	I-IV-34
Lights	I-IV-35
Radiator	I-IV-23
Seat	I-IV-31
Service equipment	I-IV-19
Switches	I-IV-32, I-IV-35
Test drive	I-IV-38
Tire pressure	I-IV-27
Torque values of accessible hardware	I-IV-31
Aids, cold weather starting	0505-3
Air cleaner assembly	0520-1
Air conditioning system	1830-3
Air conditioning system testing	9031-2, 1830-16
Air ride seat	1821-1
Alternator and generator mounting	0423-1
Alternator, 42 amp	1672-2
Alternator, 70 amp	1672-14 - 1672-26
Alternator excitation resistor	1676-8
Alternator indicator light	1676-5
Armature	0422-1, 0422-8
Axial end play bearing test	0416-3
Axial piston pump	3660-1
Axle assemblies	9020-1
Axle housing	0201-3
Axle shaft, bearings, reduction gears	0250-1
Axles, non-powered wheel	0230-1
B	
Batteries	1671-3, 9015-1
Bleeding brakes	9025-26
Bleeding fuel system	0413-4
Bleeding steering system	9025-30
Blower motor	1830-29
Bowl and ejector gate levers and linkage	3515-1
Bowl assembly	3540-1
Bowl control valve	3560-5
Bowl function control valve check and cycle times	9025-31
Bowl lift cylinder	3560-6, 3560-8
Bracket, steering column adjusting	0960-3
Brake accumulator	1060-7
Brake accumulator test	9025-25
Brake active elements	1011-3, 1111-3
Brake controls linkage	1115-1
Brake hydraulics	1060-1
Brake lever, parking	1115-1
Brake, parking	9020-5
Brake pedal	1060-4
Brake pressure indicator light	1676-5
Brake valve	1060-1
Brake valve cover	1060-4
Brake valve leakage test	9025-26
Brake system test	9025-25
Brakes, front	1011-3
Brakes, scraper hydraulic	1011-4
Brakes, service	9020-5

C

Cable, engine stop 1824-3
 Camshaft and valve actuating means 0402-1
 Case assembly, transmission 0341-3
 Case, differential 0210-6
 Center idler assembly 3640-6
 Central lubrication system 1370-3
 Chain, elevator 3640-2
 Charge pressure relief valve
 pressure test 9025-32
 Charge pump, elevator 3660-37
 Charge pump, hydraulic 2160-11
 Charge pump, transmission 0360-4
 Charging circuit 9015-6
 Charging circuit testing 9015-31
 Charging system wiring,
 alternator and regulator 1672-1
 Check valve, make-up 0960-13
 Circuit breakers and fuses 1674-1
 Circuit, charging 9015-6
 Circuit, warm-up 0960-13
 Clutch assembly, forward and third 9020-7
 Clutch, fifth, transmission 0350-16
 Clutch, first, transmission 0350-8
 Clutch, forward and third,
 transmission 0350-12
 Clutch pack engagement chart 9020-8
 Clutch pressure test 9020-30
 Clutch, reverse and fourth,
 transmission 0350-14
 Clutch, second, transmission 0350-10
 Cold weather starting aids 0505-3
 Component locations:
 Air conditioning system 9031-4
 Electrical system 9015-2
 Engine system 9010-2
 Hydraulic system 9025-34
 Power train 9020-2
 Compressor 1830-3
 Compressor relief valve 1830-26
 Condenser 1830-19
 Cone point adjustment 0210-8
 Connecting rods and pistons 0403-1
 Control circuit relief valves 0960-19
 Control mounting structure 1810-1
 Control valve, bowl 3560-5
 Control valve, displacement 3660-33
 Control valve, ejector gate 3560-5
 Control valve, pressure 2160-23

Control valve, selective 3560-1
 Control valve, transmission 0360-1
 Controls linkage, elevator 3615-3
 Controls linkage, parking brake 1115-1
 Controls, transmission 0315-3
 Converter housing and cover 0641-3
 Converter inlet pressure test 9020-32
 Converter lock-up and transmission
 control valve shift lever and linkage 0315-3
 Converter lock-up valve, transmission 0360-12
 Converter out pressure test 9020-32
 Converter turbine, gears, shafts
 and bearings 0651-1
 Conveyor and elevating device
 frame 3640-1
 Conveyor and elevating device
 hydraulic system 3660-1
 Cooler inlet pressure test 9020-33
 Cooler outlet pressure test 9020-33
 Cooling system, engine 0510-1
 Counterbalance tubes 1910-3
 Cover, converter 0641-3
 Covers and housings, transmission 0341-1
 Crankshaft and main bearings 0401-3
 Crankshaft gear 0401-4
 Cutting edge 3501-3
 Cutting edge adjustment 9030-1
 Cycling cylinders 9025-31
 Cylinder and piston, servo 3660-23, 3660-25
 Cylinder block 0404-1
 Cylinder, bowl lift 3560-6, 3560-8
 Cylinder, ejector gate 3560-7
 Cylinder, follow-up control
 steering 0960-24, 0960-30
 Cylinder head and valves 0409-1
 Cylinder liners 0404-1
 Cylinder, sliding floor 3560-7
 Cylinder, steering 0960-27
 Cylinders, scraper and haulage
 device 3560-6

D

Damper assembly 0350-1
 Delco-Remy starting motor 0422-1
 Delivery service I-IV-18
 Diagnosis and testing 9005-3
 Differential 0210-1

Differential assembly	9020-1
Differential case	0210-6
Differential drive shaft	0225-1
Differential lock valve	0210-15
Differential lock valve pressure test	9025-24
Differential with lock	0210-2
Displacement control valve	3660-33
Draft frame assembly	3540-2
Drive axle housing	0201-3
Drive axle shaft	0250-1
Drive case assembly, elevator	3650-2
Drive motor, elevator	3660-7
Drive shaft, differential	0225-1
Drive shaft, first	0350-18
Drive shaft, transmission	0315-1

E

Ejector gate and bowl levers and linkage	3515-1
Ejector gate assembly	3540-5
Ejector gate control valve	3560-5
Ejector gate cylinder	3560-7
Ejector gate rollers	3540-5
Electrical instruments and indicators	1676-5
Electrical system testing	9015-1
Elevating device frame	3640-1
Elevator chain	3640-2
Elevator chain connector tool	3640-3
Elevator controls linkage	3615-3
Elevator cycle time test	9025-33
Elevator drive case assembly	3650-2
Elevator drive motor	3660-7
Elevator drive pump	3660-17
Elevator gearbox	3650-1
Elevator lever and linkage	3615-3
Elevator pump hydraulic filter	2160-15
Elevator start up procedure	3660-38
Engine	0400-1
Camshaft and valve actuating means	0402-1
Connecting rods and pistons	0403-1
Crankshaft and main bearings	0401-3
Cylinder block	0404-1
Cylinder head and valves	0409-1
Exhaust manifold	0410-1
Flywheel, housing and fasteners	0433-1

Engine—Continued	
Fuel filter	0420-1
Fuel injection system	0413-1
Fuel transfer pump	0421-1
Installation	0400-7
Intake manifold	0414-1
Oil cooler	0419-1
Oiling system	0407-1
Removal	0400-2
Starting system	0422-1
Thermostats, housings and water piping	0418-1
Turbocharger	0416-1
Ventilating system	0408-1
Water pump	0417-1
Engine cooling system	0501-1
Engine oil cooler	0419-1
Engine oil pressure gauge	1823-7
Engine oil pressure regulating housing	0407-4
Engine oil pump	0407-1
Engine speed control, external	0515-1
Engine speed control rod	0515-2
Engine stop cable	0515-3
Engine system testing	9010-1
Engine valve clearance adjustment	0409-5
Engine water temperature gauge	1823-6
Evaporator	1830-23
Exhaust manifold	0410-1
Expansion valve	1830-24
External engine speed control	0515-1
External fuel supply system	0560-1

F

Fan drive	0429-1
Fenders	1927-1
Field assembly and frame	0422-2
Fifth clutch, transmission	0350-16
Fifth gear, power flow	9020-16
Filter bleed plus	0413-4
Filter, elevator pump hydraulic	2160-15
Filter, engine coolant conditioner	0510-3
Filter, fuel	0420-1
Filter, hydraulic oil	2160-17
Filter, oil transmission	0360-8
First clutch, transmission	0350-8
First drive shaft, transmission	0350-18
First gear housing, transmission	0350-18
First gear, power flow	9020-8
Flywheel	0433-1

Follow-up control steering cylinder	0960-24, 0960-30
Forward and third clutch, transmission	0350-12, 9020-7
Fourth and reverse clutch, transmission	0350-14
Fourth gear, power flow	9020-14
Frame and field assembly	0422-2
Frame, conveyor and elevating device	3640-1
Frame, draft	3540-2
Frame, main	1741-3
Frame installation	1740-3
Frames, scraper and haulage device	3540-1
Front brakes	1011-3
Fuel filter	0420-1
Fuel injection nozzles	0413-5
Fuel injection pump	0413-1
Fuel supply pump	0560-1
Fuel supply system, external	0560-1
Fuel tank	0560-2
Fuel transfer pump	0421-1
Fuse block	1674-1
Fuses and circuit breakers	1674-1

G

Gauge, engine oil pressure	1676-7
Gauge, engine water temperature	1676-6
Gauge, hydrostatic charge oil pressure	1676-3
Gauge, transmission oil pressure	1676-2
Gauge, transmission oil temperature	1676-7
Gear, crankshaft	0401-4
Gearbox	3650-1
Gears, shafts, bearings and power shift clutch, transmission	0350-1
Greases	I-IV-2
Grille	1921-1
Guide, valve	0409-3

H

Harness connectors	1674-3
Haulage device and scraper frames	3540-1
Haulage device and scraper hydraulic system	3560-1
Heater	1830-1
Heating system testing	9031-1
High beam indicator light	1676-5
High pressure relief valve pressure test	9025-33

High pressure switch	1830-27
Hood	1910-3
Horns	1806-3
Housing, axle	0201-3
Housing, converter	0641-3
Housing, engine oil pressure regulating	0407-4
Housings and covers, transmission	0341-1
Hydraulic brakes, scraper	1011-4
Hydraulic charge pump	2160-11
Hydraulic charge pump flow test	9025-27
Hydraulic filter restriction indicator light	1676-6
Hydraulic fitting installation and service recommendations	2160-26
Hydraulic oil accumulator, brake	1060-7
Hydraulic oil accumulator, main	2160-20
Hydraulic oil filter	2160-17
Hydraulic pump, main	2160-3
Hydraulic reservoir	2160-14
Hydraulic system, conveyor and elevating device	3660-1
Hydraulic system, power steering	0960-3
Hydraulic system, scraper and haulage device	3560-1
Hydraulic system testing (analyzer)	9025A-1
Hydraulic system testing	9025-1
Hydraulics, brake	1060-1
Hydraulics, transmission	0360-1
Hydraulics, vehicle	2160-3
Hydrostatic charge oil pressure gauge	1676-3
Hydrostatic elevator drive system	3660-1

I

Idler assembly, center	3640-6
Idler assembly, lower	3640-6
Idler assembly, upper	3640-1
Impeller, converter	0651-10
Indicator light, alternator	1676-5
Indicator light, brake pressure	1676-5
Indicator light, high beam	1676-5
Indicator light, hydraulic filter restriction	1676-6
Indicator light, parking brake	1676-8
Indicator lights, turn	1676-5
Indicators and instruments	1676-1

Input drive disk, converter 0651-7
 Input drive shafts and U-joints,
 axle and suspension system 0225-1
 Input drive shafts and U-joints,
 transmission 0325-1
 Input housing assembly 0210-6, 0210-10
 Inspection, after-sale I-IV-18
 Instrument panel 1676-1
 Instruments and indicators 1676-1
 Intake manifold 0414-1
 Intake system 0520-1

K

Key switch 1676-8

L

Leveling cutting edge adjustment 9030-1
 Lever, parking brake 1115-1
 Lever, transmission control valve
 shift 0315-3
 Levers, bowl and ejector gate 3515-1
 Lift check valve 0402-1
 Light, alternator indicator 1676-5
 Light, brake pressure indicator 1676-5
 Light, high beam indicator 1676-5
 Light, hydraulic filter restriction
 indicator 1676-6
 Light, parking brake indicator 1676-8
 Light switches 1673-1
 Light, turn indicator 1676-5
 Lighting system 1673-1
 Liner, cylinder 0404-1
 Linkage, bowl and ejector gate 3515-1
 Links, steering 0960-25
 Lock-up clutch pressure test 9020-34
 Lock valve, differential 0210-13
 Low pressure warning switch 1060-10
 Lower idler assembly 3640-6
 Lube pressure test 9020-34
 Lubrication I-V-1
 Lubrication system, central 1370-3

M

Main bearings, engine 0401-3
 Main hydraulic pump 2160-3
 Main hydraulic pump test 9025-28
 Make-up check valves 0960-13

Malfunctions, diagnosing:
 Air conditioning system 9031-8
 Electrical system 9015-12
 Engine 9010-5
 Heating system 9031-1
 Hydraulic system 9025-17
 Power train 9020-20
 Manifold 3660-15
 Manifold, exhaust 0410-1
 Manifold, intake 0414-1
 Manifold, water outlet 0418-1
 Mechanical instruments and
 indicators 1676-2
 Metering pump, steering 0960-7
 Miscellaneous components system testing 9030-1
 Modulating valve, transmission 0360-14
 Motor, Delco-Remy starting 0422-1
 Motor, elevator drive 3660-7

N

Neutral charge pressure test 9025-32
 Noise attenuator S.N. (xxxxx-) 2160-22
 Non-powered wheels 0120-1
 Non-powered wheel axles 0230-1
 Nozzle seat reamer 0413-6
 Nozzles, fuel injection 0413-5

O

Oil cooler, engine 0419-1
 Oil filter assembly, transmission 0360-8
 Oil filter, hydraulic 2160-17
 Oil lines, transmission 0341-1
 Oil pressure gauge, engine 1676-7
 Oil pressure gauge, transmission 1676-2
 Oil pressure regulating housing, engine 0407-4
 Oil pump, engine 0407-1
 Oil temperature gauge, transmission 1676-7
 Oils, lubricating I-V-2
 Oscillation hitch and steering arms 1740-5
 Output shaft and gear, transmission 0350-20

P

Parking brake 9020-5
 Parking brake active elements 1111-3
 Parking brake controls linkage 1115-1
 Parking brake indicator light 1676-8
 Parking brake lever 1115-1

Pedal, accelerator 0515-1
 Pedal, brake 1060-4
 Periodic service chart I-V-1
 Piston pump, axial 3660-1
 Pistons, connecting rods 0403-1
 Planet pinion carrier assembly 0250-1
 Plug, filter bleed 0413-4
 Power flow 9020-8
 Power steering hydraulic system 0960-3
 Power train system testing 9020-1
 Powered wheels 0110-3
 Pre-charging accumulator 1060-9
 Predelivery service I-IV-1
 Accessible hardware torque values I-IV-9
 Accumulator action I-IV-17
 Air cleaner I-IV-2
 Air conditioner I-IV-14
 Air intake hoses I-IV-3
 Alternator fan belt tension I-IV-4
 Batteries I-IV-2
 Belt tension I-IV-4
 Bleeding fuel system I-IV-3
 Cab equipment I-IV-14
 Cold weather starting aid I-IV-4
 Crankcase oil level I-IV-3
 Differential lock operation I-IV-16
 Drive axle oil level I-IV-5
 Electric fuel pump I-IV-6
 Elevator gearbox oil level I-IV-5
 Engine speeds I-IV-15
 Final check I-IV-17
 Fluid leakage I-IV-17
 Fuel filters I-IV-3
 Fuel tank I-IV-9
 Grease fittings I-IV-6
 Hydraulic reservoir oil level I-IV-5
 Hydraulic system cycle times I-IV-15
 Indicator lights and gauges I-IV-11
 Parking brake I-IV-17
 Power steering I-IV-16
 Radiator I-IV-4
 Seat operation I-IV-10
 Service brakes I-IV-16
 Service equipment I-IV-1
 Switches I-IV-13
 Tire pressure I-IV-6
 Transmission oil level I-IV-15, I-IV-17
 Transmission shifting I-IV-16
 Pressure control valve 2160-23
 Pressure control valve pressure test 9025-27
 Pressure oil circuit relief valves 0960-19

Pressure regulating valve, transmission 0360-6
 Pump, axial piston 3660-1
 Pump, charge, elevator 3660-37
 Pump, charge, hydraulic 2160-11
 Pump, charge, transmission 0360-4
 Pump, elevator drive 3660-17
 Pump, engine oil 0407-1
 Pump, fuel injection 0413-1
 Pump, fuel supply 0560-1
 Pump, fuel transfer 0421-1
 Pump, main hydraulic 2160-3
 Pump, steering metering 0960-7
 Pump, variable displacement 3660-25

R

Radial bearing test 0416-2
 Radiator 0510-1
 Reaction member 0651-1, 0651-8, 0651-12
 Receiver-dryer 1830-21
 Regulator and alternator, 42 amp 1672-1
 Regulator and alternator, 70 amp 1672-14
 Relays 1674-4
 Relief valve control circuit 0960-19
 Relief valve, pressure oil circuit 0960-19
 Relief valve, steering 0960-11
 Reservoir, hydraulic 2160-14
 Resistor, alternator excitation 1676-8
 Reverse and fourth clutch, transmission 0350-14
 Reverse gear, power flow 9020-18
 Reverse warning horn 1806-3
 Rim, wheel 0110-4
 Rocker arm assembly 0402-2, 0409-1
 Rod, connecting 0403-1
 Rod, engine speed control 0515-2
 Rollers, ejector gate 3540-5

S

Safety equipment 1806-3
 Safety information I-II-1
 Scraper and haulage device frames 3540-1
 Scraper and haulage device hydraulic system 3560-1
 Scraper fenders 1927-2
 Scraper hydraulic brakes 1011-5

Screen, valve inlet filter	0960-13	Special tools—Continued:	
Seat and seat belt	1821-2	Starting system	0499-39
Seat, suspension	1821-1	Transmission gears, shafts, bearings, and power shift clutch	0399-8
Second clutch, transmission	0350-10	Turbocharger	0499-37
Second gear, power flow	9020-10	Vehicle hydraulics	2199-8
Selective control valve	3560-1	Water pump	0499-38
Service brake active elements	1011-3	Specifications:	
Service brakes	9020-5	Air conditioning system	1899-2
Service, delivery	I-IV-18	Alternator and generator mounting	0499-24
Service, predelivery	I-IV-1	Alternator, regulator and charging system wiring	1699-1
Service step	1822-1	Axle housing	9035-20
Servo cylinders and pistons	3660-23, 3660-25	Axle shafts, bearings, reduction gears	0299-8
Shaft assembly	3650-6	Batteries, supports and cables	1699-1
Shaft, converter	0651-1	Brake hydraulics	1099-1
Shaft, differential drive	0225-1	Camshaft and valve actuating means	0499-5
Shaft, drive axle	0250-1	Connecting rods and pistons	0499-7
Shaft, transmission drive	0325-1	Converter housing and cover	0699-2
Sliding floor assembly	3540-3	Converter turbine, gears, shafts and bearings	0699-3
Sliding floor cutting edge	3501-3	Conveyor and elevating device controls linkage	3699-1
Sliding floor cylinder	3560-7	Conveyor and elevating device frame	3699-2
Solenoid, accessory	1676-8	Conveyor and elevating device hydraulic system	3699-8
Solenoid, starting aid	0505-3	Crankshaft and main bearings	0499-3
Solenoid switch, starting motor	0422-2, 0422-9	Cutting edge adjustment	9035-20
Solenoid tests	0422-3	Cylinder block	0499-9
Special tools:		Cylinder head and valves	0499-12
Air conditioning system	1899-4	Differential	0299-1
Alternator, regulator and charging system wiring	1699-8	Drive axle housing	0299-1
Batteries, supports and cables	1699-6	Electrical instruments and indicators	1699-9
Brake hydraulics	1099-3	Electrical system testing	9035-6
Camshaft and valve actuating means	0499-28	Engine break-in	0499-1
Connecting rods and pistons	0499-30	Engine cooling system	0599-1
Conveyor and elevating device frame	3699-11	Engine oil cooler	0499-20
Conveyor and elevating device hydraulic system	3699-12	Engine oiling system	0499-11
Crankshaft and main bearings	0499-27	Engine system testing	9035-1
Cylinder block	0499-31	Exhaust manifold	0499-15
Cylinder head and valves	0499-32	External fuel supply system	0599-1
Electrical system testing	9035-12	Fan drive	0499-25
Engine removal and installation	0499-26	Flywheel, housings, and fastenings	0499-25
Engine system testing	9035-3	Frame installation	1799-1
Fuel injection system	0499-34	Fuel filter	0499-21
Heating and air conditioning	9035-22		
Hydraulic system (analyzer)	9035-23		
Hydraulic system testing	9035-18		
Miscellaneous components system testing	9035-20		
Power steering hydraulic system	0999-5		
Scraper and haulage device frames	3599-2		

Specifications—Continued

Fuel injection system	0499-16	Starting circuit testing	9015-27
Fuel supply system	0499-21	Starting motor, Delco-Remy	0422-1
Fuel transfer pump	0499-15	Steering arms and oscillation hitch	1743-1
General	I-III-1	Steering circuit restrictor orifice	0960-31
Heating and air conditioning	9035-21	Steering column adjusting bracket	0960-3
Hinges, yokes and gudgeons	1799-1	Steering cylinder	0960-27
Hydraulic system	3599-2	Steering cylinder follow-up control	0960-24
Hydraulic system (analyzer)	9035-20	Steering links	0960-25
Hydraulic system testing	9035-15	Steering metering pump	0960-7
Input drive shafts and U-joints	0299-7	Steering spool	0960-13
Intake manifold	0499-17	Steering, telescoping	0960-5
Lighting system	1699-5	Steering valve	0960-11
Mechanical instruments and indicators	1699-10	Steering valve test	9025-35
Miscellaneous components testing	9035-20	Stem, valve	0110-4
Non-powered wheel axles	0299-7	Steps	1822-1
Oscillation hitch and steering link pins	1799-1	Stop cable, engine	0515-3
Parking brake active elements	1199-1	Storage of scraper	I-IV-1
Power steering hydraulic system	0999-1	Stroke control valve	2160-6, 2160-8
Power train system testing	9035-13	Superheat shut-off switch	1830-27 - 1830-28
Scraper and haulage device frames	3599-1	Suspension seat	1821-1
Seat	1899-1	Switch, high pressure	1830-26
Starting system	0499-22	Switch, horn	1806-3
Thermostats, housings and piping	0499-20	Switch, key	1676-8
Transmission gears, shafts, bearings and power shift clutch	0399-3	Switch, low pressure warning	1060-6
Transmission housings and covers	0399-2	Switch, reverse warning horn	1806-3
Transmission hydraulics	0399-4	Switch, start	1676-8
Turbocharger	0499-17	Switch, start aid	1676-8
Vehicle hydraulics	2199-1	Switch, starting motor solenoid	0422-2
Water pump	0499-19	Switch, superheat shut-off	1830-27
Wheels, powered	0199-1	Switch, thermostatic temperature control	1830-24
Wiring harness and switches	1699-6	Switch, wiper	1676-8
Speed control, engine	0515-1	Switches, light	1673-1
Speed control rod	0515-2	Switches, turn signal	1673-1
Speed control system	0515-1		
Speedometer	1676-4	T	
Spool, steering	0960-13	Tachometer	1676-3
Sprag clutch drive	0422-2, 0422-6	Tank, fuel	0560-2
Start aid switch	1676-8	Telescoping steering	0960-5
Start circuit relay	1674-5	Temporary storage	I-IV-1
Start switch	1676-8	Testing:	
Starting aid adapter, line and nozzle	0505-3	Air conditioning system	9031-2
Starting aid solenoid	0505-3	Alternator, 42 amp	1672-8
Starting aids, cold weather	0505-3	Alternator, 70 amp	1672-18
Starting circuit	9015-5	Batteries	1671-4
		Compressor	1830-16
		Differential	0210-13
		Electrical system	9015-26
		Engine system	9010-10

Testing—Continued
 Heating system 9031-1
 Hydraulic system 9025-24
 Miscellaneous components system 9030-1
 Power train system 9020-30
 Radiator leakage 0510-2, 9010-11
 Starting solenoid 0422-3
 Steering valve 0960-19
 Turbocharger 0416-2
Thermal fuse and superheat
 shut-off switch 1830-28
Thermostatic temperature
 control switch 1830-25
Thermostats 0418-1
Third and forward clutch
 transmission 0350-12
Third gear, power flow 9020-12
Timing sprockets 3640-2
Torque chart I-IV-21, 0399-1
Torque converter:
 Housing and cover 0641-3
 Theory of operation 9020-6
 Turbine, gears, shafts and bearings 0651-1
Tractor fenders 1927-1
Transmission 9020-6
Transmission assembly 0350-3
Transmission charge pump 0360-4
Transmission control valve assembly 0360-1
Transmission controls 0315-3
Transmission converter lock-up valve 0360-12
Transmission gears, shafts, bearings and
 power shift clutch 0350-1
Transmission housings and covers 0341-1
Transmission hydraulics 0360-1
Transmission input drive shafts
 and U-joints 0325-1
Transmission modulating valve 0360-14
Transmission oil filter assembly 0360-8
Transmission oil pressure gauge 1676-2
Transmission oil temperature gauge 1676-7
Transmission pressure regulating valve 0360-6
Transmission to elevator pump adapter 0360-10
Tubes, counterbalance 1910-3
Turbine, converter 0651-1
Turbocharger 0416-1

Turn indicator light 1676-5
Turn signal switches 1673-1

U

Upper idler assembly 3640-1

V

Valve actuating means 0402-1
Valve, bowl control 3560-5
Valve, brake 1060-1
Valve clearance adjustment 0409-5
Valve control circuit relief 0960-19
Valve, converter lock-up, transmission 0360-12
Valve cover, brake 1060-4
Valve, differential lock 0210-13
Valve, displacement control 3660-33
Valve, ejector gate control 3560-5
Valve guide 0409-3
Valve inlet filter screens 0960-13
Valve, lift check 0402-1
Valve, make-up check 0960-13
Valve, modulating, transmission 0360-14
Valve, pressure control 2160-23
Valve, pressure oil circuit relief 0960-19
Valve, pressure regulating,
 transmission 0360-6
Valve, selective control 3560-1
Valve, steering 0960-11
Valve, steering relief 0960-11
Valve stem 0110-4
Valve, stroke control 2160-6
Valve, transmission control 0360-1
Valves and cylinder head 0409-1
Valves, engine 0409-1
Variable displacement pump 3660-25
Vehicle hydraulics 2160-3

W

Warm-up circuit 0960-13
Water outlet manifold 0418-1
Water pump 0417-1
Water temperature gauge, engine 1676-6
Wheel axles, non-powered 0230-1
Wheels, non-powered 0120-1
Wheels, powered 0110-3
Windshield wiper 1810-3
Wiper switch 1676-8