

John Deere JD440-C Skidder- Grapple Skidder



TECHNICAL MANUAL

John Deere Dubuque Works
TM-1138 (Sep-82)



LITHO IN U.S.A.

(
(
(
(
(
(
(
(
(
(
(

JD440-C SKIDDER-GRAPPLE SKIDDER

Technical Manual
TM-1138 (Sep-82)

SECTIONAL CONTENTS OF THIS MANUAL

Section I - General Information	1
Section 1 - Wheels	1
Section 2 - Axles and Suspension System	2
Section 3 - Transmission	3
Section 4 - Engine	4
Section 5 - Engine Auxiliary Systems	5
Section 6 - Torque Converter	NOT USED 6
Section 7 - Traction (Engine) Clutch	7
Section 8 - Transfer Drive	NOT USED 8
Section 9 - Steering Systems	9
Section 10 - Service Brakes	10
Section 11 - Parking - Emergency Brakes	11
Section 13 - Miscellaneous Vehicle	NOT USED 13
Section 15 - Equipment Attaching	NOT USED 15

Continued on page 3

Previous Editions

Copyright ©1980 Deere & Company
Copyright ©1979 Deere & Company
Copyright ©1977 Deere & Company
Copyright ©1976 Deere & Company

Copyright ©1982
DEERE & COMPANY
Moline, Illinois
All Rights Reserved

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

SECTIONAL CONTENTS (Continued)

Section 16 - Electrical Systems _____	16
Section 17 - Frame, Chassis or Supporting Structure _____	17
Section 18 - Operator's Station _____	18
Section 19 - Sheet Metal and Styling _____	19
Section 20 - Safety, Convenience and Miscellaneous _____	20
Section 21 - Main Hydraulic System _____	21
Section 22 - Pneumatic Systems _____	NOT USED 22
Section 30 - Winch _____	30
Section 31 - Loader _____	NOT USED 31
Section 32 - Bulldozer _____	32
Section 33 - Backhoe and Excavator _____	NOT USED 33
Section 34 - Grading Device _____	NOT USED 34
Section 35 - Scraper and Haulage Device _____	NOT USED 35
Section 36 - Conveyor and Elevating Device _____	NOT USED 36
Section 37 - Arch or Boom, or Cranes _____	37
Section 38 - Grapple _____	38
Section 39 - Shear _____	NOT USED 39

Continued on page 5

SECTIONAL CONTENTS (Continued)

Section 40 - PTO or Winch Drive _____	40
Section 41 - Misc. Function Mechanical Drive _____	NOT USED 41
Section 42 - Ground Conditioning Tool _____	NOT USED 42
Section 43 - Swing, Rotation or Pivoting System _____	NOT USED 43
Section 44 - Cutting Mechanism _____	NOT USED 44
Section 45 - Forklifts _____	NOT USED 45
Section 46 - Automatic Control _____	NOT USED 46
Section 90 - System Testing _____	90

The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.

SECTION AND GROUP CONTENTS OF THIS MANUAL

SECTION I - GENERAL INFORMATION

- Group I - Contents, Index and Page List
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery and After-Sales Services
- Group V - Lubrication

SECTION 1 - WHEELS

- Group 0110 - Powered Wheels, Tires and Fastenings
- Group 0149 - Wheel Weights
- Group 0199 - Specifications and Special Tools

SECTION 2 - AXLES AND SUSPENSION SYSTEM

- Group 0201 - Drive Axle Housing and Support
- Group 0210 - Differentials
- Group 0225 - Input Drive Shafts and U-Joints
- Group 0250 - Axle Shaft, Bearings, Reduction Gears
- Group 0299 - Specifications and Special Tools

SECTION 3 - TRANSMISSION

- Group 0315 - Controls
- Group 0341 - Housing and Covers
- Group 0350 - Gears, Shafts, Bearings and Power Shift Clutch
- Group 0360 - Hydraulic System
- Group 0399 - Specifications and Special Tools

SECTION 4 - ENGINE

- Group 0400 - Engine Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0415 - Engine Balancer
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housing and Water Piping
- Group 0419 - Oil Cooler
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting Motor and Fastenings
- Group 0433 - Flywheel, Housing and Fastenings
- Group 0499 - Specifications and Special Tools

SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling Systems
- Group 0515 - Speed Controls
- Group 0520 - Intake Systems
- Group 0530 - External Exhaust Systems
- Group 0540 - Mounting Frame
- Group 0560 - External Fuel Supply Systems
- Group 0599 - Specifications and Special Tools

SECTION 7 - TRACTION (ENGINE) CLUTCH

- Group 0715 - Controls
- Group 0741 - Housing and Covers
- Group 0742 - Elements
- Group 0799 - Specifications and Special Tools

SECTION 9 - STEERING SYSTEM

- Group 0930 - Emergency Steering
- Group 0960 - Hydraulic System
- Group 0999 - Specifications and Special Tools

SECTION 10 - SERVICE BRAKES

- Group 1011 - Active Elements
- Group 1015 - Controls Linkage
- Group 1060 - Hydraulic System
- Group 1099 - Specifications and Special Tools

SECTION 11 - PARKING-EMERGENCY BRAKES

- Group 1111 - Active Elements
- Group 1115 - Controls Linkage
- Group 1199 - Specifications and Special Tools

SECTION 16 - ELECTRICAL SYSTEM

- Group 1671 - Batteries, Support and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1676 - Instruments and Indicators
- Group 1699 - Specifications and Special Tools

SECTION 17 - FRAME, CHASSIS, OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1746 - Frame Bottom Guards
- Group 1799 - Specifications and Special Tools

SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued

SECTION 18 - OPERATOR'S STATION

- Group 1807 - Special Noise Control Items
- Group 1810 - Operator's Enclosure
- Group 1821 - Seat and Seat Belt
- Group 1830 - Heating and Air Conditioning
- Group 1899 - Specifications and Special Tools

SECTION 19 - SHEET METAL

- Group 1910 - Hood or Engine Enclosure
- Group 1921 - Grille and Grille Housing

SECTION 20 - SAFETY, CONVENIENCE AND MISCELLANEOUS

- Group 2003 - Fire Extinguisher
- Group 2004 - Horn
- Group 2006 - Cigar Lighter

SECTION 21 - MAIN HYDRAULIC SYSTEM

- Group 2160 - Hydraulic System
- Group 2199 - Specifications and Special Tools

SECTION 30 - WINCH

- Group 3041 - Winch Housing and Mounting Structure
- Group 3050 - Winch Drum and Clutches
- Group 3060 - Hydraulic System
- Group 3099 - Specifications and Special Tools

SECTION 32 - BULLDOZER

- Group 3201 - Blade
- Group 3215 - Controls Linkage
- Group 3260 - Hydraulic System
- Group 3299 - Specifications and Special Tools

SECTION 37 - ARCH OR BOOM, OR CRANES

- Group 3740 - Frames
- Group 3760 - Hydraulic System
- Group 3799 - Specifications and Special Tools

SECTION 38 - GRAPPLE

- Group 3803 - Grapple Mechanism
- Group 3815 - Control Linkage
- Group 3860 - Hydraulic System
- Group 3899 - Specifications and Special Tools

SECTION 40 - PTO OR WINCH DRIVE

- Group 4025 - Input Drive Shafts
- Group 4051 - Gears, Shafts and Bearings
- Group 4099 - Specifications and Special Tools

SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9020 - Power Train
- Group 9025A - Hydraulic System (Analyzer)
- Group 9030 - Miscellaneous Components
- Group 9031 - Heating and Air Conditioning
- Group 9035 - Specifications and Special Tools

ALPHABETICAL INDEX

A

Accessory circuit testing 9015-30
Accumulator, brake 1060-4
Accumulator, emergency steering 0930-3
After-sale inspection I-IV-17
Aid, cold weather starting 0505-3
Air cleaner assembly 0520-1
Alternator indicator light 1676-1
Alternator, regulator and charging
 system wiring 1672-1
Arch, log 3740-3
Armature 0422-1, 0422-4
Axle shaft, bearings, reduction gears 0250-1
Axles and suspension systems 0201-1

B

Balancer shafts, engine 0415-1
Batteries, support and cables 1671-3, 9015-17
Blade, stacking 3201-3
Block, cylinder 0404-1
Block diagram:
 Electrical system 9015-5
 Hydraulic system (flow meter) 9025-15
 Power train 9020-5
Boom cylinders 3860-23
Boom, grapple 3740-5
Bottom guards, frame 1746-1
Brake accumulator 1060-4
Brake and clutch assembly, winch 3050-4
Brake band assembly, winch 3050-1
Brake valve 1060-1
Brakes, parking-emergency 1111-1
Brakes, service 1011-1
Bulldozer 3201-1

C

Cab, ROPS enclosed 1810-10
Camshaft and valve actuating means 0402-1
Canopy 1810-1
Canopy with windshield 1810-14
Case and cover, transmission 0341-1
Charging circuit testing 9015-24
Cigar lighter 2006-1
Circuit breaker, main 1674-2
Circuit protectors 1674-2
Clutch, traction (engine) 0715-1
Cold weather starting aids 0505-3
Component location:
 Electrical system 9015-1
 Engine system 9010-2
 Fire suppression system 2003-7
 Hydraulic system (flow meter) 9025-1
 Power train 9020-2

Connecting rods and pistons 0403-1
Control valve, blade 3260-1
Control valve, grapple 3860-1
Control valve, winch 3060-1
Controls linkage:
 Blade 3215-1
 Grapple 3815-1
 Parking-emergency brakes 1115-1
 Service brakes 1015-1
Controls, transmission 0315-3
Cooling systems, engine 0510-1
Countershaft 0350-5, 0350-11, 0350-16
Countershaft, reverse 0350-3, 0350-7, 0350-20
Cover, vandal 1910-6
Cowl 1910-6
Crankshaft and main bearings 0401-1
Crossover relief valve 3860-14
Cylinder block 0404-1
Cylinder, boom 3860-23
Cylinder, grapple 3860-19
Cylinder head and valves 0409-1
Cylinder, steering 0960-25

D

Delivery service I-IV-17
Diagnosing malfunctions:
 Electrical system 9015-11
 Engine system 9010-5
 Heating system 9031-1
 Hydraulic system (flow meter) 9025-16
 Power train 9020-12
 Winch 9030-1
Diagnosis and testing 9005-3
Differential case 0210-2
Differential or bevel drive 0210-1
Differential lock valve 0210-14
Differential spiral bevel pinion shaft 0210-7
Drive shaft, transmission 0350-10

E

Electrical instruments and indicators 1676-1
Electrical systems:
 Alternator, regulator and charging
 system wiring 1672-1
 Batteries, support and cables 1671-3
 Instruments and indicators 1676-1
 Lighting system 1673-1
 Wiring harness and switches 1674-1
Electrical system testing 9015-1
 Block diagram 9015-5
 Component location 9015-1

Electrical system testing—Continued
 Diagnosing malfunctions 9015-11
 Precautions 9015-14
 Schematic diagram 9015-5, 9015-35
 Testing and adjustment 9015-16
 Visual inspection 9015-15
 Wire terminal identification 9015-5, 9015-7
Emergency steering accumulator 0930-3
Emergency steering low pressure
 warning switch (with drainline) 0930-6
Emergency steering low pressure
 warning switch (without drainline) 0930-5
Engine 0400-1
Engine auxiliary systems 0500-1
Engine coolant heater 0505-4
Engine frame 1740-3, 1740-9
Engine oil pressure gauge 1676-1
Engine side shields 1910-3
Engine system testing 9010-1
 Component location 9010-2
 Diagnosing malfunctions 9010-5
 Testing and adjustment 9010-10
 Theory 9010-1
 Visual inspection 9010-8
Engine water temperature gauge 1676-2
Equipment frame 1740-8
Exhaust manifold 0410-1
Exhaust systems, engine 0530-1
Extinguisher, fire 2003-3

F

Fairlead, frame 3840-10
Fairlead, grapple 3803-7
Fan, engine 0510-1
Field and shunt windings 0422-1, 0422-4, 0422-7
Filter, engine oil 0407-6
Filter, transmission oil 0360-3
Final drive assembly 0250-1
Fire extinguisher 2003-3
Fire suppression system 2003-6
Fire suppression system recharging 2003-10
Fire suppression system testing 2003-13
Flow meter testing 9025-1
Fluid starting aid 0505-3
Flywheel assembly 0401-6, 0433-1
Frame bottom guards 1746-1
Frame, grapple boom (-xxxxxx) 3840-1
Frame, grapple boom (xxxxxx-) 3840-5
Frame installation 1740-3
Frame, log arch 3740-3
Front differential 0210-1
Fuel filter, engine 0420-1
Fuel gauge 1676-2
Fuel injection nozzles 0413-4
Fuel injection pump 0413-1
Fuel tank, engine 0560-1

Fuel transfer pump, engine 0421-1
Fuses 1674-3

G

Gauge, engine oil pressure 1676-1
Gauge, engine water temperature 1676-2
Gauge, fuel 1676-2
Gerotor operation 3860-5
Grapple 3803-1
Grapple boom 3740-5
Grapple control valve 3860-1
Grapple cylinder 3860-19
Greases I-V-3
Grille and grille housing 1921-1
Guards, frame bottom 1746-1

H

Hand held fire extinguisher
 (-315807) 2003-3
 (315808-) 2003-5
Headliner 1807-3
Heater 1830-1
Heating system testing 9031-1
Hood 1910-4
Horn 2004-1
Hour meter 1676-2
Hydraulic oil cooler 2160-20
Hydraulic oil filter 2160-20
Hydraulic system (analyzer) testing 9025A-1
 General information 9025A-1
 Pretest inspection 9025A-3
 Operational checks 9025A-3
 Test and adjustment 9025A-8
 List of parts for tests 9025A-27
Hydraulic system (flow meter) testing 9025-1
 Block diagram 9025-15
 Component location 9025-1
 Diagnosing malfunctions 9025-18
 Schematics 9025-11
 Testing 9025-19
 Theory 9025-9
 Visual inspection 9025-18D
Hydraulic system, main 2160-3
Hydraulics:
 Grapple 3860-1
 Grapple boom 3840-5
 Service brakes 1060-1
 Stacking blade 3260-1
 Steering system 0960-1
 Transmission 0360-1
 Winch 3060-1

I

Input and idler shaft, winch 3050-13
Input drive shafts and U-joints 0225-1
Instruments and indicators 1676-1
Intake system, engine 0520-1

L

Lift cylinder, blade 3260-3
 Light, alternator indicator 1676-1
 Light, parking brake indicator buzz 1676-2
 Lighter, cigar 2006-1
 Lighting circuit testing 9015-29
 Lighting system 1673-1
 Liners, cylinder 0404-1
 Log arch 3740-3
 Lubrication I-IV-1

M

Main circuit breaker 1674-2
 Main drive shaft, winch 3050-8
 Main hydraulic pump 2160-3
 Manifold, exhaust 0410-1
 Manifold, rotary, grapple 3860-16
 Miscellaneous components
 system testing 9030-1
 Seat adjustment 9030-2
 Winch 9030-1, 9030-3
 Windshield wiper adjustment 9030-2
 Motor, rotate, grapple 3860-5
 Mounting frame, engine 0540-1

N

Noise control items 1807-3
 Nozzle, fuel injection 0413-4
 Nozzles and tubes, fire
 suppression system 2003-8

O

Oil cooler, engine 0419-1
 Oil cooler, hydraulic 2160-20
 Oil filter, hydraulic 2160-20
 Oil filter relief valve 0360-4
 Oil filter, transmission 0360-3
 Oil pump, transmission 0360-1
 Oiling system, engine 0407-1
 Oils I-IV-3
 Operator enclosure 1810-1
 Output idler gear shaft 0350-5, 0350-12, 0350-15
 Output shaft 0350-6, 0350-13
 Overrunning clutch and pinion 0422-1, 0422-5

P

Parking brake indicator buzz-light 1676-2
 Parking-emergency brakes 1111-3
 Periodic service chart I-IV-1
 Pistons 0403-1
 Pivot ball assembly 1740-6
 Platform 1810-9

Power train system testing 9020-1
 Block diagram 9020-5
 Component location 9020-2
 Diagnosing malfunctions 9020-12
 Testing and adjustments 9020-16
 Theory 9020-1, 9020-5
 Visual inspection 9020-15
 Powered wheels and fastenings 0110-4
 Predelivery service I-IV-1
 Pressure control valve 2160-18
 Pump drive, hydraulic 2160-17
 Pump, engine oil 0407-1
 Pump, engine water 0417-1
 Pump, fuel injection 0413-1
 Pump, fuel transfer, engine 0421-1
 Pump, main hydraulic 2160-3
 Pump, transmission oil 0360-1

R

Radiator and fan shroud 0510-1
 Range shifter 0315-6
 Rear differential 0210-1
 Reduction gear shaft 0350-4, 0350-10, 0350-17
 Regulator and alternator 1672-1
 Relief valve, grapple 3860-3
 Relief valve, hydraulic 2160-19
 Reverse countershaft 0350-3, 0350-7, 0350-20
 Rocker arm 0402-2, 0402-4, 0402-7
 ROPS canopy 1810-1
 ROPS canopy with windshield 1810-14
 ROPS enclosed cab 1810-10
 Rotary manifold, grapple 3860-16
 Rotate motor (. 3860-5
 -266120)
 (266121- 3860-7
)

S

Safety information I-II-1
 Schematics:
 Electrical system 9015-5, 9015-33
 Screen, transmission 0360-5
 Seat 1821-1
 Sensors, fire suppression system 2003-7
 Service brakes 1011-1
 Service, delivery I-IV-15
 Service, predelivery I-IV-1
 Shaft, balancer 0415-1
 Shaft, output 0350-6, 0350-13
 Shaft, output idler gear 0350-5, 0350-12,
 0350-15
 Shaft, reduction gear 0350-4, 0350-10,
 0350-17
 Shaft, winch input and idler 0350-13
 Shaft, winch main drive 3050-8
 Shifters, transmission 0315-6
 Side shields, engine 1910-3
 Solenoid, starting 0422-1, 0422-9

Special tools:

Alternator, regulator and charging system wiring	1699-7
Batteries, support and cables	1699-5
Blade hydraulic system	3299-2
Camshaft and valve actuating means	0499-28
Connecting rods and pistons	0499-30
Crankshaft and main bearings	0499-27
Cylinder block	0499-31
Cylinder head and valves	0499-33
Electrical system testing	9035-9
Engine balancer	0499-38
Engine removal and installation	0499-26
Engine system testing	9035-3
Fuel injection system	0499-35
Hydraulic system (analyzer) testing	9035-19
Hydraulic system (flow meter) testing	9035-15
Input drive shafts and U-joints	0299-10
Main hydraulic system	2199-7
Operator enclosure	1899-3
Powered wheels and fastening	0199-2
Service brakes hydraulic system	1099-5
Starting motor and fastenings	0499-41
Steering system hydraulic system	0999-6
Traction clutch elements	0799-5
Transmission gears, shafts, bearings and power shift clutch	0399-10
Turbocharger	0499-39
Water pump	0499-41
Winch drive and clutches	3099-8

Specifications and torque values:

Alternator, regulator and charging system wiring	1699-2
Arch or boom frames	3799-1
Axle shaft, bearings, reduction gears	0299-9
Batteries, support and cables	1699-1
Blade hydraulic system	3299-1
Camshaft and valve actuating means	0499-3
Cold weather starting aids	0599-1
Connecting rods and pistons	0499-8
Crankshaft and main bearings	0499-2
Cylinder block	0499-9
Cylinder head and valves	0499-13
Differential or bevel drive	0299-2
Drive axle housing and support	0299-1
Electrical system testing	9035-6
Engine balancer	0499-17
Engine break-in	0499-1
Engine system testing	9035-1
Exhaust manifold	0499-15
Flywheel, housing and fastenings	0499-24
Frame bottom guards	1799-2
Frame installation	1799-1
Frames	3899-1

Specifications and torque values—Continued

Fuel injection system	0499-16
General	I-III-1
Grapple hydraulic system	3899-2
Hydraulic system (analyzer) testing	9035-17
Hydraulic system (flow meter) testing	9035-11
Input drive shafts and U-joints	0299-8
Instruments and indicators	1699-4
Lighting system	1699-3
Main hydraulic system	2199-1
Miscellaneous components	9035-16
Mounting frame	0599-2
Oil cooler, engine	0499-20
Oiling system, engine	0499-10
Operator enclosure	1899-1
Parking - emergency brakes	
active elements	1199-1
Power train system testing	9035-10
Powered wheels and fastenings	0199-1
Relief valve	2199-9
Seat	1899-2
Service brakes active elements	1099-1
Service brakes controls linkage	1099-1
Service brakes hydraulic system	1099-3
Speed controls	0599-1
Starting motor and fastenings	0499-21
Steering system hydraulic system	0999-1
Thermostats, housings and water piping	0499-19
Traction clutch controls	0799-1
Traction clutch elements	0799-3
Traction clutch housing and covers	0799-2
Transmission controls	0399-1
Transmission gears, shafts, bearings and power shift clutch	0399-4
Transmission housing and covers	0399-3
Transmission hydraulic system	0399-8
Turbocharger	0499-18
Water pump, engine	0499-18
Wheel weights	0199-1
Winch drive and clutches	3099-2
Winch housing and mounting structures	3099-1
Winch hydraulic system	3099-6
Winch input drive shafts	4099-1
Wiring harness and switches	1699-3
Speed and range shifter linkage	0315-3
Speed controls, engine	0515-1
Speed shifter	0315-7
Stacking blade	3201-3
Start circuit relay	1674-3
Starting aid	0505-3
Starting circuit testing	9015-18
Starting motor and fastenings	0422-1

Steering system	0930-1
Storage, temporary	I-IV-1
Switch, emergency steering low pressure warning	0930-5
Switch, horn	2004-1
Switches	1674-4

T

Testing and adjustments:	
Batteries	1671-4, 9015-17
Electrical systems	9015-16
Engine system	9010-1
Heating system	9031-1
Hydraulic system (flow meter)	9025-19
Log arch adjustment	9030-3
Power train	9020-16
Seat adjustment	9030-2
Starting motor	0422-3, 0422-6, 0422-10
Turbocharger	0416-1
Winch adjustment	9030-3
Windshield wiper attachment	9030-2
Thermostat and housing, engine	0418-1
Timing gear train	0402-3
Tires	0110-3
Traction (engine) clutch	0715-1
Turbocharger	0416-1

V

Valve, brake	1060-1
Valve, differential lock	0210-13
Valve, hydraulic relief	2160-10
Valve, oil filter relief	0360-4
Valve, oil pressure regulating	0407-4
Valve, pressure control	2160-9
Valve, steering (-400823)	0960-1
Valve, steering (400824-)	0960-11
Valve, winch control	3060-1
Vandal cover	1910-6
Ventilator outlet tube	0408-1

W

Water pump, engine	0417-1
Wheel weights	0149-1
Wheels	0110-1
Winch	3041-1
Winch adjustments	9030-1, 9030-3
Winch drive:	
Gears, shafts and bearings	4051-1
Input drive shaft	4025-3
Windshield washer and wiper	1810-13
Wiring harness and switches	1674-1

**COMPLETE PAGE LISTING
WITH LATEST DATE LINES**

I-I-1,2	(Sep-82)	2-0210-13,14	(Mar-80)	4-0402-1,2	(Sep-76)
I-I-3,4	(Sep-76)	2-0210-15,16	(Sep-82)	4-0402-3,4	(Sep-76)
I-I-5,6	(Sep-76)	2-0225-1,2	(Mar-80)	4-0402-5,6	(Sep-76)
I-I-7,8	(Jan-79)	2-0225-3,4	(Mar-80)	4-0402-7,8	(Sep-82)
I-I-9,10	(Mar-80)	2-0250-1,2	(Mar-80)	4-0403-1,2	(Mar-80)
I-I-11,12	(Mar-80)	2-0250-3,4	(Mar-80)	4-0403-3,4	(Mar-80)
I-I-13,14	(Sep-82)	2-0299-1,2	(Sep-76)	4-0403-5,6	(Sep-82)
I-I-15,16	(Sep-82)	2-0299-3,4	(Mar-80)	4-0404-1,2	(Sep-76)
I-II-1,2	(Sep-76)	2-0299-5,6	(Sep-82)	4-0404-3,4	(Sep-76)
I-II-3,4	(Sep-76)	2-0299-7,8	(Sep-82)	4-0407-1,2	(Sep-82)
I-II-5,6	(Sep-76)	2-0299-9,10	(Sep-76)	4-0407-3,4	(Sep-82)
I-II-7,8	(Mar-80)			0-0407-5,6	(Sep-82)
I-III-1,2	(Jan-79)	3-0315-1,2	(Sep-82)	4-0408-1,2	(Sep-76)
I-III-3,4	(Jan-79)	3-0315-3,4	(Mar-80)	4-0409-1,2	(Mar-80)
I-III-5,6	(Jan-79)	3-0315-5,6	(Sep-82)	4-0409-3,4	(Sep-82)
I-III-7,8	(Jan-79)	3-0315-7,8	(Mar-80)	4-0410-1,2	(Mar-80)
I-IV-1,2	(Mar-80)	3-0315-9,10	(Sep-82)	4-0413-1,2	(Jan-79)
I-IV-3,4	(Sep-82)	3-0341-1,2	(Sep-76)	4-0413-3,4	(Sep-82)
I-IV-5,6	(Mar-80)	3-0341-3,4	(Sep-82)	4-0413-5,6	(Jan-79)
I-IV-7,8	(Mar-80)	3-0350-1,2	(Sep-82)	4-0415-1,2	(Jan-79)
I-IV-9,10	(Mar-80)	3-0350-3,4	(Sep-82)	4-0416-1,2	(Sep-76)
I-IV-11,12	(Mar-80)	3-0350-5,6	(Sep-76)	4-0416-3,4	(Sep-76)
I-IV-13,14	(Mar-80)	3-0350-7,8	(Mar-80)	4-0416-5,6	(Mar-80)
I-IV-15,16	(Mar-80)	3-0350-9,10	(Sep-82)	4-0416-7,8	(Mar-80)
I-IV-17,18	(Mar-80)	3-0350-11,12	(Sep-76)	4-0417-1,2	(Sep-82)
I-IV-19,20	(Mar-80)	3-0350-13,14	(Jan-79)	4-0417-3,4	(Sep-82)
I-IV-21,22	(Mar-80)	3-0350-15,16	(Sep-82)	4-0418-1,2	(Sep-76)
I-IV-23,24	(Mar-80)	3-0350-17,18	(Sep-82)	4-0419-1,2	(Sep-76)
I-IV-25,26	(Mar-80)	3-0350-19,20	(Mar-80)	4-0420-1,2	(Sep-76)
I-IV-27,28	(Mar-80)	3-0360-1,2	(Sep-82)	4-0421-1,2	(Jan-79)
I-IV-29,30	(Mar-80)	3-0360-3,4	(Sep-82)	4-0422-1,2	(Sep-76)
I-V-1,2	(Jan-79)	3-0360-5,6	(Mar-80)	4-0422-3,4	(Sep-76)
I-V-3,4	(Mar-80)	3-0399-1,2	(Jan-79)	4-0422-5,6	(Sep-76)
		3-0399-3,4	(Sep-82)	4-0422-7,8	(Sep-76)
1-0110-1,2	(Sep-82)	3-0399-5,6	(Sep-82)	4-0422-9,10	(Sep-76)
1-0110-3,4	(Sep-82)	3-0399-7,8	(Jan-79)	4-0433-1,2	(Sep-82)
1-0149-1,2	(Mar-80)	3-0399-9,10	(Sep-82)	4-0433-3,4	(Sep-82)
1-0199-1,2	(Jan-79)	3-0399-11,12	(Sep-82)	*4-0433-5,6	(Mar-80)
				4-0499-1,2	(Mar-80)
2-0201-1,2	(Sep-76)	4-0400-1,2	(Sep-82)	4-0499-3,4	(Sep-76)
2-0201-3,4	(Sep-82)	4-0400-3,4	(Sep-76)	4-0499-5,6	(Sep-82)
2-0210-1,2	(Mar-80)	4-0400-5,6	(Sep-82)	4-0499-7,8	(Sep-82)
2-0210-3,4	(Sep-82)	4-0401-1,2	(Sep-82)	4-0499-9,10	(Sep-82)
2-0210-5,6	(Jan-79)	4-0401-3,4	(Sep-82)	4-0499-11,12	(Sep-82)
2-0210-7,8	(Sep-82)	4-0401-5,6	(Sep-82)	4-0499-13,14	(Sep-82)
2-0210-9,10	(Mar-80)	0-0401-7,8	(Sep-82)	4-0499-15,16	(Sep-82)
2-0210-11,12	(Sep-82)			4-0499-17,18	(Sep-82)
				4-0499-19,20	(Sep-82)

| Vertical line indicates pages included in this revision.
*Remove pages from manual.

4-0499-21,22	(Sep-82)	9-0999-1,2	(Sep-82)	18-1810-7,8	(Mar-80)
4-0499-23,24	(Sep-82)	9-0999-3,4	(Sep-82)	18-1810-9,10	(Sep-82)
4-0499-25,26	(Sep-82)	9-0999-5,6	(Sep-82)	18-1810-11,12	(Sep-82)
4-0499-27,28	(Sep-82)	9-0999-7,8	(Sep-82)	18-1810-13,14	(Sep-82)
4-0499-29,30	(Sep-82)	9-0999-9,10	(Sep-82)	18-1810-15,16	(Sep-82)
4-0499-31,32	(Sep-82)	10-1011-1,2	(Sep-76)	18-1821-1,2	(Sep-82)
4-0499-33,34	(Sep-82)	10-1011-3,4	(Mar-80)	18-1821-3,4	(Sep-82)
4-0499-35,36	(Sep-82)	10-1011-5,6	(Jan-79)	18-1821-5,6	(Sep-82)
4-0499-37,38	(Sep-82)	10-1015-1,2	(Jan-79)	18-1830-1,2	(Jan-79)
4-0499-39,40	(Sep-82)	10-1060-1,2	(Sep-82)	18-1899-1,2	(Sep-82)
4-0499-41,42	(Sep-82)	10-1060-3,4	(Sep-76)	18-1899-3,4	(Dec-77)
*4-0499-43,44	(Mar-80)	10-1060-5,6	(Mar-80)	19-1910-1,2	(Sep-76)
*4-0499-45,46	(Mar-80)	10-1099-1,2	(Sep-76)	19-1910-3,4	(Sep-82)
*4-0499-47,48	(Mar-80)	10-1099-3,4	(Sep-76)	19-1910-5,6	(Mar-80)
5-0505-1,2	(Dec-77)	10-1099-5,6	(Mar-80)	19-1921-1,2	(Sep-82)
5-0505-3,4	(Sep-76)	11-1111-1,2	(Sep-76)	20-2003-1,2	(Mar-80)
5-0505-5,6	(Sep-76)	11-1111-3,4	(Jan-79)	20-2003-3,4	(Mar-80)
5-0510-1,2	(Jan-79)	11-1111-5,6	(Jan-79)	20-2003-5,6	(Mar-80)
5-0515-1,2	(Jan-79)	11-1115-1,2	(Sep-76)	20-2003-7,8	(Mar-80)
5-0520-1,2	(Sep-76)	11-1199-1,2	(Sep-76)	20-2003-9,10	(Mar-80)
5-0530-1,2	(Sep-76)	16-1671-1,2	(Sep-76)	20-2003-11,12	(Mar-80)
5-0540-1,2	(Sep-82)	16-1671-3,4	(Jan-79)	20-2003-13,14	(Mar-80)
5-0560-1,2	(Mar-80)	16-1671-5,6	(Mar-80)	20-2004-1,2	(Sep-82)
5-0560-3,4	(Mar-80)	16-1671-7,8	(Sep-76)	20-2006-1,2	(Sep-76)
5-0599-1,2	(Sep-82)	16-1672-1,2	(Sep-76)	21-2160-1,2	(Sep-82)
7-0715-1,2	(Sep-76)	16-1672-3,4	(Sep-76)	21-2160-3,4	(Mar-80)
7-0715-3,4	(Jan-79)	16-1672-5,6	(Jan-79)	21-2160-5,6	(Sep-82)
7-0741-1,2	(Jan-79)	16-1672-7,8	(Mar-80)	21-2160-7,8	(Mar-80)
7-0752-1,2	(Sep-82)	16-1673-1,2	(Sep-76)	21-2160-9,10	(Sep-82)
7-0752-3,4	(Sep-82)	16-1674-1,2	(Sep-76)	21-2160-11,12	(Mar-80)
7-0752-5,6	(Sep-82)	16-1674-3,4	(Mar-80)	21-2160-13,14	(Sep-82)
7-0799-1,2	(Sep-76)	16-1676-1,2	(Sep-76)	21-2160-15,16	(Sep-82)
7-0799-3,4	(Sep-82)	16-1676-3,4	(Sep-76)	21-2160-17,18	(Sep-82)
7-0799-5,6	(Sep-82)	16-1699-1,2	(Sep-76)	21-2160-19,20	(Sep-82)
9-0930-1,2	(Sep-82)	16-1699-3,4	(Mar-80)	21-2160-21,22	(Sep-82)
9-0930-3,4	(Mar-80)	16-1699-5,6	(Mar-80)	21-2160-23,24	(Sep-82)
9-0930-5,6	(Mar-80)	16-1699-7,8	(Jan-79)	21-2160-25,26	(Sep-82)
9-0960-1,2	(Sep-82)	17-1740-1,2	(Dec-77)	21-2160-27,28	(Sep-82)
9-0960-3,4	(Sep-82)	17-1740-3,4	(Dec-77)	21-2160-29,30	(Sep-82)
9-0960-5,6	(Sep-82)	17-1740-5,6	(Mar-80)	21-2160-31,32	(Sep-82)
9-0960-7,8	(Jan-79)	17-1740-7,8	(Sep-82)	21-2160-33,34	(Sep-82)
9-0960-9,10	(Jan-79)	17-1740-9,10	(Dec-77)	21-2160-35,36	(Sep-82)
9-0960-11,12	(Sep-82)	17-1746-1,2	(Dec-77)	21-2160-37,38	(Sep-82)
9-0960-13,14	(Sep-82)	17-1746-3,4	(Sep-82)	21-2160-39,40	(Sep-82)
9-0960-15,16	(Sep-82)	17-1799-1,2	(Sep-82)	21-2160-41,42	(Sep-82)
9-0960-17,18	(Sep-82)	18-1807-1,2	(Jan-79)	21-2160-43,44	(Sep-82)
9-0960-19,20	(Sep-82)	18-1807-3,4	(Sep-76)	21-2160-45,46	(Sep-82)
9-0960-21,22	(Sep-82)	18-1810-1,2	(Mar-80)	21-2160-47,48	(Sep-82)
9-0960-23,24	(Sep-82)	18-1810-3,4	(Mar-80)	21-2199-1,2	(Sep-82)
9-0960-25,26	(Sep-82)	18-1810-5,6	(Mar-80)	21-2199-3,4	(Mar-80)
9-0960-27,28	(Sep-82)			21-2199-5,6	(Sep-82)
				21-2199-7,8	(Sep-82)
				21-2199-9,10	(Sep-82)
				21-2199-11,12	(Sep-82)

| Vertical line indicates pages included in this revision.
 *Remove pages from manual.


30-3041-1,2	(Sep-76)	38-3860-1,2	(Jan-79)	90-9020-1,2	(Sep-76)
30-3041-3,4	(Sep-76)	38-3860-3,4	(Jan-79)	90-9020-3,4	(Sep-76)
30-3041-5,6	(Sep-76)	38-3860-5,6	(Mar-80)	90-9020-5,6	(Sep-76)
30-3041-7,8	(Sep-76)	38-3860-7,8	(Mar-80)	90-9020-7,8	(Sep-76)
30-3041-9,10	(Sep-82)	38-3860-9,10	(Mar-80)	90-9020-9,10	(Sep-76)
30-3041-11,12	(Sep-76)	38-3860-11,12	(Mar-80)	90-9020-11,12	(Sep-76)
30-3041-13,14	(Jan-79)	38-3860-13,14	(Sep-82)	90-9020-13,14	(Sep-76)
30-3050-1,2	(Sep-82)	38-3860-15,16	(Sep-82)	90-9020-15,16	(Jan-79)
30-3050-3,4	(Sep-82)	39-3860-17,18	(Sep-82)	90-9020-17,18	(Jan-79)
30-3050-5,6	(Sep-76)	38-3860-19,20	(Sep-82)	90-9020-19,20	(Mar-80)
30-3050-7,8	(Sep-76)	38-3860-21,22	(Sep-82)	90-9025-1,2	(Sep-82)
30-3050-9,10	(Mar-80)	38-3860-23,24	(Sep-82)	90-9025-3,4	(Jan-79)
30-3050-11,12	(Sep-82)	38-3860-25,26	(Sep-82)	90-9025-5,6	(Jan-79)
30-3050-13,14	(Mar-80)	38-3899-1,2	(Jan-79)	90-9025-7,8	(Jan-79)
30-3050-15,16	(Jan-79)	38-3899-3,4	(Sep-82)	90-9025-9,10	(Sep-82)
30-3060-1,2	(Sep-76)			90-9025-11,12	(Sep-82)
30-3060-3,4	(Jan-79)	40-4025-1,2	(Sep-76)	90-9025-13,14	(Sep-82)
30-3060-5,6	(Jan-79)	40-4025-3,4	(Mar-80)	90-9025-15,16	(Sep-82)
30-3099-1,2	(Sep-82)	40-4025-5,6	(Sep-76)	90-9025-17,18	(Sep-82)
30-3099-3,4	(Sep-82)	40-4051-1,2	(Sep-82)	90-9025-18A,18B	(Sep-82)
30-3099-5,6	(Jan-79)	40-4051-3,4	(Sep-82)	90-9025-18C,18D	(Sep-82)
30-3099-7,8	(Sep-76)	40-4051-5,6	(Sep-82)	90-9025-19,20	(Jan-79)
		40-4099-1,2	(Sep-76)	90-9025-21,22	(Sep-82)
				90-9025-23,24	(Sep-82)
32-3201-1,2	(Sep-76)			90-9025-25,26	(Mar-80)
32-3201-3,4	(Sep-76)	90-9005-1,2	(Sep-82)	90-9025A-1,2	(Jan-79)
32-3215-1,2	(Jan-79)	90-9005-3,4	(Sep-76)	90-9025A-3,4	(Jan-79)
32-3260-1,2	(Mar-80)	90-9010-1,2	(Sep-76)	90-9025A-5,6	(Jan-79)
32-3260-3,4	(Jan-79)	90-9010-3,4	(Mar-80)	90-9025A-7,8	(Sep-82)
32-3260-5,6	(Sep-82)	90-9010-5,6	(Sep-76)	90-9025A-9,10	(Jan-79)
32-3299-1,2	(Jan-79)	90-9010-7,8	(Sep-76)	90-9025A-11,12	(Jan-79)
		90-9010-9,10	(Sep-82)	90-9025A-13,14	(Jan-79)
37-3740-1,2	(Sep-82)	90-9010-11,12	(Sep-76)	90-9025A-15,16	(Jan-79)
37-3740-3,4	(Sep-82)	90-9010-13,14	(Mar-80)	90-9025A-17,18	(Jan-79)
*37-3740-5,6	(Jan-79)	90-9010-15,16	(Sep-76)	90-9025A-19,20	(Jan-79)
*37-3740-7,8	(Jan-79)	90-9015-1,2	(Mar-80)	90-9025A-21,22	(Jan-79)
*37-3760-1,2	(Sep-76)	90-9015-3,4	(Mar-80)	90-9025A-23,24	(Sep-82)
*37-3760-3,4	(Sep-76)	90-9015-5,6	(Mar-80)	90-9025A-25,26	(Jan-79)
37-3799-1,2	(Sep-82)	90-9015-7,8	(Mar-80)	90-9025A-27,28	(Sep-82)
		90-9015-9,10	(Mar-80)	90-9030-1,2	(Sep-76)
38-3803-1,2	(Sep-82)	90-9015-11,12	(Mar-80)	90-9030-3,4	(Sep-82)
38-3803-3,4	(Sep-76)	90-9015-13,14	(Mar-80)	90-9031-1,2	(Jan-79)
38-3803-5,6	(Sep-76)	90-9015-15,16	(Sep-76)	90-9035-1,2	(Mar-80)
38-3803-7,8	(Sep-76)	90-9015-17,18	(Mar-80)	90-9035-3,4	(Mar-80)
38-3815-1,2	(Sep-76)	90-9015-19,20	(Mar-80)	90-9035-5,6	(Mar-80)
38-3815-3,4	(Sep-76)	90-9015-21,22	(Mar-80)	90-9035-7,8	(Sep-76)
38-3840-1,2	(Sep-82)	90-9015-23,24	(Mar-80)	90-9035-9,10	(Mar-80)
38-3840-3,4	(Sep-82)	90-9015-25,26	(Sep-76)	90-9035-11,12	(Jan-79)
38-3840-5,6	(Sep-82)	90-9015-27,28	(Jan-79)	90-9035-13,14	(Jan-79)
38-3840-7,8	(Sep-82)	90-9015-29,30	(Mar-80)	90-9035-15,16	(Jan-79)
38-3840-9,10	(Sep-82)	90-9015-31,32	(Mar-80)	90-9025-17,18	(Jan-79)
38-3840-11,12	(Sep-82)	90-9015-33,34	(Mar-80)	90-9035-19,20	(Sep-82)
		90-9015-35,36	(Mar-80)		

| Vertical line indicates pages included in this revision.

*Remove these pages from manual.

Group II INTRODUCTION AND SAFETY INFORMATION

INTRODUCTION

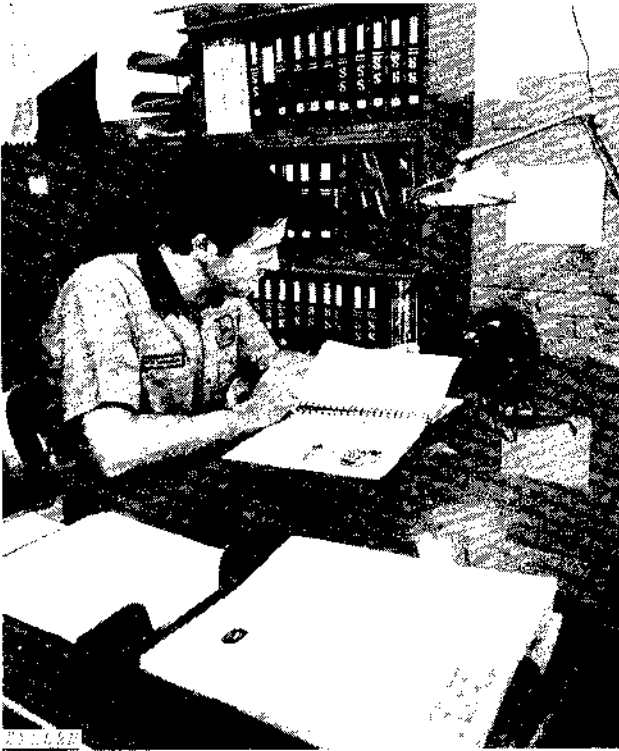

Use FOS Manuals for Reference

This technical manual is part of a twin concept of service:

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

•FOS Manuals—for reference

Fundamentals of Service (FOS) Manuals cover basic theory of operation, *fundamentals* of trouble shooting, *general* maintenance, and *basic* types of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced service technicians.



When a service technician should refer to a FOS Manual for more information, a FOS symbol like the one at the left is used in the TM to identify the reference.

•Technical Manuals—for actual service

Technical Manuals are concise service guides for a specific machine. Technical manuals are on-the-job guides containing only the vital information needed by an experienced service technician.

Litho in U.S.A.



Use Technical Manuals for Actual Service

This technical manual was planned and written for you—an experienced service technician. Keep it in a permanent binder in the shop where it is handy. Refer to it whenever in doubt about correct service procedures or specifications.

Some features of this manual:

- Inside front cover - "Table of Contents".
- Section I - Contents, safety information, general specifications and general services.
- Sections 1 through 40 - Removal, repair, testing (components removed), installation, and adjustment.
- Section 90 - Detailed explanation of system operation, diagnosis, visual inspection, testing, and adjustments.
- Specifications grouped and illustrated at the end of each section.