


**John Deere  
JD743  
Tree Harvester  
JD743  
Feller-Buncher**

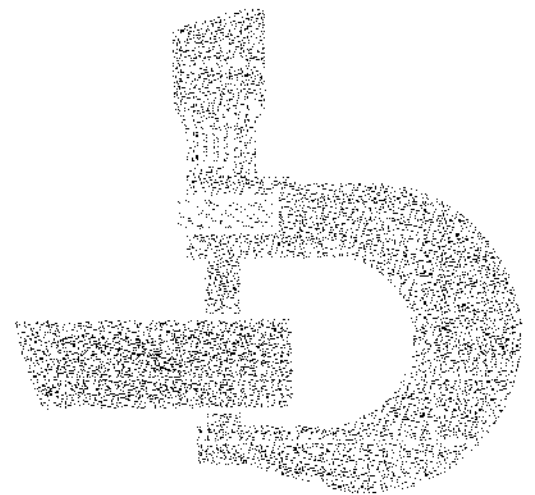

**TECHNICAL MANUAL**

**TM-1159**  
LITHO IN U.S.A.



**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**

# JD743 TREE HARVESTER JD743 FELLER-BUNCHER

Technical Manual  
TM-1159 (Mar 77)

## SECTIONAL CONTENTS OF THIS MANUAL

Section 1 - General Information	1
Section 1 - Wheels	1
Section 2 - Axles and Suspension System	2
Section 3 - Transmission	3
Section 4 - Engine	4
Section 5 - Engine Auxiliary Systems	5
Section 6 - Torque Converter	NOT USED 6
Section 7 - Traction (Engine) Clutch	NOT USED 7
Section 8 - Transfer Drive	NOT USED 8
Section 9 - Steering Systems	9
Section 10 - Service Brakes	10
Section 11 - Parking - Emergency Brakes	11
Section 13 - Miscellaneous Vehicle	NOT USED 13
Section 15 - Equipment Attaching	NOT USED 15

Continued on page 3

Copyright 1977  
DEERE & COMPANY  
Moline, Illinois  
All Rights Reserved

A-00



**SECTIONAL CONTENTS—Continued**

Section 16 - Electrical Systems _____	16
Section 17 - Frame, Chassis or Supporting Structure _____	17
Section 18 - Operator's Station _____	18
Section 19 - Sheet Metal and Styling _____	19
Section 20 - Safety, Convenience and Miscellaneous _____	20
Section 21 - Main Hydraulic System _____	21
Section 22-Pneumatic Systems _____	NOT USED 22
Section 30 - Winch _____	NOT USED 30
Section 31 - Loader _____	NOT USED 31
Section 32 - Bulldozers _____	32
Section 33 - Backhoe and Excavator _____	NOT USED 33
Section 34 - Grading Device _____	NOT USED 34
Section 35 - Scraper and Haulage Device _____	NOT USED 35
Section 36 - Conveyor and Elevating Device _____	NOT USED 36
Section 37 - Arch or Boom, or Cranes _____	37
Section 38 - Grapple _____	38
Section 39 - Shear _____	39

Continued on page 5



### SECTIONAL CONTENTS—Continued

Section 40 - PTO or Winch Drive	<b>NOT USED</b>	<b>40</b>
Section 41 - Misc. Function Mechanical Drive		<b>41</b>
Section 42 - Ground Conditioning Tool	<b>NOT USED</b>	<b>42</b>
Section 43 - Swing, Rotation or Pivoting System		<b>43</b>
Section 44 - Cutting Mechanism		<b>44</b>
Section 45 - Forklifts	<b>NOT USED</b>	<b>45</b>
Section 46 - Automatic Control	<b>NOT USED</b>	<b>46</b>
Section 90 - System Testing		<b>90</b>

*The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.*





## SECTION AND GROUP CONTENTS OF THIS MANUAL

### SECTION I - GENERAL INFORMATION

- Group I - Contents, Index and Page List
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery and After-Sales Services
- Group V - Lubrication

- Group 0418 - Thermostats, Housings and Water Piping
- Group 0419 - Oil Cooler
- Group 0420 - Fuel Filter
- Group 0422 - Starting Motor and Fastenings
- Group 0429 - Fan Drive
- Group 0433 - Flywheel, Housing and Fastenings
- Group 0499 - Specifications and Special Tools

### SECTION 1 - WHEELS

- Group 0110 - Powered Wheels, Tires and Fastenings
- Group 0199 - Specifications and Special Tools

### SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling Systems
- Group 0515 - Engine Speed Controls
- Group 0520 - Intake Systems
- Group 0530 - External Exhaust Systems
- Group 0540 - Mounting Frame
- Group 0560 - External Fuel Supply Systems
- Group 0599 - Specifications and Special Tools

### SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0201 - Drive Axle Housing and Support
- Group 0210 - Differential or Bevel Drive
- Group 0225 - Input Drive Shafts and U-Joints
- Group 0243 - Axle Lock Mounting
- Group 0250 - Axle Shaft, Bearings, Reduction Gears
- Group 0260 - Hydraulic System
- Group 0299 - Specifications and Special Tools

### SECTION 9 - STEERING SYSTEM

- Group 0930 - Emergency Steering
- Group 0960 - Hydraulic System
- Group 0999 - Specifications and Special Tools

### SECTION 3 - TRANSMISSION

- Group 0315 - Controls
- Group 0325 - Input Drive Shafts and U-Joints
- Group 0341 - Housings and Covers
- Group 0342 - Mounting Parts
- Group 0350 - Gears, Shafts, Bearings and Power Shift Clutch
- Group 0360 - Hydraulic System
- Group 0370 - Clutch Disconnect and Controls
- Group 0399 - Specifications and Special Tools

### SECTION 10 - SERVICE BRAKES

- Group 1011 - Active Elements
- Group 1015 - Controls Linkage
- Group 1060 - Hydraulic System
- Group 1099 - Specifications and Special Tools

### SECTION 4 - ENGINE

- Group 0400 - Engine Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0416 - Turbocharger
- Group 0417 - Water Pump

### SECTION 11 - PARKING-EMERGENCY BRAKES

- Group 1111 - Active Elements
- Group 1115 - Controls Linkage
- Group 1199 - Specifications and Special Tools

### SECTION 16 - ELECTRICAL SYSTEM

- Group 1671 - Batteries, Support and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1675 - System Controls
- Group 1676 - Instruments and Indicators
- Group 1699 - Specifications and Special Tools

### SECTION 17 - FRAMES, CHASSIS OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1746 - Frame Bottom Guards
- Group 1799 - Specifications and Special Tools

## SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued

### SECTION 18 - OPERATOR'S STATION

- Group 1810 - Operator Enclosure
- Group 1830 - Heating and Air Conditioning
- Group 1899 - Specifications and Special Tools

### SECTION 19 - SHEET METAL AND STYLING

- Group 1910 - Hood or Engine Enclosure
- Group 1913 - Miscellaneous Shields
- Group 1921 - Grille and Grille Housing

### SECTION 20 - SAFETY, CONVENIENCE AND MISCELLANEOUS

- Group 2001 - Radio
- Group 2002 - Mirror
- Group 2003 - Fire Extinguisher
- Group 2004 - Horn
- Group 2006 - Cigar Lighter

### SECTION 21 - MAIN HYDRAULIC SYSTEM

- Group 2160 - Hydraulic System
- Group 2199 - Specifications and Special Tools

### SECTION 32 - BULLDOZERS

- Group 3201 - Blades
- Group 3215 - Controls Linkage
- Group 3260 - Hydraulic System
- Group 3299 - Specifications and Special Tools

### SECTION 37 - ARCH OR BOOM, OR CRANES

- Group 3715 - Controls Linkage
- Group 3740 - Frames
- Group 3760 - Hydraulic System
- Group 3799 - Specifications and Special Tools

### SECTION 39 - SHEAR

- Group 3901 - Blades and Cutting Elements
- Group 3903 - Tongue and Forks
- Group 3915 - Controls Linkage
- Group 3940 - Frame
- Group 3960 - Hydraulic System
- Group 3999 - Specifications and Special Tools

### SECTION 41 - MISCELLANEOUS FUNCTION MECHANICAL DRIVE

- Group 4125 - Input Drive Shafts
- Group 4141 - Housing and Covers
- Group 4151 - Gears, Shafts and Bearings
- Group 4152 - Clutch
- Group 4160 - Hydraulic System
- Group 4199 - Specifications and Special Tools

### SECTION 43 - SWING, ROTATION OR PIVOTING SYSTEM

- Group 4315 - Controls
- Group 4350 - Mechanical Drive Elements
- Group 4360 - Hydraulic System
- Group 4399 - Specifications and Special Tools

### SECTION 44 - CUTTING MECHANISMS

- Group 4401 - Blades (Delimber Knives)
- Group 4440 - Frames (Delimber Carriage)
- Group 4460 - Hydraulic System
- Group 4499 - Specifications and Special Tools

### SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9015A - Electrical System (Automatic Control)
- Group 9020 - Power Train
- Group 9025 - Hydraulic System (Flow Meter)
- Group 9025A - Hydraulic System (Analyzer)
- Group 9030 - Miscellaneous Components
- Group 9031 - Heating and Air Conditioning
- Group 9035 - Specifications and Special Tools

## ALPHABETICAL INDEX

### A

- Accumulator, emergency steering . . .0930-3 - 0930-5
- Accumulator, hydraulic brake . . . . .1060-3 - 1060-6
  - Components . . . . . 1060-4
  - Pre-charging . . . . . 1060-5
- Accumulator, main hydraulic oil . . 2160-19 - 2160-21
- After-sale inspection . . . . . I-IV-25 - I-IV-54
  - Accumulator action . . . . . I-IV-44
  - Air cleaner . . . . . I-IV-28
  - Air conditioner operation . . . . . I-IV-46
  - Air intake hoses . . . . . I-IV-28
  - Alternator, fan, compressor
    - belt tension . . . . . I-IV-31 - I-IV-32
  - Articulation operation . . . . . I-IV-47 - I-IV-48
  - Auto-manual mode operation . . . . I-IV-48 - I-IV-49
  - Axle stabilizer operation . . . . . I-IV-46
  - Batteries . . . . . I-IV-29
  - Blade control . . . . . I-IV-49
  - Cab rear window operation . . . . . I-IV-51
  - Differential housings oil level . . . . I-IV-28
  - Differential lock . . . . . I-IV-43
  - Engine crankcase oil and
    - filter element . . . . . I-IV-26
  - Engine crankcase vent tube . . . . . I-IV-32
  - Engine disconnect clutch . . . . . I-IV-49
  - Engine speeds . . . . . I-IV-40
  - Fire extinguisher . . . . . I-IV-52
  - Fluid leakage . . . . . I-IV-54
  - Fuel filters . . . . . I-IV-29 - I-IV-30
  - Fuel tank sump . . . . . I-IV-30
  - Fuel transfer pump sediment
    - bowl . . . . . I-IV-30
  - Heater operation . . . . . I-IV-46
  - Hydraulic brakes . . . . . I-IV-41
  - Indicator lights and gauges . . . . . I-IV-41
  - Light operation . . . . . I-IV-44 - I-IV-45
  - Lubrication . . . . . I-IV-33 - I-IV-40
  - Main boom and swing control . . . . . I-IV-50
  - Parking brake . . . . . I-IV-42 - I-IV-43
  - Power steering . . . . . I-IV-44
  - Radiator . . . . . I-IV-29
- After-sale inspection—Continued
  - Seat operation . . . . . I-IV-44
  - Secondary boom and tilt control . . . . . I-IV-51
  - Shear blade cap screw torque . . . . . I-IV-54
  - Shear blade overlap . . . . . I-IV-53 - I-IV-54
  - Tire pressure . . . . . I-IV-32 - I-IV-33
  - Torque values, accessible
    - hardware . . . . . I-IV-54
  - Transmission-hydraulic system
    - oil level and filter element . . . . . I-IV-26 - I-IV-28
  - Transmission shifting . . . . . I-IV-45
  - Tree shear operation . . . . . I-IV-52
  - Tree support blade control . . . . . I-IV-50
  - Wheel cap screw torque . . . . . I-IV-54
- Air cleaner assembly . . . . . 0520-1 - 0520-2
  - Components . . . . . 0520-2
- Air conditioning system . . . . . 1830-5 - 1830-33
  - Air filters . . . . . 1830-33
  - Blower motor . . . . . 1830-31 - 1830-32
  - Compressor . . . . . 1830-5 - 1830-20
  - Condenser . . . . . 1830-22 - 1830-24
  - Evaporator . . . . . 1830-26
  - Expansion valve . . . . . 1830-27
  - Receiver-dryer . . . . . 1830-24 - 1830-25
  - Superheat shut-off switch . . . . . 1830-30
  - Thermal fuse . . . . . 1830-30
  - Thermostatic temperature
    - control switch . . . . . 1830-28 - 1830-29
- Air conditioning system testing . . . 9031-5 - 9031-25,  
Adding Refrigerant-12 to
  - system . . . . . 9031-19
- Charging system . . . . . 9031-17
- Component location . . . . . 9031-2 - 9031-3
- Compressor . . . . . 1830-21 - 1830-22
- Diagnosing malfunctions . . . . . 9031-7 - 9031-8
- Diagnosis flow chart . . . . . 9031-9
- Discharging system . . . . . 9031-14
- Evacuating system . . . . . 9031-15
- Flushing system . . . . . 9031-14
- Isolating compressor from system . . . . . 9031-24

Air conditioning system testing—Continued  
Leak testing . . . . . 9031-25  
Operational test . . . . . 9031-20  
Safety precautions . . . . . 9031-11  
Schematic . . . . . 9031-5  
System service pressure  
gauges . . . . . 9031-12  
Theory . . . . . 9031-5 - 9031-6  
Visual operating checks . . . . . 9031-7  
Visual preliminary checks . . . . . 9031-7  
Air filters . . . . . 1830-33  
Alternator, regulator and charging  
system wiring . . . . . 1672-1 - 1672-15  
Assembly . . . . . 1672-13 - 1672-14  
Assembling front housing on  
rotor . . . . . 1672-13  
Assembling front housing to  
rear housing . . . . . 1672-14  
Installing brush assembly . . . . . 1672-14  
Installing regulator . . . . . 1672-14  
Component tests . . . . . 1672-8 - 1672-12  
Brushes . . . . . 1672-8 - 1672-9  
Field diode assembly . . . . . 1672-9  
Negative diodes . . . . . 1672-10  
Positive diode assembly . . . . . 1672-10  
Rotor . . . . . 1672-12  
Checking field coil for  
leakage or shorts . . . . . 1672-12  
Continuity and current draw . . . . . 1672-12  
Stator . . . . . 1672-12  
Components . . . . . 1672-3  
Brushes . . . . . 1672-4  
Installing front bearing . . . . . 1672-5 - 1672-6  
Installing slip rings . . . . . 1672-7  
Rectifying diodes . . . . . 1672-7 - 1672-8  
Removing and installing rear  
bearing . . . . . 1672-6  
Removing front bearing from  
rotor . . . . . 1672-5  
Removing front bearing  
retainer and front housing . . . . . 1672-5  
Removing pulley and woodruff  
key . . . . . 1672-4  
Removing rear housing and  
stator . . . . . 1672-7  
Removing slip rings . . . . . 1672-6  
Test after assembly . . . . . 1672-15  
Antenna . . . . . 2001-4  
Articulation switch . . . . . 1675-1  
Axle stabilizer valve solenoid . . . . . 1675-3

Axles and suspension systems:  
Axle lock mounting . . . . . 0243-1  
Axle shaft, bearings,  
reduction gears . . . . . 0250-1 - 0250-3  
Components . . . . . 0250-1 - 0250-2  
Differential lock valve . . . . . 0210-14 - 0210-15  
Components . . . . . 0210-14  
Differential or bevel drive . . . . . 0210-1 - 0210-15  
Components . . . . . 0210-3 - 0210-4,  
0210-6 - 0210-8  
Disassembly . . . . . 0210-2  
Drive axle housing and support . . . . . 0201-3 - 0201-5  
Components . . . . . 0201-5  
Hydraulic system . . . . . 0260-1 - 0260-11  
Axle stabilizer cylinder . . . . . 0260-6 - 0260-8  
Components . . . . . 0260-7  
Axle stabilizer valve . . . . . 0260-1 - 0260-5  
Components . . . . . 0260-2  
Input drive shafts and U-joints . . . . . 0225-1 - 0225-4  
Components . . . . . 0225-1 - 0225-2

**B**

Batteries, support and cables . . . . . 1671-3 - 1671-7,  
9015-25  
Charging battery . . . . . 1671-6  
Inspection . . . . . 1671-4  
Precautions . . . . . 1671-3 - 1671-4  
High-rate discharge test . . . . . 1671-5 - 1671-6  
Specific gravity cell  
comparison test . . . . . 1671-4 - 1671-5  
Voltage test . . . . . 9015-25  
Blade, delimeter . . . . . 4401-3 - 4401-7  
Blade, tree support:  
Blade . . . . . 3201-3 - 3201-5  
Components . . . . . 3201-5  
Controls linkage . . . . . 3215-1 - 3215-3  
Hydraulic system . . . . . 3260-1 - 3260-9  
Blade control valve . . . . . 3260-1 - 3260-5  
Components . . . . . 3260-4  
Cylinders . . . . . 3260-5 - 3260-9  
Components . . . . . 3260-6  
Installing piston  
V-packing . . . . . 3260-8 - 3260-9  
Blades and cutting elements,  
shear . . . . . 3901-3 - 3901-10  
Installation and adjustment . . . . . 3901-8 - 3901-10  
Blade carriers . . . . . 3901-10  
Shear blades . . . . . 3901-7 - 3901-9  
Removal . . . . . 3901-4 - 3901-5  
Blade carriers . . . . . 3901-5  
Shear blades . . . . . 3901-5

Blades and cutting elements, shear—Continued	
Repair .....	3901-5 - 3901-6
Adjustable links .....	3901-6
Blade carriers .....	3901-6
Blade cutting edge .....	3901-5
Straightening bent shear blade .....	3901-6
Block, cylinder .....	0404-1 - 0404-7
Boom:	
Controls linkage .....	3715-3 - 3715-9
Adjustment .....	3715-8 - 3715-9
Components .....	3715-5 - 3715-6
Installation .....	3715-7 - 3715-8
Left arm rest structure and control linkage .....	3715-8
Right arm rest structure and control linkage .....	3715-7
Shafts and links .....	3715-7
Removal .....	3715-3 - 3715-5
Left control lever linkage .....	3715-3
Right control lever linkage .....	3715-4
Shafts and links .....	3715-5
Repair .....	3715-6 - 3715-7
Left and right control lever linkages .....	3715-6 - 3715-7
Shafts and links .....	3715-7
Frames .....	3740-1 - 3740-10
Components .....	3740-6 - 3740-7
Installation .....	3740-8
Main boom .....	3740-8
Secondary boom .....	3740-9 - 3740-10
Removal .....	3740-1 - 3740-5
Main boom .....	3740-2 - 3740-3
Removing booms connected with shear head .....	3740-4 - 3740-5
Secondary boom .....	3740-1 - 3740-2
Repair .....	3740-6 - 3740-7
Main boom with cover .....	3740-7
Secondary boom with cover .....	3740-6
Hydraulic system .....	3760-1 - 3760-10
Cylinders .....	3760-5 - 3760-10
Components .....	3760-6 - 3760-7
Installing piston V-packing .....	3760-9 - 3760-10
Main and secondary control valves .....	3760-1 - 3760-5
Components .....	3760-4
Bottom guards, frame .....	1746-1
Brackets, axle mounting .....	0243-1
Brackets, transmission mounting .....	0342-1
Brake valve .....	1060-1 - 1060-2
Bleeding .....	1060-2
Components .....	1060-2
Brakes, parking-emergency:	
Active elements .....	1111-3 - 1111-5
Controls linkage .....	1115-1 - 1115-2
Brakes, service:	
Active elements .....	1011-3 - 1011-4
Components .....	1011-3
Controls linkage .....	1015-1
Components .....	1015-1
Hydraulic system .....	1060-1 - 1060-6
Accumulator .....	1060-3 - 1060-6
Components .....	1060-4
Pre-charging .....	1060-5
Brake valve .....	1060-1 - 1060-2
Bleeding brakes .....	1060-2
Components .....	1060-4
Bulldozers:	
Blade, tree support .....	3201-3 - 3201-5
Controls linkage .....	3215-1 - 3215-3
Hydraulic system .....	3260-1 - 3260-9
<b>C</b>	
Cab .....	1810-3 - 1810-13
Installation .....	1810-12 - 1810-13
Removal .....	1810-3 - 1810-7
Repair .....	1810-8 - 1810-11
Cab door .....	1810-9
Cab mounts .....	1810-10
Cab windows .....	1810-8
Door latch .....	1810-9
Foam liners .....	1810-8
Seat support and seat belt .....	1810-12
Windshield washer assembly .....	1810-12
Windshield wiper and motor .....	1810-10
Camshaft and valve actuating means .....	0402-1 - 0402-7
Installation .....	0402-5 - 0402-6
Camshaft .....	0402-5
Rocker arm assembly .....	0402-6
Removal .....	0402-1 - 0402-3
Camshaft .....	0402-2 - 0402-3
Repair .....	0402-3 - 0402-5
Bushings .....	0402-4
Camshaft and Gear .....	0402-4
Rocker arm assembly .....	0402-5
Thrust plate .....	0402-4
Valve clearance adjustment .....	0402-7
Valve lift check .....	0402-1

Charging circuit testing . . . . . 9015-30 - 9015-36  
  Testing . . . . . 9015-32 - 9015-36  
  Theory . . . . . 9015-30 - 9015-31  
Cigar lighter . . . . . 2006-1  
Circuit protectors . . . . . 1674-1 - 1674-3  
Clutch disconnect and controls . . . . . 0370-1 - 0370-8  
  Disconnect clutch elements . . . . . 0370-3 - 0370-8  
  Disconnect clutch linkage . . . . . 0370-1 - 0370-2  
Clutch oil pressure regulating  
  valve . . . . . 0360-7 - 0360-8  
  Components . . . . . 0360-8  
Clutch pack, transmission . . . . . 0350-2 - 0350-3  
Clutch valve linkage . . . . . 0315-3 - 0315-4  
Clutch valve, transmission . . . . . 0360-13 - 0360-15  
Cold weather starting aids . . . . . 0505-3 - 0505-5  
  Engine coolant heater . . . . . 0505-5  
  Starting aid adapter, line and  
    nozzle . . . . . 0505-4  
  Starting fluid system . . . . . 0505-4  
Component location:  
  Air conditioning system . . . . . 9031-2 - 9031-3  
  Electrical system (automatic  
    control) . . . . . 9015A-3  
  Electrical system . . . . . 9015-2 - 9015-4  
  Engine system . . . . . 9010-2 - 9010-4  
  Heating system . . . . . 9031-2, 9031-4  
  Hydraulic system (flow meter) . . . . . 9025-3 - 9025-5  
  Power train . . . . . 9020-1 - 9020-4  
Compressor . . . . . 1830-7 - 1830-22  
Compressor relief valve . . . . . 1830-29  
Condenser . . . . . 1830-23 - 1830-24  
Connecting rods and pistons . . . . . 0403-1 - 0403-9  
  Installation . . . . . 0403-7 - 0403-9  
  Removal . . . . . 0403-1  
  Repair . . . . . 0403-2 - 0403-7  
    Connecting rods . . . . . 0403-5 - 0403-7  
    Piston head, rung lands  
      and piston skirt . . . . . 0403-3 - 0403-4  
    Piston pins . . . . . 0403-5  
    Piston rings and ring  
      grooves . . . . . 0403-2  
Control circuit testing . . . . . 9015-48 - 9015-52  
  Pressure reducing valve . . . . . 9015-52  
  Shear/grapple valve and  
    hydraulic warm-up switch . . . . . 9015-48 - 9015-51  
Control valve, boom . . . . . 3760-1 - 3760-5  
Control valve, delimeter . . . . . 4160-1 - 4160-2  
Control valve, shear . . . . . 3960-12 - 3960-16  
Control valve, transmission . . . . . 0360-9 - 0360-12  
Control valve, tree support  
  blade . . . . . 3260-1 - 3260-5  
Controls, electrical system . . . . . 1675-1 - 1675-7  
  Harvesting control box . . . . . 1675-6 - 1675-7  
  Components . . . . . 1675-6

Controls, electrical system—Continued  
  Theory . . . . . 1675-1 - 1675-7  
  Articulation switch . . . . . 1675-1  
  Axle stabilizer valve solenoid . . . . . 1675-3  
  Grapple switch . . . . . 1675-2  
  Hydraulic pump destroke  
    solenoid . . . . . 1675-3  
  Hydraulic warm-up switch . . . . . 1675-1  
  Knife-roll pressure switch . . . . . 1675-2  
  Right handle switches . . . . . 1675-3  
  Seat interlock switch . . . . . 1675-1  
  Shear switch . . . . . 1675-2  
Controls linkage, blade tree  
  support . . . . . 3215-1 - 3215-3  
Controls linkage, boom . . . . . 3715-3 - 3715-9  
Controls linkage, brakes, service . . . . . 1015-1  
Controls linkage, parking-  
  emergency brakes . . . . . 1115-1 - 1115-2  
Controls linkage, service brakes . . . . . 1015-1  
Controls linkage, shear . . . . . 3915-1 - 3915-2  
Controls linkage, swing system . . . . . 4315-3 - 4315-4  
Controls, transmission . . . . . 0315-3 - 0315-5  
Cooling systems, engine . . . . . 0510-1 - 0510-5  
  Fan . . . . . 0510-1 - 0510-2  
  Radiator and fan shroud . . . . . 0510-2 - 0510-5  
Crankshaft and main bearings . . . . . 0401-1 - 0401-8  
  Installation . . . . . 0401-4 - 0401-8  
    Front crankshaft oil seal  
      and wear sleeve . . . . . 0401-7  
    Main bearings and crankshaft . . . . . 0401-5 - 0401-6  
    Rear crankshaft oil seal,  
      wear sleeve, and housing . . . . . 0401-6  
    Vibration damper assembly . . . . . 0401-8  
  Removal . . . . . 0401-1  
  Repair . . . . . 0401-2 - 0401-5  
    Crankshaft end play check . . . . . 0401-2  
    Crankshaft gear . . . . . 0401-4  
    Front crankshaft oil seal  
      and wear sleeve . . . . . 0401-5  
    Main bearing clearance check . . . . . 0401-2  
    Main bearings and crankshaft  
      journals . . . . . 0401-3  
    Rear crankshaft oil seal,  
      housing and wear sleeve . . . . . 0401-4  
    Thrust bearings . . . . . 0401-4  
Crossover relief valve . . . . . 4360-4 - 4360-5  
Cutting mechanisms—See  
  delimeter cutting mechanisms  
Cylinder, axle stabilizer . . . . . 0260-6 - 0260-8  
Cylinder, blade, tree support . . . . . 3260-5 - 3260-9

Cylinder block ..... 0404-1 - 0404-9  
  Installation ..... 0404-7 - 0404-9  
    Cylinder block ..... 0404-7  
    Cylinder liners ..... 0404-7 - 0404-9  
    Piston cooling orifices ..... 0404-7  
  Removal ..... 0404-1 - 0404-2  
    Cylinder block ..... 0404-1 - 0404-2  
    Cylinder liner ..... 0404-2  
  Repair ..... 0404-2 - 0404-7  
    Cylinder block ..... 0404-2  
    Cylinder liner ..... 0404-3 - 0404-6  
Cylinder, boom ..... 3760-5 - 3760-10  
Cylinder, feed roll ..... 4460-12 - 4460-16  
Cylinder head and valves ..... 0409-1 - 0409-6  
  Assembly ..... 0409-6  
  Installation ..... 0409-6  
  Removal ..... 0409-1  
  Repair ..... 0409-1 - 0409-5  
    Cylinder head ..... 0409-1  
    Valve guides ..... 0409-3  
    Valve seats ..... 0409-3 - 0409-5  
    Valves, valve springs and  
    rotators ..... 0409-2  
Cylinder, knife ..... 4460-10 - 4460-12,  
4460-15  
Cylinder, grapple log  
  accumulator ..... 3860-5 - 3860-8  
Cylinder, shear ..... 3960-1 - 3960-6  
Cylinder, shear grapple ..... 3960-9 - 3960-11  
Cylinder, steering ..... 0960-8 - 0960-10

**D**

Damper assembly, vibration ..... 0401-8  
Delimber:  
  Clutch ..... 4152-1 - 4152-6  
  Components ..... 4152-2  
  Gears, shafts and bearings ..... 4151-1 - 4151-30  
    Assembly of delimber  
    gearbox ..... 4151-25 - 4151-29  
    Assembly of delimber  
    transmission ..... 4151-19 - 4151-21,  
4151-23 - 4151-24  
    Assembly of final drives ..... 4151-11 - 4151-18  
  Cleaning, handling and  
  inspection ..... 4151-10  
  Disassembly of delimber  
  gearbox ..... 4151-8 - 4151-10  
  Disassembly of delimber  
  transmission ..... 4151-6 - 4151-7  
  Disassembly of final drives ..... 4151-2 - 4151-5  
  Roll opening adjustment ..... 4151-29  
  Roller brake disassembly  
  and assembly ..... 4151-22 - 4151-23

Delimber—Continued  
Housing and covers ..... 4141-1 - 4141-5  
  Installation ..... 4141-5  
  Delimber gearbox ..... 4141-5  
  Delimber transmission ..... 4141-5  
  Removal ..... 4141-1 - 4141-3  
  Delimber gearbox ..... 4141-3  
  Delimber transmission ..... 4141-2  
  Final drives ..... 4141-1 - 4141-2  
  Repair ..... 4141-4  
Hydraulic system ..... 4160-1 - 4160-2  
  Components ..... 4160-2  
Input drive shafts ..... 4125-3 - 4125-11  
  Delimber drive line ..... 4125-6 - 4125-8  
  Components ..... 4125-7  
  Delimber drive shaft ..... 4125-4 - 4125-5  
  Components ..... 4125-5  
  Input shaft and clutch cover ..... 4125-9 - 4125-11  
  Components ..... 4125-11  
Delimber cutting mechanisms:  
  Blades (delimber knives) ..... 4401-3 - 4401-7  
  Installation ..... 4401-7  
  Delimber knives ..... 4401-7  
  Knife shafts ..... 4401-7  
  Removal ..... 4401-3 - 4401-5  
  Components ..... 4401-4  
  Delimber knives ..... 4401-3 - 4401-4  
  Fixed knife ..... 4401-4  
  Knife shafts ..... 4401-5  
  Repair ..... 4401-5 - 4401-7  
  Delimber knives ..... 4401-5 - 4401-6  
  Fixed knife ..... 4401-6  
  Shear pins ..... 4401-6 - 4401-7  
Frames (delimber carriage) ..... 4440-1 - 4440-3  
  Installation ..... 4440-3  
  Chain adjustment ..... 4440-3  
Hydraulic system ..... 4460-1 - 4460-16  
  Delimber knives and feed  
  roll cylinders ..... 4460-10 - 4460-16  
  Components ..... 4460-10,  
4460-12 - 4460-13  
  Installation ..... 4460-15 - 4460-16  
  Feed roll cylinder ..... 4460-16  
  Left knife cylinder ..... 4460-15  
  Right knife cylinder ..... 4460-15  
  Removal ..... 4460-10 - 4460-12  
  Feed roll cylinder ..... 4460-12  
  Left knife cylinder ..... 4460-11  
  Right knife cylinder ..... 4460-11  
  Repair ..... 4460-12 - 4460-15  
  Feed roll cylinder ..... 4460-14 - 4460-15



Delimber cutting mechanisms—Continued

Delimber knives and feed  
roll valve ..... 4460-1 - 4460-15  
Installation ..... 4460-7  
Repair ..... 4460-1 - 4460-7  
Assembling standard  
poppet valve ..... 4460-4 - 4460-5  
Assembly ..... 4460-7  
Components ..... 4460-2, 4460-4,  
4460-7  
Disassembly of standard  
poppet valves ..... 4460-3 - 4460-4  
Inspecting standard  
poppet valve assembly ..... 4460-4  
Installing poppet valve  
assembly in housing ..... 4460-6  
Relief valve inspection  
and repair ..... 4460-6 - 4460-7  
Removing poppet valve  
assemblies from housing ..... 4460-1  
Replacing wire harness ..... 4460-6  
Pressure reducing valve ..... 4460-8 - 4460-9  
Adjustment ..... 4460-9  
Components ..... 4460-9  
Delimber output shaft ..... 0350-5 - 0350-6  
Components ..... 0350-5  
Delivery service ..... I-IV-25  
Diagnosing malfunctions:  
Air conditioning system ..... 9031-7 - 9031-8  
Electrical system ..... 9015-18 - 9015-21  
Electrical system (automatic  
control) ..... 9015A-13  
Engine system ..... 9010-5 - 9010-7  
Heating system ..... 9031-1  
Hydraulic system (flow meter) 9025-49 - 9025-51  
Power train ..... 9020-19 - 9020-22  
Diagnosis and testing ..... 9005-3  
Differential lock valve ..... 0210-14 - 0210-15  
Components ..... 0210-14  
Differential or bevel drive ..... 0210-1 - 0210-15  
Adjustments ..... 0210-8 - 0210-10  
Cone point adjustment ..... 0210-8 - 0210-9  
Differential backlash ..... 0210-10  
Differential preload ..... 0210-10  
Pinion shaft rolling torque ..... 0210-10  
Tooth bearing pattern ..... 0210-10  
Components ..... 0210-3 - 0210-4,  
0210-6 - 0210-8  
Disassembly ..... 0210-2

Diagnosing malfunctions—Continued

Installation ..... 0210-12 - 0210-13  
Axle housing to differential  
case ..... 0210-12  
Front axle and differential  
assembly ..... 0210-12  
Rear axle and differential  
assembly ..... 0210-13  
Removal ..... 0210-1 - 0210-2  
Front differential ..... 0210-2  
Rear differential ..... 0210-1 - 0210-2  
Repair ..... 0210-2 - 0210-8  
Differential and lock ..... 0210-4 - 0210-6  
Differential bearing quill ..... 0210-3  
Differential case and cover ..... 0210-2 - 0210-3  
Differential spiral bevel  
pinion shaft ..... 0210-7 - 0210-8  
Front differential case ..... 0210-2  
Rear differential case ..... 0210-2  
Testing ..... 0210-10 - 0210-12  
Leakage test with air ..... 0210-10 - 0210-11  
Leakage test with oil ..... 0210-12  
Disconnect clutch ..... 0370-1 - 0370-8  
Elements ..... 0370-3 - 0370-8  
Linkage ..... 0370-1 - 0370-2  
Door latch ..... 1810-9  
Drive axle housing and support ..... 0201-3 - 0201-5  
Components ..... 0201-5

E

Electrical systems:

Alternator, regulator and  
charging system wiring ..... 1672-1 - 1672-15  
Batteries, support and  
cables ..... 1671-3 - 1671-7  
Instruments and indicators ..... 1676-1 - 1676-5  
Light system ..... 1673-1 - 1673-2  
System controls ..... 1675-1 - 1675-7  
Wiring harness and switches ..... 1674-1 - 1674-5  
Electrical systems (automatic  
control) testing ..... 9015A-1 - 9015A-54  
Block diagrams ..... 9015A-8 - 9015A-9  
Component location ..... 9015A-3  
Diagnosing malfunctions ..... 9015A-13  
Explanation of test procedures ..... 9015A-15  
Harvesting control box wiring ..... 9015A-53  
Precautions ..... 9015A-14  
Schematic diagram ..... 9015A-8, 9015A-54  
Shorted circuit test ..... 9015A-14  
Test procedure I - for  
inoperative function in  
manual mode ..... 9015A-16

Electrical systems (automatic control) testing—Continued	
Test procedure II - for verifying condition of harvesting control box . . .	9015A-17 - 9015A-24
Test procedure III - detailed test and diagnostic procedure in manual mode . . .	9015A-25 - 9015A-30
Test procedure IV - detailed test and diagnostic procedure in automatic mode utilizing diagnostic test box . . . . .	9015A-31 - 9015A-39
Test procedure V - detailed test and diagnostic procedure of shear close function using diagnostic test box . . . . .	9015A-40 - 9015A-41
Test procedure VI - tests valve solenoids and wiring . . . . .	9015A-42 - 9015A-46
Test procedure VII - tests individual components and wiring associated with automatic control circuit . . . . .	9015A-47 - 9015A-51
Theory . . . . .	9015A-5 - 9015A-7
Visual inspection . . . . .	9015A-14
Wire terminal location . . . . .	9015A-8, 9015A-10 - 9015A-12
Electrical systems testing . . . . .	9015-1 - 9015-58
Block diagram . . . . .	9015-6
Component location . . . . .	9015-2 - 9015-4
Diagnosing malfunctions . . . . .	9015-21 - 9015-25
Precautions . . . . .	9015-25
Schematic . . . . .	9015-53 - 9015-54
Testing and adjustment . . . . .	9015-27 - 9015-58
Axle stabilizer valve and hydraulic pump destroke stabilizer . . . . .	9015-45
Axle stabilizer valve circuit . . . . .	9015-46 - 9015-47
Axle stabilizer valve solenoid . . . . .	9015-45 - 9015-46
Batteries . . . . .	9015-28
Charging circuit . . . . .	9015-33 - 9015-36
Control circuit . . . . .	9015-51 - 9015-55
Instruments and indicators . . . . .	9015-42 - 9015-43
Lighting system . . . . .	9015-37 - 9015-38
Miscellaneous accessories . . . . .	9015-44 - 9015-45
Visual inspection . . . . .	9015-26
Wire terminal location . . . . .	9015-7 - 9015-17
Emergency brake:	
Active elements . . . . .	1111-3 - 1111-5
Controls linkage . . . . .	1115-1 - 1115-2
Emergency steering accumulator . . . . .	0930-3 - 0930-5
Components . . . . .	0930-3
Assembly . . . . .	0930-4
Disassembly . . . . .	0930-3 - 0930-4
Inspection . . . . .	0930-4
Pre-charging . . . . .	0930-5
Emergency steering buzz light . . . . .	1676-5
Emergency steering low pressure warning switch . . . . .	0930-6
Engine:	
Camshaft and valve actuating means . . . . .	0402-1 - 0402-7
Connecting rods and pistons . . . . .	0403-1 - 0403-9
Crankshaft and main bearings . . . . .	0401-1 - 0401-8
Cylinder block . . . . .	0404-1 - 0404-9
Cylinder head and valves . . . . .	0409-1 - 0409-6
Assembly . . . . .	0409-6
Exhaust manifold . . . . .	0410-1
Components . . . . .	0410-1
Fan drive . . . . .	0429-1 - 0429-4
Flywheel, housing and fastenings . . . . .	0433-1 - 0433-2
Fuel filter, engine . . . . .	0420-1 - 0420-2
Components . . . . .	0420-1
Fuel injection system . . . . .	0413-1 - 0413-19
Fuel injection nozzles . . . . .	0413-9 - 0413-19
Fuel injection pump . . . . .	0413-5 - 0413-8
Fuel transfer pump, engine . . . . .	0413-1 - 0413-4
Components . . . . .	0413-2
Intake manifold . . . . .	0414-1 - 0414-3
Components . . . . .	0414-2
Oil cooler, engine . . . . .	0419-1 - 0419-2
Components . . . . .	0419-1
Oiling system, engine . . . . .	0407-1 - 0407-5
Removal and installation . . . . .	0400-3 - 0400-8
Starting motor and fastenings . . . . .	0422-1 - 0422-9
Components . . . . .	0422-4
Testing . . . . .	0422-2 - 0422-3
. . . . .	0422-5 - 0422-9
Thermostats, housings and water piping . . . . .	0418-1 - 0418-2
Components . . . . .	0418-1
Turbocharger . . . . .	0416-1 - 0416-7
Components . . . . .	0416-2
Testing . . . . .	0416-2 - 0416-3
Ventilating system . . . . .	0408-1
Components . . . . .	0408-1
Water pump . . . . .	0417-1 - 0417-8
Components . . . . .	0417-3

Engine auxiliary systems:	
Cold weather starting aids	0505-3 - 0505-5
Engine coolant heater	0505-5
Components	0505-5
Starting aid adapter, line and nozzle	0505-4
Starting fluid system	0505-4
Components	0505-4
Cooling systems	0510-1 - 0510-6
Fan	0510-1 - 0510-2
Fan drive	0429-1
Radiator and fan shroud	0510-2 - 0510-6
Components	0510-4 - 0510-6
External exhaust systems	0530-1 - 0530-2
Components	0530-1
External fuel supply systems	0560-1 - 0560-4
Electric fuel transfer pump	0560-1 - 0560-2
Fuel tank	0560-2 - 0560-4
Intake system	0520-1 - 0520-2
Components	0520-2
Mounting frame	0540-1
Components	0540-1
Speed controls	0515-1 - 0515-3
Components	0515-2 - 0515-3
Engine coolant temperature gauge and sender	1676-3
Engine oil pressure buzzer	1676-5
Engine oil pressure gauge	1676-2
Engine oil pressure switch	1676-5
Engine system testing	9010-1 - 9010-16
Component location	9010-2 - 9010-4
Diagnosing malfunctions	9010-5 - 9010-7
Testing and adjustments	9010-10 - 9010-16
Air intake system	9010-16
Air restriction indicator test	9010-16
Intake manifold pressure test	9010-16
Basic engine	9010-10
Compression pressure test	9010-10
Cooling system	9010-11 - 9010-12
Fan, alternator and air conditioner	9010-12
Compressor belts adjustment	9010-12
Radiator leakage check	9010-11
Fuel system	9010-13
Fuel injection pump timing	9010-13
Fuel supply pump	9010-13
Fuel transfer pump flow test	9010-13
Fuel transfer pump pressure test	9010-13
Lubrication system	9010-11
Checking engine oil pressure	9010-11
Speed control linkage	9010-14 - 9010-16

Engine system testing—Continued	
Speed control adjustments	9010-14 - 9010-15
Theory	9010-1 - 9010-2
Visual inspection	9010-8 - 9010-9
Evaporator	1830-26
Exhaust manifold	0410-1
Components	0410-1
Exhaust system, engine	0530-1 - 0530-2
Expansion valve	1830-27

## F

Fan drive	0429-1 - 0429-4
Fan belt tightener	0429-1 - 0429-2
Fan drive support	0429-3 - 0429-4
Fan, engine	0510-1 - 0510-2
Belts adjustments	0510-2
Components	0510-1
Feed roll cylinder	4460-12 - 4460-16
Feed roll valve	4460-1 - 4460-15
Filter, engine fuel	0420-1 - 0420-2
Filter, transmission	0360-16 - 0360-17
Fire extinguisher	2003-1 - 2003-2
Components	2003-2
Fluid starting aid	0505-4
Flywheel, housing and fastenings	0433-1 - 0433-2
Foam liners	1810-8
Frame, boom	3740-1 - 3740-10
Frame, delimeter carriage	4440-1 - 4440-3
Frame, engine mounting	0540-1
Frame, shear	3940-1 - 3940-4
Frames, engine and equipment:	
Bottom guards	1746-1
Components	1746-1
Installation	1740-3 - 1740-8
Components	1740-5 - 1740-8
Joining	1740-8
Repair	1740-5 - 1740-8
Engine frame	1740-5 - 1740-6
Equipment frame	1740-7
Frame locking bar	1740-8
Upper pivot assembly	1740-6 - 1740-7
Adjusting pivot ball rolling torque	1740-7
Separation	1740-3 - 1740-4
Fuel filter, engine	0420-1 - 0420-2
Components	0420-1
Installation	0420-2
Fuel check valve	0420-2
Fuel filters	0420-2
Removal	0420-1
Fuel filters	0420-1

Fuel filter, engine—Continued  
Repair ..... 0420-2  
    Fuel check valve ..... 0420-2  
    Fuel filters ..... 0420-2  
Fuel gauge ..... 1676-4  
Fuel injection system ..... 0413-1 - 0413-19  
    Fuel injection nozzles ..... 0413-9 - 0413-19  
    Fuel injection pump ..... 0413-5 - 0413-8  
Fuel transfer pump ..... 0413-1 - 0413-4  
Fuel supply systems, engine ..... 0560-1 - 0560-4  
    Electric fuel transfer pump ..... 0560-1 - 0560-2  
    Fuel tank ..... 0560-2 - 0560-4  
Fuel transfer pump, engine ..... 0413-1 - 0413-4  
    Components ..... 0413-3

**G**

Gauge, engine coolant  
    temperature ..... 1676-3  
Gauge, engine oil pressure ..... 1676-2  
Gauge, fuel ..... 1676-4  
Gauge, transmission oil  
    temperature ..... 1676-4  
Grapple log accumulator  
    cylinder ..... 3860-5 - 3860-8  
Grapple log accumulator  
    valve ..... 3860-1 - 3860-4  
Grapple mechanism ..... 3803-3 - 3803-4  
Grapple switch ..... 1675-2  
Greases ..... I-V-2  
Grille and grille housing ..... 1921-1 - 1921-2  
Guards, frame bottom ..... 1746-1

**H**

Harvesting control box ..... 1675-6 - 1675-7  
    Components ..... 1675-6  
Heating system ..... 1830-1 - 1830-6  
    Heater blowers ..... 1830-6  
    Heater core ..... 1830-2  
    Heater pipes and hoses ..... 1830-6  
    Heater valve ..... 1830-1  
Heating system testing ..... 9031-1 - 9031-4  
    Component location ..... 9031-2, 9031-4  
    Diagnosing malfunctions ..... 9031-1  
    Preliminary checks ..... 9031-1  
Hood ..... 1910-3  
Horn ..... 2004-1  
Hour meter ..... 1676-5  
Hydraulic pump destroke solenoid ..... 1675-3  
Hydraulic system (analyzer)  
    testing ..... 9025A-1 - 9025A-37  
    Hydraulic system pretest  
        check sheet ..... 9025A-4  
    Operational checks ..... 9025A-3  
    Pretest inspection ..... 9025A-3  
    Symptom index ..... 9025A-5 - 9025A-7

Hydraulic system (analyzer)  
    testing—Continued  
    Test and adjustment ..... 9025A-8 - 9025A-37  
        Axle stabilizer leakage test ..... 9025A-30  
        Axle stabilizer tests ..... 9025A-29 - 9025A-30  
        Brake accumulator pressure  
            test ..... 9025A-22  
        Brake valve leakage test ..... 9025A-22  
        Cylinder leakage test ..... 9025A-17  
        Differential lock leakage  
            test ..... 9025A-21  
        Differential lock valve  
            test ..... 9025A-21  
        Emergency steering accumu-  
            lator test ..... 9025A-23  
        Four-line steering trouble-  
            shooting chart ..... 9025A-25  
        Function leakage test ..... 9025A-16 - 9025A-17  
        Parts list for test ..... 9025A-36 - 9025A-37  
        Pressure control valve test ..... 9025A-24  
        Standby pressure test ..... 9025A-24  
        Surge relief valve test ..... 9025A-17  
        Swing crossover relief valve  
            setting check ..... 9025A-28  
        Swing drift check ..... 9025A-27  
        Swing motor leakage check ..... 9025A-27  
        System accumulator pressure  
            test ..... 9025A-23  
        System test ..... 9025A-8 - 9025A-12  
        Test pattern analysis  
            chart ..... 9025A-13 - 9025A-15  
        Test specifications ..... 9025A-33 - 9025A-35  
        Transmission lube pressure  
            test ..... 9025A-20  
        Transmission oil pressure  
            test ..... 9025A-19  
        Transmission pump test ..... 9025A-18  
        Trapped oil circuit check ..... 9025A-26  
        Tuning functions to  
            harvesting control box ..... 9025A-31 - 9025A-32  
Hydraulic system (flow meter)  
    testing ..... 9025-1 - 9025-78  
    Block diagram ..... 9025-40  
    Component location ..... 9025-3 - 9025-5  
    Diagnosing malfunctions ..... 9025-49 - 9025-51  
    Schematic ..... 9025-6 - 9025-7  
    Test ports ..... 9025-41 - 9025-48  
    Testing and adjustments ..... 9025-53 - 9025-96  
        Bleeding brakes ..... 9025-68  
        Bleeding steering system ..... 9025-72  
        Brake accumulator pressure  
            test ..... 9025-67  
        Brake circuit ..... 9025-66  
        Brake valve leakage test ..... 9025-68  
        Cycle times ..... 9025-73 - 9025-74  
        Differential lock pressure ..... 9025-68