

**John Deere  
JD444  
Loader**



**TECHNICAL MANUAL**

**TM1162**  
LITHO IN U.S.A. (REVISED)



# JD444 LOADER

Technical Manual  
TM-1162 (Nov-76)

## SECTIONAL CONTENTS OF THIS MANUAL

Section 1 - General Information _____		1
Section 1 - Wheels (Tracks) _____		1
Section 2 - Axles and Suspension System _____		2
Section 3 - Transmission _____		3
Section 4 - Engine _____		4
Section 5 - Engine Auxiliary Systems _____		5
Section 6 - Torque Converter _____		6
Section 7 - Traction (Engine) Clutch _____	NOT USED	7
Section 8 - Transfer Drive _____	NOT USED	8
Section 9 - Steering Systems _____		9
Section 10 - Service Brakes _____		10
Section 11 - Parking - Emergency Brakes _____		11
Section 13 - Miscellaneous Vehicle _____	NOT USED	13
Section 15 - Equipment Attaching _____	NOT USED	15

Continued on page 3

Copyright © 1976  
DEERE & COMPANY  
Moline, Illinois  
All Rights Reserved



**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**

**SECTIONAL CONTENTS (Continued)**

Section 16 - Electrical Systems _____	16
Section 17 - Frame, Chassis or Supporting Structure _____	17
Section 18 - Operator's Station _____	18
Section 19 - Sheet Metal and Styling _____	19
Section 20 - Safety, Convenience and Miscellaneous _____	20
Section 21 - Main Hydraulic System _____	21
Section 22 - Pneumatic Systems _____	NOT USED 22
Section 30 - Winch _____	NOT USED 30
Section 31 - Loader _____	31
Section 32 - Bulldozer _____	NOT USED 32
Section 33 - Backhoe and Excavator _____	33
Section 34 - Grading Device _____	NOT USED 34
Section 35 - Scraper and Haulage Device _____	NOT USED 35
Section 36 - Conveyor and Elevating Device _____	NOT USED 36
Section 37 - Arch or Boom, or Cranes _____	NOT USED 37
Section 38 - Grapple _____	NOT USED 38
Section 39 - Shear _____	NOT USED 39

Continued on page 5

I

### SECTIONAL CONTENTS (Continued)

Section 40 - PTO or Winch Drive _____	<b>NOT USED</b>	<b>40</b>
Section 41 - Misc. Function Mechanical Drive _____	<b>NOT USED</b>	<b>41</b>
Section 42 - Ground Conditioning Tool _____	<b>NOT USED</b>	<b>42</b>
Section 43 - Swing, Rotation or Pivoting System _____	<b>NOT USED</b>	<b>43</b>
Section 44 - Cutting Mechanism _____	<b>NOT USED</b>	<b>44</b>
Section 45 - Forklifts _____	<b>NOT USED</b>	<b>45</b>
Section 46 - Automatic Control _____	<b>NOT USED</b>	<b>46</b>
Section 90 - System Testing _____		<b>90</b>

*The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.*





## SECTION AND GROUP CONTENTS OF THIS MANUAL

### SECTION I - GENERAL INFORMATION

- Group I - Contents, Index and Page List
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery and After-Sale Services
- Group V - Lubrication

### SECTION 1 - WHEELS

- Group 0110 - Powered Wheels and Fastenings
- Group 0199 - Specifications and Special Tools

### SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0201 - Drive Axle Housing and Support
- Group 0210 - Differential or Bevel Drive
- Group 0225 - Input Drive Shafts and U-Joints
- Group 0250 - Axle Shafts, Bearings and Reduction Gears
- Group 0299 - Specifications and Special Tools

### SECTION 3 - TRANSMISSION

- Group 0315 - Controls
- Group 0325 - Input Drive Shafts and U-Joints
- Group 0341 - Housings and Covers
- Group 0350 - Gears, Shafts, Bearings and Power Shift Clutch
- Group 0360 - Hydraulic System
- Group 0399 - Specifications and Special Tools

### SECTION 4 - ENGINE

- Group 0400 - Engine Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housing and Piping
- Group 0419 - Oil Cooler
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting Motor and Fastenings
- Group 0433 - Flywheel, Housing and Fastenings
- Group 0499 - Specifications and Special Tools

### SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling Systems
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0530 - External Exhaust Systems
- Group 0540 - Mounting Frame
- Group 0560 - External Fuel Supply Systems
- Group 0599 - Specifications and Special Tools

### SECTION 6 - TORQUE CONVERTER

- Group 0641 - Housing and Cover
- Group 0651 - Turbine, Gears, Shafts and Bearings
- Group 0699 - Specifications and Special Tools

### SECTION 9 - STEERING SYSTEM

- Group 0930 - Emergency Steering
- Group 0960 - Hydraulic System
- Group 0999 - Specifications and Special Tools

### SECTION 10 - SERVICE BRAKES

- Group 1011 - Active Elements
- Group 1060 - Hydraulic System
- Group 1099 - Specifications and Special Tools

### SECTION 11 - PARKING-EMERGENCY BRAKES

- Group 1111 - Active Elements
- Group 1115 - Controls Linkage
- Group 1199 - Specifications and Special Tools

### SECTION 16 - ELECTRICAL SYSTEMS

- Group 1671 - Batteries, Support and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1675 - System Controls
- Group 1676 - Instruments and Indicators
- Group 1699 - Specifications and Special Tools

## SECTION AND GROUP CONTENTS OF THIS MANUAL - Continued

### SECTION 17 - FRAME, CHASSIS, OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1746 - Frame Bottom Guards
- Group 1799 - Specifications and Special Tools

### SECTION 18 - OPERATOR'S STATION

- Group 1807 - Special Noise Control Items
- Group 1810 - Operator Enclosure
- Group 1821 - Seat and Seat Belt
- Group 1822 - Steps and Handholds
- Group 1830 - Heating and Air Conditioning
- Group 1899 - Specifications and Special Tools

### SECTION 19 - SHEET METAL AND STYLING

- Group 1910 - Hood or Engine Enclosure
- Group 1921 - Grille and Grille Housing
- Group 1927 - Fenders

### SECTION 20 - SAFETY, CONVENIENCE AND MISCELLANEOUS

- Group 2002 - Mirror
- Group 2004 - Horn
- Group 2006 - Cigar Lighter

### SECTION 21 - MAIN HYDRAULIC SYSTEM

- Group 2160 - Hydraulic System
- Group 2199 - Specifications and Special Tools

### SECTION 31 - LOADER

- Group 3102 - Buckets
- Group 3115 - Controls Linkage
- Group 3140 - Frames
- Group 3160 - Hydraulic System
- Group 3199 - Specifications and Special Tools

### SECTION 33 - BACKHOE AND EXCAVATOR

- Group 3301 - Blades, Teeth and Shanks
- Group 3302 - Buckets
- Group 3315 - Controls Linkage
- Group 3321 - Seat
- Group 3340 - Frames
- Group 3360 - Hydraulic System
- Group 3399 - Specifications and Special Tools

### SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information - Seven Basic Steps of Diagnosis and Testing
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9020 - Power Train
- Group 9025 - Hydraulic System (Flow Meter)
- Group 9025A - Hydraulic System (Analyzer)
- Group 9030 - Miscellaneous Components
- Group 9031 - Heating and Air Conditioning
- Group 9035 - Specifications and Special Tools

**ALPHABETICAL INDEX**

<b>A</b>		Charging system .....	9015-25
Accumulator, brake .....	1060-4	Checking and adding	
Accumulator, steering .....	0930-3	compressor oil .....	1830-14
After-sale inspection .....	I-IV-16	Cigar lighter .....	2006-1
Air cleaner .....	0520-1	Circuit breakers .....	1674-2
Air conditioning system .....	1830-3	Circuit boom raise .....	1675-1
Air conditioning system testing .....	9031-5	Circuit, return-to-dig .....	1675-1
Diagnosing malfunctions .....	9031-8	Clutch coil and housing,	
Precautions .....	9031-11	compressor .....	1830-13
System service .....	9031-12	Clutch control valve .....	0360-6
Visual checks .....	9031-7	Clutch, powershift .....	0350-1
Air intake system .....	0414-1	Compressor .....	1830-3
Air restriction indicator .....	1676-3	Compressor hub and	
Alarm, reverse warning .....	2004-2	drive plate assembly .....	1830-6
Alternator (Delco-Remy) .....	1672-1	Compressor pulley and	
Alternator (Motorola) .....	1672-8	bearings .....	1830-12
Analyzer testing .....	9025A-1	Compressor servicing .....	1830-15
Axle, front .....	0201-3	Compressor shaft seal .....	1830-8
Axle, rear .....	0201-3	Condenser .....	1830-18
<b>B</b>		Connecting rods .....	0403-1
Backhoe .....	3301-1	Control valve, backhoe .....	3360-1
Batteries .....	1671-3	Control valve, loader .....	3160-3
Bearings, main .....	0401-2	Cooler, engine oil .....	0419-1
Block, cylinder .....	0404-1	Crankshaft .....	0401-1
Boom cylinder, backhoe .....	3360-9	Cylinder block .....	0404-1
Boom cylinder, loader .....	3160-16	Cylinder head .....	0409-1
Boom valve, backhoe .....	3360-5	Cylinder liner .....	0404-3
Boom valve, loader .....	3160-9	Cylinder, steering .....	0960-11
Boom raise circuit .....	1675-1	Cylinders, backhoe .....	3360-7
Bottom guards, frame .....	1746-1	Cylinders, hydraulic .....	3160-15
Brakes, parking-emergency .....	1111-3	<b>D</b>	
Brakes, service .....	1011-3	Damper assembly .....	0350-1
Break-in, engine .....	0499-1	Defroster .....	1810-12
Bucket cylinder, backhoe .....	3360-8	Deglazing cylinder	
Bucket cylinder, loader .....	3160-16	liners .....	0404-3
Bucket valve, backhoe .....	3360-4	Delivery service .....	I-IV-16
Bucket valve, loader .....	3160-10	Diagnosis and testing .....	9005-3
Buckets, backhoe .....	3301-1	Differential, no-spin .....	0210-6
Buckets, loader .....	3102-3	Differential, standard .....	0210-1
<b>C</b>		Dipstick nipple .....	0407-4
Cab .....	1810-6	Disconnect shifter and	
Camshaft and valve actuating		linkage .....	0315-5
means .....	0402-1	Drawbar .....	1740-8
Canopy .....	1810-1	Drive axle housing	
		and support .....	0201-3

E

Electrical system testing	9015-1
Block diagram	9015-8
Component location	9015-3
Inspection	9015-20
Malfunctions	9015-17
Operation	9015-1
Precautions	9015-19
Schematic diagram	9015-49
Tests	9015-22
Wiring routes	9015-8
Emergency steering accumulator	0930-3
Emergency steering low pressure warning system	0930-5
Engine break-in	0499-1
Engine cooling system	0510-1
Engine frame	1740-3
Engine fuel system	0560-1
Engine lubricating system	0407-1
Engine oil pressure adjustment	9010-11
Engine oil pressure check	9010-10
Engine oil pressure gauge	1676-3
Engine oil pump	0407-1
Engine removal, installation	0400-5
Engine testing	9010-1
Component locations	9010-2
Malfunctions	9010-5
Speed control linkage adjustment	9010-14
Tests and adjustments	9010-10
Visual inspection	9010-8
Engine water temperature gauge	1676-4
Evaporator	1830-20
Exhaust manifold	0410-1
Exhaust system, engine	0530-1

F

Filter, engine fuel	0420-1
Flywheel	0433-1
Frames, loader	3140-1
Fuel filter, engine	0420-1
Fuel gauge	1676-4
Fuel injection nozzles	0413-5
Fuel injection pump	0413-1
Fuel system	0560-1
Fuel tank	0560-1
Fuel transfer pump	0421-1
Fuses	1674-2

G

Gauge, engine oil pressure	1676-3
Gauge, engine water temperature	1676-4
Gauge, fuel	1676-4
Gauge, transmission oil pressure	1676-2
Gauge, transmission oil temperature	1676-2
Greases	I-V-2
Grille and grille housing	1921-1
Guard, splash	1927-1

H

Handholds	1822-1
Heater	1830-1
Heating system testing	9031-1
Heavy-duty bucket	3301-3
Hood	1910-4
Horn	2004-1
Hour meter	1676-5
Hydraulic oil indicator light and switch	1676-6
Hydraulic system (analyzer) testing	9025A-1
Hydraulic system pretest check sheet	9025A-4
Loader hydraulic system tests	9025A-8
Operational checks	9025A-3
Parts list for tests	9025A-27
Pretest inspection	9025A-3
Steering and brake system tests	9025A-14
Symptom index	9025A-5
Hydraulic system (flow meter) testing	9025-1
Component location	9025-1
Diagnosing malfunctions	9025-17
Operations	9025-5
Testing and adjustments	9025-25
Visual inspection	9025-25

I

Injection nozzles, fuel	0413-5
Injection pump, fuel	0413-1
Inspection, after-sale	I-IV-16
Instruments and indicators	1676-1
Instruments and indicators testing	9015-31
Intake system, engine	0520-1

<b>L</b>	
Leak testing compressor .....	1830-16
Light circuit testing .....	9015-30
Light, hydraulic oil indicator .....	1676-6
Light, parking brake indicator .....	1676-5
Lighter, cigar .....	2006-1
Light flashers .....	1673-2
Light switches .....	1673-1
Liner, cylinder .....	0404-1
Loader buckets and boom .....	3102-3
Loader frame .....	3140-1
Lubricants .....	I-V-2
Lubrication system, engine .....	0407-1
<b>M</b>	
Main bearings .....	0401-2
Malfunctions:	
Air conditioning system .....	9031-1
Batteries .....	9015-17
Brake system .....	9025-18
Charging circuit .....	9015-17
Clutch control valve .....	9025-17
Damper assembly .....	9020-9
Differential .....	9020-9
Drive shafts .....	9020-9
Engine .....	9010-5
Final drives .....	9020-9
Gauges and switches .....	9015-18
Hydraulic pump (loader) .....	9025-23
Hydraulic pump (steering and brakes) ..	9025-19
Lights .....	9015-18
Loader functions .....	9025-23
Loader pump .....	9025-23
Starting circuit .....	9015-17
Steering and brake hydraulic pump .....	9025-19
Steering and brake system .....	9025-18
Steering valve .....	9025-20
Manifold, exhaust .....	0410-1
Manifold, water .....	0418-1
Mechanical instruments and indicators .....	1676-2
Mirror .....	2002-3
Miscellaneous accessories circuit testing .....	9015-33
Miscellaneous components system testing ..	9030-1
Windshield wiper adjustment .....	9030-1
Mounting frame, engine .....	0540-1
Muffler .....	0530-1
Multi-purpose bucket clam cylinder .....	3160-17
<b>N</b>	
Neutral start switch .....	1674-4
Noise control items .....	1807-3
No-spin differential .....	0210-6
Nozzles, fuel injection .....	0413-5
<b>O</b>	
Oil cooler, engine .....	0419-1
Oil cooler, transmission .....	0360-9
Oil filter, transmission .....	0360-8
Oil pan .....	0407-4
Oiling system, engine .....	0407-1
Oils .....	I-V-2
Operator enclosure .....	1810-1
<b>P</b>	
Panel, instrument .....	1676-1
Parking brake indicator light and switch .....	1676-5
Parking-emergency brakes .....	1111-3
Periodic service chart .....	I-V-1
Pistons .....	0403-1
Platforms .....	1810-4
Power shift clutch .....	0350-1
Power train system testing .....	9020-1
Block diagram .....	9020-5
Component location .....	9020-2
Diagnosing malfunctions .....	9020-9
Testing and adjustments .....	9020-11
Powered wheels and fastening .....	0110-3
Predelivery service .....	I-IV-1
Pump, engine oil .....	0407-1
Pump, engine water .....	0417-1
Pump, fuel injection .....	0413-1
Pump, fuel transfer .....	0421-1
Pump, loader hydraulic .....	3160-1
Pump, main hydraulic .....	2160-3
Pump, transmission .....	0360-1

## R

Radiator and fan shroud .....	0510-2
Rear view mirror .....	2002-3
Rear weights .....	1740-8
Regulator and alternator .....	1672-1
Relief valve, backhoe .....	3360-6
Reservoir and filters, loader .....	3160-19
Return-to-dig and boom raise circuit testing .....	9015-35
Return-to-dig circuit .....	1675-1
Reverse warning alarm .....	2004-2
ROPS canopy frame .....	1810-1

## S

Safety information .....	I-II-1
Schematic, electrical system testing .....	9015-5, 9015-39
Seat .....	1821-1
Seat, backhoe .....	3321-1
Seat belt .....	1821-3
Service brakes .....	1011-3
Service, delivery .....	I-IV-16
Service, predelivery .....	I-IV-1
Shift controls and linkage .....	0315-3
Side shields, engine .....	1910-3
Special tools:	
Alternator, regulator and charging system wiring .....	1699-7
Batteries, support and cables .....	1699-6
Camshaft and valve actuating means .....	0499-32
Connecting rods and pistons .....	0499-34
Crankshaft and main bearings .....	0499-30
Cylinder block .....	0499-35
Cylinder head and valves .....	0499-36
Electrical system testing .....	9035-11
Engine oiling system .....	0499-33
Engine removal and installation .....	0499-28
Engine system testing .....	9035-3
Flywheel, housing and fastenings .....	0499-43

## Special tools—Continued

Fuel injection system .....	0499-37
Heating and air conditioning .....	9035-22
Hydraulic system (analyzer) .....	9035-19
Hydraulic system (flow meter) system testing .....	9035-15
Loader hydraulic system .....	3199-8
Main hydraulic system .....	2199-7
Oiling System .....	0499-35
Service brakes hydraulic system .....	1099-2
Starting motor and fastenings .....	0499-40
Steering hydraulic system .....	0999-7
Torque converter turbine, gears, shafts and bearings .....	0699-4
Turbocharger .....	0499-38
Transmission gears, shafts, bearings and power shift clutch .....	0399-9
Transmission housings and covers .....	0399-8
Water pump .....	0499-39
Specifications and torque values:	
Air conditioning .....	1899-3
Alternator, regulator and (Delco-Remy) charging system wiring .....	1699-1
Alternator, regulator and charging system wiring (Motorola) .....	1699-2
Axle shafts, bearings, reduction gears .....	0299-7
Backhoe hydraulic system .....	3399-1
Boom cylinder .....	3399-4
Boom valve .....	3399-3
Bucket cylinder .....	3399-4
Bucket valve .....	3399-2
Control valve .....	3399-3
Crowd cylinder .....	3399-4
Crowd valve .....	3399-1
Relief valve .....	3399-3
Stabilizer cylinder .....	3399-5
Stabilizer valve .....	3399-1
Swing cylinder .....	3399-5
Swing valve .....	3399-2
Batteries, support and cables .....	1699-1
Camshaft and valve actuating means .....	0499-3
Cold weather starting aids .....	0599-1
Connecting rods and pistons .....	0499-8
Crankshaft and main bearings .....	0499-2

Specifications and torque values—Continued

Cylinder block	0499-10
Cylinder head and valves	0499-15
Differential or bevel drive	0299-3
Drive axle housing and support	0299-1
Electrical system testing	9035-6
Emergency steering	0999-1
Engine break-in	0499-1
Engine cooling system	0599-1
Engine mounting frame	0599-3
Engine oil cooler	0499-23
Engine speed controls	0599-2
Engine system testing	9035-1
Flywheel, housing and fastenings	0499-27
Frame installation	1799-1
Fuel injection system	0499-18
General specifications	I-III-1
Heating and air conditioning	9035-21
Hydraulic system (analyzer)	9035-16
Hydraulic system (flow meter) testing	9035-13
Input drive shafts and U-joints	0299-2
Instruments and indicators	1699-5
Lighting system	1699-4
Loader bucket	3199-2
Loader frame	3199-2
Loader hydraulic system	3199-3
Main hydraulic system	2199-1
Miscellaneous components	9035-20
Windshield wiper adjustment	9035-20
Oil cooler	0299-24
Oiling system	0499-13
Operator enclosure	1899-1
Power train system testing	9035-12
Powered wheels and fastenings	0199-1
Service brakes hydraulic system	1099-1
Starting motor and fastenings	0499-25
Steering hydraulic system	0999-1
Thermostats, housings and water piping	0499-23
Torque converter housing and cover	0699-1
Torque converter turbine, gears, shafts and bearings	0699-3

Specifications and torque values—Continued

Transmission gears, shafts bearings, and power shift clutch	0399-2
Transmission housings and covers	0399-1
Transmission hydraulic system	0399-6
Transmission input drive shafts and U-joints	0399-1
Speed controls, engine	0515-1
Splash guards	1927-1
Stabilizer cylinder	3360-11
Stabilizer valve	3360-4
Start circuit relay	1674-3
Start switch	1674-4
Start switch, neutral	1674-4
Starting aids, cold weather	0505-3
Starting circuit testing	9015-20
Starting motor and fastenings	0422-1
Steering shroud and cowl	1910-5
Steering system	0930-3
Steps	1822-1
Storage, temporary	I-IV-1
Supports, engine	0540-1
Swing cylinder	3360-11
Swing valve	3360-5
Switch, electric horn	2004-1
Switch, emergency steering low pressure warning	0930-5
Switch, hydraulic oil indicator	1676-6
Switch, key	1674-4
Switch, light	1673-1
Switch, neutral start	1674-4
Switch, parking brake indicator	1676-5
Switch, start	1674-4
System controls, electrical	1675-1
System short test	9015-18

T

Tank, engine fuel	0560-1
Teeth and shanks	3301-3



Tires .....	0110-3
Torque chart .....	I-IV-15
Torque converter .....	0641-3
Transmission .....	0315-3
Transmission control valve .....	0360-3
Transmission oil filter .....	0360-8
Transmission pump .....	0360-1
Transmission oil pressure gauge .....	1676-2
Transmission oil temperature gauge .....	1676-2

**V**

Valve, backhoe control .....	3360-1
Valve, boom, backhoe .....	3360-5
Valve, boom, loader .....	3160-10
Valve, brake .....	1060-1
Valve, bucket, backhoe .....	3360-4
Valve, bucket, loader .....	3160-9
Valve, clutch control .....	0360-6
Valve, crowd .....	3360-4
Valve, engine oil pressure .....	0407-2, 0407-4
Valve, loader control .....	3160-6
Valve, relief, backhoe .....	3360-6
Valve, relief, loader .....	3160-13
Valve, stabilizer .....	3360-4

Valve, steering .....	0960-1
Valve, swing .....	3360-5
Valve, transmission control .....	0360-3
Ventilating system, engine .....	0408-1
Voltmeter .....	1676-5

**W**

Water manifold .....	0418-1
Water pump, engine .....	0417-1
Weight, rear .....	1740-8
Wheels, powered .....	0110-3
Windshield wipers .....	1810-11
Windshield wipers adjustments .....	9030-1
Wiring harness and switches .....	1674-1
Circuit breakers .....	1674-2
Fuses .....	1674-2
Start circuit relay .....	1674-3
Switches .....	1674-4

**COMPLETE PAGE LISTING  
 WITH LATEST DATE LINES**

Page	Date Line	Page	Date Line	Page	Date Line
I-I-1,2	(Nov-76)	2-0201-5,6	(Nov-76)	3-0399-9,10	(Jan-80)
I-I-3,4	(Nov-76)	2-0210-1,2	(Nov-76)	4-0400-1,2	(Dec-78)
I-I-5,6	(Nov-76)	2-0210-3,4	(Nov-76)	4-0400-3,4	(Jan-80)
I-I-7,8	(Nov-76)	2-0210-5,6	(Dec-78)	4-0400-5,6	(Jan-80)
I-I-9,10	(Jan-80)	2-0210-7,8	(Dec-78)	4-0400-7,8	(Nov-76)
I-I-11,12	(Jan-80)	2-0210-9,10	(Dec-78)	4-0400-9,10	(Jan-80)
I-I-13,14	(Jan-80)	2-0210-11,12	(Jan-80)	4-0400-11,12	(Nov-76)
I-I-15,16	(Jan-80)	2-0210-13,14	(Nov-76)	4-0401-1,2	(Nov-76)
I-I-17,18	(Jan-80)	2-0210-15,16	(Jan-80)	4-0401-3,4	(Jan-80)
I-I-19,20*	(Dec-78)	2-0225-1,2	(Nov-76)	4-0401-5,6	(Jan-80)
I-I-21,22*	(Dec-78)	2-0225-3,4	(Nov-76)	4-0402-1,2	(Nov-76)
I-I-23,24*	(Dec-78)	2-0250-1,2	(Nov-76)	4-0402-3,4	(Nov-76)
I-I-25,26*	(Dec-78)	2-0250-3,4	(Nov-76)	4-0402-5,6	(Nov-76)
I-II-1,2	(Nov-76)	2-0299-1,2	(Nov-76)	4-0402-7,8	(Nov-76)
I-II-3,4	(Nov-76)	2-0299-3,4	(Dec-78)	4-0403-1,2	(Nov-76)
I-II-5,6	(Nov-76)	2-0299-5,6	(Jan-80)	4-0403-3,4	(Jan-80)
I-II-7,8	(Nov-76)	2-0299-7,8	(Nov-76)	4-0403-5,6	(Jan-80)
I-III-1,2	(Dec-78)			4-0404-1,2	(Nov-76)
I-III-3,4	(Nov-76)	3-0315-1,2	(Nov-76)	4-0404-3,4	(Nov-76)
I-IV-1,2	(Nov-76)	3-0315-3,4	(Nov-76)	4-0404-5,6	(Nov-76)
I-IV-3,4	(Jan-80)	3-0315-5,6	(Nov-76)	4-0404-7,8	(Nov-76)
I-IV-5,6	(Dec-78)	3-0325-1,2	(Jan-80)	4-0407-1,2	(Jan-80)
I-IV-7,8	(Nov-76)	3-0341-1,2	(Jan-80)	4-0407-3,4	(Jan-80)
I-IV-9,10	(Jan-80)	3-0341-3,4	(Jan-80)	4-0408-1,2	(Nov-76)
I-IV-11,12	(Dec-78)	3-0350-1,2	(Nov-76)	4-0409-1,2	(Jan-80)
I-IV-13,14	(Nov-76)	3-0350-3,4	(Nov-76)	4-0409-3,4	(Jan-80)
I-IV-15,16	(Nov-76)	3-0350-5,6	(Dec-78)	4-0409-5,6	(Jan-80)
I-IV-17,18	(Nov-76)	3-0350-7,8	(Nov-76)	4-0410-1,2	(Nov-76)
I-IV-19,20	(Jan-80)	3-0350-9,10	(Jan-80)	4-0413-1,2	(Jan-80)
I-IV-21,22	(Jan-80)	3-0350-11,12	(Nov-76)	4-0413-3,4	(Jan-80)
I-IV-23,24	(Nov-76)	3-0350-13,14	(Nov-76)	4-0413-5,6	(Nov-76)
I-IV-25,26	(Jan-80)	3-0350-15,16	(Jan-80)	4-0413-7,8	(Nov-76)
I-IV-27,28	(Nov-76)	3-0350-17,18	(Jan-80)	4-0414-1,2	(Jan-80)
I-IV-29,30	(Nov-76)	3-0350-19,20	(Jan-80)	4-0416-1,2	(Dec-78)
I-IV-31,32	(Dec-78)	3-0350-21,22	(Nov-76)	4-0416-3,4	(Dec-78)
I-IV-33,34	(Nov-76)	3-0350-23,24	(Dec-78)	4-0416-5,6	(Jan-80)
I-IV-35,36	(Nov-76)	3-0360-1,2	(Nov-76)	4-0416-7,8	(Dec-78)
I-V-1,2	(Jan-80)	3-0360-3,4	(Nov-76)	4-0417-1,2	(Nov-76)
		3-0360-5,6	(Dec-78)	4-0417-3,4	(Dec-78)
1-0110-1,2	(Nov-76)	3-0360-7,8	(Nov-76)	4-0418-1,2	(Nov-76)
1-0110-3,4	(Nov-76)	3-0360-9,10	(Nov-76)	4-0419-1,2	(Nov-76)
1-0110-5,6	(Nov-76)	3-0399-1,2	(Nov-76)	4-0420-1,2	(Nov-76)
1-0199-1,2	(Nov-76)	3-0399-3,4	(Nov-76)	4-0421-1,2	(Nov-76)
		3-0399-5,6	(Nov-76)	4-0422-1,2	(Nov-76)
2-0201-1,2	(Nov-76)	3-0399-7,8	(Nov-76)	4-0422-3,4	(Nov-76)
2-0201-3,4	(Nov-76)			4-0422-5,6	(Nov-76)
				4-0422-7,8	(Nov-76)
				4-0422-9,10	(Nov-76)

*Vertical lines indicate pages included in this revision.  
 \*Remove these pages.*

Page	Date Line	Page	Date Line	Page	Date Line
4-0433-1,2	(Jan-80)	9-0930-1,2	(Jan-80)	16-1699-1,2	(Dec-78)
4-0499-1,2	(Jan-80)	9-0930-3,4	(Jan-80)	16-1699-3,4	(Dec-78)
4-0499-3,4	(Nov-76)	9-0930-5,6	(Nov-76)	16-1699-5,6	(Dec-78)
4-0499-5,6	(Nov-76)	9-0960-1,2	(Nov-76)	16-1699-7,8	(Dec-78)
4-0499-7,8	(Nov-76)	9-0960-3,4	(Jan-80)		
4-0499-9,10	(Jan-80)	9-0960-5,6	(Jan-80)	17-1740-1,2	(Nov-76)
4-0499-11,12	(Nov-76)	9-0960-7,8	(Jan-80)	17-1740-3,4	(Nov-76)
4-0499-13,14	(Jan-80)	9-0960-9,10	(Jan-80)	17-1740-5,6	(Nov-76)
4-0499-15,16	(Jan-80)	9-0960-11,12	(Jan-80)	17-1740-7,8	(Nov-76)
4-0499-17,18	(Jan-80)	9-0960-13,14	(Jan-80)	17-1746-1,2	(Nov-76)
4-0499-19,20	(Jan-80)	9-0960-15,16	(Jan-80)	17-1799-1,2	(Nov-76)
4-0499-21,22	(Jan-80)	9-0960-17,18	(Jan-80)		
4-0499-23,24	(Dec-78)	9-0960-19,20	(Jan-80)	18-1807-1,2	(Jan-80)
4-0499-25,26	(Dec-78)	9-0960-21,22	(Jan-80)	18-1807-3,4	(Nov-76)
4-0499-27,28	(Jan-80)	9-0999-1,2	(Dec-78)	18-1807-5,6	(Nov-76)
4-0499-29,30	(Jan-80)	9-0999-3,4	(Dec-78)	18-1810-1,2	(Jan-80)
4-0499-31,32	(Jan-80)	9-0999-5,6	(Jan-80)	18-1810-3,4	(Nov-76)
4-0499-33,34	(Jan-80)	9-0999-7,8	(Jan-80)	18-1810-5,6	(Nov-76)
4-0499-35,36	(Jan-80)			18-1810-7,8	(Nov-76)
4-0499-37,38	(Jan-80)	10-1011-1,2	(Nov-76)	18-1810-9,10	(Nov-76)
4-0499-39,40	(Jan-80)	10-1011-3,4	(Nov-76)	18-1810-11,12	(Nov-76)
4-0499-41,42	(Jan-80)	10-1060-1,2	(Nov-76)	18-1821-1,2	(Nov-76)
4-0499-43,44	(Jan-80)	10-1060-3,4	(Dec-78)	18-1821-3,4	(Nov-76)
		10-1060-5,6	(Jan-80)	18-1822-1,2	(Nov-76)
		10-1099-1,2	(Jan-80)	18-1830-1,2	(Nov-76)
5-0505-1,2	(Nov-76)			18-1830-3,4	(Jan-80)
5-0505-3,4	(Nov-76)	11-1111-1,2	(Nov-76)	18-1830-5,6	(Jan-80)
5-0510-1,2	(Nov-76)	11-1111-3,4	(Nov-76)	18-1830-7,8	(Jan-80)
5-0510-3,4	(Nov-76)	11-1115-1,2	(Nov-76)	18-1830-9,10	(Jan-80)
5-0515-1,2	(Nov-76)	11-1199-1,2	(Nov-76)	18-1830-11,12	(Jan-80)
5-0520-1,2	(Nov-76)			18-1830-13,14	(Jan-80)
5-0530-1,2	(Nov-76)	16-1671-1,2	(Dec-78)	18-1830-15,16	(Jan-80)
5-0540-1,2	(Nov-76)	16-1671-3,4	(Nov-76)	18-1830-17,18	(Jan-80)
5-0560-1,2	(Nov-76)	16-1671-5,6	(Nov-76)	18-1830-19,20	(Jan-80)
5-0560-3,4	(Nov-76)	16-1671-7,8	(Nov-76)	18-1830-21,22	(Jan-80)
5-0599-1,2	(Nov-76)	16-1672-1,2	(Jan-80)	18-1830-23,24	(Jan-80)
5-0599-3,4	(Nov-76)	16-1672-3,4	(Nov-76)	18-1830-25,26	(Jan-80)
		16-1672-5,6	(Nov-76)	18-1830-27,28	(Jan-80)
		16-1672-7,8	(Jan-80)	18-1899-1,2	(Nov-76)
6-0641-1,2	(Jan-80)	16-1672-9,10	(Dec-78)	18-1899-3,4	(Jan-80)
6-0641-3,4	(Dec-78)	16-1672-11,12	(Dec-78)	18-1899-5,6	(Jan-80)
6-0641-5,6	(Jan-80)	16-1672-13,14	(Dec-78)		
6-0641-7,8	(Jan-80)	16-1672-15,16	(Dec-78)	19-1910-1,2	(Nov-76)
6-0641-9,10	(Jan-80)	16-1672-17,18	(Dec-78)	19-1910-3,4	(Nov-76)
6-0651-1,2	(Nov-76)	16-1672-19,20	(Dec-78)	19-1910-5,6	(Nov-76)
6-0651-3,4	(Jan-80)	16-1672-21,22	(Dec-78)	19-1921-1,2	(Nov-76)
6-0651-5,6	(Jan-80)	16-1673-1,2	(Nov-76)	19-1927-1,2	(Nov-76)
6-0651-7,8	(Nov-76)	16-1674-1,2	(Nov-76)		
6-0651-9,10	(Nov-76)	16-1674-3,4	(Jan-80)	20-2002-1,2	(Nov-76)
6-0651-11,12	(Nov-76)	16-1675-1,2	(Nov-76)	20-2002-3,4	(Nov-76)
6-0651-13,14	(Jan-80)	16-1676-1,2	(Nov-76)	20-2004-1,2	(Nov-76)
6-0699-1,2	(Jan-80)	16-1676-3,4	(Jan-80)	20-2006-1,2	(Nov-76)
6-0699-3,4	(Jan-80)	16-1676-5,6	(Dec-78)		
6-0699-5,6	(Jan-80)				

Vertical lines indicate pages included in this revision.

Page	Date Line	Page	Date Line	Page	Date Line
21-2160-1,2	(Nov-76)	90-9005-1,2	(Dec-78)	90-9025-21,22	(Dec-78)
21-2160-3,4	(Jan-80)	90-9005-3,4	(Nov-76)	90-9025-23,24	(Nov-76)
21-2160-5,6	(Jan-80)	90-9010-1,2	(Dec-78)	90-9025-25,26	(Jan-80)
21-2160-7,8	(Jan-80)	90-9010-3,4	(Nov-76)	90-9025-27,28	(Nov-76)
21-2199-1,2	(Nov-76)	90-9010-5,6	(Dec-78)	90-9025-29,30	(Nov-76)
21-2199-3,4	(Nov-76)	90-9010-7,8	(Nov-76)	90-9025-31,32	(Nov-76)
21-2199-5,6	(Nov-76)	90-9010-9,10	(Jan-80)	90-9025-33,34	(Dec-78)
21-2199-7,8	(Jan-80)	90-9010-11,12	(Jan-80)	90-9025-35,36	(Dec-78)
21-2199-9,10	(Jan-80)	90-9010-13,14	(Jan-80)	90-9025A-1,2	(Nov-76)
		90-9010-15,16	(Jan-80)	90-9025A-3,4	(Nov-76)
31-3102-1,2	(Nov-76)	90-9015-1,2	(Jan-80)	90-9025A-5,6	(Nov-76)
31-3102-3,4	(Nov-76)	90-9015-3,4	(Dec-78)	90-9025A-7,8	(Nov-76)
31-3102-5,6	(Nov-76)	90-9015-5,6	(Dec-78)	90-9025A-9,10	(Nov-76)
31-3102-7,8	(Nov-76)	90-9015-7,8	(Jan-80)	90-9025A-11,12	(Dec-78)
31-3115-1,2	(Nov-76)	90-9015-9,10	(Jan-80)	90-9025A-13,14	(Nov-76)
31-3115-3,4	(Nov-76)	90-9015-11,12	(Jan-80)	90-9025A-15,16	(Dec-78)
31-3140-1,2	(Nov-76)	90-9015-13,14	(Jan-80)	90-9025A-17,18	(Nov-76)
31-3140-3,4	(Jan-80)	90-9015-15,16	(Jan-80)	90-9025A-19,20	(Nov-76)
31-3140-5,6	(Jan-80)	90-9015-17,18	(Jan-80)	90-9025A-21,22	(Jan-80)
31-3140-7,8	(Jan-80)	90-9015-19,20	(Jan-80)	90-9025A-23,24	(Dec-78)
31-3160-1,2	(Jan-80)	90-9015-21,22	(Jan-80)	90-9025A-25,26	(Dec-78)
31-3160-3,4	(Jan-80)	90-9015-23,24	(Jan-80)	90-9025A-27,28	(Dec-78)
31-3160-5,6	(Jan-80)	90-9015-25,26	(Jan-80)	90-9030-1,2	(Nov-76)
31-3160-7,8	(Nov-76)	90-9015-27,28	(Jan-80)	90-9031-1,2	(Dec-78)
31-3160-9,10	(Nov-76)	90-9015-29,30	(Jan-80)	90-9031-3,4	(Dec-78)
31-3160-11,12	(Dec-78)	90-9015-31,32	(Jan-80)	90-9031-5,6	(Dec-78)
31-3160-13,14	(Jan-80)	90-9015-33,34	(Jan-80)	90-9031-7,8	(Dec-78)
31-3160-15,16	(Jan-80)	90-9015-35,36	(Jan-80)	90-9031-9,10	(Dec-78)
31-3160-17,18	(Jan-80)	90-9015-37,38	(Jan-80)	90-9031-11,12	(Dec-78)
31-3160-19,20	(Jan-80)	90-9015-39,40	(Jan-80)	90-9031-13,14	(Jan-80)
31-3160-21,22	(Jan-80)	90-9015-41,42	(Jan-80)	90-9031-15,16	(Jan-80)
31-3199-1,2	(Jan-80)	90-9015-43,44	(Jan-80)	90-9031-17,18	(Jan-80)
31-3199-3,4	(Jan-80)	90-9015-45,46	(Jan-80)	90-9031-19,20	(Jan-80)
31-3199-5,6	(Jan-80)	90-9015-47,48	(Jan-80)	90-9031-21,22	(Jan-80)
31-3199-7,8	(Jan-80)	90-9015-49,50	(Jan-80)	90-9035-1,2	(Jan-80)
		90-9020-1,2	(Nov-76)	90-9035-3,4	(Nov-76)
33-3301-1,2	(Nov-76)	90-9020-3,4	(Nov-76)	90-9035-5,6	(Nov-76)
33-3301-3,4	(Nov-76)	90-9020-5,6	(Nov-76)	90-9035-7,8	(Dec-78)
33-3302-1,2	(Nov-76)	90-9020-7,8	(Nov-76)	90-9035-9,10	(Dec-78)
33-3315-1,2	(Nov-76)	90-9020-9,10	(Nov-76)	90-9035-11,12	(Dec-78)
33-3321-1,2	(Nov-76)	90-9020-11,12	(Jan-80)	90-9035-13,14	(Jan-80)
33-3340-1,2	(Nov-76)	90-9020-13,14	(Nov-76)	90-9035-15,16	(Dec-78)
33-3340-3,4	(Nov-76)	90-9020-15,16	(Nov-76)	90-9035-17,18	(Dec-78)
33-3360-1,2	(Nov-76)	90-9025-1,2	(Nov-76)	90-9035-19,20	(Dec-78)
33-3360-3,4	(Nov-76)	90-9025-3,4	(Nov-76)	90-9035-21,22	(Jan-80)
33-3360-5,6	(Nov-76)	90-9025-5,6	(Nov-76)		
33-3360-7,8	(Dec-78)	90-9025-7,8	(Nov-76)		
33-3360-9,10	(Dec-78)	90-9025-9,10	(Nov-76)		
33-3360-11,12	(Dec-78)	90-9025-11,12	(Nov-76)		
33-3360-13,14	(Dec-78)	90-9025-13,14	(Nov-76)		
33-3399-1,2	(Nov-76)	90-9025-15,16	(Nov-76)		
33-3399-3,4	(Nov-76)	90-9025-17,18	(Nov-76)		
33-3399-5,6	(Nov-76)	90-9025-19,20	(Nov-76)		

| Vertical lines indicate pages included in this revision.