

**John Deere
JD890
Excavator**



TECHNICAL MANUAL

TM-1163

LITHO IN U.S.A.

JD890 EXCAVATOR

Technical Manual TM-1163 (Feb 78)

SECTIONAL CONTENTS OF THIS MANUAL

Section 1 - General Information		1
Section 1 - Tracks		1
Section 2 - Axles and Suspension System		2
Section 3 - Transmission	NOT USED	3
Section 4 - Engine		4
Section 5 - Engine Auxiliary Systems		5
Section 6 - Torque Converter	NOT USED	6
Section 7 - Traction (Engine) Clutch	NOT USED	7
Section 8 - Transfer Drive	NOT USED	8
Section 9 - Steering Systems	NOT USED	9
Section 10 - Service Brakes	NOT USED	10
Section 11 - Parking - Emergency Brakes	NOT USED	11
Section 13 - Miscellaneous Vehicle		13
Section 15 - Equipment Attaching	NOT USED	15

Continued on page 3

Copyright 1978
DEERE & COMPANY
Moline, Illinois
All Rights Reserved

00A

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

SECTIONAL CONTENTS (Continued)

Section 16 - Electrical Systems _____		16
Section 17 - Frame, Chassis or Supporting Structure _____		17
Section 18 - Operator's Station _____		18
Section 19 - Sheet Metal and Styling _____		19
Section 20 - Safety, Convenience and Miscellaneous _____		20
Section 21 - Main Hydraulic System _____	NOT USED	21
Section 22 - Pneumatic Systems _____	NOT USED	22
Section 30 - Winch _____	NOT USED	30
Section 31 - Loader _____	NOT USED	31
Section 32 - Bulldozers _____	NOT USED	32
Section 33 - Backhoe and Excavator _____		33
Section 34 - Grading Device _____	NOT USED	34
Section 35 - Scraper and Haulage Device _____	NOT USED	35
Section 36 - Conveyor and Elevating Device _____	NOT USED	36
Section 37 - Arch or Boom, or Cranes _____	NOT USED	37
Section 38 - Grapple _____	NOT USED	38
Section 39 - Shear _____	NOT USED	39

Continued on page 5



SECTIONAL CONTENTS (Continued)

Section 40 - PTO or Winch Drive _____	NOT USED	40
Section 41 - Misc. Function Mechanical Drive _____	NOT USED	41
Section 42 - Ground Conditioning Tool _____	NOT USED	42
Section 43 - Swing, Rotation or Pivoting System _____		43
Section 44 - Cutting Mechanism _____	NOT USED	44
Section 45 - Forklifts _____	NOT USED	45
Section 46 - Automatic Control _____	NOT USED	46
Section 90 - System Testing _____		90

The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.



SECTION AND GROUP CONTENTS OF THIS MANUAL

SECTION I - GENERAL INFORMATION

- Group I - Contents and Index
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery and After-Sales Services
- Group V - Lubrication

SECTION 1 - TRACKS

- Group 0130 - Track Systems
- Group 0199 - Specifications and Special Tools

SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0250 - Axle Shaft, Bearings, Reduction Gears
- Group 0299 - Specifications and Special Tools

SECTION 4 - ENGINE

- Group 0400 - Engine Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housings, and Water Piping
- Group 0419 - Oil Cooler
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting Motor and Fastenings
- Group 0423 - Alternator and Generator Mounting
- Group 0429 - Fan Drive
- Group 0433 - Flywheel, Housing and Fastenings
- Group 0499 - Specifications and Special Tools

SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling Systems
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0530 - External Exhaust Systems
- Group 0540 - Mounting Frame
- Group 0560 - External Fuel Supply Systems
- Group 0599 - Specifications and Special Tools

SECTION 13 - MISCELLANEOUS VEHICLE

- Group 1370 - Lubrication Systems

SECTION 16 - ELECTRICAL SYSTEMS

- Group 1671 - Batteries, Support and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1675 - System Controls
- Group 1676 - Instruments and Indicators
- Group 1699 - Specifications and Special Tools

SECTION 17 - FRAME, CHASSIS OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1749 - Chassis Weights

SECTION 18 - OPERATOR'S STATION

- Group 1810 - Operator Enclosure
- Group 1830 - Heating and Air Conditioning
- Group 1899 - Specifications and Special Tools

SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued

SECTION 19 - SHEET METAL AND STYLING

- Group 1910 - Hood or Engine Enclosure
- Group 1913 - Miscellaneous Shields
- Group 1921 - Grille and Grille Housing
- Group 1927 - Fenders

SECTION 20 - SAFETY, CONVENIENCE AND MISCELLANEOUS

- Group 2003 - Fire Extinguisher
- Group 2004 - Horn

SECTION 33 - BACKHOE AND EXCAVATOR

- Group 3301 - Blades, Teeth and Shanks
- Group 3302 - Buckets
- Group 3315 - Controls Linkage
- Group 3340 - Frames
- Group 3360 - Hydraulic System
- Group 3399 - Specifications and Special Tools

SECTION 43 - SWING, ROTATION OR PIVOTING SYSTEM

- Group 4311 - Brakes
- Group 4350 - Mechanical Drive Elements
- Group 4360 - Hydraulic System
- Group 4399 - Specifications and Special Tools

SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9020 - Power Train
- Group 9025 - Hydraulic System
- Group 9030 - Miscellaneous Components
- Group 9031 - Heating and Air Conditioning
- Group 9035 - Specifications and Special Tools

ALPHABETICAL INDEX

A

Accessory relay 1674-3
 Accumulator, track 0130-35
 After-sale inspection I-IV-19
 Air circulation fans 1810-9
 Air cleaner 0520-1
 Air conditioning system 1830-6
 Air conditioning system testing 9031-5
 Component location 9031-3
 Diagnosing malfunctions 9031-8
 General information 9031-7
 Testing and adjustments 9031-12
 Visual inspection 9031-8
 Air filters 1830-32
 Alternator and generator mounting 0423-1
 Alternator indicator light 1676-4
 Alternator, regulator and charging system
 wiring 1672-1
 Armature 0422-8
 Auxiliary counterweight 1749-6
 Axles and suspension systems 0250-3

B

Blower motor 1830-31
 Boom 3340-2,3340-7
 Boom lubrication lines 1370-3
 Boom raise 1675-2
 Brake, track 0260-19
 Brakes, swing system 4311-3
 Bucket, backhoe 3302-1
 Bucket cylinder shield 1913-1
 Bucket linkage 3340-1,3340-4,
 3340-10
 Bucket teeth 3301-3

C

Cab 1810-3
 Camshaft and valve actuating means 0402-1
 Chain, track 0130-14
 Charging circuit testing 9015-27
 Chassis weights 1749-1
 Cold weather starting aids 0505-3
 Commercial shearing main hydraulic pump 3360-14
 Commercial shearing third section unloading
 valve 3360-22
 Component location:
 Air conditioning system 9031-3
 Electrical system 9015-3
 Engine system 9010-4
 Heating system 9031-3
 Hydraulic system 9025-3
 Power train system 9020-2
 Compressor 1830-4

Compressor relief valve 1830-30
 Condensor 1830-20
 Connecting rods and pistons 0403-1
 Controls linkage, backhoe and excavator 3315-1
 Coolant filter/conditioner 0510-1
 Cooling system, engine 0510-1
 Counterbalance valves 0260-6
 Counterweight, auxiliary 1749-6
 Counterweight cable cover 1913-1
 Crankshaft and main bearings 0401-1
 Crossover relief valve, swing system 4360-4
 Cylinder block 0404-1
 Cylinder head and valves 0409-1
 Cylinder, hydraulic, main 3360-37

D

Delco-Remy starting motor 0422-1
 Delivery service I-IV-19
 Diagnosing malfunctions:
 Air conditioning system 9031-8
 Electrical system 9015-15
 Engine system 9010-7
 Heating system 9031-1
 Hydraulic system 9025-39
 Power train system 9020-10
 Track system 9030-1
 Digging functions control valve 3360-31
 Dipperstick 3340-1,3340-6,
 3340-9
 Dipperstick lubrication lines 1370-3
 Drive sprocket 0130-5
 Dimensions I-III-4

E

Electrical system testing 9015-1
 Component location 9015-3
 Diagnosing malfunctions 9015-15
 General information 9015-1
 Testing and adjustment 9015-21
 Visual inspection 9015-20
 Electrical systems 1672-1
 Engine 0400-1
 Engine auxiliary systems 0505-3
 Engine mounts 0540-1
 Engine oil pressure gauge 1676-3
 Engine shield 1913-1
 Engine system testing 1910-1
 Component location 9010-4
 Diagnosing malfunctions 9010-7
 General information 9010-1
 Testing and adjustment 9010-12
 Visual inspection 9010-10

Engine water temperature gauge	1676-2
Evaporator	1830-25
Exhaust manifold	0410-1
Exhaust system, engine	0530-1
Expansion valve	1830-27

F

Fan belt tightener	0429-1
Fan drive	0429-1
Fan drive support	0429-3
Fans, air circulation	1810-9
Fast boom raise	1675-2
Fenders	1927-1
Filter, air conditioning	1830-31
Filter, fuel, engine	0420-1
Filters, high pressure	3360-6
Filters, return	3360-8
Fire extinguisher	2003-3
Flexmaster couplings	3360-36
Floor platform	1810-4,1810-6, 1810-8
Fluid starting aid	0505-3
Flywheel, housing and fastenings	0433-1
Frame	1749-1
Frame, backhoe	3340-1
Front idler	0130-25
Fuel filter, engine	0420-1
Fuel gauge	1676-2
Fuel injection nozzle	0413-8
Fuel injection system	0413-1
Fuel tank, engine	0560-1
Fuel transfer pump	0421-1
Fuses	1674-4

G

Gauge, engine oil pressure	1676-3
Gauge, engine water temperature	1676-2
Gauge, fuel	1676-2
Gauge, hydraulic oil temperature	1676-2
Gauge lights	1673-1
General specifications	I-III-1
Greases	I-IV-2
Grille and grille housing	1921-1

H

Heater core	1830-3
Heater, engine coolant	0505-4
Heater pipes and hoses	1830-3
Heater valve	1830-1
Heating system	1830-1
Heating system testing	9031-1
Component location	9031-3
Diagnosis and testing	9031-1

Hood	1910-3
Horn	2004-1
Hose, heater	1830-5
Hour meter	1676-3
House lock solenoid, swing system	4360-6
House lock, swing system	4311-3
House lock switches	1675-1
Hydraulic cylinders	3360-37
Hydraulic fitting installation and service recommendations	3360-1
Hydraulic oil filter indicator light	1676-4
Hydraulic oil temperature gauge	1676-2
Hydraulic pump shields	1913-2
Hydraulic system, main	3360-1
Hydraulic system, testing	9025-1
Component location	9025-3
Diagnosing malfunctions	9025-39
General information	9025-1
Testing and adjustment	9025-44
Visual inspection	9025-43
Hydraulics, axle and suspension systems ..	0260-1
Hydraulics, swing system	4360-1

I

Idler, front	0130-25
Indicators	1676-3
Instrument panel	1676-1
Instruments and indicators	1676-1
Instruments and indicators testing	9015-34
Intake manifold	0414-1
Intake system, engine	0520-1

K

Key switch	1674-2
------------------	--------

L

Light, alternator indicator	1676-4
Light, hydraulic oil filter indicator	1676-4
Light, plugged condenser indicator	1676-4
Light, stop engine warning indicator	1676-4
Lights, gauge	1673-1
Lubrication	I-V-1
Lubrication lines	1370-3

M

Main bearings	1740-3
Main frame	1740-3
Main hydraulic pump (Commercial Shearing)	3360-20
Main hydraulic pump drive	3360-29
Main hydraulic pump (Tyrone)	3360-9
Manifold, exhaust	0410-1
Manifold, intake	0414-1

Mechanical drive elements 4350-1
 Miscellaneous components testing 9030-1
 Adjustments 9030-2
 Diagnosing malfunctions 9030-1
 Momentary house lock 1675-1
 Motor, Delco-Remy starting 0422-1
 Motor, swing 4360-8
 Mounting frame 0540-1
 Mounts, engine 0540-1
 Muffler 0530-1

O

Oil cooler and lines, engine 1419-1
 Oil cooler and lines, hydraulic 3360-35
 Oil pressure regulating housing 0407-4
 Oil pump 0407-1
 Oiling system, engine 0407-1
 Oils I-V-2
 Operator enclosure 1810-3

P

Periodic service chart I-V-1
 Permanent house lock 1675-1
 Planetary drive 0250-13
 Platform, floor 1810-4, 1810-6,
 1810-8
 Plugged condenser indicator light 1676-5
 Power train system testing 9020-1
 Component location 9020-2
 Diagnosing malfunctions 9020-10
 General information 9020-1
 Visual inspection 9020-10
 Predelivery service I-IV-1
 Pressure compensator valves 0260-3
 Propel motor cover and shield 1913-1
 Propel motor, two speed 1675-2
 Pump drive, main hydraulic 3360-23
 Pump, fuel injection 0413-1
 Pump, fuel transfer 0421-1
 Pump, main hydraulic (Commercial
 Shearing) 3360-14
 Pump, main hydraulic, Tyrone 3360-6
 Pump, oil, engine 0407-1
 Pump, water, engine 0417-1

R

Radiator 0510-1
 Receiver-drier 1830-24
 Regulator and alternator 1672-1
 Reservoir, hydraulic 3360-4
 Roller, track 0130-7
 Rotary manifold 0260-22
 Rotary manifold shield 1913-2

S

Safety information I-II-2
 Seat adjustment 9030-6
 Seat and seat adjuster 1810-8
 Service, delivery I-IV-16
 Service, predelivery I-IV-1
 Shields, miscellaneous 1913-1
 Shoe, track 0130-6
 Solenoid switch 0422-9
 Solenoid, two-speed 0260-9
 Special tools:
 Air conditioning 1899-3
 Air conditioning system testing 9035-19
 Alternator, regulator and charging system
 wiring 1699-5
 Axles and suspension system hydraulics 0299-10
 Backhoe and excavator hydraulic system 3399-4
 Batteries, support and cables 1699-4
 Camshaft and valve actuating means 0499-35
 Connecting rods and pistons 0499-37
 Crankshaft and main bearings 0499-34
 Cylinder block 0499-38
 Cylinder head and valves 0499-39
 Electrical system testing 9035-10
 Engine removal and installation 0499-31
 Engine system testing 9035-3
 Frames 3399-6
 Fuel injection system 0499-41
 Hydraulic system, backhoe and excavator 3999-7
 Hydraulic system testing 9035-13
 Miscellaneous components testing 9035-16
 Operator enclosure 1899-1
 Starting motor and fastenings 0499-46
 Swing system hydraulic system 4399-7
 Swing system mechanical drive elements 4399-7
 Track system 0199-6
 Track system testing 9035-16
 Turbocharger 0499-44
 Water pump 0499-45

Specifications and torque values:

Air conditioning 1899-1
 Air conditioning system testing 9035-18
 Alternator and generator mounting 0499-28
 Alternator, regulator and charging system
 wiring 1699-1
 Axle shaft, bearings, reduction gears 0299-1
 Axles and suspension system hydraulics 0299-5
 Backhoe and excavator hydraulic system 3399-1
 Batteries, support and cables 1699-1
 Camshaft and valve actuating means 0499-5
 Crankshaft and main bearings 0499-2
 Cylinder block 0499-9
 Connecting rods and pistons 0499-7

Specifications and torque values—Continued:

Cylinder head and valves	0499-13
Electrical system testing	9035-5
Engine break-in	0499-1
Engine cooling system	0599-1
Engine fuel supply systems	0599-2
Engine system testing	9035-1
Exhaust manifold	0499-16
Fan drive	0499-29
Flywheel housing and fastenings	0499-30
Fuel filter	0499-25
Fuel injection system	0499-17
Fuel transfer pump	0499-25
General	I-III-1
Heating system testing	9035-18
Hydraulic system, backhoe and excavator	3399-1
Hydraulic system testing	9035-11
Instruments and indicators	1699-3
Intake manifold	0499-18
Miscellaneous components testing	9035-15
Oil cooler	0499-24
Oiling system	0499-11
Starting motor and fastenings	0499-26
Swing system hydraulic system	4399-4
Swing system mechanical drive elements	4399-1
Thermostats, housings and water piping	0499-20
Track system	0199-1
Track system testing	9035-15
Turbocharger	0499-19
Water pump	0499-22
Speed control, engine	0515-1
Starter switch	1674-3
Starting aid safety switch	1674-4
Starting aids, cold weather	0505-3
Starting circuit relay	1674-3
Starting circuit testing	9015-22
Starting motor (Delco-Remy) and fastenings	0422-1
Stop engine warning indicator light	1676-5
Storage of excavator	I-IV-1
Superheat shutoff switch	1830-30
Swing bearing	4350-12
Swing bearing top seal	4350-14
Swing control valve	4360-1
Swing drive	4350-1
Swing motors	4360-8
Swing system	4311-3
Switch, house lock	1675-1
Switch, key	1674-2
Switch, starter	1674-3
Switch, starting aid safety	1674-4
Switch, superheat shutoff	1830-29

Switch, thermal	1830-30
Switch, thermostat	1830-27
System testing:	
Air conditioning	9015-1
Electrical system	9015-1
Engine	9010-1
General information	9005-3
Heating system	9031-1
Hydraulic system	9025-1
Miscellaneous components	9030-1
Power train	9020-1

T

Teeth, bucket	3301-3
Thermal fuse	1830-30
Thermal switch	1830-31
Thermostat switch	1830-28
Thermostats, housings and water piping	0418-1
Third section unloading valve (Commercial Shearing)	3360-22
Third section unloading valve (Tyrone)	3360-13
Track accumulator	0130-35
Track adjuster	0130-30
Track brakes	0260-19
Track chain assembly	0130-14
Track control valves	0260-1
Track drive assembly	0250-3
Track drive motors	0260-11
Track guide	0130-3
Track guides and slides	0130-4
Track rollers	0130-7
Track shoes	0130-6
Track system	0130-3
Track system testing	9030-1
Turbocharger	0416-1
Two-speed boom check	3360-34
Two-speed solenoid	0260-9
Tyrone main hydraulic pump	3360-6
Tyrone third section unloading valve	3360-13

U

Undercarriage	0130-44
---------------	---------

V

Valve, compressor relief	1830-29
Valve, counterbalance	0260-6
Valve, crossover relief	4360-4
Valve, digging functions control	3360-24
Valve, expansion	1830-26
Valve, heater	1830-1
Valve, pressure compensator	0260-3

Valve, swing control 4360-1
Valve, third section unloading
(Commercial Shearing)..... 3360-23
Valve, third section unloading, Tyrone 3360-13
Valve, track control 0260-1
Ventilating system 0408-1

W

Water outlet manifold 0418-1
Water pump 0417-1
Weights, chassis 1749-1
Wiring harness and switches 1674-1



COMPLETE PAGE LISTING WITH LATEST DATE LINES

I-I-1,2	(Feb-78)	1-0130-27,28	(Mar-80)	4-0401-1,2	(Mar-80)
I-I-3,4	(Feb-78)	1-0130-29,30	(Jul-79)	4-0401-3,4	(Mar-80)
I-I-5,6	(Feb-78)	1-0130-31,32	(Jul-79)	4-0401-5,6	(Mar-80)
I-I-7,8	(Feb-78)	1-0130-33,34	(Jul-79)	4-0401-7,8	(Mar-80)
I-I-9,10	(Mar-80)	1-0130-35,36	(Mar-80)	4-0402-1,2	(Mar-80)
I-I-11,12	(Mar-80)	1-0130-37,38	(Jul-79)	4-0402-3,4	(Mar-80)
I-I-13,14	(Mar-80)	1-0130-39,40	(Mar-80)	4-0402-5,6	(Mar-80)
I-I-15,16	(Mar-80)	1-0130-41,42	(Mar-80)	4-0403-1,2	(Mar-80)
I-I-17,18	(Mar-80)	1-0130-43,44	(Mar-80)	4-0403-3,4	(Mar-80)
I-II-1,2	(Jul-79)	1-0199-1,2	(Feb-78)	4-0403-5,6	(Mar-80)
I-II-3,4	(Jul-79)	1-0199-3,4	(Jul-79)	4-0403-7,8	(Mar-80)
I-III-1,2	(Jul-79)	1-0199-5,6	(Mar-80)	4-0404-1,2	(Mar-80)
I-III-3,4	(Jul-79)	1-0199-7,8	(Mar-80)	4-0404-3,4	(Mar-80)
I-IV-1,2	(Jul-79)	1-0199-9,10	(Mar-80)	4-0404-5,6	(Mar-80)
I-IV-3,4	(Jul-79)	1-0199-11,12*	(Jul-79)	4-0404-7,8	(Mar-80)
I-IV-5,6	(Jul-79)			4-0404-9,10	(Mar-80)
I-IV-7,8	(Jul-79)	2-0250-1,2	(Feb-78)	4-0407-1,2	(Mar-80)
I-IV-9,10	(Jul-79)	2-0250-3,4	(Jul-79)	4-0407-3,4	(Mar-80)
I-IV-11,12	(Mar-80)	2-0250-5,6	(Feb-78)	4-0408-1,2	(Mar-80)
I-IV-13,14	(Mar-80)	2-0250-7,8	(Jul-79)	4-0409-1,2	(Mar-80)
I-IV-15,16	(Jul-79)	2-0250-9,10	(Feb-78)	4-0409-3,4	(Mar-80)
I-IV-17,18	(Jul-79)	2-0250-11,12	(Jul-79)	4-0409-5,6	(Mar-80)
I-IV-19,20	(Jul-79)	2-0250-13,14	(Feb-78)	4-0410-1,2	(Mar-80)
I-IV-21,22	(Jul-79)	2-0250-15,16	(Feb-78)	4-0413-1,2	(Mar-80)
I-IV-23,24	(Jul-79)	2-0250-17,18	(Jul-79)	4-0413-3,4	(Mar-80)
I-IV-25,26	(Mar-80)	2-0250-19,20	(Jul-79)	4-0413-5,6	(Mar-80)
I-IV-27,28	(Jul-79)	2-0260-1,2	(Mar-80)	4-0413-7,8	(Mar-80)
I-IV-29,30	(Jul-79)	2-0260-3,4	(Mar-80)	4-0413-9,10	(Mar-80)
I-IV-31,32	(Jul-79)	2-0260-5,6	(Jul-79)	4-0413-11,12	(Mar-80)
I-IV-33,34	(Jul-79)	2-0260-7,8	(Mar-80)	4-0413-13,14	(Mar-80)
I-IV-35,36	(Mar-80)	2-0260-9,10	(Jul-79)	4-0413-15,16	(Mar-80)
I-IV-37,38	(Mar-80)	2-0260-11,12	(Mar-80)	4-0413-17,18	(Mar-80)
I-IV-39,40	(Jul-79)	2-0260-13,14	(Mar-80)	4-0413-19,20	(Mar-80)
I-IV-41,42	(Jul-79)	2-0260-15,16	(Mar-80)	4-0414-1,2	(Mar-80)
I-V-1,2	(Jul-79)	2-0260-17,18	(Mar-80)	4-0416-1,2	(Mar-80)
		2-0260-19,20	(Mar-80)	4-0416-3,4	(Mar-80)
1-0130-1,2	(Jul-79)	2-0260-21,22	(Mar-80)	4-0416-5,6	(Mar-80)
1-0130-3,4	(Feb-78)	2-0260-23,24	(Jul-79)	4-0416-7,8	(Mar-80)
1-0130-5,6	(Jul-79)	2-0299-1,2	(Feb-78)	4-0417-1,2	(Mar-80)
1-0130-7,8	(Feb-78)	2-0299-3,4	(Feb-78)	4-0417-3,4	(Mar-80)
1-0130-9,10	(Mar-80)	2-0299-5,6	(Feb-78)	4-0418-1,2	(Mar-80)
1-0130-11,12	(Jul-79)	2-0299-7,8	(Feb-78)	4-0419-1,2	(Mar-80)
1-0130-13,14	(Jul-79)	2-0299-9,10	(Mar-80)	4-0420-1,2	(Mar-80)
1-0130-15,16	(Feb-78)			4-0421-1,2	(Mar-80)
1-0130-17,18	(Feb-78)	4-0400-1,2	(Mar-80)	4-0421-3,4	(Mar-80)
1-0130-19,20	(Feb-78)	4-0400-3,4	(Mar-80)	4-0422-1,2	(Mar-80)
1-0130-21,22	(Feb-78)	4-0400-5,6	(Mar-80)	4-0422-3,4	(Mar-80)
1-0130-23,24	(Jul-79)	4-0400-7,8	(Mar-80)	4-0422-5,6	(Mar-80)
1-0130-25,26	(Jul-79)	4-0400-9,10	(Mar-80)	4-0422-7,8	(Mar-80)

Vertical lines indicate pages included in this revision
 *Remove these pages from manual.

COMPLETE PAGE LISTING WITH LATEST DATE LINES—Continued

4-0422-9,10	(Mar-80)	16-1672-5,6	(Feb-78)	20-2003-1,2	(Feb-78)
4-0423-1,2	(Mar-80)	16-1672-7,8	(Feb-78)	20-2003-3,4	(Feb-78)
4-0429-1,2	(Mar-80)	16-1672-9,10	(Feb-78)	20-2004-1,2	(Feb-78)
4-0429-3,4	(Mar-80)	16-1672-11,12	(Feb-78)		
4-0433-1,2	(Mar-80)	16-1673-1,2	(Feb-78)	33-3301-1,2	(Mar-80)
4-0499-1,2	(Mar-80)	16-1674-1,2	(Feb-78)	33-3301-3,4	(Feb-78)
4-0499-3,4	(Mar-80)	16-1674-3,4	(Jul-79)	33-3301-5,6	(Feb-78)
4-0499-5,6	(Mar-80)	16-1675-1,2	(Jul-79)	33-3302-1,2	(Feb-78)
4-0499-7,8	(Mar-80)	16-1676-1,2	(Feb-78)	33-3302-3,4	(Feb-78)
4-0499-9,10	(Mar-80)	16-1676-3,4	(Jul-79)	33-3315-1,2	(Mar-80)
4-0499-11,12	(Mar-80)	16-1676-5,6	(Jul-79)	33-3315-3,4	(Mar-80)
4-0499-13,14	(Mar-80)	16-1699-1,2	(Feb-78)	33-3315-5,6	(Feb-78)
4-0499-15,16	(Mar-80)	16-1699-3,4	(Mar-80)	33-3315-7,8	(Mar-80)
4-0499-17,18	(Mar-80)	16-1699-5,6	(Feb-78)	33-3315-9,10	(Feb-78)
4-0499-19,20	(Mar-80)			33-3340-1,2	(Mar-80)
4-0499-21,22	(Mar-80)	17-1740-1,2	(Mar-80)	33-3340-3,4	(Feb-78)
4-0499-23,24	(Mar-80)	17-1740-3,4	(Feb-78)	33-3340-5,6	(Mar-80)
4-0499-25,26	(Mar-80)	17-1740-5,6	(Feb-78)	33-3340-7,8	(Mar-80)
4-0499-27,28	(Mar-80)	17-1749-1,2	(Mar-80)	33-3340-9,10	(Mar-80)
4-0499-29,30	(Mar-80)	17-1749-3,4	(Feb-78)	33-3360-1,2	(Mar-80)
4-0499-31,32	(Mar-80)	17-1749-5,6	(Mar-80)	33-3360-3,4	(Mar-80)
4-0499-33,34	(Mar-80)			33-3360-5,6	(Mar-80)
4-0499-35,36	(Mar-80)	18-1810-1,2	(Mar-80)	33-3360-7,8	(Mar-80)
4-0499-37,38	(Mar-80)	18-1810-3,4	(Feb-78)	33-3360-9,10	(Mar-80)
4-0499-39,40	(Mar-80)	18-1810-5,6	(Feb-78)	33-3360-11,12	(Mar-80)
4-0499-41,42	(Mar-80)	18-1810-7,8	(Feb-78)	33-3360-13,14	(Mar-80)
4-0499-43,44	(Mar-80)	18-1810-9,10	(Mar-80)	33-3360-15,16	(Mar-80)
4-0499-45,46	(Mar-80)	18-1830-1,2	(Feb-78)	33-3360-17,18	(Mar-80)
4-0499-47,48	(Mar-80)	18-1830-3,4	(Mar-80)	33-3360-19,20	(Mar-80)
		18-1830-5,6	(Mar-80)	33-3360-21,22	(Mar-80)
5-0505-1,2	(Feb-78)	18-1830-7,8	(Mar-80)	33-3360-23,24	(Mar-80)
5-0505-3,4	(Feb-78)	18-1830-9,10	(Mar-80)	33-3360-25,26	(Mar-80)
5-0505-5,6	(Feb-78)	18-1830-11,12	(Mar-80)	33-3360-27,28	(Mar-80)
5-0510-1,2	(Mar-80)	18-1830-13,14	(Mar-80)	33-3360-29,30	(Mar-80)
5-0510-3,4	(Mar-80)	18-1830-15,16	(Mar-80)	33-3360-31,32	(Mar-80)
5-0515-1,2	(Feb-78)	18-1830-17,18	(Mar-80)	33-3360-33,34	(Mar-80)
5-0520-1,2	(Feb-78)	18-1830-19,20	(Mar-80)	33-3360-35,36	(Mar-80)
5-0540-1,2	(Jul-79)	18-1830-21,22	(Mar-80)	33-3360-37,38	(Mar-80)
5-0560-1,2	(Feb-78)	18-1830-23,24	(Mar-80)	33-3360-39,40	(Mar-80)
5-0560-3,4	(Feb-78)	18-1830-25,26	(Mar-80)	33-3360-41,42	(Mar-80)
5-0599-1,2	(Feb-78)	18-1830-27,28	(Mar-80)	33-3399-1,2	(Mar-80)
		18-1830-29,30	(Mar-80)	33-3399-3,4	(Mar-80)
13-1370-1,2	(Feb-78)	18-1830-31,32	(Mar-80)	33-3399-5,6	(Mar-80)
13-1370-3,4	(Feb-78)	18-1899-1,2	(Mar-80)	33-3399-7,8	(Mar-80)
		18-1899-3,4	(Mar-80)		
16-1671-1,2	(Feb-78)	19-1910-1,2	(Feb-78)	43-4311-1,2	(Feb-78)
16-1671-3,4	(Feb-78)	19-1910-3,4	(Mar-80)	43-4311-3,4	(Mar-80)
16-1671-5,6	(Feb-78)	19-1913-1,2	(Feb-78)	43-4311-5,6	(Mar-80)
16-1671-7,8	(Mar-80)	19-1921-1,2	(Feb-78)	43-4350-1,2	(Jul-79)
16-1672-1,2	(Feb-78)	19-1927-1,2	(Mar-80)	43-4350-3,4	(Feb-78)
16-1672-3,4	(Feb-78)	19-1927-3,4	(Mar-80)		

Vertical lines indicate pages included in this revision.

COMPLETE PAGE LISTING WITH LATEST DATE LINES—Continued

43-4350-5,6	(Jul-79)	90-9020-1,2	(Feb-78)	90-9035-3,4	(Jul-79)
43-4350-7,8	(Feb-78)	90-9020-3,4	(Feb-78)	90-9035-5,6	(Jul-79)
43-4350-9,10	(Feb-78)	90-9020-5,6	(Feb-78)	90-9035-7,8	(Jul-79)
43-4350-11,12	(Jul-79)	90-9020-7,8	(Feb-78)	90-9035-9,10	(Jul-79)
43-4350-13,14	(Jul-79)	90-9020-9,10	(Feb-78)	90-9035-11,12	(Mar-80)
43-4360-1,2	(Mar-80)	90-9025-1,2	(Mar-80)	90-9035-13,14	(Mar-80)
43-4360-3,4	(Mar-80)	90-9025-3,4	(Jul-79)	90-9035-15,16	(Mar-80)
43-4360-5,6	(Mar-80)	90-9025-5,6	(Feb-78)	90-9035-17,18	(Mar-80)
43-4360-7,8	(Mar-80)	90-9025-7,8	(Mar-80)	90-9035-19,20	(Mar-80)
43-4360-9,10	(Mar-80)	90-9025-9,10	(Mar-80)		
43-4360-11,12	(Mar-80)	90-9025-11,12	(Mar-80)		
43-4399-1,2	(Feb-78)	90-9025-13,14	(Mar-80)		
43-4399-3,4	(Mar-80)	90-9025-15,16	(Mar-80)		
43-4399-5,6	(Feb-78)	90-9025-17,18	(Mar-80)		
43-4399-7,8	(Feb-78)	90-9025-19,20	(Mar-80)		
43-4399-9,10	(Feb-78)	90-9025-21,22	(Mar-80)		
		90-9025-23,24	(Mar-80)		
90-9005-1,2	(Mar-80)	90-9025-25,26	(Mar-80)		
90-9005-3,4	(Feb-78)	90-9025-27,28	(Mar-80)		
90-9010-1,2	(Mar-80)	90-9025-29,30	(Mar-80)		
90-9010-3,4	(Feb-78)	90-9025-31,32	(Mar-80)		
90-9010-5,6	(Feb-78)	90-9025-33,34	(Mar-80)		
90-9010-7,8	(Feb-78)	90-9025-35,36	(Mar-80)		
90-9010-9,10	(Feb-78)	90-9025-37,38	(Mar-80)		
90-9010-11,12	(Feb-78)	90-9025-39,40	(Mar-80)		
90-9010-13,14	(Mar-80)	90-9025-41,42	(Mar-80)		
90-9010-15,16	(Mar-80)	90-9025-43,44	(Mar-80)		
90-9010-17,18	(Mar-80)	90-9025-45,46	(Mar-80)		
90-9015-1,2	(Mar-80)	90-9025-47,48	(Mar-80)		
90-9015-3,4	(Feb-78)	90-9025-49,50	(Mar-80)		
90-9015-5,6	(Mar-80)	90-9025-51,52	(Mar-80)		
90-9015-7,8	(Mar-80)	90-9025-53,54	(Mar-80)		
90-9015-9,10	(Mar-80)	90-9025-55,56	(Mar-80)		
90-9015-11,12	(Mar-80)	90-9025-57,58	(Mar-80)		
90-9015-13,14	(Mar-80)	90-9025-59,60	(Mar-80)		
90-9015-15,16	(Mar-80)	90-9030-1,2	(Jul-79)		
90-9015-17,18	(Mar-80)	90-9030-3,4	(Jul-79)		
90-9015-19,20	(Mar-80)	90-9030-5,6	(Mar-80)		
90-9015-21,22	(Mar-80)	90-9031-1,2	(Mar-80)		
90-9015-23,24	(Mar-80)	90-9031-3,4	(Feb-78)		
90-9015-25,26	(Mar-80)	90-9031-5,6	(Mar-80)		
90-9015-27,28	(Mar-80)	90-9031-7,8	(Mar-80)		
90-9015-29,30	(Mar-80)	90-9031-9,10	(Mar-80)		
90-9015-31,32	(Mar-80)	90-9031-11,12	(Mar-80)		
90-9015-33,34	(Mar-80)	90-9031-13,14	(Mar-80)		
90-9015-35,36	(Mar-80)	90-9031-15,16	(Mar-80)		
90-9015-37,38	(Mar-80)	90-9031-17,18	(Mar-80)		
90-9015-39,40	(Mar-80)	90-9031-19,20	(Mar-80)		
90-9015-41,42	(Mar-80)	90-9031-21,22	(Mar-80)		
90-9015-43,44	(Mar-80)	90-9035-1,2	(Mar-80)		

Vertical lines indicate pages included in this revision