

**John Deere  
JD855  
Crawler Loader**



**TECHNICAL MANUAL**

**TM-1165**

Litho in U.S.A. (T) New



## Technical Manual TM-1165 (Jun-84)

### SECTIONAL CONTENTS OF THIS MANUAL

|                                         |       |
|-----------------------------------------|-------|
| Section I - General Information         | _____ |
| Section 1 - Wheels (Tracks)             | _____ |
| Section 2 - Axles and Suspension System | _____ |
| Section 3 - Transmission                | _____ |
| Section 4 - Engine                      | _____ |
| Section 5 - Engine Auxiliary Systems    | _____ |
| Section 6 - Torque Converter            | _____ |
| Section 7 - Traction (Engine) Clutch    | _____ |
| Section 8 - Transfer Drive              | _____ |
| Section 9 - Steering Systems            | _____ |
| Section 10 - Service Brakes             | _____ |
| Section 11 - Parking - Emergency Brakes | _____ |
| Section 13 - Miscellaneous Vehicle      | _____ |
| Section 15 - Equipment Attaching        | _____ |

*Continued on page 3*

Copyright© 1984 DEERE & COMPANY  
Moline, Illinois  
All Rights Reserved  
Previous Editions  
Copyright© 1979 DEERE & COMPANY  
Copyright© 1978 DEERE & COMPANY



**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**





## SECTIONAL CONTENTS—Continued

|                                                 |          |    |
|-------------------------------------------------|----------|----|
| Section 40 - PTO or Winch Drive                 |          | 40 |
| Section 41 - Misc. Function Mechanical Drive    | NOT USED | 41 |
| Section 42 - Ground Conditioning Tool           |          | 42 |
| Section 43 - Swing, Rotation or Pivoting System | NOT USED | 43 |
| Section 44 - Cutting Mechanism                  | NOT USED | 44 |
| Section 45 - Forklifts                          | NOT USED | 45 |
| Section 46 - Automatic Control                  | NOT USED | 46 |
| Section 90 - System Testing                     |          | 90 |

*The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.*



## SECTION AND GROUP CONTENTS OF THIS MANUAL

### SECTION I - GENERAL INFORMATION

- Group I - Contents and Index
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Predelivery, Delivery and After-Sale Services
- Group V - Fuels and Lubricants

### SECTION 1 - TRACKS

- Group 0130 - Track Systems
- Group 0199 - Specifications and Special Tools

### SECTION 2 - AXLES AND SUSPENSION SYSTEMS

- Group 0201 - Drive Axle Housing and Support
- Group 0250 - Axle Shaft, Bearings and Reduction Gears
- Group 0299 - Specifications and Special Tools

### SECTION 3 - TRANSMISSION

- Group 0315 - Controls
- Group 0325 - Input Drive Shafts and U-Joints
- Group 0360 - Hydraulic System
- Group 0370 - Clutch Disconnect and Controls
- Group 0399 - Specifications and Special Tools

### SECTION 4 - ENGINE

- Group 0400 - Engine Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block
- Group 0407 - Oiling System
- Group 0408 - Ventilating System
- Group 0409 - Cylinder Head and Valves
- Group 0410 - Exhaust Manifold
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0416 - Turbocharger
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housings and Piping
- Group 0419 - Oil Cooler
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting Motor
- Group 0423 - Alternator and Generator Mounting
- Group 0429 - Fan Drive
- Group 0433 - Flywheel, Housing and Fasteners
- Group 0499 - Specifications and Special Tools

### SECTION 5 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling System
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0530 - External Exhaust System
- Group 0540 - Mounting Frame
- Group 0560 - External Fuel Supply System
- Group 0599 - Specifications and Special Tools

### SECTION 8 - TRANSFER DRIVE

- Group 0841 - Housing and Covers
- Group 0851 - Gears, Shafts, Bearings
- Group 0899 - Specifications and Special Tools

### SECTION 11 - PARKING-EMERGENCY BRAKE

- Group 1111 - Active Elements
- Group 1115 - Controls Linkage
- Group 1160 - Parking Brake Hydraulic
- Group 1199 - Specifications and Special Tools

### SECTION 15 - EQUIPMENT ATTACHING

- Group 1511 - Drawbar
- Group 1512 - Towbar

### SECTION 16 - ELECTRICAL SYSTEM

- Group 1671 - Batteries, Supports and Cables
- Group 1672 - Alternator, Regulator and Charging System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1675 - System Controls
- Group 1676 - Instruments and Indicators
- Group 1699 - Specifications and Special Tools

### SECTION 17 - FRAME, CHASSIS OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1746 - Frame Bottom Guards
- Group 1749 - Chassis Weights

### SECTION 18 - OPERATOR'S STATION

- Group 1810 - Operator Enclosure
- Group 1821 - Seat
- Group 1830 - Heating and Air Conditioning
- Group 1899 - Specifications and Special Tools

## **SECTION AND GROUP CONTENTS OF THIS MANUAL—Continued**

### **SECTION 19 - SHEET METAL AND STYLING**

- Group 1910 - Hood or Engine Enclosures
- Group 1913 - Miscellaneous Shields
- Group 1921 - Grille and Grille Housing
- Group 1927 - Fenders

### **SECTION 20 - SAFETY, CONVENIENCE AND MISCELLANEOUS**

- Group 2003 - Fire Extinguisher
- Group 2004 - Horn and Warning Devices
- Group 2006 - Cigar Lighter

### **SECTION 31 - LOADER**

- Group 3102 - Buckets
- Group 3115 - Controls Linkage
- Group 3140 - Loader Frames
- Group 3160 - Hydraulic System
- Group 3199 - Specifications and Special Tools

### **SECTION 40 - PTO OR WINCH DRIVE**

- Group 4041 - Housing and Covers

### **SECTION 42 - GROUND CONDITIONING TOOL**

- Group 4215 - Controls Linkage
- Group 4260 - Hydraulic System

### **SECTION 90 - SYSTEM TESTING**

- Group 9005 - General Information - Seven Basic Steps of Testing and Diagnosis
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9020 - Power Train
- Group 9025 - Hydraulic System (Flow Meter)
- Group 9025A - Hydraulic System (Analyzer)
- Group 9026 - Hydrostatic System
- Group 9030 - Miscellaneous Components
- Group 9031 - Heating and Air Conditioning
- Group 9035 - Specifications and Special Tools

## ALPHABETICAL INDEX

### A

After-sale inspection ..... I-IV-16 - I-IV-28  
Air cleaner ..... I-IV-20  
Air intake hose ..... I-IV-20  
Alternator-fan compressor  
  belt tension ..... I-IV-20 - I-IV-22  
Batteries ..... I-IV-26  
Cab air filter ..... I-IV-25  
Charging system ..... I-IV-27  
Engine coolant conditioner  
  filter ..... I-IV-22  
Engine crankcase oil and  
  filter element ..... I-IV-17  
Final drive housing oil level ..... I-IV-19  
Fluid leakage ..... I-IV-28  
Fuel tank sump ..... I-IV-23  
Hydraulic brake (park brake) ..... I-IV-28  
Hydraulic oil level ..... I-IV-18  
Hydrostatic transmission  
  oil level ..... I-IV-18  
Indicator lights and gauges ..... I-IV-26 - I-IV-27  
Lubrication ..... I-IV-25  
Radiator coolant level ..... I-IV-22  
Splitter gearbox oil level ..... I-IV-19  
Track shoe cap screws ..... I-IV-25  
Track tension adjustment ..... I-IV-23 - I-IV-24  
Air conditioning relay ..... 1674-4  
Air conditioning system ..... 1830-5 - 1830-30  
  Blower motor ..... 1830-29  
  Components ..... 1830-30  
  Compressor ..... 1830-5 - 1830-20  
Compressor relief valve ..... 1830-26  
Condenser ..... 1830-21 - 1830-22  
Evaporator ..... 1830-24  
Expansion valve ..... 1830-25  
High temperature switch ..... 1830-28  
Receiver - dryer ..... 1830-23  
Superheat shut-off switch ..... 1830-27  
Thermal fuse ..... 1830-27  
Thermostatic temperature control  
  switch ..... 1830-25 - 1830-26  
Air conditioning system testing ... 9031-2 - 9031-19  
  Component location ..... 9031-2 - 9031-3  
  Diagnosing malfunctions ..... 9031-8  
  Diagnosis flow chart ..... 9031-10  
  Operational diagnostic chart ..... 9031-9  
  Safety precautions ..... 9031-11  
  Schematic ..... 9031-11

### Air conditioning system testing—Continued

System service ..... 9031-12 - 9031-19  
  Adding refrigerant - 12 to  
    system ..... 9031-18  
  Charging system ..... 9031-16 - 9031-17  
  Discharging system ..... 9031-14  
  Electrical testing ..... 9031-14  
  Evacuating system ..... 9031-15  
  Flushing system components ..... 9031-19  
  Inspecting refrigerant  
    hoses and tubing ..... 9031-20  
  Leak testing ..... 9031-19  
  Operational test ..... 9031-14  
  Purging the system ..... 9031-20  
  Pressure gauges ..... 9031-12 - 9031-13  
  Visual operating checks ..... 9031-7  
  Visual preliminary checks ..... 9031-7  
Air intake system, engine ..... 0520-1 - 0520-2  
Air restriction indicator ..... 1676-2  
Alarm, reverse warning ..... 2004-2  
Alternator, 16 amp ..... 1672-2 - 1672-13  
  Components ..... 1672-4  
  Test after assembly ..... 1672-13  
Alternator, 50 amp ..... 1672-14 - 1672-26  
  Components ..... 1672-16  
Automatic control valve shut-  
  off valve control ..... 0315-13 - 0315-14  
Automatic control valve variable  
  orifice linkage ..... 0315-10 - 0315-11  
Axle shaft, bearings, and  
  reduction gears ..... 0250-1 - 0250-18  
  Components ..... 0250-1  
  Final drive housing cover with  
    gears and shafts ..... 0250-12 - 0250-18  
  Planet housing with pinions and  
    shafts ..... 0250-2 - 0250-11  
Axles and suspension systems:  
  Axle shaft, bearings and reduc-  
    tion gears ..... 0250-1 - 0250-18  
  Drive axle housing and support .. 0201-3 - 0201-6

### B

Batteries, support and cables ..... 1671-3 - 1671-7  
  Charging battery ..... 1671-7  
  Inspection ..... 1671-4 - 1671-5  
  Testing ..... 1671-5 - 1671-6  
Battery disconnect switch ..... 1674-2  
Block, cylinder ..... 0404-1 - 0404-6  
Blower motor ..... 1830-29

Brake valve ..... 1160-1 - 1160-4  
Brakes, parking-emergency  
    Active elements ..... 1111-3 - 1111-5  
    Controls linkage ..... 1115-1 - 1115-2  
    Hydraulic system ..... 1160-1 - 1160-4  
Brush shields ..... 1910-6  
Buckets ..... 3102-3 - 3102-4  
Bypass valve, transmission ..... 0360-38 - 0360-39

## C

Cab ..... 1810-3 - 1810-5  
Cab relay ..... 1674-4  
Camshaft and valve actuating  
    means ..... 0402-1 - 0402-4  
Carrier rollers ..... 0130-4 - 0130-7  
Chain, track ..... 0130-13 - 0130-22  
Charge pump ..... 0360-31 - 0360-32  
Chassis weights ..... 1749-1  
Cigar, lighter ..... 2006-1  
Circuit breakers ..... 1674-5  
Clutch disconnect and controls ..... 0370-1 - 0370-6  
    Clutch elements ..... 0370-3 - 0370-6  
    Controls ..... 0370-1 - 0370-2  
Cold weather starting aids ..... 0505-3 - 0505-5  
    Engine coolant heater ..... 0505-5  
    Starting aid adapter, line  
        and nozzle ..... 0505-4  
    Starting aid solenoid ..... 0505-3 - 0505-4  
    Starting aid switch ..... 0505-4  
Component location:  
    Air conditioning system ..... 9031-2 - 9031-3  
    Electrical system ..... 9015-2 - 9015-5  
    Engine system ..... 9010-2 - 9010-4  
    Heating system ..... 9031-2 - 9031-3  
    Hydraulic system (flow meter) ..... 9025-3  
    Power train system ..... 9020-2 - 9020-3  
Compressor ..... 1830-5 - 1830-20  
Compressor relief valve ..... 1830-26  
Condenser ..... 1830-21 - 1830-22  
Connecting rods and pistons ..... 0403-1 - 0403-6  
Control valve, loader ..... 3160-13 - 3160-21  
Controls linkage, double selector  
    valve ..... 4215-3  
Coolant filter/conditioner ..... 0510-1 - 0510-3  
Cooling systems, engine ..... 0510-1 - 0510-4  
Cover, PTO ..... 4041-3  
Cowl ..... 1910-4  
Crankshaft and main bearings ..... 0401-1 - 0401-7  
    Installation ..... 0401-4 - 0401-7  
Cylinder block ..... 0404-1 - 0404-6

Cylinder, loader ..... 3160-22 - 3160-32  
Cylinder head and valves ..... 0409-1 - 0409-6  
Cylinder, track adjuster ..... 0130-29 - 0130-31

## D

Delco-Remy starting motor ..... 0422-1 - 0422-10  
Delivery service ..... I-IV-16  
Diagnosing malfunctions:  
    Air conditioning system ..... 9031-8  
    Electrical system ..... 9015-8 - 9015-10  
    Engine system ..... 9010-5 - 9010-7  
    Heating system ..... 9031-1  
    Hydraulic system (flow meter) ..... 9025-21 - 9025-23  
    Power train system ..... 9020-10 - 9020-11  
    Track ..... 9030-1  
Double selector valve ..... 4260-1  
Double selector valve control linkage ..... 4215-3  
Drawbar ..... 1511-3  
    Components ..... 1511-3  
Drive axle housing and support ..... 0201-3 - 0201-6

## E

Electrical sensing gauges and  
    indicators ..... 1676-4 - 1676-6  
Electrical system testing ..... 9015-1 - 9015-32  
    Block diagram ..... 9015-6  
    Component location ..... 9015-2 - 9015-5  
    Diagnosing malfunctions ..... 9015-8 - 9015-10  
    Precautions ..... 9015-11 - 9015-12  
    Schematic ..... 9015-7, 9015-31  
    Testing and adjustments ..... 9015-13 - 9015-30  
    Visual inspection ..... 9015-12  
    Wiring diagram ..... 9015-7, 9015-32  
Electrical systems:  
    Alternator, regulator and  
        charging system wiring ..... 1672-1 - 1672-26  
    Batteries, support and cables ..... 1671-3 - 1671-7  
    Instruments and indicators ..... 1676-1 - 1676-6  
    Lighting system ..... 1673-1 - 1673-2  
    System controls ..... 1675-1 - 1675-2  
    Wiring harness and switches ..... 1674-1 - 1674-6  
Engine:  
    Camshaft and valve actuating  
        means ..... 0402-1 - 0402-4  
    Connecting rods and pistons ..... 0403-1 - 0403-6  
    Crankshaft and main bearings ..... 0401-1 - 0401-7  
    Cylinder block ..... 0404-1 - 0404-6  
    Cylinder head and valves ..... 0409-1 - 0409-6  
    Engine balancer ..... 0415-1 - 0415-2  
    Exhaust manifold ..... 0410-1 - 0410-2  
    Fan drive ..... 0429-1  
    Flywheel, housing and  
        fastenings ..... 0433-1 - 0433-2

## Engine—Continued

|                                                |                  |
|------------------------------------------------|------------------|
| Fuel filter .....                              | 0420-1 - 0420-2  |
| Fuel injection system .....                    | 0413-1 - 0413-11 |
| Fuel transfer pump .....                       | 0421-1 - 0421-4  |
| Intake manifold .....                          | 0414-1 - 0414-2  |
| Oil cooler .....                               | 0419-1 - 0419-2  |
| Oiling system .....                            | 0407-1 - 0407-5  |
| Removal and installation .....                 | 0400-5 - 0400-8  |
| Starting motor and fastenings ..               | 0422-1 - 0422-10 |
| Thermostats, housing and water<br>piping ..... | 0418-1 - 0418-2  |
| Turbocharger .....                             | 0416-1 - 0416-8  |
| Ventilating system .....                       | 0408-1           |
| Water pump .....                               | 0417-1 - 0417-6  |

## Engine auxiliary systems:

|                                        |                   |
|----------------------------------------|-------------------|
| Cold weather starting aids .....       | 0505-3 - 0505-5   |
| Cooling systems .....                  | 0510-1 - 0510-3   |
| External exhaust systems .....         | 0530-1            |
| External fuel supply systems .....     | 0560-1 - 0560-2   |
| Intake system .....                    | 0520-1 - 0520-2   |
| Mounting frame .....                   | 0540-1            |
| Speed controls .....                   | 0515-1 - 0515-6   |
| Engine coolant temperature gauge ..... | 1676-2            |
| Engine oil pressure gauge .....        | 1676-3            |
| Engine side shields .....              | 1910-5            |
| Engine system testing .....            | 9010-1 - 9010-14  |
| Component location .....               | 9010-2 - 9010-4   |
| Diagnosing malfunctions .....          | 9010-5 - 9010-7   |
| Testing and adjustments .....          | 9010-10 - 9010-14 |
| Theory of operation .....              | 9010-1            |
| Visual inspection .....                | 9010-8 - 9010-9   |
| Evaporator .....                       | 1830-24           |
| Exhaust manifold .....                 | 0410-1 - 0410-2   |
| Exhaust systems, engine .....          | 0530-1            |
| Expansion valve .....                  | 1830-25           |
| External exhaust system .....          | 0530-1            |
| Extinguisher, fire .....               | 2003-3 - 2003-4   |

## F

|                                     |                 |
|-------------------------------------|-----------------|
| Fan drive .....                     | 0429-1          |
| Fenders .....                       | 1927-1          |
| Filter, fuel .....                  | 0420-1 - 0420-2 |
| Filters, transmission .....         | 0360-109        |
| Fire extinguisher .....             | 2003-3 - 2003-4 |
| Flywheel, housing and fastenings .. | 0433-1 - 0433-2 |

|                                      |                   |
|--------------------------------------|-------------------|
| Forward and reverse speed control .. | 0315-6 - 0315-9   |
| Frame bottom guards .....            | 1746-1            |
| Frame, engine mounting .....         | 0540-1            |
| Frame, loader .....                  | 3140-1 - 3140-2   |
| Frame, main .....                    | 1740-3 - 1740-4   |
| Frame, track .....                   | 0130-33 - 0130-36 |
| Front idler .....                    | 0130-23 - 0130-28 |
| Fuel filter .....                    | 0420-1 - 0420-2   |
| Fuel injection system .....          | 0413-1 - 0413-11  |
| Fuel injection nozzles .....         | 0413-8 - 0413-11  |
| Fuel injection pump .....            | 0413-1 - 0413-7   |
| Fuel tank, engine .....              | 0560-1 - 0560-2   |
| Fuel transfer pump .....             | 0421-1 - 0421-4   |
| Fuses .....                          | 1674-6            |

## G

|                                                |                 |
|------------------------------------------------|-----------------|
| Gauge, engine coolant temperature .....        | 1676-2          |
| Gauge, engine oil pressure .....               | 1676-3          |
| Gauge, transmission oil pressure .....         | 1676-1          |
| Gauge, transmission oil tem-<br>perature ..... | 1676-2          |
| Greases .....                                  | I-V-2           |
| Grille and grille housing .....                | 1921-1 - 1921-2 |
| Guard, frame bottom .....                      | 1746-1          |
| Guard, rock .....                              | 1913-2          |

## H

|                                                |                    |
|------------------------------------------------|--------------------|
| Heating system .....                           | 1830-1 - 1830-3    |
| Heating system testing .....                   | 9031-1 - 9031-3    |
| High temperature switch .....                  | 1830-28            |
| Hood .....                                     | 1910-3             |
| Horn .....                                     | 2004-1             |
| Hour meter .....                               | 1676-4             |
| Hydraulic oil filter indicator .....           | 1676-5             |
| Hydraulic system (analyzer)<br>testing .....   | 9025A-1 - 9025A-11 |
| Hydraulic system pretest check<br>sheet .....  | 9025A-4            |
| Operational checks .....                       | 9025A-3            |
| Pretest inspection .....                       | 9025A-3            |
| Symptom index .....                            | 9025A-5            |
| Tests .....                                    | 9025A-6 - 9025A-11 |
| Hydraulic system (flow meter)<br>testing ..... | 9025-1 - 9025-28   |
| Component location .....                       | 9025-3             |
| Diagnosing malfunctions .....                  | 9025-21 - 9025-23  |
| Testing and adjustment .....                   | 9025-24 - 9025-28  |
| Theory of operation .....                      | 9025-5 - 9025-19   |
| Visual inspection .....                        | 9025-20            |

|                                                                           |                     |
|---------------------------------------------------------------------------|---------------------|
| Hydraulic system, hydrostatic transmission .....                          | 0360-1 - 0369-110   |
| Hydraulic system, parking-emergency brakes .....                          | 1160-1 - 1160-4     |
| Hydrostatic system testing .....                                          | 9026-2 - 9026-155   |
| Adjustment procedures .....                                               | 9026-111 - 9026-155 |
| Automatic control valve P4 pressure adjustment .....                      | 9026-131 - 9026-132 |
| Automatic control valve variable orifice installation adjustment .....    | 9026-125 - 9026-126 |
| Automatic control valve variable orifice pressure adjustment .....        | 9026-127 - 9026-128 |
| Bleeding of the transmission control circuit .....                        | 9026-138 - 9026-140 |
| Brake valve cable adjustment .....                                        | 9026-114            |
| Engine speed adjustment .....                                             | 9026-153            |
| Engine speed and transmission control valve synchronization .....         | 9026-117 - 9026-120 |
| FNR speed control lever linkage neutral adjustment .....                  | 9026-115 - 9026-116 |
| Initial start-up of crawler after transmission repair .....               | 9026-113            |
| Pump displacement control valve neutral adjustment .....                  | 9026-154 - 9026-155 |
| Return-to-neutral cable adjustment .....                                  | 9026-148 - 9026-149 |
| Steering linkage adjustment .....                                         | 9026-143 - 9026-144 |
| Steering neutral stop adjustment .....                                    | 9026-145 - 9026-149 |
| Steering valve stop adjustment on the transmission control valve .....    | 9026-141 - 9026-142 |
| Transmission automatic control valve shutoff valve cable adjustment ..... | 9026-152            |
| Transmission control valve P1 overpressure relief valve adjustment .....  | 9026-123            |
| Transmission control valve P2 pressure regulating valve adjustment .....  | 9026-124            |
| Transmission control valve P3 speed control valve adjustment .....        | 9026-129 - 9026-132 |

|                                                      |                     |
|------------------------------------------------------|---------------------|
| Hydrostatic system testing—Continued                 |                     |
| Adjustment procedures—Continued                      |                     |
| Transmission fluid heat-up procedure .....           | 9026-121            |
| Transmission full speed adjustment .....             | 9026-135 - 9026-137 |
| Component location .....                             | 9026-36 - 9026-42   |
| Diagnosing malfunctions .....                        | 9026-43 - 9026-107  |
| Diagnostic equipment .....                           | 9026-44             |
| Diagnostic procedures .....                          | 9026-45 - 9026-72   |
| Automatic control valve accumulator (P9 check) ..... | 9026-70 - 9026-72   |
| Automatic control valve operational check .....      | 9026-66 - 9026-69   |
| Engine horsepower check .....                        | 9026-49 - 9026-50   |
| Transmission charge pressure loss isolation .....    | 9026-57 - 9026-58   |
| Transmission control system tracking check .....     | 9026-59 - 9026-65   |
| Transmission pressures test .....                    | 9026-55 - 9026-56   |
| Transmission volumetric efficiency test .....        | 9026-51 - 9026-54   |
| Diagnostic symptoms .....                            | 9026-73 - 9026-108  |
| Symptoms index .....                                 | 9026-74             |
| General Information .....                            | 9026-2 - 9026-34    |
| Brake valve .....                                    | 9026-32             |
| Hydrostatic transmission .....                       | 9026-2 - 9026-17    |
| Charge pump .....                                    | 9026-10             |
| Oil cooler bypass valve .....                        | 9026-33             |
| Transmission control valve .....                     | 9026-18 - 9026-32   |
| Visual inspection .....                              | 9026-34             |
| Hydrostatic transmission .....                       | 0360-1 - 0360-110   |
| Bypass valve .....                                   | 0360-38 - 0369-39   |
| Charge pump .....                                    | 0360-31 - 0360-32   |
| Cleanliness .....                                    | 0360-2              |
| Components .....                                     | 0360-1              |
| Hydrostatic transmission sump .....                  | 0360-108            |
| Installation .....                                   | 0360-4              |
| Manifold valve assembly .....                        | 0360-64 - 0360-67   |
| Motor displacement control valve .....               | 0360-61 - 0360-63   |
| Oil cooler .....                                     | 0360-103            |
| Oil cooler bypass valve .....                        | 0360-104 - 0360-105 |
| Pump displacement control valve .....                | 0360-33 - 0360-37   |
| Removal .....                                        | 0360-2 - 0360-3     |
| Repair .....                                         | 0360-4              |
| Start-up procedure .....                             | 0360-5              |

# Hydrostatic transmission—Continued

|                                     |                     |
|-------------------------------------|---------------------|
| Transmission control valve ..       | 0360-68 - 0360-102  |
| Assembly .....                      | 0360-86 - 0360-101  |
| Automatic control valve ..          | 0360-88 - 0360-90   |
| Automatic control valve             |                     |
| shutoff valve .....                 | 0360-87             |
| Automatic control valve             |                     |
| variable orifice .....              | 0360-92 - 0360-94   |
| FNR valve .....                     | 0360-99 - 0360-100  |
| P1 over pressure relief             |                     |
| valve .....                         | 0360-86             |
| P2 pressure regulator               |                     |
| valve .....                         | 0360-86             |
| Port plate and cover                |                     |
| assembly .....                      | 0360-101            |
| Speed control valve .....           | 0360-97 - 0360-98   |
| Steering valve .....                | 0360-95 - 0360-96   |
| Steering valve orifices .....       | 0360-91             |
| Disassembly .....                   | 0360-70 - 0360-84   |
| Automatic control valve ..          | 0360-73 - 0360-75   |
| Automatic control valve             |                     |
| shutoff valve .....                 | 0360-73             |
| Automatic control valve             |                     |
| variable orifice .....              | 0360-76 - 0360-77   |
| FNR valve .....                     | 0360-82 - 0360-83   |
| P1 over pressure relief valve ..... | 0360-72             |
| P2 pressure regulator valve .....   | 0360-72             |
| Speed control valve .....           | 0360-84             |
| Steering valve .....                | 0360-79 - 0360-81   |
| Steering valve orifices .....       | 0360-75             |
| Transmission control valve          |                     |
| assembly .....                      | 0360-78             |
| Transmission filters .....          | 0360-109            |
| Transmission motor .....            | 0360-40 - 0360-60   |
| Transmission operating pres-        |                     |
| sure valve .....                    | 0360-106 - 0360-107 |
| Transmission pump .....             | 0360-6 - 0360-30    |
| Hydrostatic transmission sump ..... | 0360-108            |

## I

|                                       |                   |
|---------------------------------------|-------------------|
| Idler, track .....                    | 0130-23 - 0130-28 |
| Input drive shafts and U-joints ..... | 0325-1 - 0325-2   |
| Instrument panel .....                | 1676-1            |
| Instruments and indicators .....      | 1676-1 - 1676-6   |
| Electrical sensing gauges             |                   |
| and indicators .....                  | 1676-4 - 1676-6   |
| Mechanical sensing gauges and         |                   |
| indicators .....                      | 1676-1 - 1676-3   |
| Intake manifold .....                 | 0414-1 - 0414-2   |
| Intake system, engine .....           | 0520-1 - 0520-2   |

## K

|                  |        |
|------------------|--------|
| Key switch ..... | 1674-3 |
|------------------|--------|

## L

|                                    |                   |
|------------------------------------|-------------------|
| Light switch .....                 | 1673-2            |
| Lighter, cigar .....               | 2006-1            |
| Lights .....                       | 1673-1            |
| Loader controls linkage .....      | 3115-1 - 3115-2   |
| Loader frames .....                | 3140-1 - 3140-2   |
| Loader hydraulic system .....      | 3160-1 - 3160-32  |
| Control valve .....                | 3160-13 - 3160-21 |
| Cylinders .....                    | 3160-22 - 3160-32 |
| Hydraulic fitting installation and |                   |
| service recommendations .....      | 3160-1 - 3160-3   |
| Loader pump .....                  | 3160-4 - 3160-9   |
| Oil cooler .....                   | 3160-12           |
| Reservoir and filters .....        | 3160-10 - 3160-11 |
| Loader mast and cab cover .....    | 1913-1            |
| Loader pump .....                  | 3160-4 - 3160-9   |
| Lubrication .....                  | I-V-1 - I-V-2     |

## M

|                                    |                   |
|------------------------------------|-------------------|
| Main bearings and crankshaft ..... | 0401-1 - 0401-7   |
| Main frame .....                   | 1740-3 - 1740-4   |
| Malfunctions, diagnosing:          |                   |
| Air conditioning system .....      | 9031-8            |
| Electrical system .....            | 9015-8 - 9015-10  |
| Engine system .....                | 9010-5 - 9010-7   |
| Heating system .....               | 9031-1            |
| Hydraulic system (flow meter)      | 9025-21 - 9025-23 |
| Power train system .....           | 9020-10 - 9020-11 |
| Track .....                        | 9030-1            |
| Manifold, exhaust .....            | 0410-1 - 0410-2   |
| Manifold, intake .....             | 0414-1 - 0414-2   |
| Manifold valve assembly .....      | 0360-64 - 0360-67 |
| Mechanical sensing gauges and      |                   |
| indicators .....                   | 1676-1 - 1676-3   |
| Motor, Delco-Remy starting .....   | 0422-1 - 0422-10  |
| Motor displacement control         |                   |
| valve .....                        | 0360-61 - 0360-63 |
| Motor, transmission .....          | 0360-40 - 0360-60 |
| Mounting frame, engine .....       | 0540-1            |
| Muffler .....                      | 0530-1            |

Nozzle, fuel injection . . . . . 0413-8 - 0413-11

|                                    |                     |
|------------------------------------|---------------------|
| Oil cooler bypass valve . . . . .  | 0360-104 - 0360-105 |
| Oil cooler, engine . . . . .       | 0419-1 - 0419-2     |
| Oil cooler, loader . . . . .       | 3160-12             |
| Oil cooler, transmission . . . . . | 0360-103            |
| Oiling system, engine . . . . .    | 0407-1 - 0407-5     |
| Oils . . . . .                     | I-V-2               |

|                                                      |                   |
|------------------------------------------------------|-------------------|
| Parking-emergency brakes:                            |                   |
| Active elements .....                                | 1111-3 - 1111-5   |
| Controls linkage .....                               | 1115-1 - 1115-2   |
| Hydraulic system .....                               | 1160-1 - 1160-4   |
| Pistons and connecting rods .....                    | 0403-1 - 0403-6   |
| Power train system testing .....                     | 9020-1 - 9020-12  |
| Adjustment .....                                     | 9020-12           |
| Block diagram .....                                  | 9020-9            |
| Component location .....                             | 9020-2 - 9020-3   |
| Diagnosing malfunctions .....                        | 9020-10 - 9020-11 |
| Parking brake and final<br>drive cross section ..... | 9020-8            |
| Theory of operation .....                            | 9020-5 - 9020-7   |
| Visual inspection .....                              | 9020-11           |
| Predelivery service .....                            | I-IV-1 - I-IV-15  |
| Air cleaner .....                                    | I-IV-1            |
| Air intake hose .....                                | I-IV-2            |
| Alternator - fan compressor<br>belt tension .....    | I-IV-6 - I-IV-7   |
| Batteries .....                                      | I-IV-2            |
| Crankcase oil level .....                            | I-IV-3            |
| Engine speeds .....                                  | I-IV-7 - I-IV-10  |
| Final check .....                                    | I-IV-15           |
| Final drive housing oil level .....                  | I-IV-5            |
| Fuel filters .....                                   | I-IV-2            |
| Fuel tank .....                                      | I-IV-2            |
| Fuel tank sump .....                                 | I-IV-3            |
| Hardware torque valves .....                         | I-IV-15           |
| Hydraulic brake (park brake) .....                   | I-IV-13           |
| Hydraulic oil level .....                            | I-IV-6            |
| Hydrostatic transmission oil<br>level .....          | I-IV-5            |
| Injection pump .....                                 | I-IV-14           |
| Indicator lights and gauges .....                    | I-IV-11 - I-IV-12 |
| Lights .....                                         | I-IV-12 - I-IV-13 |
| Lubrication .....                                    | I-IV-14           |

|                                                                 |                   |
|-----------------------------------------------------------------|-------------------|
| Neutral lock lever operation .....                              | I-IV-14           |
| Radiator .....                                                  | I-IV-3            |
| Seat operation .....                                            | I-IV-10           |
| Splitter gearbox oil level .....                                | I-IV-4            |
| Steering .....                                                  | I-IV-13           |
| Track rollers, upper idlers<br>and front idler oil levels ..... | I-IV-4            |
| Track tension adjustment .....                                  | I-IV-10           |
| Transmission shifting .....                                     | I-IV-13           |
| PTO cover .....                                                 | 4041-3            |
| Pump displacement control valve 0360-33 - 0360-37               |                   |
| Pump, engine oil .....                                          | 0407-1 - 0407-4   |
| Pump, engine water .....                                        | 0417-1 - 0417-6   |
| Pump, fuel injection .....                                      | 0413-1 - 0413-7   |
| Pump, fuel transfer .....                                       | 0421-1 - 0421-4   |
| Pump, loader .....                                              | 3160-4 - 3160-9   |
| Pump, transmission .....                                        | 0360-6 - 0360-30  |
| Pump, transmission charge .....                                 | 0360-31 - 0360-32 |

|                                      |                           |
|--------------------------------------|---------------------------|
| Radiator .....                       | 0510-1 - 0510-3           |
| Receiver-dryer .....                 | 1830-22                   |
| Recoil spring .....                  | 0130-31 - 0130-33         |
| Relays .....                         | 1674-4                    |
| Reservoir and filters, loader ....   | 3160-10 - 3160-11         |
| Return-to-dig function .....         | 1675-1 - 1675-2           |
| Return to neutral linkage .....      | 0315-14                   |
| Reverse warning alarm .....          | 2004-2                    |
| Rock guards .....                    | 1913-2                    |
| Rock guards and track guides .....   | 0130-3                    |
| Rocker arm assembly .....            | 0402-2, 0402-3,<br>0409-2 |
| Roller, track .....                  | 0130-8 - 0130-11          |
| ROPS, windshield (without cab) ..... | 1810-6                    |
| ROPS, without cab .....              | 1810-7                    |

|                            |                 |
|----------------------------|-----------------|
| Safety information .....   | I-II-1 - I-II-7 |
| Seat .....                 | 1821-1 - 1821-5 |
| Service, delivery .....    | I-IV-16         |
| Shield, brush .....        | 1910-6          |
| Shield, engine side .....  | 1910-5          |
| Shoe, track .....          | 0130-12         |
| Side shields, engine ..... | 1910-5          |

### Special tools:

|                                                  |                   |
|--------------------------------------------------|-------------------|
| Air conditioning system                          | 1899-3 - 1899-4   |
| Alternator, regulator and charging system wiring | 1699-8 - 1699-9   |
| Batteries, support and cables                    | 1699-7            |
| Camshaft and valve actuating means               | 0499-28 - 0499-29 |
| Clutch disconnect and controls                   | 0399-21           |
| Connecting rods and pistons                      | 0499-30           |
| Crankshaft and main bearings                     | 0499-27           |
| Cylinder block                                   | 0499-31           |
| Cylinder head and valves                         | 0499-32 - 0499-33 |
| Drive axle housing and support                   | 0299-5 - 0299-6   |
| Electrical system testing                        | 9035-11           |
| Engine removal and installation                  | 0499-26           |
| Engine system testing                            | 9035-3 - 9035-5   |
| Fuel injection system                            | 0499-34 - 0499-36 |
| Heating and air conditioning system testing      | 9035-21           |
| Hydraulic system                                 | 0399-15 - 0399-20 |
| Hydraulic system testing                         | 9035-15 - 9035-16 |
| Hydrostatic system testing                       | 9035-19           |
| Loader frames                                    | 3199-5            |
| Starting motor and fastenings                    | 0499-39 - 0499-40 |
| Track systems                                    | 0199-6 - 0199-8   |
| Transfer drive gears                             |                   |
| shafts, bearings                                 | 0899-2            |
| Turbocharger                                     | 0499-37           |
| Water pump                                       | 0499-38           |

### Specifications and torque values

|                                                  |                   |
|--------------------------------------------------|-------------------|
| Air conditioning system                          | 1899-1 - 1899-2   |
| Alternator and generator mounting                | 0499-24           |
| Alternator, regulator and charging system wiring | 1699-1 - 1699-5   |
| Axle shaft, bearings and reduction gears         | 0299-2 - 0299-5   |
| Batteries, support and cables                    | 1699-1            |
| Camshaft and valve actuating means               | 0499-5 - 0499-7   |
| Center frame                                     | 1799-1            |
| Clutch disconnect and controls                   | 0399-14           |
| Connecting rods and pistons                      | 0499-8 - 0499-9   |
| Controls                                         | 0399-1            |
| Cooling systems, engine                          | 0599-1            |
| Crankshaft and main bearings                     | 0499-3 - 0499-4   |
| Cylinder block                                   | 0499-10 - 0499-11 |
| Cylinder head and valves                         | 0499-13 - 0499-17 |
| Drive axle housing and support                   | 0299-1            |
| Electrical system testing                        | 9035-6 - 9035-10  |
| Engine break-in                                  | 0499-1            |

### Specifications and torque values—Continued

|                                             |                   |
|---------------------------------------------|-------------------|
| Engine oiling system                        | 0499-12 - 0499-13 |
| Engine removal and installation             | 0499-2            |
| Engine system testing                       | 9035-1 - 9035-2   |
| Exhaust manifold                            | 0499-16           |
| External exhaust system                     | 0599-1            |
| External fuel supply system, engine         | 0599-1            |
| Fan drive                                   | 0499-25           |
| Flywheel, housing and fastenings            | 0499-25           |
| Fuel filter                                 | 0499-26           |
| Fuel injection system                       | 0499-17 - 0499-18 |
| Fuel transfer pump                          | 0499-21           |
| General                                     | I-III-1 - I-III-4 |
| Blade                                       | I-III-2           |
| Brakes                                      | I-III-1           |
| Capacities                                  | I-III-2           |
| Drawbar pull                                | I-III-1           |
| Engine                                      | I-III-1           |
| Hydraulic cylinders                         | I-III-2           |
| Hydraulic system                            | I-III-1           |
| Loader dimensions                           | I-III-3           |
| Operating information                       | I-III-4           |
| Power                                       | I-III-1           |
| Special equipment                           | I-III-2           |
| Standard equipment                          | I-III-2           |
| Steering                                    | I-III-1           |
| Tracks                                      | I-III-2           |
| Transmission                                | I-III-1           |
| Heating and air conditioning system testing | 9035-20           |
| Hydraulic system                            | 0399-3 - 0399-13  |
| Hydraulic system (analyzer) testing         | 9035-14           |
| Hydraulic system (flow meter) testing       | 9035-13           |
| Hydrostatic system testing                  | 9035-17 - 9035-18 |
| Input drive shafts and U-joints             | 0399-2            |
| Instruments and Indicators                  | 1699-6            |
| Intake manifold                             | 0499-17           |
| Lighting system                             | 1699-5            |
| Loader hydraulic system                     | 3199-1 - 3199-4   |
| Miscellaneous components system testing     | 9035-22 - 9035-23 |
| Mounting frame, engine                      | 0599-1            |
| Oil cooler                                  | 0499-21           |
| Parking-emergency brakes active elements    | 1199-1            |
| Parking-emergency brakes hydraulic system   | 1199-2            |

Specifications and torque values—Continued

|                                                   |                   |
|---------------------------------------------------|-------------------|
| Power train system testing .....                  | 9035-12           |
| Speed controls, engine .....                      | 0599-1            |
| Starting motor and fastenings .....               | 0499-22 - 0499-24 |
| Thermostats, housings and<br>water piping .....   | 0499-20           |
| Track systems .....                               | 0199-1 - 0199-5   |
| Transfer drive gears, shafts,<br>bearings .....   | 0899-1 - 0899-2   |
| Turbocharger .....                                | 0499-21 - 0499-23 |
| Water pump .....                                  | 0499-23 - 0499-24 |
| Wiring harness and switches .....                 | 1699-6            |
| Speed control, forward and<br>reverse .....       | 0315-6 - 0315-9   |
| Components .....                                  | 0315-9            |
| Speed control support .....                       | 0315-12           |
| Speed controls, engine .....                      | 0515-1 - 0515-6   |
| Splitter housing:                                 |                   |
| Gears, shafts, bearings .....                     | 0851-1 - 0851-7   |
| Housings and covers .....                         | 0841-3 - 0841-4   |
| Sprocket .....                                    | 0130-37 - 0130-38 |
| Start safety switch .....                         | 1674-2            |
| Start-up procedure, transmission .....            | 0360-5            |
| Starter switch .....                              | 1674-3            |
| Starting aids, cold weather .....                 | 0505-3 - 0505-5   |
| Starting circuit relay .....                      | 1674-4            |
| Starting motor and fastenings .....               | 0422-1 - 0422-10  |
| Assembly .....                                    | 0422-9 - 0422-10  |
| Components .....                                  | 0422-5 - 0422-6   |
| Installation .....                                | 0422-10           |
| Operational theory .....                          | 0422-1 - 0422-2   |
| Repair .....                                      | 0422-5 - 0422-9   |
| Testing solenoid .....                            | 0422-3 - 0422-4   |
| Steering linkage .....                            | 0315-3 - 0315-5   |
| Storage of crawler .....                          | I-IV-1            |
| Sump, hydrostatic transmission .....              | 0360-108          |
| Superheat shut-off switch .....                   | 1830-27           |
| Switch, battery disconnect .....                  | 1674-2            |
| Switch, high temperature .....                    | 1830-28           |
| Switch, key .....                                 | 1674-3            |
| Switch, light .....                               | 1673-2            |
| Switch, start safety .....                        | 1674-2            |
| Switch, starter .....                             | 1674-3            |
| Switch, starting aid .....                        | 0505-4            |
| Switch, superheat shut-off .....                  | 1830-27           |
| Switch, thermostatic temperature<br>control ..... | 1830-25 - 1830-26 |
| Switch, wiper .....                               | 1674-3            |

T

Tests and adjustments:

|                                                  |                   |
|--------------------------------------------------|-------------------|
| Air conditioning system .....                    | 9031-12 - 9031-19 |
| Adding Refrigerant-12 to<br>system .....         | 9031-18           |
| Charging system .....                            | 9031-16 - 9031-17 |
| Discharging System .....                         | 9031-14           |
| Electrical testing .....                         | 9031-14           |
| Evacuating system .....                          | 9031-15           |
| Flushing system components .....                 | 9031-19           |
| Inspecting refrigerant hoses<br>and tubing ..... | 9031-19           |
| Leak testing .....                               | 9031-19           |
| Operational test .....                           | 9031-14           |
| Pressure gauges .....                            | 9031-12 - 9031-13 |
| Alternator, 16 amp .....                         | 1672-5 - 1672-11  |
| Alternator, 50 amp .....                         | 1672-19 - 1672-21 |
| Battery .....                                    | 1671-5 - 1671-6   |
| Battery voltage test .....                       | 9015-13           |
| High-rate discharge test .....                   | 1671-6            |
| Specific gravity cell compar-<br>ison test ..... | 1671-5            |
| Compressor leak testing .....                    | 1830-18 - 1830-19 |
| Discharge to suction side<br>leak test .....     | 1830-19           |
| Shaft seal leak test .....                       | 1830-18           |
| Electrical system .....                          | 9015-13 - 9015-30 |
| Accessory circuits .....                         | 9015-25 - 9015-30 |
| Batteries .....                                  | 9015-13           |
| Charging circuit - 16 amp<br>alternator .....    | 9015-20 - 9015-22 |
| Charging circuit - 50 amp<br>alternator .....    | 9015-23 - 9015-25 |
| Starting circuit .....                           | 9015-14 - 9015-19 |
| System short test .....                          | 9015-13           |
| Engine system .....                              | 9010-10 - 9010-14 |
| Air restriction indicator<br>test .....          | 9010-14           |
| Alternator and fan belt<br>adjustments .....     | 9010-12           |
| Aneroid adjustments .....                        | 9010-14           |
| Compression pressure test .....                  | 9010-10           |
| Engine oil pressure check .....                  | 9010-10           |
| Engine output check .....                        | 9010-10 - 9010-11 |
| Fuel transfer pump pressure<br>test .....        | 9010-12           |
| Intake manifold pressure test .....              | 9010-14           |
| Radiator leakage check .....                     | 9010-11           |
| Speed control adjustment .....                   | 9010-13           |
| Heating system .....                             | 9031-1 - 9031-3   |

Tests and adjustment—Continued

|                                                      |                    |
|------------------------------------------------------|--------------------|
| Hydraulic system (analyzer) . . . . .                | 9025A-6 - 9025A-12 |
| Cylinder leakage test . . . . .                      | 9025A-10           |
| Function leakage test . . . . .                      | 9025A-8 - 9025A-10 |
| Hydraulic pump test . . . . .                        | 9025A-7 - 9025A-8  |
| Parts list for tests . . . . .                       | 9025A-11           |
| System relief valve test . . . . .                   | 9025A-6 - 9025A-7  |
| Hydraulic system (flow meter) . . . . .              | 9025-23 - 9025-28  |
| Auxiliary control valve lift check test . . . . .    | 9025-25            |
| Boom control valve lift check test . . . . .         | 9025-25            |
| Bucket control valve lift check test . . . . .       | 9025-25            |
| Hydraulic cylinder leakage test . . . . .            | 9025-24            |
| Hydraulic pump flow test . . . . .                   | 9025-26 - 9025-27  |
| Hydraulic sump check . . . . .                       | 9025-24            |
| Loader circuit leakage check . . . . .               | 9025-25            |
| Oil lines and hoses check . . . . .                  | 9025-24            |
| System relief pressure setting<br>check . . . . .    | 9025-24            |
| Power train . . . . .                                | 9020-12            |
| Engine disconnect clutch . . . . .                   | 9020-12            |
| Track adjustment . . . . .                           | 9030-2 - 9030-3    |
| Front idler gears . . . . .                          | 9030-3             |
| Inner guide adjustment . . . . .                     | 9030-3             |
| Outer guide adjustment . . . . .                     | 9030-3             |
| Track tension . . . . .                              | 9030-2             |
| Turbocharger . . . . .                               | 0416-2             |
| Axial end play bearing test . . . . .                | 0416-2             |
| Radial bearing movement . . . . .                    | 0416-2             |
| Thermal fuse . . . . .                               | 1830-27            |
| Thermostatic temperature control<br>switch . . . . . | 1830-25 - 1830-26  |
| Thermostats, housing and water<br>piping . . . . .   | 0418-1 - 0418-2    |
| Towbar . . . . .                                     | 1512-1             |
| Track systems . . . . .                              | 0130-3 - 0130-38   |
| Carrier rollers . . . . .                            | 0130-4 - 0130-7    |
| Front idler . . . . .                                | 0130-23 - 0130-28  |
| Recoil spring . . . . .                              | 0130-31 - 0130-33  |
| Rock guards and track guides . . . . .               | 0130-3             |
| Sprocket . . . . .                                   | 0130-37 - 0130-38  |
| Track adjuster cylinder . . . . .                    | 0130-29 - 0130-31  |
| Track chain assembly . . . . .                       | 0130-13 - 0130-22  |
| Track frame . . . . .                                | 0130-33 - 0130-36  |
| Track rollers . . . . .                              | 0130-8 - 0130-11   |
| Track shoes . . . . .                                | 0130-12            |
| Track testing . . . . .                              | 9030-1 - 9030-3    |
| Adjustment . . . . .                                 | 9030-2 - 9030-3    |
| Transfer drive:                                      |                    |
| Gears, shafts, bearings . . . . .                    | 0851-1 - 0851-7    |
| Housings and covers . . . . .                        | 0841-3 - 0841-4    |

|                                                               |                     |
|---------------------------------------------------------------|---------------------|
| Transmission control valve . . . . .                          | 0360-68 - 0360-102  |
| Assembly . . . . .                                            | 0360-86 - 0360-101  |
| Automatic control valve . . . . .                             | 0360-88 - 0360-90   |
| Automatic control valve<br>shutoff valve . . . . .            | 0360-87             |
| Automatic control valve<br>variable orifice . . . . .         | 0360-92 - 0360-94   |
| FNR valve . . . . .                                           | 0360-99 - 0360-100  |
| P1 over pressure relief valve . . . . .                       | 0360-86             |
| P2 pressure regulator valve . . . . .                         | 0360-86             |
| Port plate and cover<br>assembly . . . . .                    | 0360-101            |
| Speed control valve . . . . .                                 | 0360-97 - 0360-98   |
| Steering valve . . . . .                                      | 0360-95 - 0360-96   |
| Steering valve orifices . . . . .                             | 0360-91             |
| Disassembly . . . . .                                         | 0360-70 - 0360-84   |
| Automatic control valve . . . . .                             | 0360-73 - 0360-75   |
| Automatic control valve<br>shutoff valve . . . . .            | 0360-73             |
| Automatic control valve<br>variable orifice . . . . .         | 0360-76 - 0360-77   |
| FNR valve . . . . .                                           | 0360-82 - 0360-83   |
| P1 over pressure relief valve . . . . .                       | 0360-72             |
| P2 pressure regulator valve . . . . .                         | 0360-72             |
| Speed control valve . . . . .                                 | 0360-84             |
| Steering valve . . . . .                                      | 0360-79 - 0360-81   |
| Steering valve orifices . . . . .                             | 0360-75             |
| Transmission control valve<br>assembly . . . . .              | 0360-78             |
| Transmission controls . . . . .                               | 0315-3 - 0315-14    |
| Automatic control valve shut-<br>off valve control . . . . .  | 0315-13 - 0315-14   |
| Return to neutral linkage . . . . .                           | 0315-14             |
| Automatic control valve variable<br>orifice linkage . . . . . | 0315-10 - 0315-11   |
| Components . . . . .                                          | 0315-10             |
| Forward and reverse speed<br>control . . . . .                | 0315-6 - 0315-9     |
| Components . . . . .                                          | 0315-6              |
| Control head . . . . .                                        | 0315-7 - 0315-8     |
| Components . . . . .                                          | 0315-9              |
| Speed control support . . . . .                               | 0315-12             |
| Steering linkage . . . . .                                    | 0315-3 - 0315-5     |
| Transmission filters . . . . .                                | 0360-109            |
| Transmission motor . . . . .                                  | 0360-40 - 0360-60   |
| Transmission oil filter indicator . . . . .                   | 1676-5              |
| Transmission oil pressure gauge . . . . .                     | 1676-1              |
| Transmission oil temperature gauge . . . . .                  | 1676-2              |
| Transmission operating pres-<br>sure valve . . . . .          | 0360-106 - 0360-107 |
| Transmission pump . . . . .                                   | 0360-6 - 0360-30    |
| Turbocharger . . . . .                                        | 0416-1 - 0416-8     |