

**John Deere
860-B
Scraper**



Technical Manual

TM1171
LITHO IN U.S.A. (REVISED)

JD860-B Scraper

Technical Manual
TM-1171

SECTIONAL CONTENTS OF THIS MANUAL

Section 1 - General Information _____	1
Section 1 - Wheels _____	1
Section 2 - Axles and Suspension System _____	2
Section 3 - Transmission _____	3
Section 4 - Engine _____	4
Section 5 - Engine Auxiliary Systems _____	5
Section 6 - Torque Converter _____	6
Section 7 - Traction (Engine) Clutch _____	NOT USED 7
Section 8 - Transfer Drive _____	NOT USED 8
Section 9 - Steering Systems _____	9
Section 10 - Service Brakes _____	10
Section 11 - Parking - Emergency Brakes _____	11
Section 13 - Miscellaneous Vehicle _____	NOT USED 13
Section 15 - Equipment Attaching _____	NOT USED 15

Continued on page 3

Copyright© 1977
DEERE & COMPANY
Moline, Illinois
All Rights Reserved

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

SECTIONAL CONTENTS (Continued)

Section 16 - Electrical Systems _____		16
Section 17 - Frame, Chassis or Supporting Structure _____		17
Section 18 - Operator's Station _____		18
Section 19 - Sheet Metal and Styling _____		19
Section 20 - Safety, Convenience and Miscellaneous _____		20
Section 21 - Main Hydraulic System _____		21
Section 22 - Pneumatic Systems _____	NOT USED	22
Section 30 - Winch _____	NOT USED	30
Section 31 - Loader _____	NOT USED	31
Section 32 - Bulldozer _____	NOT USED	32
Section 33 - Backhoe and Excavator _____	NOT USED	33
Section 34 - Grading Device _____	NOT USED	34
Section 35 - Scraper and Haulage Device _____		35
Section 36 - Conveyor and Elevating Device _____		36
Section 37 - Arch or Boom, or Cranes _____	NOT USED	37
Section 38 - Grapple _____	NOT USED	38
Section 39 - Shear _____	NOT USED	39

Continued on page 5

SECTIONAL CONTENTS (Continued)

Section 40 - PTO or Winch Drive _____	NOT USED	40
Section 41 - Misc. Function Mechanical Drive _____	NOT USED	41
Section 42 - Ground Conditioning Tool _____	NOT USED	42
Section 43 - Swing, Rotation or Pivoting System _____	NOT USED	43
Section 44 - Cutting Mechanism _____	NOT USED	44
Section 45 - Forklifts _____	NOT USED	45
Section 46 - Automatic Control _____	NOT USED	46
Section 90 - System Testing _____		90

The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.



SECTION AND GROUP CONTENTS OF THIS MANUAL

SECTION I - GENERAL INFORMATION

- GROUP I - Contents, Index and Page List
- GROUP II - Introduction and Safety Information
- GROUP III - General Specifications
- GROUP IV - Predelivery, Delivery and After-Sale Services
- GROUP V - Lubrication

SECTION 1 - WHEELS

- GROUP 0110 - Powered Wheels and Fastenings
- GROUP 0120 - Non-Powered Wheels and Fastenings
- GROUP 0199 - Specifications and Special Tools

SECTION 2 - AXLES AND SUSPENSION SYSTEM

- GROUP 0201 - Drive Axle Housing and Support
- GROUP 0210 - Differential or Bevel Drive
- GROUP 0225 - Input Drive Shafts and U-joints
- GROUP 0230 - Non-Powered Wheel Axles
- GROUP 0250 - Axle Shaft, Bearings, Reduction Gears
- GROUP 0299 - Specifications and Special Tools

SECTION 3 - TRANSMISSION

- GROUP 0325 - Input Drive Shafts and U-joints
- GROUP 0341 - Housings and Covers
- GROUP 0350 - Gears, Shafts, Bearings and Power Shift Clutch
- GROUP 0360 - Hydraulic System
- GROUP 0399 - Specifications and Special Tools

SECTION 4 - ENGINE

- GROUP 0400 - Engine Removal and Installation
- GROUP 0401 - Crankshaft and Main Bearings
- GROUP 0402 - Camshaft and Valve Actuating Means
- GROUP 0403 - Connecting Rods and Pistons
- GROUP 0404 - Cylinder Block
- GROUP 0407 - Oiling System
- GROUP 0408 - Ventilating System
- GROUP 0409 - Cylinder Head and Valves
- GROUP 0410 - Exhaust Manifold
- GROUP 0413 - Fuel Injection System
- GROUP 0414 - Intake Manifold
- GROUP 0416 - Turbocharger
- GROUP 0417 - Water Pump
- GROUP 0418 - Thermostats, Housing and Water Piping
- GROUP 0419 - Oil Cooler
- GROUP 0420 - Fuel Filter
- GROUP 0421 - Fuel Transfer Pump
- GROUP 0422 - Starting System

SECTION 4 - ENGINE (Continued)

- GROUP 0423 - Alternator and Generator Mounting
- GROUP 0429 - Fan Drive
- GROUP 0433 - Flywheel, Housing and Fastenings
- GROUP 0499 - Specifications and Special Tools

SECTION 5 - ENGINE AUXILIARY SYSTEMS

- GROUP 0505 - Cold Weather Starting Aids
- GROUP 0510 - Cooling Systems
- GROUP 0515 - Speed Controls
- GROUP 0520 - Intake System
- GROUP 0530 - External Exhaust Systems
- GROUP 0540 - Mounting Frame
- GROUP 0560 - External Fuel Supply Systems
- GROUP 0599 - Specifications and Special Tools

SECTION 6 - TORQUE CONVERTER

- GROUP 0641 - Housing and Cover
- GROUP 0651 - Turbines, Gears, Shafts, Etc.
- GROUP 0660 - Hydraulic System
- GROUP 0699 - Specifications and Special Tools

SECTION 9 - STEERING SYSTEM

- GROUP 0960 - Hydraulic System
- GROUP 0999 - Specifications and Special Tools

SECTION 10 - SERVICE BRAKES

- GROUP 1011 - Active Elements
- GROUP 1015 - Controls Linkage
- GROUP 1060 - Hydraulic System
- GROUP 1099 - Specifications and Special Tools

SECTION 11 - PARKING-EMERGENCY BRAKES

- GROUP 1111 - Active Elements
- GROUP 1115 - Controls Linkage
- GROUP 1199 - Specifications and Special Tools

SECTION 16 - ELECTRICAL SYSTEM

- GROUP 1671 - Batteries, Supports and Cables
- GROUP 1672 - Alternator, Regulator and Charging System Wiring
- GROUP 1673 - Lighting System
- GROUP 1674 - Wiring Harness and Switches
- GROUP 1675 - System Controls
- GROUP 1676 - Instruments and Indicators
- GROUP 1699 - Specifications and Special Tools

SECTION 17 - FRAME, CHASSIS OR SUPPORTING STRUCTURE

- GROUP 1740 - Frame Installation
- GROUP 1746 - Frame Bottom Guards
- GROUP 1799 - Specifications and Special Tools

SECTION AND GROUP CONTENTS OF THIS MANUAL (Continued)

SECTION 18 - OPERATOR'S STATION

- GROUP 1810 - Operator Enclosure
- GROUP 1821 - Seat and Seat Belt
- GROUP 1830 - Heating and Air Conditioning
- GROUP 1899 - Specifications and Special Tools

SECTION 19 - SHEET METAL AND STYLING

- GROUP 1910 - Hood or Engine Enclosure
- GROUP 1913 - Miscellaneous Shields
- GROUP 1921 - Grille and Grille Housing
- GROUP 1927 - Fenders

SECTION 20 - SAFETY, CONVENIENCE AND MISCELLANEOUS

- GROUP 2004 - Horn
- GROUP 2006 - Cigar Lighter

SECTION 21 - MAIN HYDRAULIC SYSTEM

- GROUP 2160 - Hydraulic System
- GROUP 2199 - Specifications and Special Tools

SECTION 35 - SCRAPER AND HAULAGE DEVICE

- GROUP 3501 - Blades or Cutting Edges
- GROUP 3515 - Controls Linkage
- GROUP 3540 - Frames
- GROUP 3560 - Hydraulic System
- GROUP 3599 - Specifications and Special Tools

SECTION 36 - CONVEYOR AND ELEVATING DEVICE

- GROUP 3612 - Conveyor or Mast
- GROUP 3640 - Conveyor and Elevating Device Frame
- GROUP 3650 - Gear Box
- GROUP 3660 - Hydraulic System
- GROUP 3699 - Specifications and Special Tools

SECTION 90 - SYSTEM TESTING

- GROUP 9005 - General Information - Seven Basic Steps of Testing and Diagnosis
- GROUP 9010 - Engine
- GROUP 9015 - Electrical
- GROUP 9020 - Power Train
- GROUP 9025 - Hydraulic System (Flow Meter)
- GROUP 9030 - Miscellaneous Components
- GROUP 9031 - Heating and Air Conditioning
- GROUP 9035 - Specifications and Special Tools

ALPHABETICAL INDEX

A

Accelerator pedal	0515-1	Air conditioning system	1830-1
Accessory relay	1674-4	Blower motor	1830-26
Accumulator, brake	1060-8	Compressor	1830-1
Accumulator, brake and differential lock	0210-15	Compressor relief valve	1830-23
Adjusting idler	3612-10	Condenser	1830-16
After-sale inspection	I-IV-19	Evaporator	1830-17,1830-20
Accumulator action	I-IV-30	Expansion valve	1830-21
Air cleaner	I-IV-19	High pressure switch	1830-24
Air conditioner	I-IV-32	Receiver-dryer	1830-17
Air intake hoses	I-IV-19	Thermal fuse and superheat shut-off switch	1830-25
Axle housing mounting nuts	I-IV-36	Thermostatic temperature control switch	1830-22
Batteries	I-IV-19	Air conditioning system testing	9031-1
Belt tension	I-IV-23	Adding Refrigerant-12 to system	9031-16
Cab equipment	I-IV-33	Charging system	9031-14
Crankcase oil level and filter	I-IV-21	Component location	9031-2
Differential housing oil level	I-IV-35	Diagnosing malfunctions	9031-6
Differential lock	I-IV-28	Discharging system	9031-12
Drive axle oil level	I-IV-35	Electrical testing	9031-12
Elevator gearbox	I-IV-35	Evacuating system	9031-13
Engine coolant conditioner filter	I-IV-22	Flushing system components	9031-18
Engine speeds	I-IV-29	Inspecting refrigerant hoses and tubing	9031-18
Fluid leakage	I-IV-16	Isolating compressor from system	9031-17
Fuel filters	I-IV-22	Leak testing	9031-17
Gauges, switches and indicator lights	I-IV-25	Operational test	9031-12
Grease fittings	I-IV-37	Operational theory	9031-1
Hardware torque values	I-IV-40	Safety precautions	9031-9
Hydraulic reservoir oil and filters	I-IV-20	Schematic	9031-1
Hydraulic system cycle times	I-IV-32	System service - pressure gauges	9031-10
Lights	I-IV-40	Visual checks	9031-5
Oscillation hitch pivot cap screws	I-IV-36	Air filter restriction indicator	1676-7
Parking brake	I-IV-32	Alternator and generator mounting	0423-1
Power steering pump oil level	I-IV-25	Alternator indicator light	1676-6
Radiator	I-IV-23	Alternator, regulator and charging system wiring	1672-1
Seat	I-IV-28	Axle shaft, bearings, reduction gears	0250-1
Service brakes	I-IV-30	Axles and suspension system: Axle shaft, bearings, reduction gears	0250-1
Sliding floor rail bracket cap screws	I-IV-37	Differential or bevel gear	0210-1
Steering links and steering cylinder pin cap screws	I-IV-37	Drive axle housing and support	0201-3
Tire pressure	I-IV-35	Input drive shafts and U-joints	0225-1
Transmission oil and filter	I-IV-12	Non-powered wheel axles	0230-1
Transmission shifting	I-IV-28		
Upper elevator sprocket cap screws	I-IV-37		
Wheel retaining cap screws	I-IV-36		
Air cleaner assembly	0520-1		

B

Batteries, supports and cables	1671-3
Battery testing	9015-16

Belly pan, frame	1746-1
Belly pan, transmission	1913-1
Block, cylinder	0404-1
Blower motor	1830-26
Bowl and elevator control valve linkage	3515-1
Bowl control valve	3560-1
Bowl lift cylinders	3560-8
Brake accumulator	1060-8
Brake accumulator and differential lock	0210-15
Brake, parking:	
Active elements	1111-3
Controls linkage	1115-1
Brake pressure indicator light	1676-6
Brake pump	1060-4
Brake valve	1060-1
Brakes, service:	
Active elements	1011-3
Controls linkage	1015-1
Hydraulic system	1060-1
Accumulator	1060-8 - 1060-10
Brake pump	1060-4
Brake system filters	1060-12
Brake valve	1060-1
Low pressure warning switch	1060-11
Unloading valve	1060-6

C

Camshaft and valve actuating means	0402-1
Canopy with roof and side panels	1810-4
Central lube system	3540-7
Chain, elevator	3612-7
Charging circuit testing	9015-20
Check valve, elevator	3660-8
Cigar lighter	2006-1
Circuit breakers	1674-1
Clutch, power shift (See transmission)	0350-1
Cold weather starting aids	0505-3
Component location:	
Air conditioning system	9031-2
Electrical system	9015-1
Engine system	9010-2
Hydraulic system (flow meter)	9025-1
Power train system	9020-2
Compressor	1830-1
Compressor relief valve	1830-23
Condenser	1830-16
Connecting rods and pistons	0403-1
Cooling system, engine	0510-1
Cover, rear frame	1913-2

Crankshaft and main bearings	0401-1
Cutting edge adjustment	9030-1
Cutting edge assembly	3501-3
Cylinder block	0404-1
Cylinder, bowl lift	3560-8
Cylinder, ejector gate	3560-8
Cylinder, follow-up	0960-17
Cylinder head and valves	0409-1
Cylinder, sliding floor	3560-8
Cylinder, steering	0960-15

D

Delivery service	I-IV-18
Diagnosing malfunctions:	
Air conditioning system	9031-6
Electrical system	9015-10
Engine system	9010-5
Hydraulic system (flow meter)	9025-26
Power train system	9020-17
Diagnosis and testing	9005-3
Differential or bevel gear	0210-1
Accumulator, brake	0210-15
Differential	0210-1
Differential lock control valve	0210-13
Downshift inhibitor	0360-9
Draft frame	1740-7,3540-2
Drive axle housing and support	0201-3
Drive shaft, transmission	0325-3

E

Ejector gate	3540-5
Ejector gate cylinders	3560-8
Electrical indicators	1676-6
Electrical instrument panel switches	1674-4
Electrical sensing gauges	1676-4
Electrical system:	
Alternator, regulator and charging system wiring	1672-1
Batteries, supports and cables	1671-3
Instruments and indicators	1676-1
Lighting system	1673-1
System controls	1675-1
Wiring harness and switches	1674-1
Electrical system testing:	
Block diagram	9015-6
Component location	9015-1
Diagnosing electrical problems	9015-10
Precautions	9015-13
Schematic diagram	9015-6, 9015-35
Testing and adjustment	9015-15
Visual inspection	9015-14
Wire harness connector	9015-6, 9015-8

Elevator:	
Conveyor or mast	3612-3
Frame	3640-1
Gearbox	3650-1
Hydraulic system	3660-1
Elevator, bowl and gate control levers and linkage	3515-1
Engine:	
Alternator and generator mounting	0423-1
Camshaft and valve actuating means	0402-1
Connecting rods and pistons	0403-1
Crankshaft and main bearings	0401-1
Cylinder block	0404-1
Cylinder head and valves	0409-1
Exhaust manifold	0410-1
Fan drive	0429-1
Flywheel, housing and fastenings	0433-1
Fuel filter	0420-1
Fuel injection system	0413-1
Fuel transfer pump	0421-1
Intake manifold	0414-1
Oil cooler	0419-1
Oiling system	0407-1
Removal and installation	0400-5
Starting motor and fastenings	0422-1
Thermostats, housings and water piping	0418-1
Turbocharger	0416-1
Ventilating system	0408-1
Water pump	0417-1
Engine auxiliary systems:	
Cold weather starting aids	0505-3
Cooling systems	0510-1
External exhaust systems	0530-1
External fuel supply systems	0560-1
Intake system	0520-1
Mounting frame	0540-1
Speed controls	0515-1
Engine coolant conditioner filter	0510-4
Engine coolant heater	0505-4
Engine coolant temperature gauge	1676-4
Engine oil pressure gauge	1676-4
Engine removal and installation	0400-5
Engine stop cable	0515-3
Engine system testing	9010-1
Evaporator	1830-17, 1830-20
Exhaust manifold	0410-1
Exhaust system, engine	0530-1
Expansion valve	1830-21
F	
Fan drive	0429-1
Fan drive support	0429-2

Fan, engine cooling	0510-1
Fenders	1927-1
Filter assembly, transmission	0360-14
Filter, engine coolant conditioner	0510-4
Filter, fuel, engine	0420-1
Flywheel, housing and fastenings	0433-1
Follow-up cylinders	0960-17
Frame bottom guards	1746-1
Frame cover, rear	1913-2
Frame, draft	1740-7
Frame, elevator	3640-1
Frame, engine mounting	0540-1
Frame installation	1740-3
Frame, main	1740-3
Frames, scraper	3540-1
Fuel filter, engine	0420-1
Fuel gauge	1676-5
Fuel injection system	0413-1
Fuel system, engine	0560-1
Fuel transfer pump	0421-1
Fuses	1674-1

G

Gauge, engine coolant temperature	1676-4
Gauge, engine oil pressure	1676-4
Gauge, fuel	1676-5
Gauge, transmission oil pressure	1676-2
Gauge, transmission oil temperature	1676-5
Gearbox, elevator	3650-1
Gears, shafts, bearings and power shift clutch (See transmission)	0350-1
Greases	I-V-3
Grille and grille housing	1921-1
Guards, frame bottom	1746-1

H

Harness connectors	1674-3
Heat shield	1913-2
High pressure switch	1830-24
Hood	1910-3
Horn	2004-3
Hydraulic filter restriction indicator	1676-7
Hydraulic system (flow meter)	9025-1
Hydraulics, brake	1060-1
Hydraulics, elevator	3660-1
Hydraulics, main	2160-1
Hydraulics, scraper	3560-1
Hydraulics, steering system	0960-3
Hydraulics, torque converter - See transmission hydraulics	0360-1
Hydraulics, transmission	0360-1

I

Idler, adjusting	3612-10
Idler, lower	3612-5
Idler, upper	3612-3
Input drive shafts and U-joints, axle system	0225-1
Input drive shafts and U-joints, transmission	0325-3
Instrument panel switches	1674-4
Instruments and indicators	1676-1
Instruments and indicators circuit testing	9015-29
Intake manifold	0414-1
Intake system, engine	0520-1
Intercooler	0414-1

K

Key switch	1674-4
------------------	--------

L

Light, alternator indicator	1676-6
Light, brake pressure indicator	1676-6
Light, parking brake indicator	1676-6
Light, turn indicator	1676-6
Lighter, cigar	2006-1
Lighting circuit testing	9015-24
Lighting system	1673-1
Liner, cylinder	0404-1
Lockup clutch valve	0360-7
Low pressure warning switch	1060-11
Lower idler	3612-5
Lubrication	I-V-1

M

Main frame	1740-3
Main hydraulic system	2160-1
Malfunctions, diagnosing: Air conditioning system testing	9031-6
Electrical system	9015-10
Engine system	9010-5
Hydraulic system (flow meter)	9025-26
Power train system	9020-17
Manifold, exhaust	0410-1
Manifold, intake	0414-1
Manifold, water	0418-1
Mechanical indicators	1676-7
Mechanical sensing gauges	1676-2
Miscellaneous components testing	9030-1
Motor, elevator	3660-16
Motor, starting	0422-1
Mounting, alternator and generator	0423-1
Mounting frame, engine	0540-1
Muffler	0530-1

N

Non-powered wheels and fastenings	0120-1
Nozzle, fuel injection	0413-8

O

Oil cooler, engine	0419-1
Oil cooler, transmission	0360-15
Oil lines, transmission	0360-11
Oil pump, transmission	0360-2
Oiling system, engine	0407-1
Oils	I-V-3
Oscillation hitch	1740-5

P

Parking brake: Active elements	1111-3
Controls linkage	1115-1
Parking brake indicator light	1676-6
Periodic service chart	I-V-2
Pistons and connecting rods	0403-1
Power shift clutch (See transmission)	0350-1
Power train system testing	9020-1
Powered wheels and fastenings	0110-3
Predelivery service	I-IV-1
Accumulator action	I-IV-9
Air cleaner	I-IV-1
Air conditioner	I-IV-11
Air intake hoses	I-IV-2
Batteries	I-IV-2
Belt tension	I-IV-4
Bleeding fuel system	I-IV-3
Cab equipment	I-IV-11
Crankcase oil level	I-IV-3
Differential housing oil level	I-IV-12
Differential lock	I-IV-9
Elevator gearbox oil level	I-IV-13
Engine speeds	I-IV-9
Final check	I-IV-17
Fluid leakage	I-IV-16
Fuel filters	I-IV-3
Fuel tank	I-IV-5
Gauges, switches and indicator lights	I-IV-5
Grease fitting check	I-IV-14
Hydraulic reservoir oil level	I-IV-2
Hydraulic system cycle times	I-IV-11
Lights	I-IV-17
Oscillation hitch pivot cap screws	I-IV-13
Parking brake	I-IV-10
Power steering pump oil level	I-IV-5
Radiator	I-IV-4

Predelivery service - Continued

Seat	I-IV-8
Service brakes	I-IV-10
Tire pressure	I-IV-13
Torque values, accessible hardware	I-IV-17
Transmission oil level	I-IV-12
Transmission shifting	I-IV-9
Wheel retaining cap screws	I-IV-13
Pressure regulator valve	0360-5
Primary steering pump	0960-3
Pump, brake	1060-4
Pump, elevator hydraulic	3660-10
Pump, fuel injection	0413-1
Pump, fuel transfer	0421-1
Pump, oil, engine	0407-1
Pump, primary steering	0960-3
Pump, secondary steering and brake	0960-5
Pump, transmission oil	0360-2
Pump, transmission tandem	0360-2
Pump, water, engine	0417-1

R

Radiator and fan shroud	0510-1
Rail brackets	3540-3
Range selector circuit testing	9015-34
Range selector control valve	0360-3
Range selector system	1675-1
Receiver-dryer	1830-17
Regulator and alternator	1672-1
Relays	1674-3
Reservoir, hydraulic	2160-1
Reverse warning horn	2004-3
Rocker arm assembly	0402-2, 0409-1, 0409-4

S

Safety information	I-II-1
Seat	1821-1
Seat adjustment	9030-3
Secondary steering and brake pump	0960-5
Service brakes:	
Active elements	1011-3
Controls linkage	1015-1
Hydraulic system	1060-1
Service door	1910-7
Servo valve	0960-11
Shields	1913-1
Sliding floor	3540-3
Sliding floor cylinder	3560-8
Sod pan	1746-1

Special tools:

Air conditioning system	1899-4
Alternator, regulator and charging system wiring	1699-7
Batteries, supports and cables	1699-6
Camshaft and valve actuating means	0499-28
Connecting rods and pistons	0499-30
Conveyor and elevating device frames	3699-10
Conveyor and elevating device hydraulic system	3699-11
Crankshaft and main bearings	0499-27
Cylinder block	0499-31
Cylinder head and valves	0499-32
Differential or bevel drive	0299-6
Electrical system testing	9035-9
Elevator frames	3699-10
Elevator hydraulic system	3699-11
Engine removal and installation	0499-26
Engine system testing	9035-3
Frame installation	1799-2
Main frame	1799-3
Oscillation hitch and steering link pins	1799-2
Fuel injection system	0499-34
Heating and air conditioning system testing	9035-15
Hydraulic system (flow meter) testing	9035-13
Hydraulics, scraper	3599-6
Powered wheels and fastenings	0199-2
Scraper hydraulics	3599-6
Service brakes hydraulic system	1099-5
Steering system hydraulics	0999-8
Torque converter turbine, gears, shaft, etc.	0699-6
Transmission gears, shafts and bearings	0399-12
Turbocharger	0499-37
Water pump	0499-38
Wheels, powered	0199-2
Specifications and torque values:	
Air conditioning system	1899-2
Alternator and generator mounting	0499-24
Alternator, regulator and charging system wiring	1699-2
Axle shaft, bearings, reduction gears	0299-6
Batteries, supports and cables	1699-1
Brake active elements	1199-1

Specifications and torque values - Continued

Camshaft and valve actuating means	0499-5
Cold weather starting aids	0599-1
Connecting rods and pistons	0499-7
Conveyor and elevating device frames	3699-1
Conveyor and elevating device gearbox	3699-3
Conveyor and elevating device hydraulic system	3699-7
Cooling systems, engine	0599-1
Crankshaft and main bearings	0499-3
Cylinder block	0499-9
Cylinder head and valves	0499-12
Differential or bevel drive	0299-2
Drive axle housing and support	0299-1
Electrical system testing	9035-6
Elevator frames	3699-1
Elevator gearbox	3699-3
Elevator hydraulic system	3699-7
Engine break-in	0499-1
Engine removal and installation	0499-2
Engine system testing	9035-1
Exhaust manifold	0499-15
External fuel supply systems	0599-2
Fan drive	0499-25
Flywheel, housing and fastenings	0499-25
Frame installation	1799-1
Oscillation hitch and steering link pins	1799-1
Frames, scraper	3599-1
Fuel filter	0499-21
Fuel injection system	0499-16
Fuel transfer pump	0499-21
Gearbox	3699-3
General	I-III-1 - I-III-3
Bowl	I-III-2
Brakes	I-III-1
Capacities	I-III-2
Capacity (SAE heaped)	I-III-1
Cutting edge	I-III-2
Differential lock	I-III-1
Drive axle	I-III-1
Elevator	I-III-2
Engine	I-III-1
Hydraulic cylinders	I-III-2
Hydraulic system	I-III-1
Power	I-III-1
Power steering	I-III-1
Scraper dimensions	I-III-3
Special equipment	I-III-2
Standard equipment	I-III-2
Tires	I-III-2

Specifications and torque values - Continued

General - Continued	
Tractor oscillation	I-III-1
Transmission	I-III-1
Weight distribution	I-III-2
Heating and air conditioning system testing	9035-14
Hydraulic system (flow meter) testing	9035-11
Hydraulics, scraper	3599-3
Input drive shafts and U-joints	0299-5
Intake manifold	0499-17
Lighting system	1699-4
Non-powered wheel axles	0299-5
Oil cooler	0499-20
Oiling system, engine	0499-11
Power train system testing	9035-10
Powered wheels and fastenings	0199-1
Scraper frames	3599-1
Scraper hydraulics	3599-3
Seat and seat belt	1899-1
Service brakes active elements	1099-1
Service brakes controls linkage	1099-1
Service brakes hydraulic system	1099-2
Speed controls, engine	0599-2
Starting motor and fastenings	0499-39
Steering system hydraulics	0999-1
System controls	1699-5
Thermostats, housings and water piping	0499-20
Torque converter housing and cover	0699-1
Torque converter turbine, gears, shaft, etc	0699-2
Transmission gears, shafts and bearings	0399-1
Transmission hydraulic system	0399-7
Transmission input drive shafts and U-joints	0399-1
Turbocharger	0499-17
Water pump	0499-19
Wheels, powered	0199-1
Wiring harness and switches	1699-5
Speed controls, engine	0515-1
Speedometer	1676-3
Start aid switch	1674-5
Start aid testing	9015-32
Start circuit relay	1674-2
Start switch	1674-4
Starting aids, cold weather	0505-3
Starting motor and fastenings	0422-1
Steering arms	1740-5
Steering system hydraulics	0960-3
Steering control valve	0960-13 - 0960-14

Storage of scraper I-IV-1
 Suspension seat 1821-1
 Switch, high pressure 1830-24
 Switch, key 1674-4
 Switch, low pressure warning 1060-11
 Switch, solenoid 0422-9
 Switch, start 1674-4
 Switch, start aid 1674-5
 Switch, superheat shut-off 1830-25
 Switch, thermostatic temperature
 control 1830-22
 Switch, wiper 1674-5

T

Tachometer 1676-3
 Tandem pump, transmission 0360-2
 Tank, fuel 0560-1
 Tests and adjustments;
 Air conditioning system 9031-10
 Alternator 1672-5
 Batteries 1671-4
 Compressor 1830-14
 Cutting edge adjustment 9030-1
 Differential 0210-10
 Electrical system 9015-15
 Engine system 9010-10
 Hydraulic system (flow meter) 9025-30 - 9025-45
 Miscellaneous components 9030-1
 Power train 9020-21
 Range selector solenoid 1675-4
 Starting motor solenoid tests 0422-3 - 0422-4
 Turbocharger 0416-2
 Windshield wiper adjustment 9030-2
 Thermal fuse and superheat
 shut-off switch 1830-25
 Thermostatic temperature control
 switch 1830-22
 Thermostats, housings and
 water piping 0418-1
 Torque converter:
 Housing and cover 0641-3
 Hydraulic system - See
 transmission hydraulics,
 page 0360-1 - 0360-15
 Turbine, gears, shaft, etc 0651-1
 Transmission:
 Gears, shafts, bearings and
 power shift clutch 0350-1
 Housings and covers 0341-1
 Hydraulic system 0360-1
 Input drive shafts and U-joints 0325-3
 Transmission belly pan 1913-1
 Transmission filter restriction
 indicator 1676-7

Transmission oil pressure gauge 1676-2
 Transmission oil temperature gauge 1676-5
 Turbocharger 0416-1
 Turn indicator lights 1676-6

U

Unloading valve, brake 1060-6
 Upper idler assembly 3612-3

V

Valve, bowl control 3560-1
 Valve, brake 1060-1
 Valve, brake unloading 1060-6
 Valve, compressor relief 1830-23
 Valve, differential lock
 control 0210-13
 Valve, elevator control 3660-1
 Valve, expansion 1830-21
 Valve, lockup clutch 0360-7
 Valve, pressure regulator 0360-5
 Valve, range selector control 0360-3
 Valve, servo 0960-11
 Valve, steering 0960-8
 Valve, steering control 0960-13
 Ventilating system, engine 0408-1
 Ventilator outlet tube assembly 0408-1

W

Water manifold 0418-1
 Water pump, engine 0417-1
 Wheel axles 0230-1
 Wheels and fastenings 0110-3
 Windshield wiper 1810-3
 Windshield wiper adjustment 9030-2
 Wiper switch 1674-5
 Wiper testing 9015-32
 Wiring harness and switches 1674-1

**COMPLETE PAGE LISTING
WITH LATEST DATE LINES**

I-I-1,2	(Dec-77)	2-0210-3,4	(Dec-77)	3-0399-11,12	(Dec-77)
I-I-3,4	(Dec-77)	2-0210-5,6	(Dec-77)	3-0399-13,14	(Dec-77)
I-I-5,6	(Dec-77)	2-0210-7,8	(Jun-79)	4-0400-1,2	(Jun-79)
I-I-7,8	(Jun-79)	2-0210-9,10	(Jun-79)	4-0400-3,4	(Jun-79)
I-I-9,10	(Jun-79)	2-0210-11,12	(Jun-79)	4-0400-5,6	(Jun-79)
I-I-11,12	(Jun-79)	2-0210-13,14	(Jun-79)	4-0400-7,8	(Jun-79)
I-I-13,14	(Jun-79)	2-0210-15,16	(Jun-79)	4-0400-9,10	(Jun-79)
I-I-15,16	(Jun-79)	2-0210-17,18	(Jun-79)	4-0401-1,2	(Jun-79)
I-I-17,18	(Jun-79)	2-0225-1,2	(Dec-77)	4-0401-3,4	(Jun-79)
I-I-19,20	(Jun-79)	2-0230-1,2	(Dec-77)	4-0401-5,6	(Jun-79)
I-I-21,22*	(Dec-77)	2-0230-3,4	(Jun-79)	4-0401-7,8	(Jun-79)
I-I-23,24*	(Dec-77)	2-0250-1,2	(Dec-77)	4-0402-1,2	(Jun-79)
I-I-25,26*	(Dec-77)	2-0250-3,4	(Jun-79)	4-0402-3,4	(Jun-79)
I-I-27,28*	(Dec-77)	2-0299-1,2	(Dec-77)	4-0402-5,6	(Jun-79)
I-I-29,30*	(Dec-77)	2-0299-3,4	(Jun-79)	4-0402-7,8	(Jun-79)
I-I-31,32*	(Dec-77)	2-0299-5,6	(Jun-79)	4-0403-1,2	(Jun-79)
I-II-1,2	(Jun-79)	2-0299-7,8	(Jun-79)	4-0403-3,4	(Jun-79)
I-II-3,4	(Jun-79)	3-0325-1,2	(Dec-77)	4-0403-5,6	(Jun-79)
I-III-1,2	(Jun-79)	3-0325-3,4	(Jun-79)	4-0403-7,8	(Jun-79)
I-III-3,4	(Jun-79)	3-0341-1,2	(Dec-77)	4-0404-1,2	(Jun-79)
I-IV-1,2	(Jun-79)	3-0341-3,4	(Jun-79)	4-0404-3,4	(Jun-79)
I-IV-3,4	(Jun-79)	3-0350-1,2	(Dec-77)	4-0404-5,6	(Jun-79)
I-IV-5,6	(Jun-79)	3-0350-3,4	(Dec-77)	4-0404-7,8	(Jun-79)
I-IV-7,8	(Jun-79)	3-0350-5,6	(Dec-77)	4-0404-9,10	(Jun-79)
I-IV-9,10	(Jun-79)	3-0350-7,8	(Dec-77)	4-0407-1,2	(Jun-79)
I-IV-11,12	(Jun-79)	3-0350-9,10	(Jun-79)	4-0407-3,4	(Jun-79)
I-IV-13,14	(Jun-79)	3-0350-11,12	(Dec-77)	4-0408-1,2	(Jun-79)
I-IV-15,16	(Jun-79)	3-0350-13,14	(Dec-77)	4-0409-1,2	(Jun-79)
I-IV-17,18	(Jun-79)	3-0350-15,16	(Dec-77)	4-0409-3,4	(Jun-79)
I-IV-19,20	(Jun-79)	3-0350-17,18	(Jun-79)	4-0409-5,6	(Jun-79)
I-IV-21,22	(Jun-79)	3-0350-19,20	(Dec-77)	4-0410-1,2	(Jun-79)
I-IV-23,24	(Jun-79)	3-0350-21,22	(Dec-77)	4-0413-1,2	(Jun-79)
I-IV-25,26	(Jun-79)	3-0350-23,24	(Jun-79)	4-0413-3,4	(Jun-79)
I-IV-27,28	(Jun-79)	3-0350-25,26	(Dec-77)	4-0413-5,6	(Jun-79)
I-IV-29,30	(Jun-79)	3-0350-27,28	(Dec-77)	4-0413-7,8	(Jun-79)
I-IV-31,32	(Jun-79)	3-0350-29,30	(Dec-77)	4-0413-9,10	(Jun-79)
I-IV-33,34	(Jun-79)	3-0350-31,32	(Jun-79)	4-0413-11,12	(Jun-79)
I-IV-35,36	(Jun-79)	3-0350-33,34	(Dec-77)	4-0413-13,14	(Jun-79)
I-IV-37,38	(Jun-79)	3-0360-1,2	(Dec-77)	4-0413-15,16	(Jun-79)
I-IV-39,40	(Jun-79)	3-0360-3,4	(Dec-77)	4-0413-17,18	(Jun-79)
I-IV-41,42	(Jun-79)	3-0360-5,6	(Jun-79)	4-0413-19,20	(Jun-79)
I-V-1,2	(Jun-79)	3-0360-7,8	(Dec-77)	4-0414-1,2	(Jun-79)
I-V-3,4	(Jun-79)	3-0360-9,10	(Dec-77)	4-0414-3,4	(Jun-79)
1-0110-1,2	(Jun-79)	3-0360-11,12	(Dec-77)	4-0416-1,2	(Jun-79)
1-0110-3,4	(Jun-79)	3-0360-13,14	(Dec-77)	4-0416-3,4	(Jun-79)
1-0120-1,2	(Jun-79)	3-0360-15,16	(Dec-77)	4-0416-5,6	(Jun-79)
1-0199-1,2	(Jun-79)	3-0399-1,2	(Jun-79)	4-0416-7,8	(Jun-79)
2-0201-1,2	(Jun-79)	3-0399-3,4	(Dec-77)	4-0417-1,2	(Jun-79)
2-0201-3,4	(Jun-79)	3-0399-5,6	(Dec-77)	4-0417-3,4	(Jun-79)
2-0201-5,6	(Jun-79)	3-0399-7,8	(Dec-77)	4-0418-1,2	(Jun-79)
2-0210-1,2	(Jun-79)	3-0399-9,10	(Jun-79)	4-0419-1,2	(Jun-79)
				4-0420-1,2	(Jun-79)

Vertical lines indicate pages included in this revision.

*Remove and discard.