

# F710 and F725 Front Mowers



## TECHNICAL MANUAL

John Deere  
Lawn & Grounds Care Division  
TM1493 (Feb-95)

# Introduction

## FOREWORD

This manual is written for an experienced technician. Essential tools required in performing certain service work are identified in this manual and are recommended for use.

Live with safety: Read the safety messages in the introduction of this manual and the cautions presented throughout the text of the manual.

**N** This is the safety-alert symbol. When you see this symbol on the machine or in this manual, be alert to the potential for personal injury.

Technical manuals are divided in two parts: repair and diagnostics. Repair sections tell how to repair the components. Diagnostic sections help you identify the majority of routine failures quickly.

Information is organized in groups for the various components requiring service instruction. At the beginning of each group are summary listings of all applicable essential tools, other materials needed to do the job and service parts kits.

Section 10, Group 15—Repair Specifications, consist of all applicable specifications, near tolerances and specific torque values for various components on each individual machine.

Binders, binder labels, and tab sets can be ordered by John Deere dealers direct from the John Deere Distribution Service Center.

This manual is part of a total product support program.

## FOS MANUALS—REFERENCE

## TECHNICAL MANUALS—MACHINE SERVICE

## COMPONENT MANUALS—COMPONENT SERVICE

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic type of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise guides for specific machines. Technical manuals are on-the-job guides containing only the vital information needed for diagnosis, analysis, testing, and repair.

Component Technical Manuals are concise service guides for specific components. Component technical manuals are written as stand-alone manuals covering multiple machine applications.

# Contents

## SECTION 10—GENERAL INFORMATION

- Group 05—Safety
- Group 10—General Specifications
- Group 15—Repair Specifications
- Group 20—Fuels and Lubricants
- Group 25—Serial Number Locations
- Group 30—Features and Attachments
- Group 35—Service Information Bulletin Listing

## SECTION 20—ENGINE REPAIR—F710

- Group 05—Engine—FC540V
- Group 10—Muffler—F710

## SECTION 25—ENGINE REPAIR—F725

- Group 05—Engine—FD590V
- Group 10—Muffler—F725
- Group 15—Cooling System—F725

## SECTION 30—FUEL AND AIR REPAIR—F710

- Group 05—Fuel System—FC540V
- Group 10—Air System—FC540V

## SECTION 35—FUEL AND AIR REPAIR—F725

- Group 05—Fuel System—FD590V
- Group 10—Air System—FD590V

## SECTION 40—ELECTRICAL REPAIR

- Group 05—Battery and Cables
- Group 10—Electrical System Components
- Group 15—Electric PTO Clutch
- Group 20—Wiring Harness

## SECTION 50—POWER TRAIN REPAIR

- Group 05—Hydrostatic Transmission and Differential Assembly
- Group 10—Hydrostatic Transmission
- Group 15—Differential Assembly

## SECTION 60—STEERING AND BRAKE REPAIR

- Group 05—Steering System Repair
- Group 10—Brake Repair

## SECTION 70—HYDRAULIC REPAIR

- Group 05—Hydraulic Control Valve

- Group 10—Hydraulic Lift Cylinder
- Group 15—Hydrostatic Oil Cooler and Filter
- Group 20—Hydraulic Lines

## SECTION 80—MISCELLANEOUS REPAIR

- Group 05—PTO Assembly
- Group 10—Rear Axle
- Group 15—Wheels and Bearings
- Group 20—Seat
- Group 25—Lift Arm Assembly
- Group 30—Mower Deck Repair

## SECTION 210—TEST & ADJUSTMENT SPECIFICATIONS/OPERATIONAL CHECKOUT PROCEDURE

- Group 05—Test & Adjustment Specifications
- Group 10—Operational Checkout Procedures

## SECTION 220—ENGINE OPERATION, TESTS AND ADJUSTMENTS - FC540V ENGINE

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests & Adjustments

## SECTION 225—ENGINE OPERATION, TESTS, AND ADJUSTMENTS - FD590V ENGINE

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests & Adjustments

## SECTION 230—FUEL/AIR OPERATION TESTS & ADJUSTMENTS - FC540V ENGINE

- Group 05—Component Location
- Group 10—Theory of Operation
- Group 15—Diagnosis, Tests & Adjustments

## SECTION 235—FUEL/AIR OPERATION TESTS & ADJUSTMENTS - FD590V ENGINE

- Group 05—Component Location
- Group 10—Theory of Operation

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

TM1493-19-16JAN91

COPYRIGHT©1990  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION™ Manual

Group 15—Diagnosis, Tests & Adjustments

**SECTION 240—ELECTRICAL OPERATION TESTS  
& ADJUSTMENTS - FC540V  
ENGINE**

Group 05—Component Location  
Group 10—Theory of Operation  
Group 15—Diagnosis, Tests & Adjustments  
Group 20—Wiring Schematics

**SECTION 245—ELECTRICAL OPERATION TESTS  
& ADJUSTMENTS - FD590V  
engine**

Group 05—Component Location  
Group 10—Theory of Operation  
Group 15—Diagnosis, Tests & Adjustments  
Group 20—Wiring Schematics

**SECTION 250—POWER TRAIN OPERATION  
TESTS & ADJUSTMENTS**

Group 05—Component Location  
Group 10—Theory of Operation  
Group 15—Diagnosis, Tests & Adjustments

**SECTION 260—STEERING & BRAKES  
OPERATION TESTS &  
ADJUSTMENTS**

Group 05—Component Location  
Group 10—Theory of Operation  
Group 15—Diagnosis, Tests & Adjustments

**SECTION 270—HYDRAULIC OPERATION TESTS  
& ADJUSTMENTS**

Group 05—Component Location  
Group 10—Theory of Operation  
Group 15—Diagnosis, Tests & Adjustments  
Group 20—Hydraulic Schematic

**SECTION 280—MISCELLANEOUS OPERATION  
TESTS & ADJUSTMENTS**

Group 05—Component Location  
Group 10—Theory of Operation  
Group 15—Diagnosis, Tests & Adjustments

**Index**

**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**

Contents

210

220

225

230

235

240

245

250

260

270

*Contents*

210

220

225

230

235

240

245

250

260

270

*Contents*

280

INDX



*Contents*

280

INDX

# Section 10

# GENERAL INFORMATION

## Contents

	Page		Page
<b>Group 05—Safety</b> .....	10-05-1		
<b>Group 10—General Specifications</b>		FC540V Engine .....	10-30-4
Specifications		FD590V .....	10-30-4
Machine .....	10-10-1	Power Train .....	10-30-5
Mower Deck .....	10-10-2	Hydraulic System .....	10-30-6
<b>Group 15—Repair Specifications</b>		Frame .....	10-30-7
Repair Specifications .....	10-15-1	Steering System .....	10-30-7
Tune-Up		Mower Decks .....	10-30-8
Specifications .....	10-15-3	Optional Attachments & Kits .....	10-30-8
Adjustments .....	10-15-4	<b>Group 35—Service Information Bulletin</b>	
Service Recommendations		<b>Listing</b> .....	10-35-1
O-Ring Boss Fittings .....	10-15-5		
Flat Face O-Ring Seal Fittings .....	10-15-6		
Metric Series Torque Chart .....	10-15-7		
Inch Series Torque Chart .....	10-15-8		
<b>Group 20—Fuels and Lubricants</b>			
Fuel .....	10-20-1		
Fuel Storage .....	10-20-1		
Gasoline Engine Oil .....	10-20-2		
Engine Coolant .....	10-20-2		
Hydrostatic Drive Oil .....	10-20-3		
Extreme Pressure Grease .....	10-20-3		
Lubricant Storage .....	10-20-4		
Alternative Lubricants .....	10-20-4		
<b>Group 25—Serial Number Locations</b>			
Serial Numbers .....	10-25-1		
Record			
Product Identification Card .....	10-25-1		
Engine Serial Number .....	10-25-2		
Steering Valve Serial Number .....	10-25-2		
Hydrostatic Transmission Serial			
Number .....	10-25-3		
Differential Serial Number .....	10-25-3		
PTO Gearbox Serial Number .....	10-25-4		
Mower Deck Serial Number .....	10-25-5		
<b>Group 30—Features and Attachments</b>			
F710/F725 Front Mowers .....	10-30-1		
F710 .....	10-30-2		
F725 .....	10-30-3		

*Contents*

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-04JUN90

T81389 -JUN-07DEC88

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-04JUN90

TS187 -19-30SEP88


## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

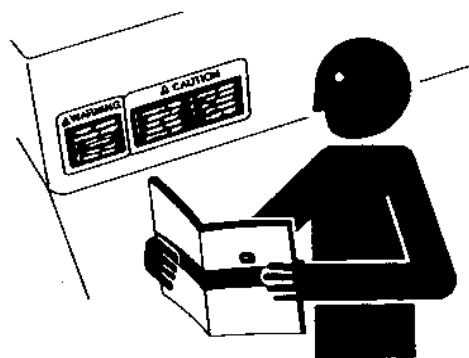

DX,READ -19-04JUN90

TS201 -JUN-23AUG88

## HANDLE FLUIDS SAFELY—AVOID FIRES

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



DX,FLAME -19-04JUN90


TS227 -JUN-23AUG88

## PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).

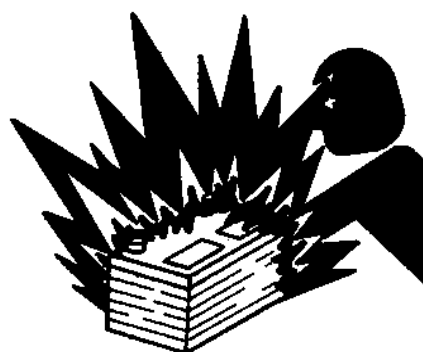

DX,SPARKS -19-04JUN90


TS204 -JUN-23AUG88

## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

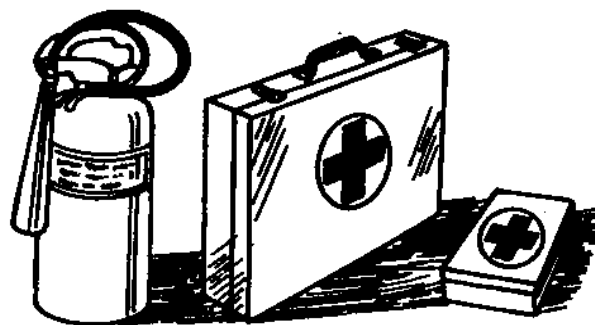

DX,FIRE2 -19-04JUN90

TS291 -JUN-23AUG88

## PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 10—15 minutes. Get medical attention immediately.

If acid is swallowed:

1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
3. Get medical attention immediately.

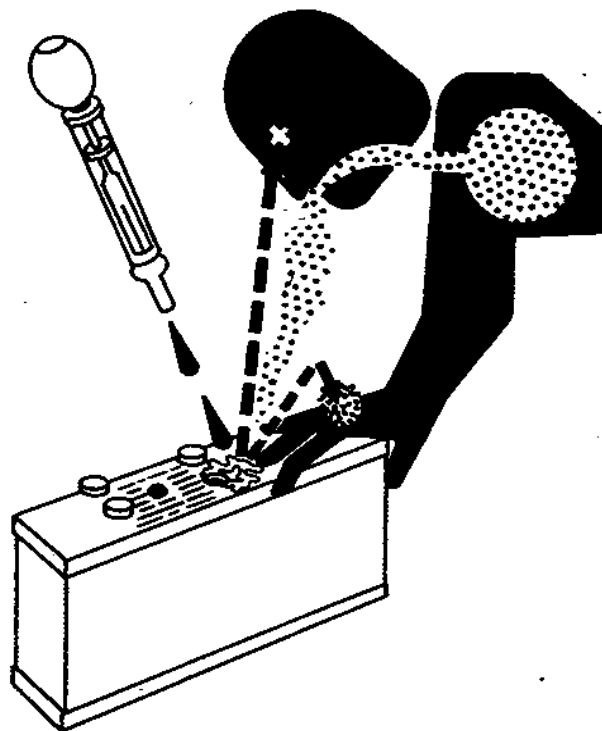

DX,POISON -19-04JUN90

## SERVICE COOLING SYSTEM SAFELY

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.



DX,RCAP -19-04JUN90

## AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury may call the Deere & Company Medical Department in Moline, Illinois, or other knowledgeable medical source.




-JUN-23AUG88  
X9811

DX,FLUID,NA -19-11JUN90

## PARK MACHINE SAFELY

Before working on the machine:

- Lower all equipment to the ground.
- Stop the engine and remove the key.
- Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.

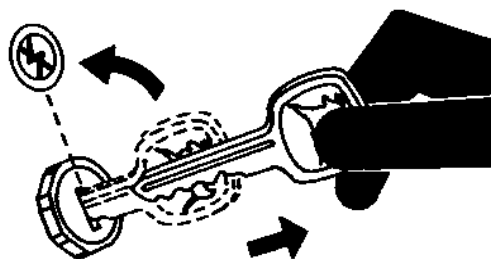


-JUN-24MAY89  
TS230

DX,PARK -19-04JUN90

### SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

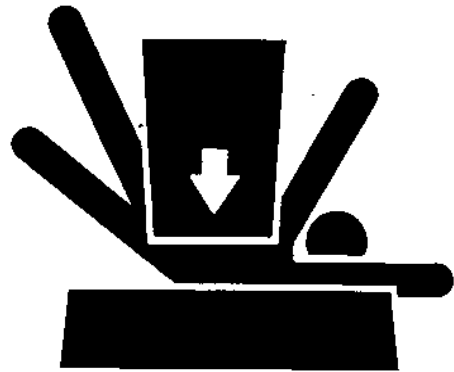

DX,LOWER -19-04JUN90

10  
5  
-JUN-23AUG88  
TS229


### WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

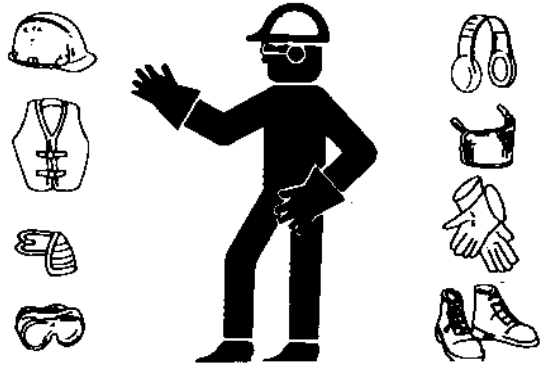


DX,WEAR -19-10SEP90

-JUN-23AUG88  
TS206

### WORK IN CLEAN AREA

Before starting a job:

- Clean work area and machine.
- Make sure you have all necessary tools to do your job.
- Have the right parts on hand.
- Read all instructions thoroughly; do not attempt shortcuts.

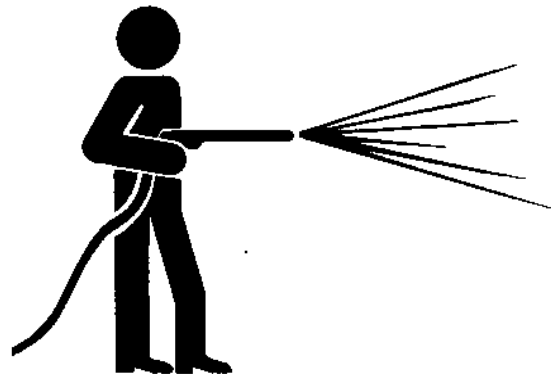

DX,CLEAN -19-04JUN90

-JUN-18OCT88  
T6642EJ




69510

### SERVICE MACHINES SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

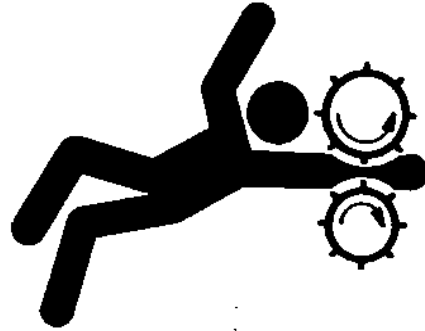


DX, LOOSE -19-04JUN90

TS228 -JUN-23AUG88

### WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

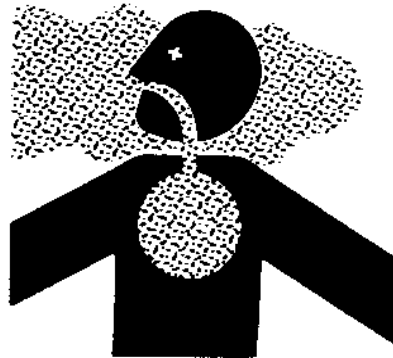

DX, AIR -19-04JUN90

TS220 -JUN-23AUG88

### ILLUMINATE WORK AREA SAFELY

Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.




DX, LIGHT -19-04JUN90

TS223 -JUN-23AUG88

### REPLACE SAFETY SIGNS

Replace missing or damaged safety signs. See the machine operator's manual for correct safety sign placement.

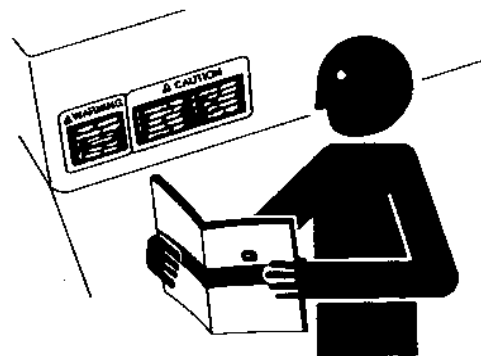


DX, SIGNS1 -19-04JUN90

TS201 -JUN-23AUG88

### USE PROPER LIFTING EQUIPMENT

Lifting heavy components incorrectly can cause severe injury or machine damage.

Follow recommended procedure for removal and installation of components in the manual.

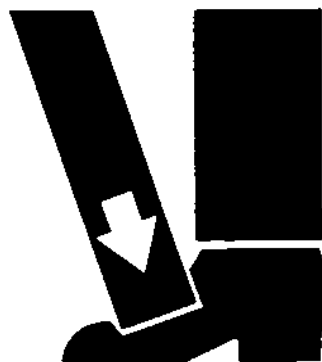

DX,LIFT -19-04JUN90

10  
05  
7  
-JUN-23AUG88  
TS226

### SERVICE TIRES SAFELY

Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims or missing lug bolts and nuts.



DX,TIRECP -19-24AUG90

-JUN-12APR90  
TS952


## AVOID HARMFUL ASBESTOS DUST

Avoid breathing dust that may be generated when handling components containing asbestos fibers. Inhaled asbestos fibers may cause lung cancer.

Components in products that may contain asbestos fibers are brake pads, brake band and lining assemblies, clutch plates, and some gaskets. The asbestos used in these components is usually found in a resin or sealed in some way. Normal handling is not hazardous as long as airborne dust containing asbestos is not generated.

Avoid creating dust. Never use compressed air for cleaning. Avoid brushing or grinding of asbestos containing materials. When servicing, wear an approved respirator. A special vacuum cleaner is recommended to clean asbestos. If not available, wet the asbestos containing materials with a mist of oil or water.

Keep bystanders away from the area.

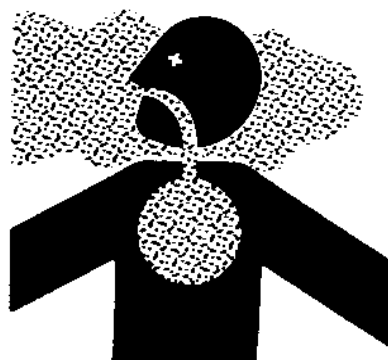

DX,DUST -19-27AUG90

TS220 -JUN-23AUG88

## AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-05OCT90

TS953 -JUN-15MAY90

10-05-8

## REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

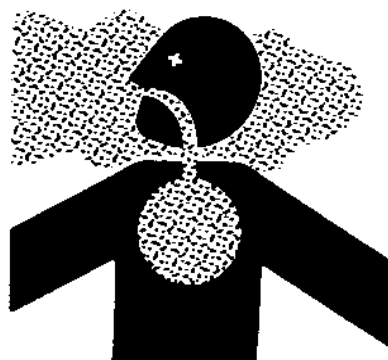

DX,PAINT -19-04JUN90

10  
05  
9  
-JUN-23AUG88  
TS220


## USE PROPER TOOLS

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards.

Use power tools only to loosen threaded parts and fasteners.

For loosening and tightening hardware, use the correct size tools. DO NOT use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches.

Use only service parts meeting John Deere specifications.

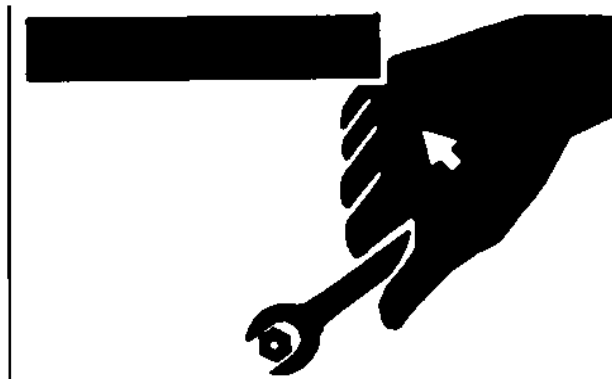

DX,REPAIR -19-04JUN90

-JUN-08NOV89  
TS779