

 
BL-370

B Series

IR Ingersoll-Rand®

Service Manual

S/N 572711001 & Above

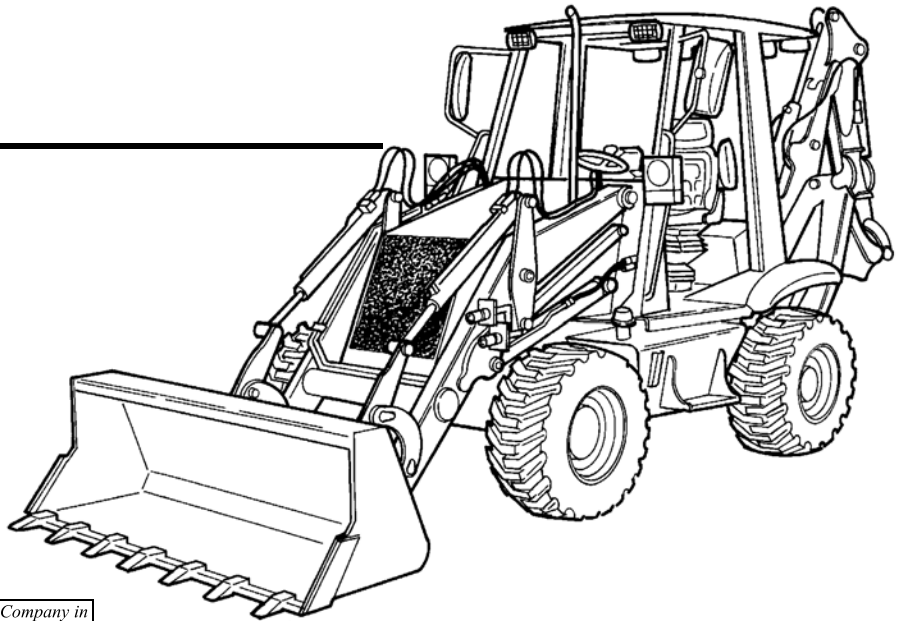

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

MAINTENANCE SAFETY


WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0199


 **Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.




 Never service the Ingersoll-Rand Loader Backhoe without instructions.

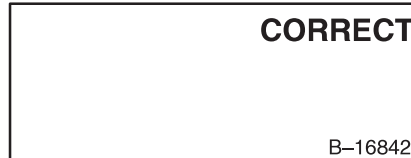


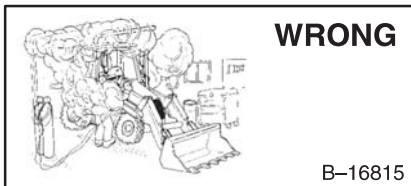 
 Always use an approved lift arm support device when servicing the loader backhoe with the lift arm raised. Replace the lift arm support device if damaged or missing.


 Disconnecting or loosening any hydraulic tubeline, hose, fitting component, or part failure can cause lift arms or backhoe boom to drop.




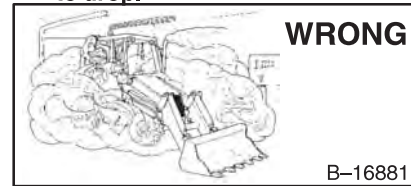 
 Cleaning and maintenance are required daily.


 NEVER modify equipment or add attachments not approved by Ingersoll-Rand.




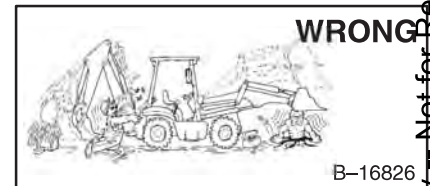 
 Have good ventilation when welding or grinding painted parts.


 Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.




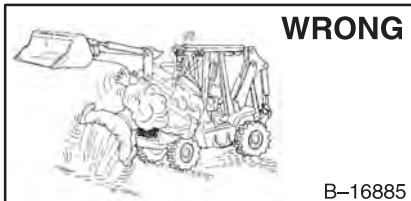 
 Vent exhaust to outside when engine must be run for service.


 Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.





 Never work on loader backhoe with lift arms raised unless supported by an approved lift arm support device.


 Always lower the backhoe bucket to the ground before doing any maintenance.




 Stop, cool and clean engine of flammable materials before checking fluid.


 Never service or adjust machine with the engine running unless instructed to do so in the manual.


 Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.

 Never fill fuel tank with engine running, while smoking or when near open flame.





 Keep body, jewelry and clothing away from moving parts, electrical contacts, hot parts and exhaust.


 Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.

 Keep engine cover closed except for service. Close and latch engine cover before operating the loader backhoe.



 Lead-acid batteries produce flammable and explosive gases.

 Keep arcs, sparks, flames and lighted tobacco away from batteries.

 Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are not in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED Ingersoll-Rand SERVICE PERSONNEL**. Always use genuine Ingersoll-Rand replacement parts.

MSW18-0602

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	70-01	HYDRAULIC FLUID RESERVOIR	20-01
AIR CLEANER SERVICE	10-01	HYDRAULIC SYSTEM INFORMATION	20-01
ALTERNATOR	60-01	HYDRAULIC/HYDROSTATIC FLUID	
ALTERNATOR BELT	10-01	SPECIFICATIONS	SPEC-01
APPROVED LIFT ARM SUPPORT DEVICE	10-01	HYDRAULIC/HYDROSTATIC SYSTEM	10-01
ARM CYLINDER	20-01	HYDROSTATIC DRIVE MOTOR	30-01
ARM	50-01	HYDROSTATIC PUMP	30-01
AXLE TOE-IN	10-01	HYDROSTATIC SYSTEM INFORMATION	30-01
		HYDROSTATIC TESTING	30-01
BACKHOE CONTROL VALVE	20-01		
BATTERY	60-01	INSTRUMENT PANEL	60-01
BOB-TACH	50-01		
BOB-TACH HAND LEVER	10-01	LIFT ARMS	50-01
BOOM	50-01	LIFT ARM STABILIZER	50-01
BOOM CYLINDER	20-01	LIFT CYLINDER	20-01
BOOM LOCK PIN	10-01	LIFTING AND BLOCKING THE	
BUCKET	50-01	LOADER BACKHOE	10-01
BUCKET CYLINDER	20-01	LOADER BACKHOE SPECIFICATIONS	SPEC-01
BUCKET POSITIONING LINK	50-01	LOADER BACKHOE TORQUE	SPEC-01
		LOADER CONTROL VALVE	20-01
CAB LIGHTS	60-01	LUBRICATING THE LOADER BACKHOE	10-01
CENTER FLOOR PANEL	50-01		
CONVERSIONS	SPEC-01	MAIN RELIEF VALVE	20-01
		MASTER CYLINDER	20-01
DRIVE COUPLER	70-01	MUFFLER	70-01
DRIVESHAFT	40-01		
DROP BOX	40-01	OIL COOLER	30-01
		OPERATOR CANOPY	50-01
ELECTRICAL SYSTEM INFORMATION	60-01	OPERATOR SEAT	50-01
ENCLOSED CAB	50-01		
ENGINE	70-01	PARKING BRAKE HOUSING	40-01
ENGINE COMPONENTS AND TESTING	70-01	PORT RELIEF VALVE	
ENGINE COOLING SYSTEM	10-01	(BACKHOE CONTROL VALVE)	20-01
ENGINE COVER	10-01, 50-01		
ENGINE LUBRICATION SYSTEM	10-01	RADIATOR	70-01
ENGINE SIDE COVERS	50-01	REAR AXLE	10-01, 40-01
ENGINE SPECIFICATIONS	SPEC-01	RECONDITIONING THE ENGINE	70-01
ENGINE SPEED CONTROL	70-01		
FENDER	50-01	SERVICE SCHEDULE	10-01
FLOOR PANELS	50-01	STABILIZER	50-01
FLYWHEEL	70-01	STABILIZER CYLINDER (FRONT & REAR)	20-01
FLYWHEEL HOUSING	70-01	STEERING CYLINDER	20-01
FRONT AXLE	10-01, 40-01	STEERING PUMP	20-01
FRONT AXLE PIVOT FRAME	50-01	STEERING VALVE	20-01
FRONT LIGHTS	60-01	STARTER	60-01
FUEL LEVEL SENDER	60-01	SWING CYLINDER	20-01
FUEL SYSTEM	10-01	SWING FRAME	50-01
FUEL TANK	50-01		
GEAR PUMP	20-01	TILT CYLINDER	20-01
GRILL	50-01	TIRE MAINTENANCE	10-01
GRILL FRAME	50-01	TORQUE SPECIFICATIONS	
		FOR BOLTS	SPEC-01
HYDRAULIC FILTER	20-01	TOWING THE LOADER BACKHOE	10-01
HYDRAULIC FILTER HOUSING	20-01	TRANSPORTING THE LOADER BACKHOE	10-01
		TRAVEL PEDAL	70-01

Dealer Copy -- Not for Resale

ALPHABETICAL INDEX (CONT'D)

TROUBLESHOOTING.....40-01, 70-01
TURBO70-01
TURN INDICATOR LIGHTS (FRONT).....60-01
TURN INDICATOR LIGHTS (REAR).....60-01

X-CHANGE™50-01

Dealer Copy -- Not for Resale

CONTENTS

FOREWORD	II
SAFETY INSTRUCTIONS	V
SERIAL NUMBER LOCATION	VII
DELIVERY REPORT	VII
LOADER BACKHOE IDENTIFICATION	VIII
SAFETY AND MAINTENANCE	10-01
HYDRAULIC SYSTEM	20-01
HYDROSTATIC SYSTEM	30-01
DRIVE SYSTEM	40-01
MAIN FRAME	50-01
ELECTRICAL SYSTEM AND ANALYSIS	60-01
ENGINE SERVICE	70-01
SPECIFICATIONS	SPEC-01

**SAFETY &
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

**DRIVE
SYSTEM**

MAIN FRAME

**ELECTRICAL
SYSTEM &
ANALYSIS**


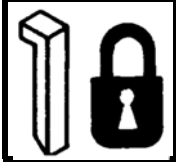 
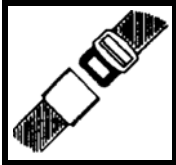 
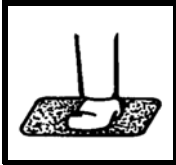 
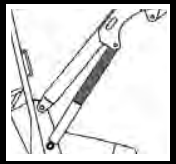 
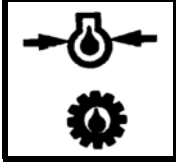 



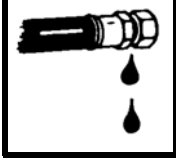 



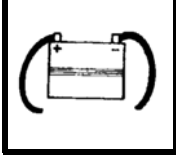 


**ENGINE
SERVICE**

SPECIFICATIONS

FOREWORD


This manual is for the Ingersoll-Rand loader mechanic. It provides necessary servicing and adjustment procedures for the Ingersoll-Rand loader and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, Starting procedure, daily checks, etc.

A general inspection of the following items must be made after the loader has had service or repair:

- | | | | |
|--|---|---|---|
| <p>1. Check that ROPS mounting hardware is tightened and is Ingersoll-Rand approved.</p> |  | <p>9. Bob-Tach wedges and linkages must function correctly and be in good condition.</p> |  |
| <p>2. The seat belt must be correctly installed, functional and in good condition.</p> |  | <p>10. Safety treads must be in good condition.</p> |  |
| <p>3. Check lift arm support device, replace if damaged.</p> |  | <p>11. Check for correct function of indicator lamps (Optional on some models).</p> |  |
| <p>4. Machine signs must be legible and in the correct location.</p> |  | <p>12. Check hydraulic fluid level, engine oil level and fuel supply.</p> |  |
| <p>5. Foot pedal must return to neutral.</p> |  | <p>13. Inspect for fuel, oil or hydraulic fluid leaks.</p> |  |
| <p>6. Check for correct function of the work lights</p> |  | <p>14. Lubricate the loader backhoe.</p> |  |
| <p>7. The parking brake must function correctly.</p> |  | <p>15. Check the condition of the battery and cables.</p> |  |
| <p>8. Enclosure door latches must open and close freely.</p> |  | <p>16. Inspect the air cleaner for damage or leaks. Check the condition of the element.</p> |  |

Dealer Copy -- Not for Resale

 
17. Check the electrical charging system.

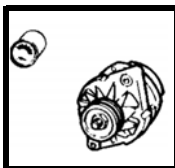

20. Operate the loader and check all functions.



 18. Check tires for wear and pressure.

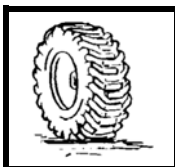


21. Check for any field modification not completed.



19. Inspect for loosen or broken parts or connections.



 22. Recommend to the owner that all necessary corrections be made before the machine is returned to service.

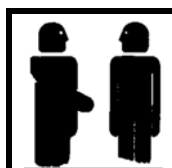

Dealer Copy -- Not for Resale

**CALIFORNIA
PROPOSITION 65 WARNING**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.



Dealer Copy -- Not for Resale

SAFETY INSTRUCTIONS

Safe Operation Is The Operator's Responsibility

Carefully follow the operating and maintenance instructions in this manual.

The Ingersoll-Rand loader backhoe is highly maneuverable and compact. It is rugged and useful under a wide variety of conditions. This presents an operator with hazards associated with off highway, rough terrain applications, common with Ingersoll-Rand loader backhoe usage.

The Ingersoll-Rand loader backhoe has an internal combustion engine with resultant heat and exhaust. All exhaust gasses can kill or cause illness so use the loader backhoe with adequate ventilation.

The dealer explains the capabilities and restrictions of the Ingersoll-Rand loader backhoe and attachments for each application. The dealer demonstrates the safe operation according to Ingersoll-Rand instructional materials, which are also available to operators. The dealer can also identify unsafe modifications or use of unapproved attachments. The attachments and buckets are designed for a Rated Operating Capacity (some have restricted lift heights) and secure fastening to the Ingersoll-Rand loader or Rated Lift Capacity for the backhoe. The user must check with the dealer, or Ingersoll-Rand literature, to determine safe loads of materials of specified densities for the loader backhoe-attachment combination.

The following publications and training materials provide information on the safe use and maintenance of the Ingersoll-Rand loader backhoe and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the Ingersoll-Rand loader backhoe and attachment is in safe operating condition.
- The Operation & Maintenance Manual delivered with the Ingersoll-Rand loader backhoe or attachment gives operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided inside the cab of the loader backhoe. Replacement Operation & Maintenance Manuals can be ordered from your Ingersoll-Rand dealer.
- Machine signs (decals) instruct on the safe operation and care of your Ingersoll-Rand loader backhoe or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Ingersoll-Rand dealer.

- An Operator's Handbook is fastened to the operator cab of the loader backhoe. Its brief instructions are convenient to the operator. The Handbook is available from your dealer in an English edition or one of many other languages. See your Ingersoll-Rand dealer for more information on translated versions.
- The Safety Manual delivered with Ingersoll-Rand loader backhoe gives general safety information.
- See the ADDITIONAL PUBLICATIONS Page in this manual or your Ingersoll-Rand dealer for Service and Parts Manuals, printed materials, videos, or training courses available. Also check the Ingersoll-Rand web site www.ingersoll-rand.com

The dealer and owner/operator review the recommended uses of the product when delivered. If the owner/operator will be using the machine for a different application(s) he must ask the dealer for recommendations on the new use.



Call Before You Dig

1-888-258-0808

When you call, you will be directed to a location in your state/city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.)

SI17-1003

SAFETY INSTRUCTIONS (CONT'D)

FIRE PREVENTION

The machines and some attachments have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

- Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.
- The operator cab, engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.
- Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part.
- Check fuel and hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Tighten or replace any parts that show leakage. Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.
- Do not use ether or starting fluids on any engine which has glow plugs. These starting aids can cause explosion and injure you or bystanders.
- Always clean the machine, disconnect the battery, and disconnect the wiring from the electronic controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding. Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.
- Stop the engine and let it cool before adding fuel. No smoking!
- Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.

- Know where fire extinguishers and first aid kits are located and how to use them. Fire extinguishers are available from your Ingersoll-Rand dealer.

NOTE: The engine in this machine is NOT equipped with a spark arrestor exhaust system. It is in violation of California Public Resource Code Section 4442 to use or operate this engine on or near any forest-covered, brush-covered or grass-covered land unless the exhaust system is equipped with a spark arrestor meeting any applicable spark arrestor. All spark arrestors must be properly maintained.

SI19-0603

SERIAL NUMBER LOCATION

Always use the serial number of the loader backhoe when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

Loader Backhoe Serial Number

Figure 1



The loader backhoe serial number plate is located under the loader lift arm on the left side [Figure 1].


Explanation of loader Serial Number:

XXXX	XXXXX
Model 1.-Model/ Engine Combination	Model 2.-Production Sequence (Series)

1. The four digit Model/Engine Combination Module number identifies the model number and engine combination.
2. The five digit Production Sequence Number identifies the order which the loader is produced.

Engine Serial Number

 
Figure 2

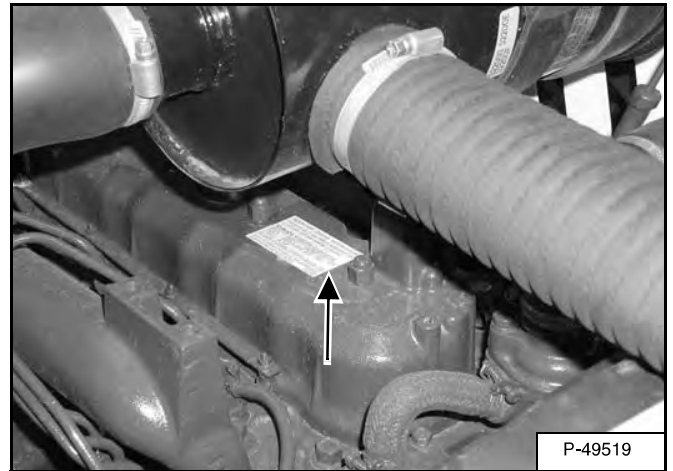

The engine serial number is located on the valve cover at the right side of the engine [Figure 2].

DELIVERY REPORT

 
Figure 3

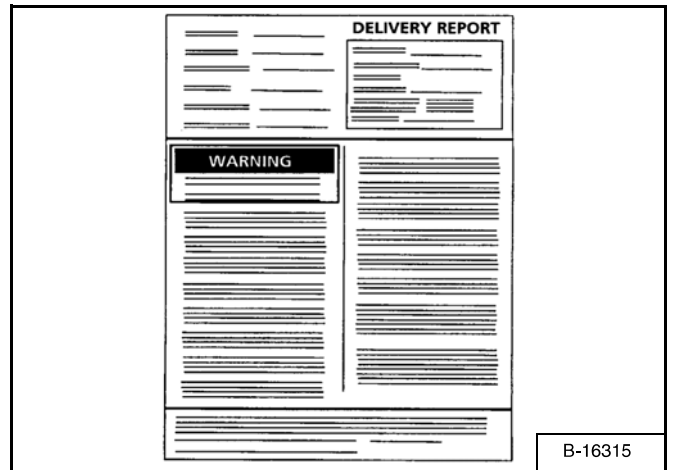

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the Ingersoll-Rand loader backhoe is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely [Figure 3].

Dealer Copy -- Not for Resale

 LOADER BACKHOE IDENTIFICATION

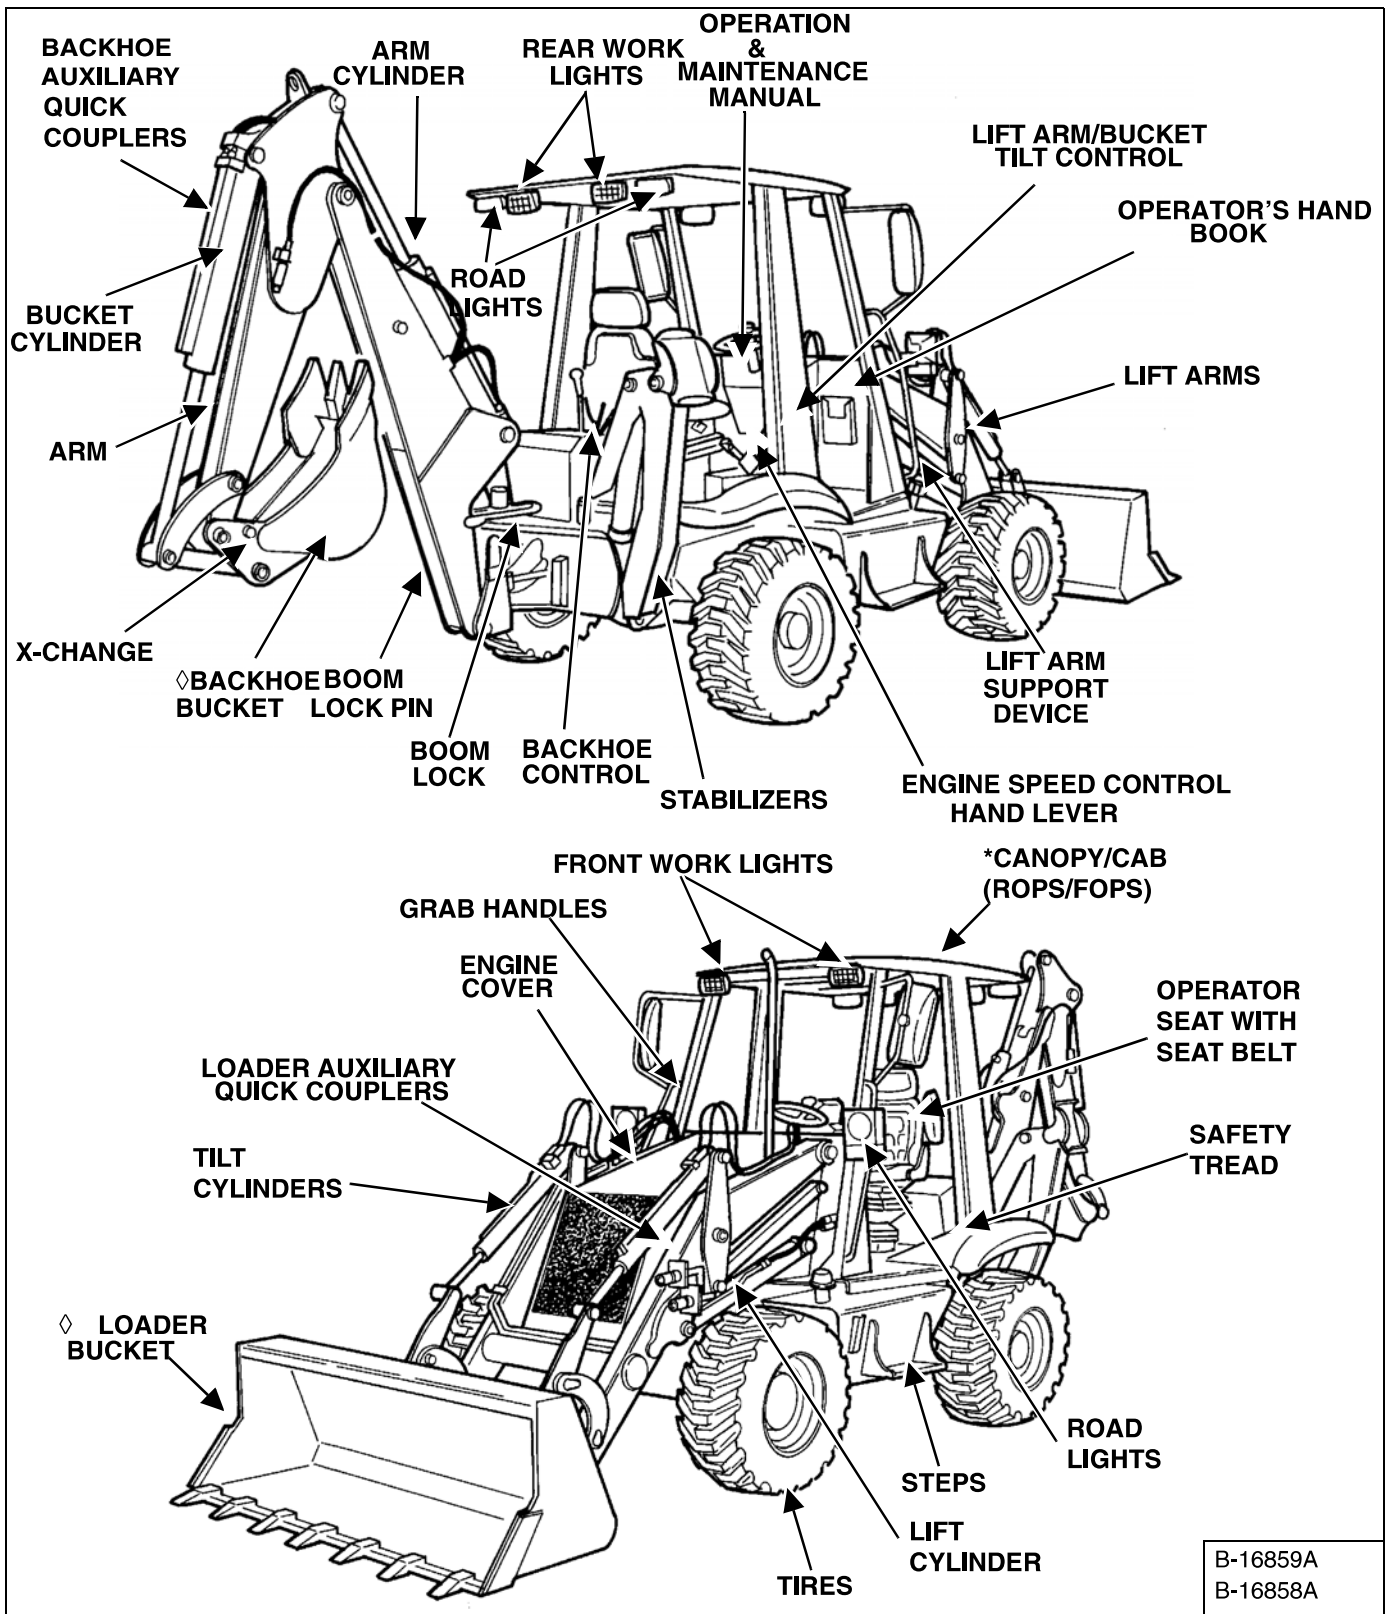

Dealer Copy -- Not for Resale

◇ BUCKET - Several different buckets and other attachments are available for the Ingersoll-Rand loader backhoe.
 * Roll Over Protective Structure (ROPS) per SAE J1040 and ISO 3471 and Falling Object Protective Structure (FOPS) per ISO 3449, Level I.

SAFETY AND MAINTENANCE

AIR CLEANER SERVICE 10-80-1
 Replacing The Filter..... 10-80-1

ALTERNATOR BELT 10-160-1
 Adjusting The Alternator Belt..... 10-160-1

APPROVED LIFT ARM SUPPORT DEVICE 10-20-1
 Installing The Approved Lift Arm Support Device 10-20-1
 Removing The Approved Lift Arm Support Device 10-20-2

AXLE TOE-IN 10-60-1
 Procedure 10-60-1

BOOM LOCK PIN 10-140-1
 Engaging And Disengaging The Pin 10-140-1

BOB-TACH HAND LEVER 10-150-1
 Inspection And Maintenance 10-150-1

ENGINE COOLING SYSTEM..... 10-90-1
 Coolant Replacement 10-90-1

ENGINE COVER..... 10-30-1

ENGINE LUBRICATION SYSTEM 10-110-1
 Checking Engine Oil 10-110-1
 Oil Chart..... 10-110-1
 Replacing Oil And Filter..... 10-110-2

FRONT AXLE 10-130-2
 Checking Oil Level..... 10-130-2
 Draining Oil 10-130-2

FUEL SYSTEM 10-100-1
 Filling The Fuel Tank 10-100-1
 Fuel Filter..... 10-100-2
 Fuel Specifications..... 10-100-1
 Removing Air From The Fuel System 10-100-2

HYDRAULIC/HYDROSTATIC SYSTEM 10-120-1
 Checking And Adding Fluid 10-120-1
 Cleaning The Cooler 10-120-1
 Replacing Hydraulic Fluid 10-120-3
 Replacing Hydraulic/Hydrostatic Filter..... 10-120-2

LIFTING AND BLOCKING THE LOADER BACKHOE 10-10-1
 Procedure 10-10-1

Dealer Copy -- Not for Resale

SAFETY AND MAINTENANCE

LUBRICATING THE LOADER BACKHOE	10-170-1
REAR AXLE	10-130-1
Checking Oil Level	10-130-1
Draining Oil	10-130-1
SERVICE SCHEDULE	10-70-1
Chart	10-70-1
TIRE MAINTENANCE	10-180-1
Mounting	10-180-1
Tire Pressure	10-180-1
Wheel Nuts	10-180-1
TOWING THE LOADER BACKHOE	10-50-1
Procedure	10-50-1
TRANSPORTING THE LOADER BACKHOE	10-40-1

LIFTING AND BLOCKING THE LOADER BACKHOE


Procedure

! WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0199

 Figure 10-10-1

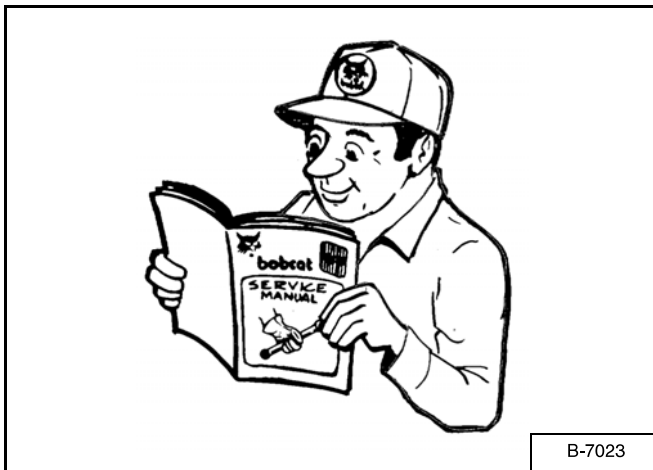

Read the removal and installation, disassembly and assembly, etc., completely to become familiar with the procedure before beginning [Figure 10-10-1].

Always park the loader backhoe on a level surface.


Stop the engine, and engage the parking brake.

! WARNING

Put jackstands under the front and rear axle before running the engine for service. Failure to use jackstands can allow the machine to fall or move and cause injury or death.

W-2461-0303

 Figure 10-10-2

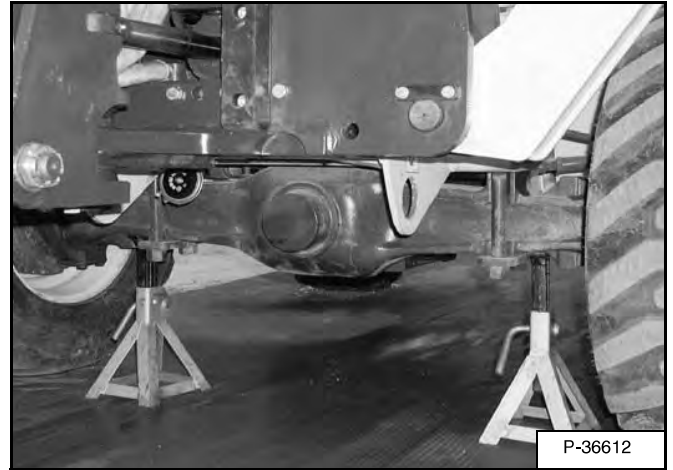

Lift the rear of the loader backhoe and install jackstands [Figure 10-10-2].

Figure 10-10-3



NOTE: Loader lift arms are raised for photo clarity.

Lift the front of the loader backhoe and put jackstands under the axle [Figure 10-10-3].

Note: Make sure the jackstands do not touch the tires.

Dealer Copy -- Not for Resale



Dealer Copy -- Not for Resale