

# T40140

S/N 363212001  
& above

 
# T40170

S/N 363312001  
& above



# Bobcat®

## SERVICE MANUAL

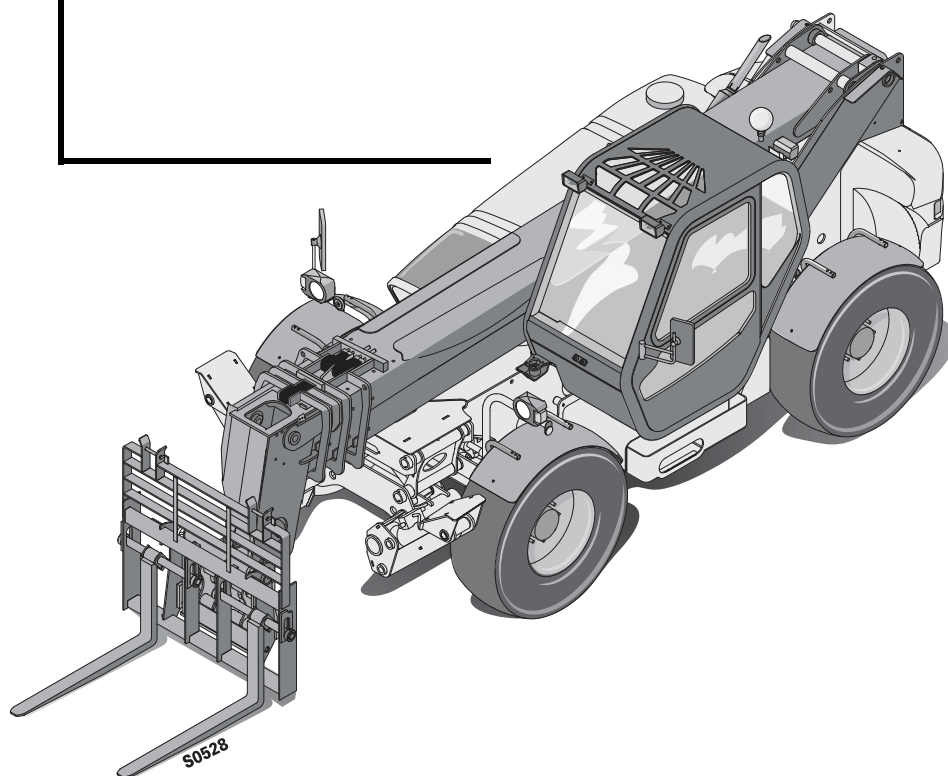





## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

### CORRECT



 
B-10731a

- ⚠ Never service the Bobcat Telescopic Handler without instructions.



**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


### CORRECT

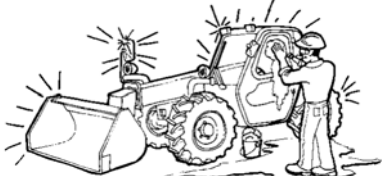

B-16082

- ⚠ Cleaning and maintenance are required daily.


### WRONG

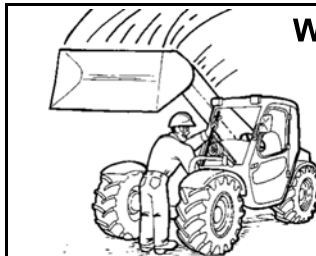 

B-16080

- ⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause boom to drop. Do not go under boom when raised unless supported by an approved boom stop. Replace if damaged.

### WRONG

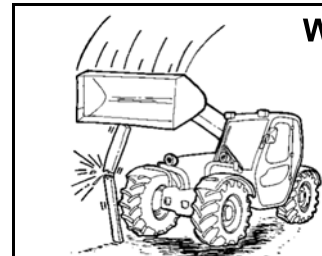 

B-16079

- ⚠ Never work on Telescopic Handler with boom up unless boom is held by an approved boom stop. Replace if damaged.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.


### WRONG



 B-16081

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

### WRONG

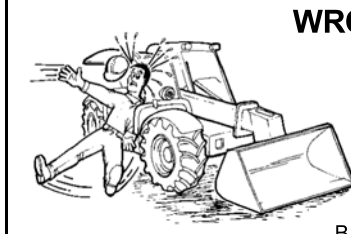

B-16078

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.

### WRONG



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner / operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**.

MSW12-0805

**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**



**Bobcat®**

## ALPHABETICAL INDEX

|  |         |  |         |
|--|---------|--|---------|
| ACCUMULATOR .....                      | 20-210  | FUEL SYSTEM .....                                  | 10-80   |
| AIR CLEANER .....                      | 70-40   | FUEL TANK .....                                    | 50-80   |
| AIR CLEANER SERVICE .....              | 10-60   |  |         |
| AIR CONDITIONING SERVICE .....         | 80-90   | GEAR PUMP .....                                    | 20-130  |
| AIR CONDITIONING SYSTEM FLOW .....     | 80-10   | GENERAL AIR CONDITIONING SERVICE GUIDELINES .....  | 80-60   |
| AIR INTAKE COWLING .....               | 50-170  |  |         |
| ALTERNATOR .....                       | 60-30   | HEATER ASSEMBLY .....                              | 80-170  |
| APPROVED BOOM STOP .....               | 10-150  | HYDRAULIC CONNECTION SPECIFICATIONSSPEC-50         |         |
| AXLE AND DIFFERENTIAL (FRONT) .....    | 40-20   | HYDRAULIC CONTROL VALVE .....                      | 20-170  |
| AXLE AND DIFFERENTIAL (REAR) .....     | 40-21   | HYDRAULIC / HYDROSTATIC FLUID SPECIFICATIONS ..... | SPEC-60 |
| AXLE TOE-IN .....                      | 40-40   | HYDRAULIC / HYDROSTATIC SYSTEM .....               | 10-100  |
| AXLES (FRONT AND REAR) .....           | 10-110  | HYDRAULIC RESERVOIR .....                          | 20-150  |
|  |         | HYDRAULIC SYSTEM INFORMATION .....                 | 20-10   |
| BASIC TROUBLESHOOTING .....            | 80-50   | HYDROSTATIC DRIVE MOTOR .....                      | 30-30   |
| BATTERY .....                          | 60-20   | HYDROSTATIC PUMP .....                             | 30-40   |
| BOOM ASSEMBLY .....                    | 50-30   | HYDROSTATIC SYSTEM INFORMATION .....               | 30-10   |
| BOOM TRAY .....                        | 50-160  |  |         |
| BRAKE LIGHT SWITCH .....               | 60-100  | INCHING SWITCH .....                               | 60-170  |
| BRAKE VALVE .....                      | 20-120  | INSTRUMENT PANEL .....                             | 60-80   |
| BUCKET POSITIONING CYLINDER .....      | 20-30   | INTERMEDIATE BOOM .....                            | 50-160  |
|  |         | JOYSTICK .....                                     | 60-170  |
| COMPONENTS .....                       | 80-20   | JOYSTICK PANEL .....                               | 50-160  |
| COMPRESSOR .....                       | 80-110  |  |         |
| CONDENSER .....                        | 80-120  | LIFT CYLINDER .....                                | 20-20   |
| CONVERSIONS .....                      | SPEC-70 | LIFTING AND BLOCKING THE TELESCOPIC HANDLER .....  | 10-10   |
|  |         | LIGHTS .....                                       | 60-60   |
| DASH COVER / STEERING COLUMN COVER ... | 50-130  | LUBRICATION .....                                  | 10-120  |
| DRIVE BOX .....                        | 20-70   | MACHINE TORQUE SPECIFICATIONS .....                | SPEC-30 |
| DRIVESHAFT .....                       | 40-70   | MAIN RELIEF VALVE .....                            | 20-80   |
|  |         | MUFFLER .....                                      | 70-30   |
| ELECTRICAL SYSTEM INFORMATION .....    | 60-10   |  |         |
| ENGINE AND ENGINE MOUNTS .....         | 70-60   | OIL COOLER .....                                   | 30-20   |
| ENGINE COMPONENTS AND TESTING .....    | 70-70   | OIL COOLER / RADIATOR .....                        | 70-50   |
| ENGINE COOLING SYSTEM .....            | 10-70   | OPERATOR CAB .....                                 | 10-20   |
| ENGINE COVER .....                     | 10-160  | OPERATOR CAB .....                                 | 50-10   |
| ENGINE COVER .....                     | 50-170  | OPERATOR SEAT .....                                | 50-20   |
| ENGINE / HYDROSTAT ASSEMBLY .....      | 70-80   |  |         |
| ENGINE LUBRICATION SYSTEM .....        | 10-90   | PARKING BRAKE .....                                | 20-190  |
| ENGINE SPECIFICATIONS .....            | SPEC-20 | PARKING BRAKE .....                                | 40-50   |
| ENGINE SPEED CONTROL .....             | 70-20   | PEDAL ASSEMBLY .....                               | 60-140  |
| ENGINE TIMING .....                    | 70-71   | PORT RELIEF VALVES .....                           | 20-171  |
| END BOOM .....                         | 50-40   | PRESSURE REDUCING VALVE .....                      | 20-200  |
| EVAPORATOR / BLOWER UNIT .....         | 80-150  | PRESSURE SWITCH .....                              | 80-140  |
| EXPANSION VALVE .....                  | 80-160  |  |         |
| EXTENSION CYLINDER .....               | 20-40   |  |         |
|  |         |  |         |
| FAN MOTOR .....                        | 20-140  |  |         |
| FENDER .....                           | 50-110  |  |         |
| FLOW CONTROL VALVE .....               | 20-172  |  |         |
| FLYWHEEL AND HOUSING .....             | 70-90   |  |         |
| FRAME LEVELING CYLINDER .....          | 20-100  |  |         |
| FRAME LEVEL SPEED SWITCH .....         | 60-170  |  |         |
| FRONT AXLE .....                       | 40-30   |  |         |
| FRONT WEIGHT .....                     | 50-120  |  |         |
| FRONT WIPER MOTOR .....                | 60-110  |  |         |

---

## ALPHABETICAL INDEX (CONT'D)

QUICK TACH..... 50-90  
QUICK TACH CYLINDER..... 20-90

REAR AXLE..... 40-90  
REAR WEIGHTS..... 50-100  
REAR WIPER MOTOR ..... 60-130  
RECEIVER / DRIER..... 80-130  
RECONDITIONING THE ENGINE..... 70-100  
REGULAR MAINTENANCE..... 80-40

SAFETY ..... 80-30  
SERVICE BRAKE ..... 40-80  
SERVICE SCHEDULE ..... 10-50  
SERVICE SOFTWARE ..... 60-170  
STABILIZER CONTROL VALVE..... 20-250  
STABILIZER CYLINDER..... 20-250  
STABILIZER FRAME..... 50-160  
STARTER..... 60-40  
STEERING ANGLE ADJUSTMENT..... 40-60  
STEERING CYLINDER (FRONT)..... 20-60  
STEERING CYLINDER (REAR)..... 20-61  
STEERING MODE VALVE BLOCK ..... 20-110  
STEERING VALVE ..... 20-160  
SWITCH PANEL..... 60-90  
SYSTEM CHARGING AND RECLAMATION ..... 80-100  
SYSTEM TROUBLESHOOTING CHART ..... 80-70

TEMPERATURE / PRESSURE..... 80-80  
TIRE MAINTENANCE ..... 10-130  
TILT CYLINDER ..... 20-50  
TOP WIPER MOTOR ..... 60-120  
TORQUE SPECIFICATIONS FOR BOLTS..... SPEC-40  
TOW VALVE ..... 20-220  
TOWING THE TELESCOPIC HANDLER..... 10-40  
TRANSPORTING THE TELESCOPIC HANDLER.. 10-30  
TRAVEL / SIGNAL LEVER..... 60-70  
TROUBLESHOOTING ..... 40-10  
TROUBLESHOOTING ..... 70-10

TELESCOPIC HANDLER SPECIFICATIONS... SPEC-10

WEAR PADS (FRONT) ..... 50-50  
WEAR PADS (REAR)..... 50-60

## CONTENTS

|  |         |
|--|---------|
| FOREWORD .....                                 | II      |
| SAFETY INSTRUCTIONS .....                      | V       |
| SERIAL NUMBER LOCATIONS .....                  | VIII    |
| DELIVERY REPORT .....                          | IX      |
| BOBCAT TELESCOPIC HANDLER IDENTIFICATION ..... | IX      |
| SAFETY AND MAINTENANCE .....                   | 10-01   |
| HYDRAULIC SYSTEM .....                         | 20-01   |
| HYDROSTATIC SYSTEM .....                       | 30-01   |
| DRIVE SYSTEM .....                             | 40-01   |
| MAIN FRAME .....                               | 50-01   |
| ELECTRICAL SYSTEM AND ANALYSIS .....           | 60-01   |
| ENGINE SERVICE .....                           | 70-01   |
| HEATING, VENTILATION, AIR CONDITIONING .....   | 80-01   |
| SPECIFICATIONS .....                           | SPEC-01 |

**SAFETY &  
MAINTENANCE**

**HYDRAULIC  
SYSTEM**

**HYDROSTATIC  
SYSTEM**

**DRIVE  
SYSTEM**

**MAIN FRAME**

**ELECTRICAL  
SYSTEM &  
ANALYSIS**

**ENGINE  
SERVICE**

**HVAC**

**SPECIFICATIONS**

 


# FOREWORD


This manual is for the Bobcat Telescopic Handler mechanic. It provides necessary servicing and adjustment procedures for the Bobcat Telescopic Handler and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the Telescopic Handler has had service or repair:


1. Check that ROPS / FOPS (including right side window) is in good condition and is not modified.

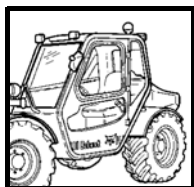

 
9. Enclosure door latches must open and close freely.

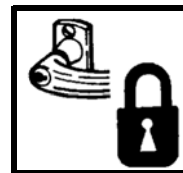

 2. Check that ROPS mounting hardware is tightened and is Bobcat approved.

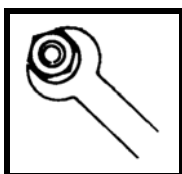


10. Attachment locking pins must function correctly and be in good condition.

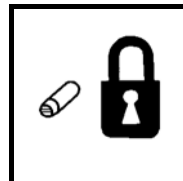 


3. The seat belt must be correctly installed, functional and in good condition.



 
11. Safety treads must be in good condition.

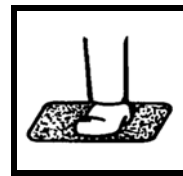

 4. Check boom support device, replace if damaged.

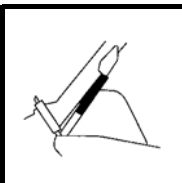

 
12. Check for correct function of indicator lamps and gauges.

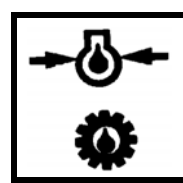

5. Machine signs must be legible and in the correct location.



 
13. Check hydraulic fluid level, engine oil level and fuel supply.

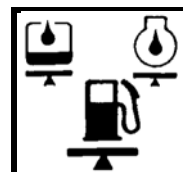

6. Check tires for wear and pressure. Use only approved tires.



 14. Inspect for fuel, oil or hydraulic fluid leaks.

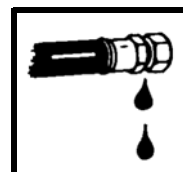


7. Check for correct function of the work lights.




15. Lubricate the Telescopic Handler



 
8. The parking brake must function correctly.

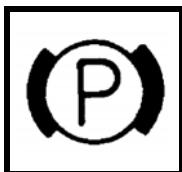

 
16. Check the condition of the battery and cables.

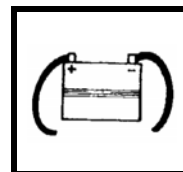

 17. Inspect the air cleaner for damage or leaks. Check the condition of the element.

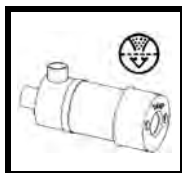

 
18. Check the electrical charging system.

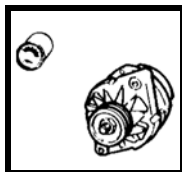

19. Inspect for loose or broken parts or connections.



 
20. Operate the Telescopic Handler and check all functions.

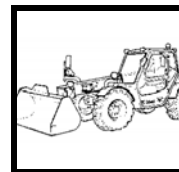

21. Check for any field modification not completed.



 22. Recommend to the owner that all necessary corrections be made before the machine is returned to service.

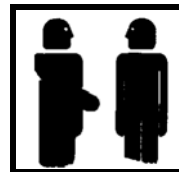



## SAFETY INSTRUCTIONS



### Safety Alert Symbol

This symbol with a warning statement means:  
"Warning, be alert! Your safety is involved!"  
Carefully read the message that follows.



## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

## IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

The signal word **DANGER** on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107



## WARNING

The signal word **WARNING** on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with

the machine or attachment contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.

- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.

The dealer and owner / operator review the recommended uses of the product when delivered. If the owner / operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.



Cutting or drilling concrete containing sand or rock containing quartz may result in exposure to silica dust.

SI VH-0308 SM

## FIRE PREVENTION



### Maintenance

The machine and some attachments have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

The operator's area, engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.

All fuels, most lubricants and some coolants mixtures are flammable. Flammable fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire.

### Operation

Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.

### Electrical



Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part or wires that are loose or frayed.

Battery gas can explode and cause serious injury. Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting. Do not jump start or charge a frozen or damaged battery. Keep any open flames or sparks away from batteries. Do not smoke in battery charging area.

## Hydraulic System

Check hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Hydraulic tubes and hoses must be properly routed and have adequate support and secure clamps. Tighten or replace any parts that show leakage.

Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.

### Fueling



Stop the engine and let it cool before adding fuel. No smoking! Do not refuel a machine near open flames or sparks. Fill the fuel tank outdoors.

### Starting

Do not use ether or starting fluids on any engine that has glow plugs. These starting aids can cause explosion and injure you or bystanders.

Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.

SI VH-0308 SM

---

## **FIRE PREVENTION (CONT'D)**

 
### **Welding And Grinding**

Always clean the machine and attachment, disconnect the battery, and disconnect the wiring from the Bobcat controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding.

Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.

Dust generated from repairing nonmetallic parts such as hoods, fenders or covers can be flammable or explosive. Repair such components in a well ventilated area away from open flames or sparks.

### **Fire Extinguishers**

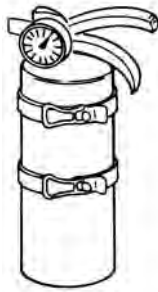

Know where fire extinguishers and first aid kits are located and how to use them. Inspect the fire extinguisher and service the fire extinguisher regularly. Obey the recommendations on the instructions plate.

SI VH-0208

## SERIAL NUMBER LOCATIONS

Always use the serial number of the Telescopic Handler when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

### Telescopic Handler Serial Number


Figure 1



The front, on the right side of the chassis [Figure 1].

### Engine Serial Number

 Figure 2

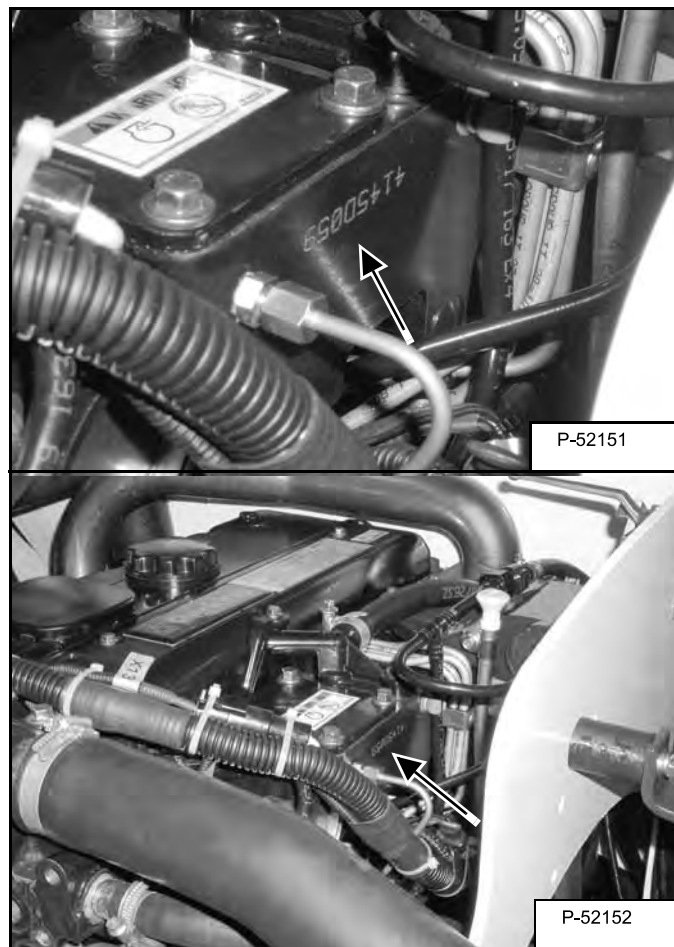

The engine serial number is stamped on a plate near the injection pump or at the rear of the cylinder block [Figure 2]. Always use the full number when ordering replacement parts.

### Other Serial Numbers

Some components may also have serial numbers. Always use these serial numbers when requesting parts.

Delivery Report

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the Telescopic Handler is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely [Figure 3].

Figure 3


DELIVERY REPORT

WARNING

B-16315

Bobcat Telescopic Handler Identification

 Figure 4

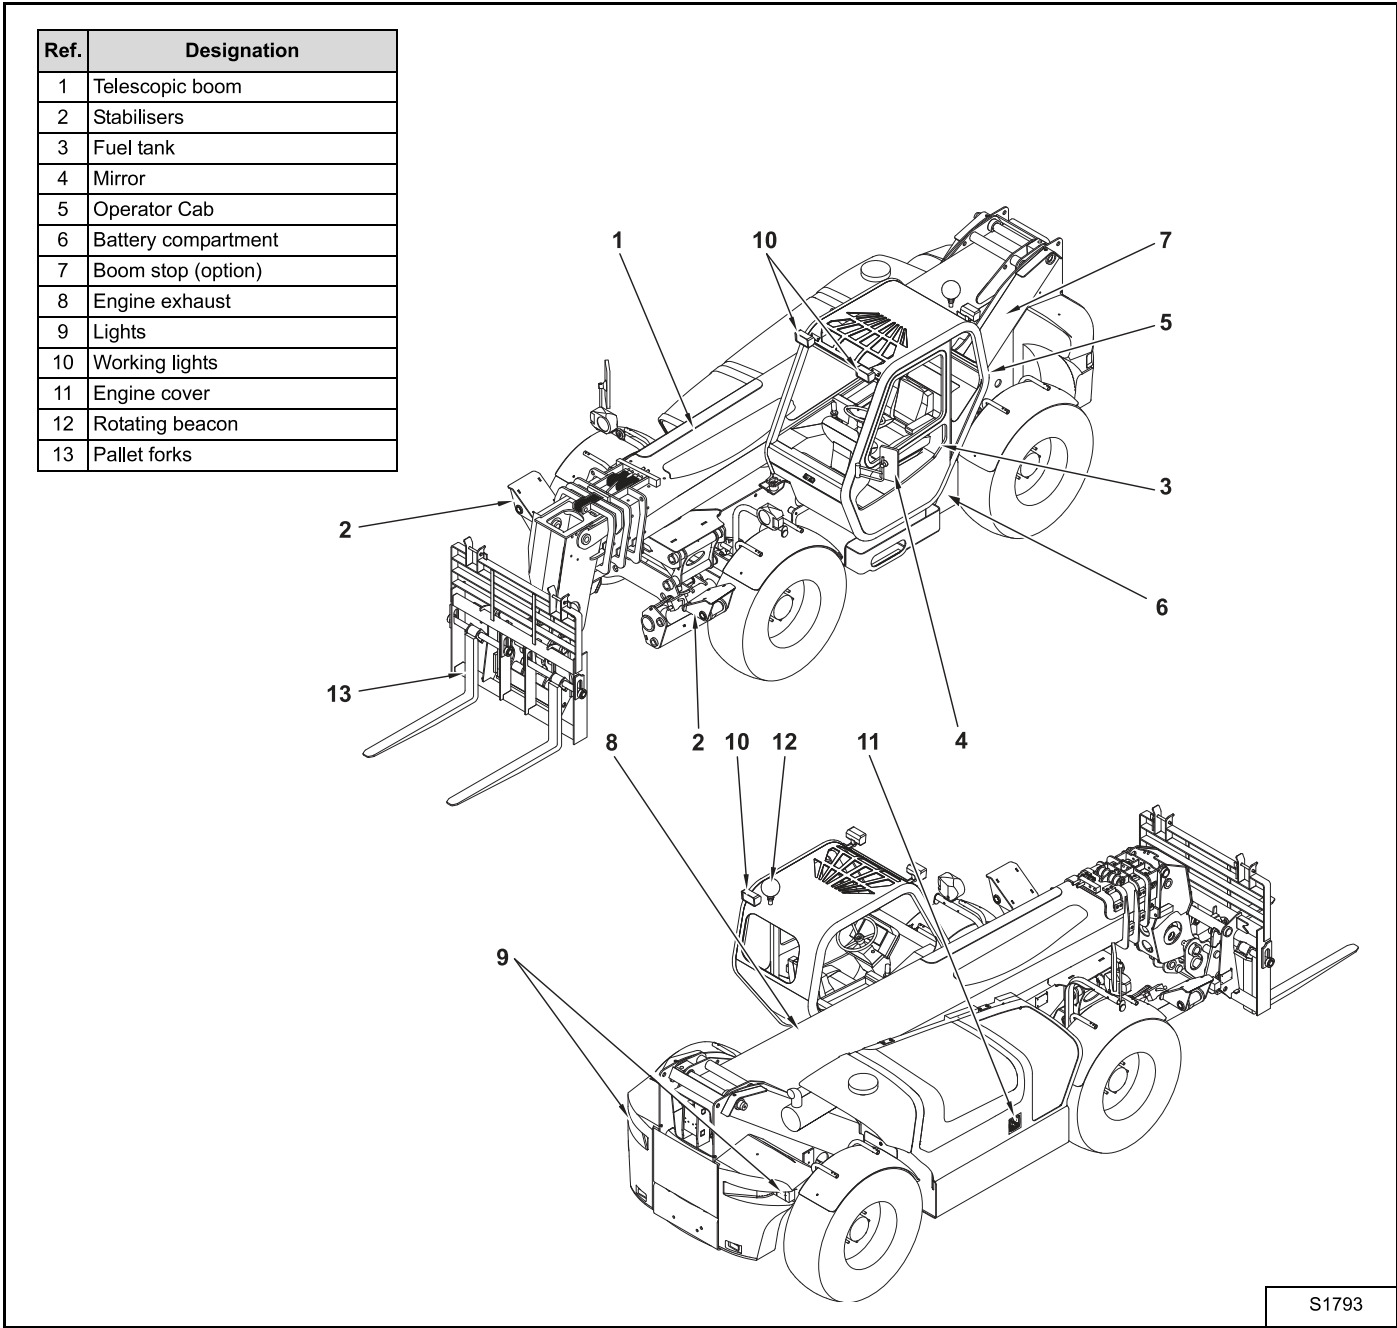





**Bobcat®**

## SAFETY AND MAINTENANCE

|   |          |
|---|----------|
| AIR CLEANER SERVICE .....                         | 10-60-1  |
| Replacing Filter Element .....                    | 10-60-1  |
| APPROVED BOOM STOP .....                          | 10-150-1 |
| Installing The Approved Boom Stop .....           | 10-150-1 |
| Removing The Approved Boom Stop .....             | 10-150-1 |
| AXLES (FRONT AND REAR) .....                      | 10-110-1 |
| Checking Oil Level (Front Differential) .....     | 10-110-2 |
| Checking Oil Level (Planetary Carrier) .....      | 10-110-1 |
| Checking Oil Level (Rear Differential) .....      | 10-110-2 |
| Draining Oil (Front Differential) .....           | 10-110-3 |
| Draining Oil (Planetary Carrier) .....            | 10-110-1 |
| Draining Oil (Rear Differential) .....            | 10-110-2 |
| ENGINE COOLING SYSTEM .....                       | 10-70-1  |
| Checking The Coolant Level .....                  | 10-70-1  |
| Cleaning The Cooling System .....                 | 10-70-1  |
| Replacing The Coolant .....                       | 10-70-2  |
| ENGINE COVER .....                                | 10-160-1 |
| Opening And Closing The Engine Cover .....        | 10-160-1 |
| ENGINE LUBRICATION SYSTEM .....                   | 10-90-1  |
| Checking Engine Oil .....                         | 10-90-1  |
| Replacing Oil And Filter .....                    | 10-90-2  |
| FUEL SYSTEM .....                                 | 10-80-1  |
| Filling The Fuel Tank .....                       | 10-80-1  |
| Fuel Filter .....                                 | 10-80-1  |
| Fuel Specifications .....                         | 10-80-1  |
| HYDRAULIC / HYDROSTATIC SYSTEM .....              | 10-100-1 |
| Checking And Adding Fluid .....                   | 10-100-1 |
| Replacing Hydraulic Fluid .....                   | 10-100-2 |
| Replacing Hydraulic / Hydrostatic Filter .....    | 10-100-1 |
| LIFTING AND BLOCKING THE TELESCOPIC HANDLER ..... | 10-10-1  |
| Procedure .....                                   | 10-10-1  |

Continued On Next Page

---

## SAFETY AND MAINTENANCE (CONT'D)

|   |          |
|---|----------|
| LUBRICATION .....                         | 10-120-1 |
| Procedure .....                           | 10-120-1 |
| OPERATOR CAB .....                        | 10-20-1  |
| Cab Door .....                            | 10-20-2  |
| Cab Door Window .....                     | 10-20-2  |
| Emergency Exit .....                      | 10-20-1  |
| SERVICE SCHEDULE .....                    | 10-50-1  |
| TIRE MAINTENANCE .....                    | 10-130-1 |
| Tire Mounting .....                       | 10-130-1 |
| Tire Rotation .....                       | 10-130-1 |
| Wheel nuts .....                          | 10-130-1 |
| TOWING THE TELESCOPIC HANDLER .....       | 10-40-1  |
| Procedure .....                           | 10-40-1  |
| TRANSPORTING THE TELESCOPIC HANDLER ..... | 10-30-1  |
| Procedure .....                           | 10-30-1  |