

 
453



Bobcat®

Service Manual

S/N 515011001 & Above
S/N 515111001 & Above

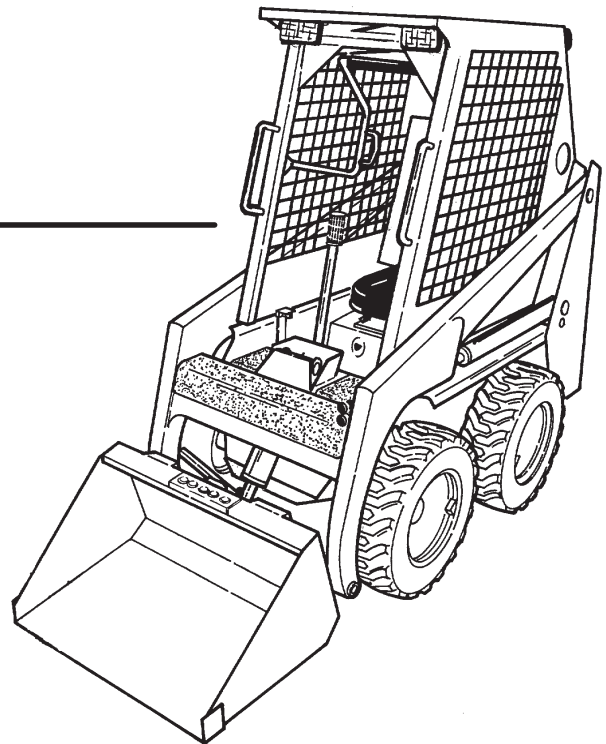

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)



Printed in U.S.A.

MAINTENANCE SAFETY




WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

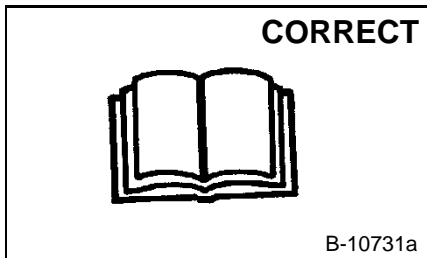

 
Never service the Bobcat Skid-Steer Loader without instructions.

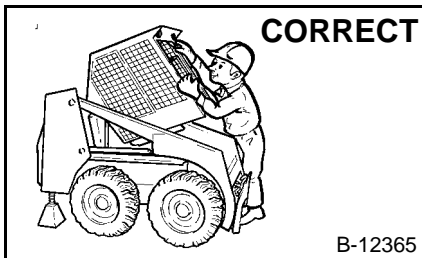

 
Use the correct procedure to lift or lower operator cab.

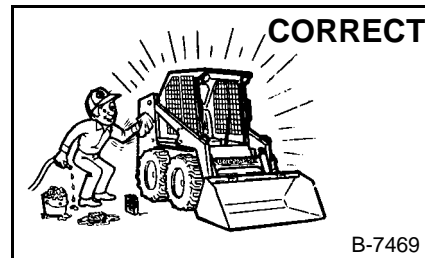

 
Cleaning and maintenance are required daily.

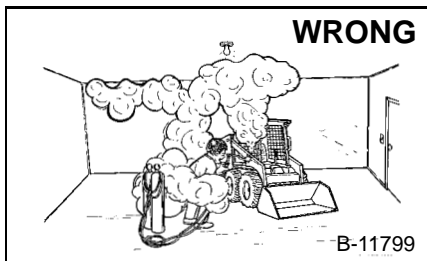

 
- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

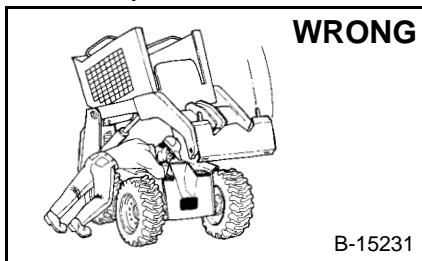

 
Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

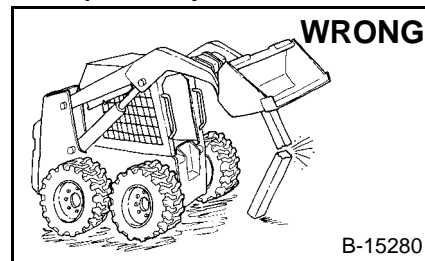

 - Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

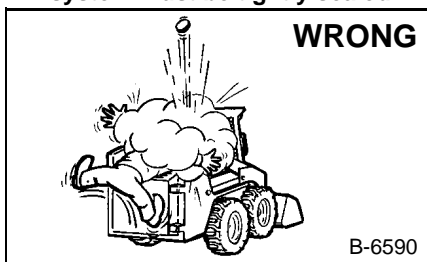

 - Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

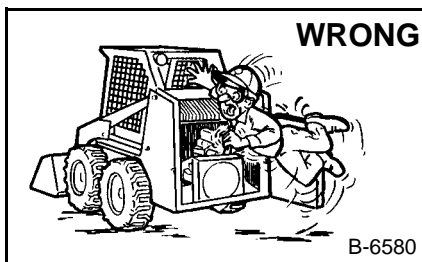

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.



- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER SERVICE	1-1	MAIN RELIEF VALVE	2-1
ALTERNATOR	6-1	OIL PUMP	7-1
ALTERNATOR BELT	1-1	OPERATOR CAB	1-1, 5-1
AUXILIARY CONTROL LOCKBOLT	1-1	OPERATOR CAB GAS CYLINDER	5-1
AXLE, BEARINGS AND SPROCKET	4-1	OPERATOR SEAT	5-1
AXLE HUB	4-1		
AXLE SEAL	4-1		
BATTERY	6-1	PARKING BRAKE DISC	4-1
BICS™ (With Press To Operate Button)	8-1	PARKING BRAKE PEDAL	4-1
BICS™ (Without Press To Operate Button)	8-1	PEDAL INTERLOCK LINKAGE	2-1
BICS™ BLOCK VALVE	2-1	PISTONS AND CONNECTING ROD	7-1
BICS™ SYSTEM CONTROLLER	8-1	PIVOT PINS	1-1
BOB-TACH	1-1, 5-1		
		RADIATOR	7-1
CHAINCASE COVERS	4-1	RADIATOR MOUNTING BRACKET	7-1
CHAINCASE FLUID	4-1	REAR DOOR	5-1
CONTROL PEDALS	2-1	REAR LIGHTS (OPTIONAL)	6-1
CONTROL SHIELD AND		REAR WINDOW	5-1
STEERING LEVER PANELS	3-1	REMOTE START SWITCH	1-1
CRANKSHAFT AND BEARINGS	7-1	ROCKER ARM AND SHAFT	7-1
CRANKSHAFT GEAR	7-1		
CYLINDER BORE	7-1	SEAT BAR	5-1
CYLINDER HEAD	7-1	SEAT BAR RESTRAINT SYSTEM	1-1
		SEAT BAR SENSOR	8-1
DECIMAL & MILLIMETER EQUIVALENTS	9-1	SEAT SENSOR	8-1
DRIVE BELT	3-1	SERVICE SCHEDULE	1-1
DRIVE CHAIN	4-1	SPARK ARRESTOR MUFFLER	1-1
		STANDARD TORQUE SPECIFICATIONS	
ELECTRICAL SYSTEM INFORMATION	6-1	FOR BOLTS	9-1
ENGINE	7-1	STARTER	6-1
ENGINE COMPRESSTION TEST	7-1	STEERING LEVERS	3-1
ENGINE COOLING SYSTEM	1-1	STEERING LINKAGE	3-1
ENGINE LUBRICATION SYSTEM	1-1		
ENGINE MOUNTING BRACKET	7-1	TENSION PULLEY AND SPRING	3-1
ENGINE OIL COOLER AND SHROUDING	7-1	THERMOSTAT	7-1
ENGINE SPECIFICATIONS	9-1	TILT CYLINDER	2-1
ENGINE SPEED CONTROL	7-1	TIMING GEARCASE COVER	7-1
		TIMING GEARS	7-1
FAN	7-1	TIRE MAINTENANCE	1-1
FINAL DRIVE TRANSMISSION (CHAINCASE)	1-1	TOWING THE LOADER	1-1
FLYWHEEL	7-1	TORQUE SPECIFICATION FOR BOLTS	9-1
FRONT LIGHTS (OPTIONAL)	6-1	TRACTION LOCK	8-1
FUEL CAMSHAFT	7-1	TRANSPORTING THE LOADER	1-1
FUEL INJECTION PUMP	7-1	TROUBLESHOOTING	2-1, 3-1, 6-1, 7-1
FUEL INJECTOR NOZZLES	7-1		
FUEL SYSTEM	1-1, 7-1	U.S. TO METRIC CONVERSION	9-1
FUEL TANK	5-1		
		VALVE & VALVE SPRINGS	7-1
GLOW PLUGS	7-1	VALVE CLEARANCE	7-1
		VALE GUIDE, VALVE & VALVE SEAT	7-1
HYDRAULIC CONNECTION SPECIFICATION	9-1		
HYDRAULIC CONTROL VALVE	2-1	WATER PUMP	7-1
HYDRAULIC CYLINDERS	2-1		
HYDRAULIC FILTER BLOCK	2-1		
HYDRAULIC/HYDROSTATIC			
FLUID SPECIFICATIONS	9-1		
HYDRAULIC/HYDROSTATIC SYSTEM	1-1		
HYDRAULIC PUMP	2-1		
HYDRAULIC RESERVOIR	2-1		
HYDRAULIC SYSTEM INFORMATION	2-1		
HYDROSTATIC MOTOR	3-1		
HYDROSTATIC PUMP	3-1		
HYDROSTATIC SYSTEM INFORMATION	3-1		
IDLER GEAR AND CAMSHAFT	7-1		
INSTRUMENT PANEL	6-1		
LIFT ARM SUPPORT DEVICE	1-1		
LIFT ARMS	5-1		
LIFT CYLINDER(S)	2-1		
LIFTING AND BLOCKING THE LOADER	1-1		
LIFTING THE LOADER	1-1		
LOADER SPECIFICATIONS	9-1		
LUBRICATING THE LOADER	1-1		



CONTENTS

FOREWORD	ii
SAFETY INSTRUCTIONS	v
SERIAL NUMBER LOCATIONS	vii
DELIVERY REPORT	vii
BOBCAT LOADER IDENTIFICATION	viii
PREVENTIVE MAINTENANCE	1-1
HYDRAULIC SYSTEM	2-1
HYDROSTATIC SYSTEM	3-1
DRIVE SYSTEM	4-1
MAIN FRAME	5-1
ELECTRICAL SYSTEM	6-1
ENGINE SERVICE	7-1
SYSTEMS ANALYSIS	8-1
SPECIFICATIONS	9-1

**CALIFORNIA
PROPOSITION 65 WARNING**
Diesel engine exhaust and some of its
constituents are known to the State of California
to cause cancer, birth defects and other
reproductive harm.

**PREVENTIVE
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

**DRIVE
SYSTEM**

**MAIN
FRAME**

**ELECTRICAL
SYSTEM**

**ENGINE
SERVICE**

 

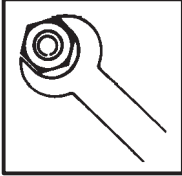 

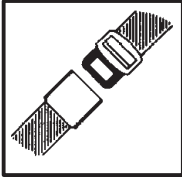 
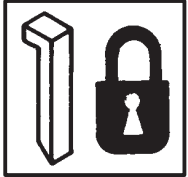 
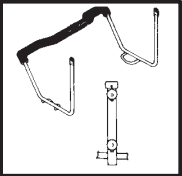 
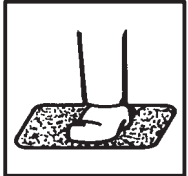 
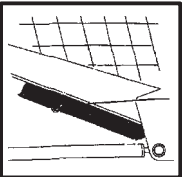 
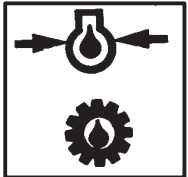 

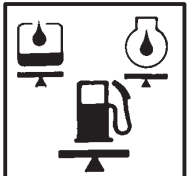 
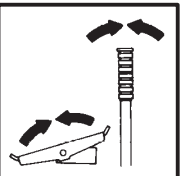 
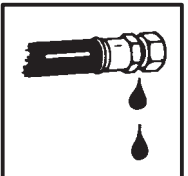 


**SYSTEMS
ANALYSIS**

SPECIFICATIONS


FOREWORD

This manual is for the Bobcat loader mechanic. It provides necessary servicing and adjustment procedures for the Bobcat loader and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

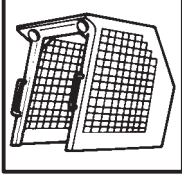
A general inspection of the following items must be made after the loader has had service or repair:

- | | | | |
|---|---|--|---|
| 1. Check that the ROPS/FOPS (Including sidescreens) is in good condition and is not modified. |  | 9. The parking brake must function correctly. |  |
| 2. Check that ROPS mounting hardware is tightened and is Melroe approved. |  | 10. Enclosure door latches must open and close freely. |  |
| 3. The seat belt must be correctly installed, functional and in good condition. |  | 11. Bob-Tach wedges and linkages must function correctly and be in good condition. |  |
| 4. The seat bar and pedal interlocks must be correctly adjusted, clean and lubricated. |  | 12. Safety treads must in good condition. |  |
| 5. Check lift arm support device, replace if damaged. |  | 13. Check for correct function of indicator lamps (Optional on some models). |  |
| 6. Machine signs must be legible and in the correct location. |  | 14. Check hydraulic fluid level, engine oil level and fuel supply. |  |
| 7. Steering levers and foot pedals must return to neutral. |  | 15. Inspect for fuel, oil or hydraulic fluid leaks. |  |
| 8. Check for correct function of the work lights. |  | 16. Lubricate the loader. |  |

 
17. Check the condition of the battery and cables.

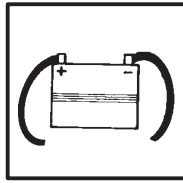

 
18. Inspect the air cleaner for damage or leaks. Check the condition of the element.

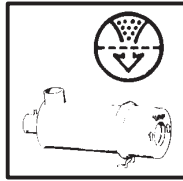

 
19. Check the electrical charging system.

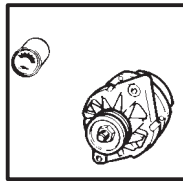

 
20. Check tires for wear and pressure.

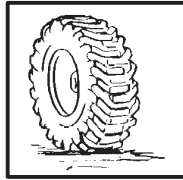

 21. Inspect for loose or broken parts or connections.

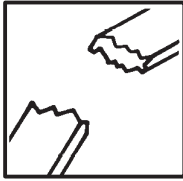

 
22. Operate the loader and check all functions.

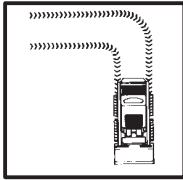


23. Check for any field modification not completed.



 24. Check for correct function of the Bobcat Interlock Control System (BICS™) before the machine is returned to the customer.

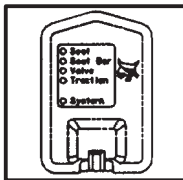

 Recommend to the owner that all necessary corrections be made before the machine is returned to service.

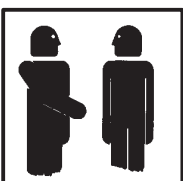



SAFETY INSTRUCTIONS

 
WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0199

The following publications provide information on the safe use and maintenance of the loader and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the loader gives operating information as well as routine maintenance and service procedures. It is a part of the loader and must stay with the machine when it is sold. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat loader dealer.
- The loader has machine signs (decals) which instruct on the safe operation and care. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat loader dealer.
- The loader has a plastic Operator's Handbook fastened to the operator cab. Its brief instructions are convenient to the operator. The Handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The EMI Safety Manual (available in Spanish) delivered with the loader gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Skid-Steer Loader Operator Training Course is available through your local dealer. This course is intended to provide rules and practices for correct operation of the Bobcat loader. The course is available in English and Spanish version.
- The Service Safety Training Course is available from your Bobcat dealer. This course provides information for safe and correct service procedures for Bobcat Skid-Steer loaders.
- The Bobcat Skid-Steer Loader Safety Video is available from your Bobcat Dealer.

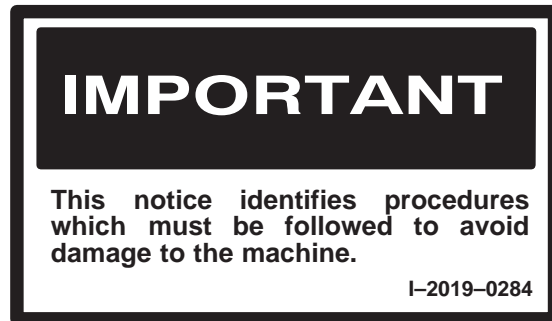

Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

SAFETY INSTRUCTIONS (Cont'd)

- Wear tight fitting clothing. Always wear safety glasses when maintaining or servicing loader. Safety glasses, hearing protection or loader special applications kit are required for some work. See your dealer for Melroe Safety equipment.
- Know where fire extinguisher and first aid kit are located and how to use them.
- Do not use the Bobcat loader where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.
- The engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazard and overheating.
- Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part.
- Check fuel and hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Tighten or replace any parts that show leakage. Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.
- Follow any environmental safety regulations when disposing of used fluids such as engine oil, grease or anti-freeze.
- Do not use ether or starting fluids on engines which have glow plugs. These starting aids can cause explosion and injure you or bystanders.
- Always clean the loader and disconnect the battery before doing any welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the loader when welding. Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.
- Stop the engine and let it cool before adding fuel. No smoking!
- Use the procedure in the Operation & Maintenance or Service Manuals for connecting the battery.

A fire extinguisher is available from your local dealer. The fire extinguisher can be installed in the location shown [A].



 
SERIAL NUMBER LOCATIONS

Always use the serial number of the loader when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

LOADER SERIAL NUMBER



The loader serial number plate is located on the inside of the operator cab on the right fender and in front of the seat [A].

Explanation of loader Serial Number:

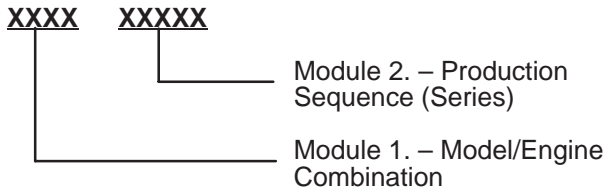

ENGINE SERIAL NUMBER

  
The engine serial number is located on the engine fuel injection pump. [B].

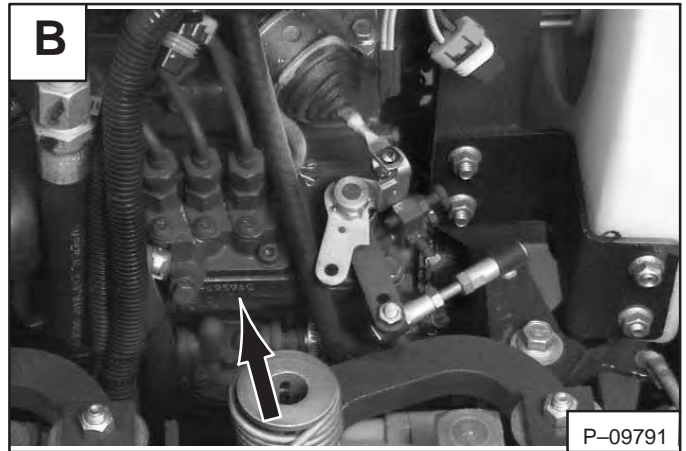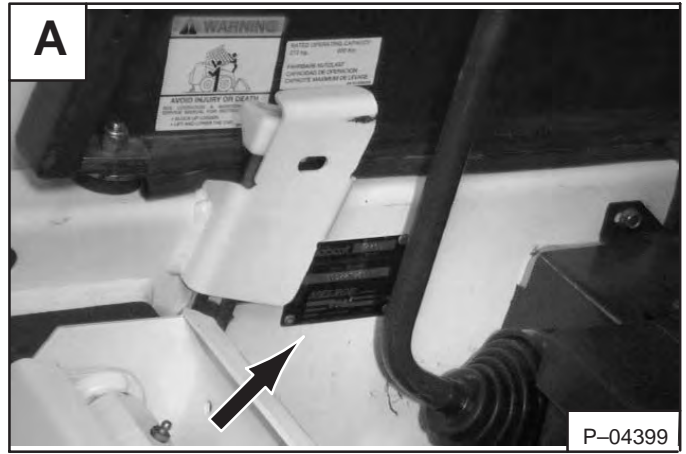

DELIVERY REPORT

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the Bobcat loader is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely [C].

 BOBCAT SKID STEER LOADER IDENTIFICATION

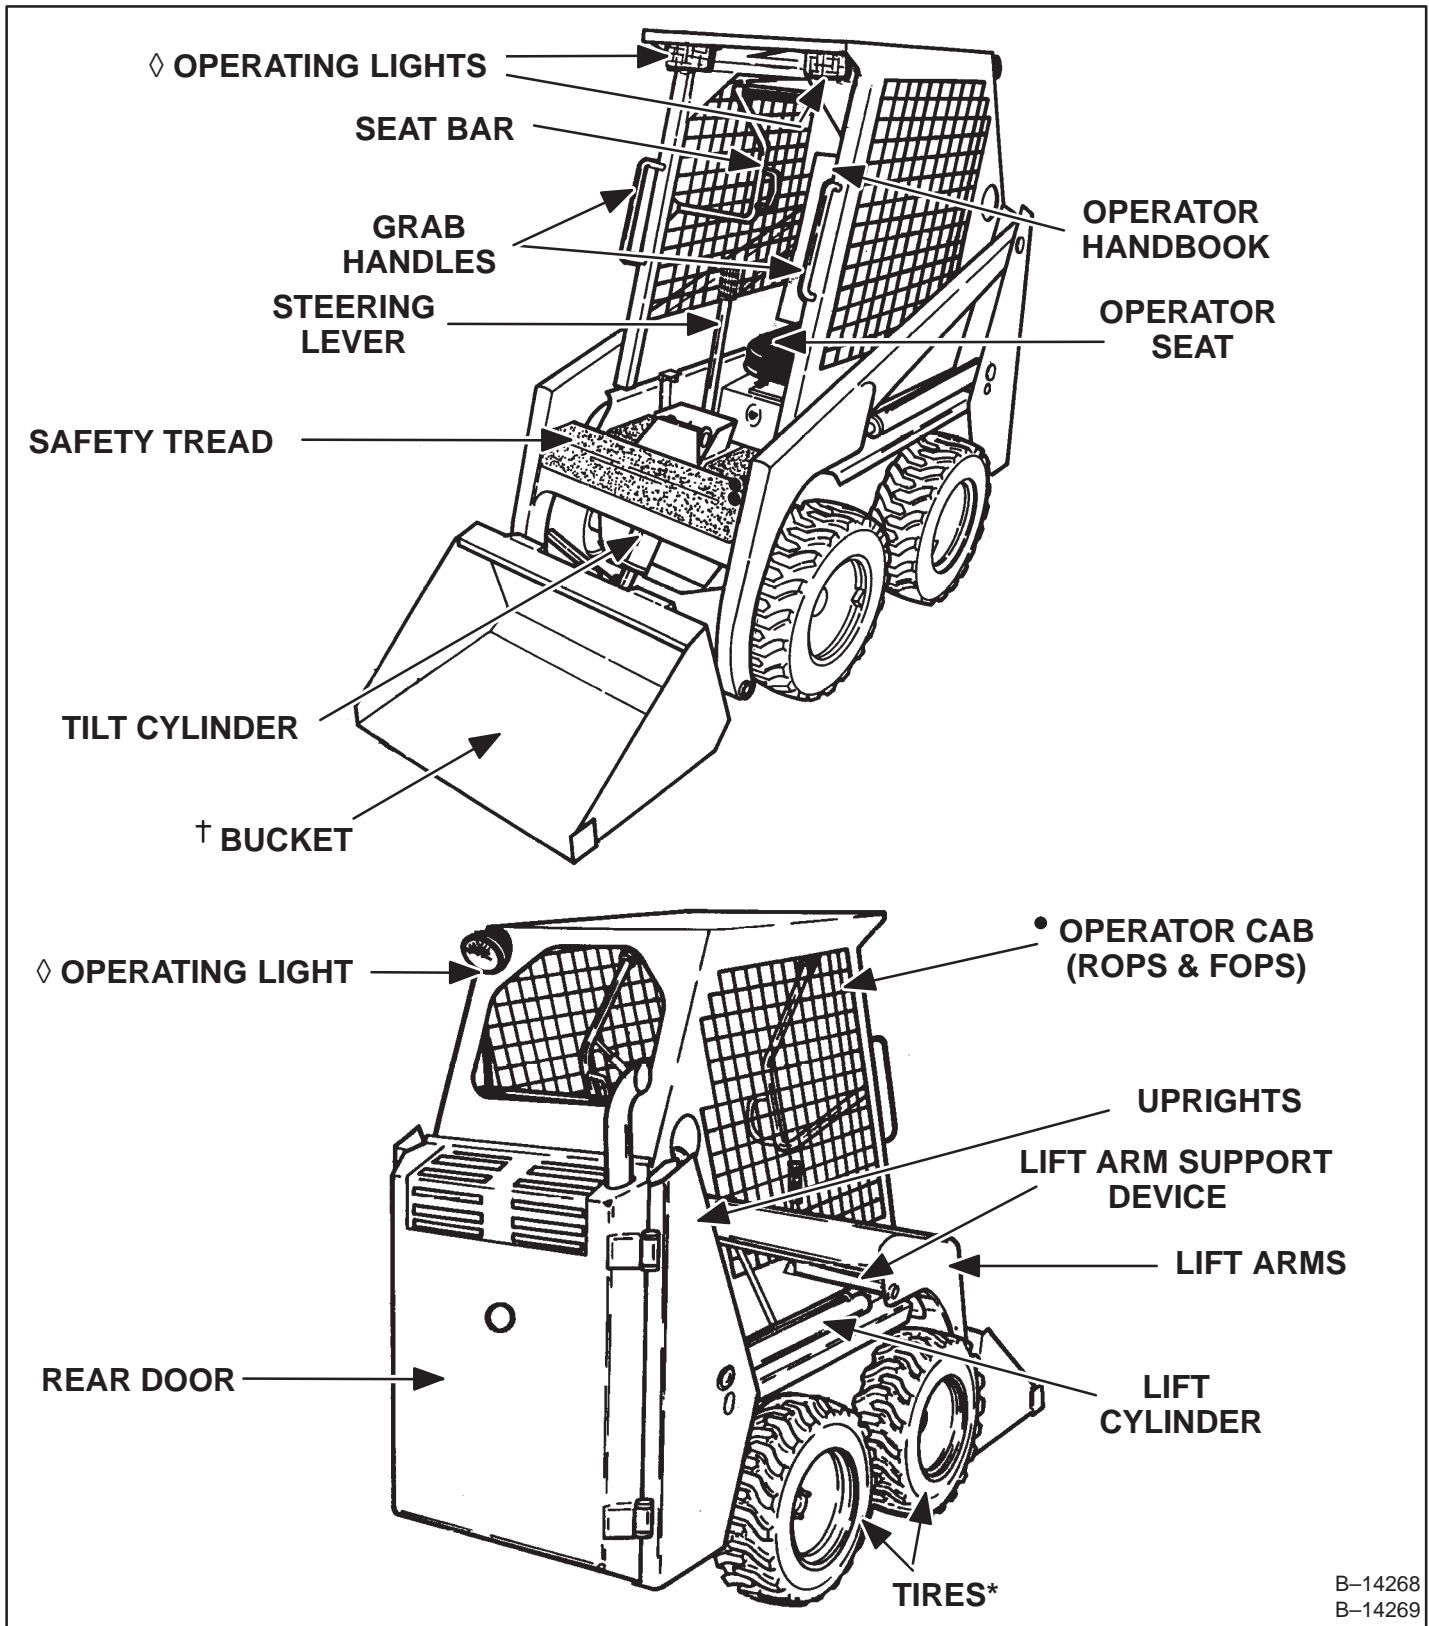

B-14268
B-14269

◇ FACTORY OPTION OR FIELD ACCESSORY (Not Standard Equipment)

* TIRES – Flotation tires (Optional) are shown. Bobcats are base-equipped with standard tires.

† BUCKET – Several different buckets and other attachments are available for the Bobcat loader.

● ROPS, FOPS – Roll-Over Protective Structure, Falling Object Protective Structure, per SAE J1040 and ISO 3471, and Falling Object Protective Structure per SAE J1043 and ISO 3449, Level I. The Bobcat loader is base-equipped with a standard operator cab as shown. Extra insulated cab is available as an option (Reduced noise level).

PREVENTIVE MAINTENANCE

PREVENTIVE MAINTENANCE

	Page Number
AIR CLEANER SERVICE	
Replacing Filter Element	1-13
ALTERNATOR BELT	
Adjusting The Alternator Belt	1-19
AUXILIARY CONTROL LOCKBOLT	1-24
BOB-TACH	
Inspection And Maintenance	1-27
ENGINE COOLING SYSTEM	
Cleaning The Cooling System	1-18
Checking The Coolant Level	1-18
Replacing The Coolant	1-18
ENGINE LUBRICATION SYSTEM	
Checking Engine Oil	1-17
Oil Chart	1-17
Replacing Oil And Filter	1-17
FINAL DRIVE TRANSMISSION (CHAINCASE)	
Checking And Adding Oil	1-24
FUEL SYSTEM	
Filling The Fuel Tank	1-14
Fuel Filter	1-15
Fuel Specifications	1-14
Removing Air From The Fuel System	1-16
HYDRAULIC/HYDROSTATIC SYSTEM	
Checking And Adding Fluid	1-20
Hydraulic/Hydrostatic Filter Replacement	1-21
Replacing The Hydraulic/Hydrostatic Fluid	1-21
LIFT ARM SUPPORT DEVICE	
Engaging The Lift Arm Support Device	1-7
Disengaging The Lift Arm Support Device	1-8
LIFTING AND BLOCKING THE LOADER	
Procedure	1-4
LUBRICATING THE LOADER	
Procedure	1-25
OPERATOR CAB	
Description	1-9
Emergency Exit	1-11
Lowering The Operator Cab	1-10
Raising The Operator Cab	1-9

Continued On Next Page

PREVENTIVE MAINTENANCE (Cont'd)

	Page Number
PIVOT PINS	1-27
REMOTE START SWITCH Procedure	1-28
SEAT BAR RESTRAINT SYSTEM Description	1-12
Inspecting The Seat Bar	1-12
Maintaining The Seat Bar	1-12
SERVICE SCHEDULE Chart	1-3
SPARK ARRESTOR MUFFLER Cleaning Procedure	1-22
TIRE MAINTENANCE Tire Inflation	1-23
Tire Rotation	1-23
Wheel Nuts	1-23
TOWING THE LOADER Procedure	1-6
TRANSPORTING THE LOADER Procedure	1-5

SERVICE SCHEDULE

Maintenance work must be done at regular intervals. Failure to do so will result in excessive wear and early failures. The service schedule is a guide for correct maintenance of the Bobcat loader.

WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Failure to follow instructions can cause injury or death.

W-2003-1298

SERVICE SCHEDULE		HOURS					
ITEM	SERVICE REQUIRED	8-10	50	100	250	500	1000
Engine Air Cleaner	Empty the dust cup & replace the filter element as needed.						
Engine Oil	Check the oil level & add oil as needed.						
Engine Cooling System	Clean debris from oil cooler and radiator. Check coolant level in recovery tank and add as needed.						
Tires	Check the air pressure & for damaged tires.						
Indicators, Gauges & Lights (Opt.)	Check for correct operation of all indicators, gauges & lights (Opt.).						
Seat Belt and Seat Bar	Check the condition of seat belt. Check the seat bar & pedal interlocks for correct operation. Clean dirt and debris from moving parts.						
Safety Signs (Decals) and Safety Tread	Check for damaged signs and safety treads. Replace any signs or safety treads that are damaged or worn.						
Lift Arm and Bob-Tach Pivot Pin and Wedges	Lubricate with multi-purpose lithium based grease.						
Engine Fuel Filter	Remove the water from the filter.						
Hyd. Fluid, Hoses & Tubelines	Check fluid level & add as needed. Check for damage & leaks. Repair & replace as needed.						
Bobcat Interlock Control System (BICS™)	Check BICS™ System Controller functions. Clean dirt, debris or objects from under or behind seat as required.						
Battery	Check cables, connections & electrolyte level. Add distilled water as needed						
Control Pedals & Steering	Check for correct operation repair or adjust as needed.						
Bob-Tach	Check locking levers & wedges for condition & operation.						
Wheel Nuts	<input type="checkbox"/> Check for loose wheel nuts & tighten to 40-45 ft.-lbs. (54-61 Nm) torque.						
Parking Brake	Check operation.						
Alternator Belt	Check tension & adjust as needed.						
Engine Oil & Filter	Replace oil & filter. See engine <i>Oil Chart</i> .						
Hydraulic Filter Element	Replace filter element.						
Spark Arrestor Muffler	Clean the spark chamber.						
Drive Belt	Check drive belt for condition and tension.						
Steering Lever Pivots	Lubricate grease fittings and oil hole in the steering shaft.						
Engine Fuel Filter	Replace filter element.						
Hydraulic Reservoir Breather	Replace the breather cap.						
Final Drive Trans (Chaincase)	Replace the fluid.						
Hydraulic/Hydrostatic Reservoir	● Replace the fluid.						
Bobcat Interlock Control System (BICS™)	Check the lift arm by-pass control						

- Check wheel nut torque every 8 hours for the first 24 hours.
- Also replace hydraulic/hydrostatic filter element when the transmission warning light stays on for five minutes after the fluid is at operating temperature.
- Or every 12 months.

Dear

**Thanks very much for your visiting and
patience.**

Want to get more information,

Please click here, Go back to the page.

**After your payment, you will have instant access to
your download.**

The Download Link will also be sent to your e-mail.

You will get the complete manual

Have any questions

please write to me

admin@servicemanualperfect.com