 


# X 331

## Excavator

### Service Manual

(S/N 512911001 – 512912999)

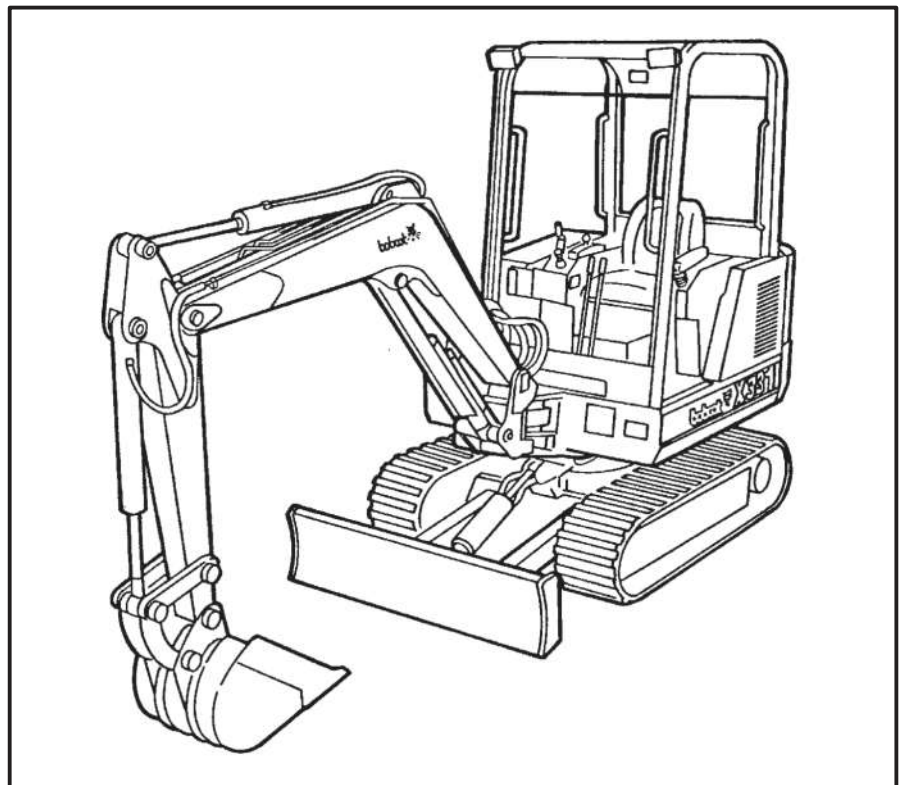

**MELROE**  
**INGERSOLL-RAND**

6724222(2-96)

1 of 525

Printed in U.S.A.



© Melroe Company 1996



# MAINTENANCE SAFETY



 
## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903




**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

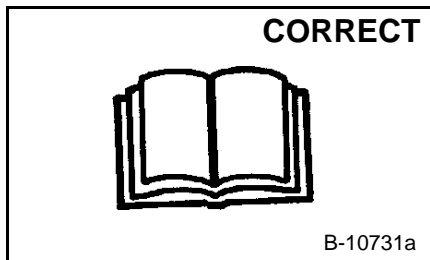


B-10731a

 - ⚠ Never service the Bobcat Hydraulic Excavator without instructions.

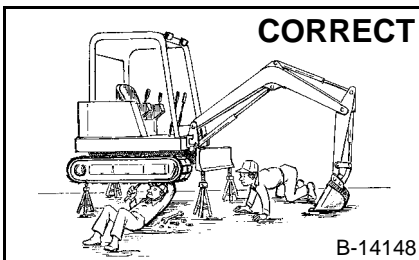


B-14148

 - ⚠ Use the correct procedure to lift and support the excavator.
- ⚠ Always lift the blade fully before installing jackstands.

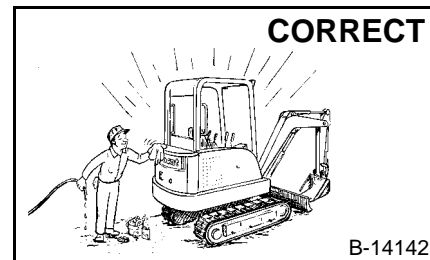

B-14142

 - ⚠ Cleaning and maintenance are required daily.

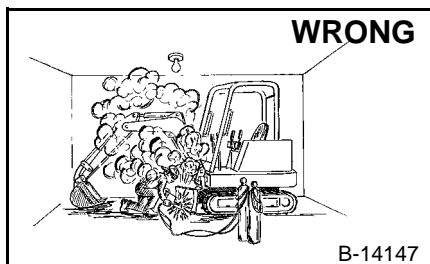


B-14147

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.




B-14141

 - ⚠ Vent exhaust to outside when engine must be run for service.
- ⚠ Exhaust system must be tightly sealed. Exhaust Fumes can kill without warning.

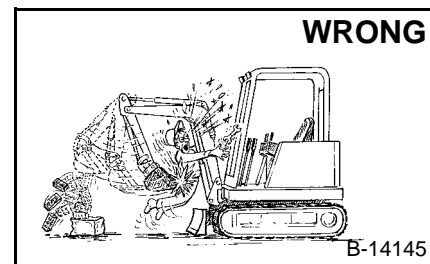


B-14145

 - ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.

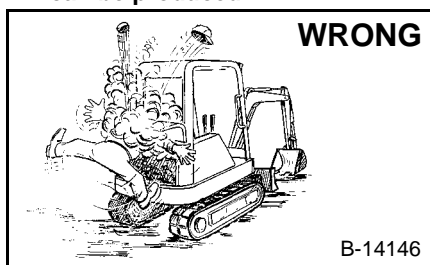

B-14146

 - ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

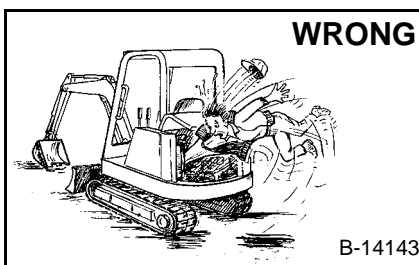

B-14143

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep rear door closed except for service. Close and latch door before operating the excavator.



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



**Bobcat®**

## ALPHABETICAL INDEX

ACCUMULATOR (S/N 12999 & Below)	2-1	HYDRAULIC CONTROL VALVE (6-Spool)	
ACCUMULATOR (S/N 13001 & Above)	2-1	(S/N 12999 & Below)	2-1
AIR CLEANER	1-1	HYDRAULIC CONTROL VALVE (5-Spool)	
AIR CLEANER	7-1	(S/N 13001 & Above)	2-1
ALTERNATOR	6-1	HYDRAULIC CONTROL VALVE (5-Spool)	
ARM	4-1	(S/N 13001 & Above)	2-1
ARM CYLINDER	2-1	HYDRAULIC CYLINDER	2-1
AUXILIARY SELECTOR VALVE	2-1	HYDRAULIC EXCAVATOR SPECIFICATIONS	8-1
		HYDRAULIC FILTER ASSEMBLY	2-1
BATTERY	6-1	HYDRAULIC PUMP	2-1
BLADE	5-1	HYDRAULIC RESERVOIR AND FUEL	
BLADE CONTROL LEVER AND CABLE	3-1	RESERVOIR	2-1
BLADE CYLINDER	2-1	HYDRAULIC SERVICE INFORMATION	
BOOM	4-1	(S/N 11001-12999)	2-1
BOOM CYLINDER	2-1	HYDRAULIC SERVICE INFORMATION	
BOOM PIVOT BUSHING	4-1	(S/N 13001 & Above)	2-1
BOOM SWING BRACKET	4-1	HYDRAULIC SYSTEM	1-1
BOOM SWING CYLINDER	2-1	HYDRAULIC SYSTEM TROUBLESHOOTING	2-8
BUCKET	4-1		
BUCKET CYLINDER	2-1	IDLER GEAR AND CAMSHAFT	7-1
BUCKET TEETH	4-1	INSPECTION COVER (S/N 11001-11999)	4-1
		INSTRUMENT PANEL	6-1
CAB	4-1		
CAB/CANOPY REAR COVER	4-1	JOYSTICK (S/N 12999 & Below)	3-1
CAB ELECTRICAL	6-1	JOYSTICK (S/N 13001 & Above)	3-1
CENTER SWIVEL JOINT	4-1	JOYSTICK CONTROL CHANGE	2-1
COOLING SYSTEM	1-1		
COUNTERBALANCE VALVE (S/N 11057-12999)	4-1	LEFT CONSOLE (S/N 12999 & Below)	3-1
COUNTERWEIGHTS	4-1	LEFT CONSOLE (S/N 13001 & Above)	3-1
CRANKSHAFT AND BEARINGS	7-1	LEFT CONSOLE RELEASE HANDLE	
CRANKSHAFT GEAR	7-1	(S/N 13001 & Above)	3-1
CROSS PORT RELIEF VALVE		LEFT HAND CORNER POST	4-1
(S/N 11001-11056 & S/N 13001 & Above)	4-1	LEFT HAND SIDE COVER	4-1
CYLINDER BORE	7-1	LIFTING AND BLOCKING THE EXCAVATOR	1-1
CYLINDER HEAD	7-1	LUBRICATION OF THE EXCAVATOR	1-1
DECIMAL & MILLIMETER EQUIVALENTS	8-1	MAIN RELIEF VALVES (S/N 11001-12999)	2-1
		MAIN RELIEF VALVES (Adjustable)	
ELECTRICAL SYSTEM	6-1	(S/N 13001 & Above)	2-1
ENGINE	7-1	MUFFLER	7-1
ENGINE COMPRESSION	7-1		
ENGINE COVER	1-1	OIL COOLER	2-1
ENGINE COVER	4-1	OIL PUMP	7-1
ENGINE FLYWHEEL	7-1		
ENGINE LUBRICATION SYSTEM	1-1	PISTON AND CONNECTING ROD	7-1
ENGINE OIL PRESSURE	7-1	PORT BLOCK	2-1
ENGINE OIL SPECIFICATIONS	8-1	PORT RELIEF VALVES AND MAIN RELIEF VALVES	
ENGINE SPECIFICATIONS	8-1	(S/N 13001 & Above)	2-1
		RADIATOR	7-1
FAN GUARD	7-1	REAR FLOOR PLATE	4-1
FINAL DRIVE CASE	1-1	RIGHT CONSOLE COVER	3-1
FLOORMAT AND FLOOR PLATE	4-1	RIGHT CONSOLE	3-1
FRONT ENGINE COVER	4-1	RIGHT HAND CORNER POST	4-1
FUEL CAMSHAFT	7-1	RIGHT HAND SIDE COVER	4-1
FUEL, COOLANT AND LUBRICANTS	8-1	ROCKER ARM AND SHAFT	7-1
FUEL INJECTOR NOZZLES	7-1	ROPS CANOPY	4-1
FUEL INJECTION PUMP	7-1		
FUEL LEVEL SENDER	6-1	SEAT AND SEAT MOUNT	4-1
FUEL SHUT-OFF SOLENOID	7-1	SERVICE SCHEDULE	1-1
FUEL SYSTEM	1-1	SPARK ARRESTOR MUFFLER	1-1
		SPEED CONTROL LEVER	3-1
GAUGES	6-1	STARTER	6-1
GAUGE LIGHTS	6-1	STEERING LEVER AND PEDALS	3-1
GLOW PLUGS	7-1	SWING BRACKET BUSHING	4-1
		SWING GEAR BOX	4-1
HEATER AIR FILTER SERVICE	1-1	SWING MOTOR	4-1
HYDRAULIC CONTROL VALVE (3-Spool)			
(S/N 12999 & Below)	2-1		

## ALPHABETICAL INDEX (Cont'd)

SWING MOTOR DRIVE CARRIER (S/N 13001 & Above) .....	4-1
SWING MOTOR COVER .....	4-1
TIMING GEARS .....	7-1
TIMING GEARCASE COVER .....	7-1
TOOL BOX .....	4-1
TRACK DAMAGE IDENTIFICATION .....	5-1
TRACK FRAME .....	5-1
TRAVEL MOTOR .....	5-1
TRANSPORTING THE EXCAVATOR .....	1-1
TROUBLESHOOTING .....	6-1
TROUBLESHOOTING .....	7-1
TWO SPEED SWITCH (S/N 13001 & Above) .....	2-1
TWO SPEED VALVE (S/N 12999 & Below) .....	2-1
UPPERSTRUCTURE AND SWING CIRCLE GEAR .....	4-1
USING A BOOSTER BATTERY (JUMP STARTING) .....	1-1
U.S. TO METRIC CONVERSION .....	8-1
VALVE CLEARANCE .....	7-1
VALVE, VALVE SEAT AND GUIDE .....	7-1
WATER PUMP .....	7-1

# CONTENTS

SAFETY INSTRUCTIONS .....	iv
SERIAL NUMBER LOCATIONS .....	vi
DELIVERY REPORT .....	vi
HYDRAULIC EXCAVATOR IDENTIFICATION .....	vii
PREVENTIVE MAINTENANCE .....	1-1
HYDRAULIC SYSTEM .....	2-1
DRIVE SYSTEM .....	3-1
UPPER WORKS & SWING SECTION .....	4-1
MAIN FRAME & TRACKS .....	5-1
ELECTRICAL SYSTEM .....	6-1
ENGINE SERVICE .....	7-1
SPECIFICATIONS .....	8-1

**PREVENTIVE  
MAINTENANCE**

**HYDRAULIC  
SYSTEM**

**DRIVE  
SYSTEM**

**UPPER WORKS  
& SWING  
SECTION**

**MAIN FRAME  
& TRACKS**

**ELECTRICAL  
SYSTEM**

**ENGINE  
SERVICE**

**SPECIFICATIONS**



 


# FOREWORD


This manual is for the Bobcat hydraulic excavator mechanic. It provides necessary servicing and adjustment procedures for the hydraulic excavator and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the hydraulic excavator has had service or repair:


1. Check that the ROPS/TOPS/FOGS is in good condition and is not modified.

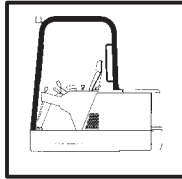

 
2. Check that ROPS/TOPS mounting hardware is tightened and is Melroe approved.

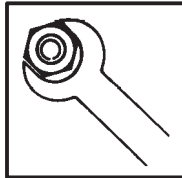

 
3. The seat belt must be correctly installed, functional and in good condition.

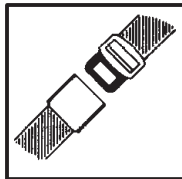

 
4. Inspect for loose or broken parts or connections.

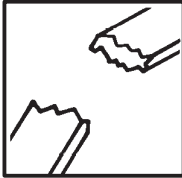

 
5. Machine signs must be legible and in the correct location.

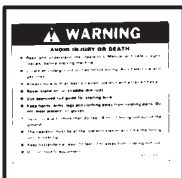

 
6. Steering levers, control levers and foot pedals must return to neutral. Check that foot pedals lock and control lever locks are in working condition.

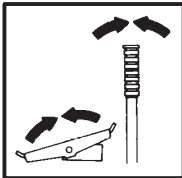

 
7. Inspect the air cleaner for damage or leaks. Check the condition of the element.

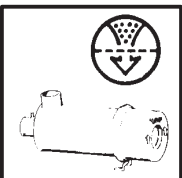

 
8. Check the electrical charging system.

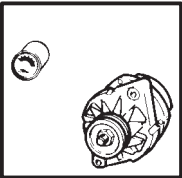


9. Safety treads must in good condition.

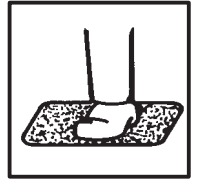

10. Check for correct function of indicator lamps (Optional on some models).

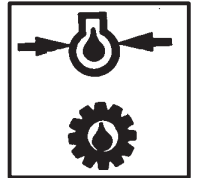

11. Check hydraulic fluid level, engine oil level and fuel supply.

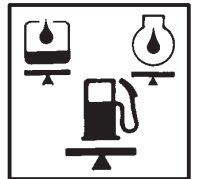


12. Inspect for fuel, oil or hydraulic fluid leaks.




13. Lubricate the excavator.



 14. Check the condition of the battery and cables.

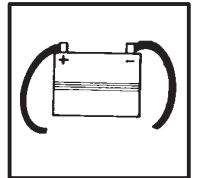

Recommend to the owner that all necessary corrections be made before the machine is returned to service.

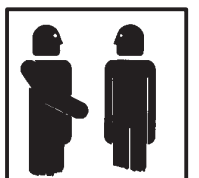



## SAFETY INSTRUCTIONS

 
# **WARNING**

Instructions are necessary before operating or servicing machine. Read Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Failure to follow instructions can cause injury or death.

W-2003-0797

The following publications provide information on the safe use and maintenance of the excavator and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the excavator gives operating information as well as routine maintenance and service procedures. It is a part of the excavator and must stay with the machine when it is sold. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat Excavator dealer.
- The excavator has machine signs (decals) which instruct on the safe operation and care. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat Excavator dealer.
- The CIMA Safety Manual delivered with the excavator gives information for safe operating and standard signals.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.

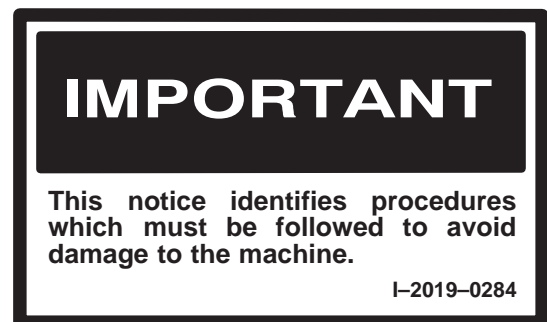

**Safety Alert Symbol:** This Safety Symbol is used for important safety messages. When you see this symbol follow the safety message to avoid personal injury or death.

## **SAFETY INSTRUCTIONS (Cont'd)**

- Wear tight fitting clothing. Always wear safety glasses when maintaining or servicing the excavator. Safety glasses, hearing protection or loader special application kits are required for some work. See your dealer for Melroe Safety equipment.
- Know where fire extinguishers and first aid kits are located and how to use them.
- Do not use the Bobcat excavator where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.
- The engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent a fire hazard and overheating.
- Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part.
- Check fuel and hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Tighten or replace any parts that show leakage. Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.
- Follow any environmental safety regulations when disposing of used fluids such as engine oil, grease or anti-freeze.
- Do not use ether or starting fluids on an engine that has glow plugs. These starting aids can cause an explosion and injure you or bystanders.
- Always clean the excavator and disconnect the battery before doing any welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the excavator when welding. Have good ventilation when grinding or welding painted parts. Wear a dust mask when grinding painted parts. Toxic dust or gas can be produced.
- Stop the engine and let it cool before adding fuel. No smoking!
- Use the procedure in the Operation & Maintenance or Service Manuals for connecting the battery.

**Dear**

**Thanks very much for your visiting and  
patience.**

**Want to get more information,**

**Please click here, Go back to the page.**

**After your payment, you will have instant access to  
your download.**

**The Download Link will also be sent to your e-mail.**

**You will get the complete manual**

**Have any questions**

**please write to me**

**[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**