

 


**Bobcat®**

**331  
331E  
334**

# **Service Manual**

**S/N 232511001 & Above  
S/N 232711001 & Above  
S/N 232611001 & Above  
(D Series)**

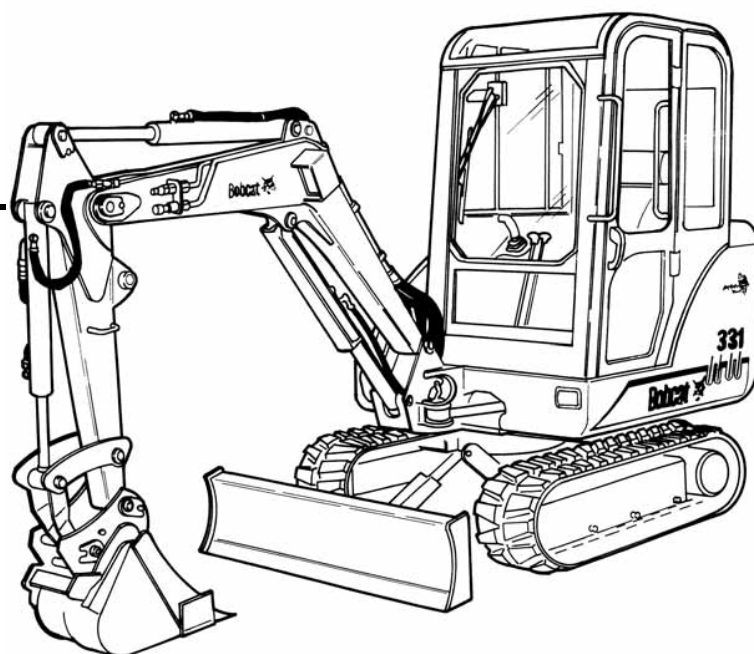



# MAINTENANCE SAFETY



## WARNING

 
Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


### CORRECT

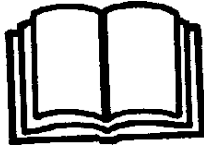

B-10731a

- ⚠ Never service the Bobcat Hydraulic Excavator without instructions.


### CORRECT

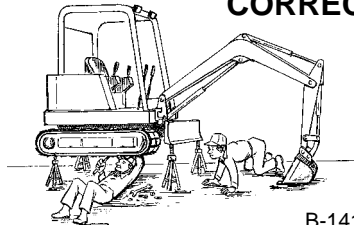 

B-14148

- ⚠ Use the correct procedure to lift and support the excavator.
- ⚠ Always lift the blade fully before installing jackstands.


### CORRECT

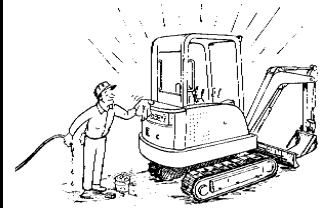 

B-14142

- ⚠ Cleaning and maintenance are required daily.


### WRONG

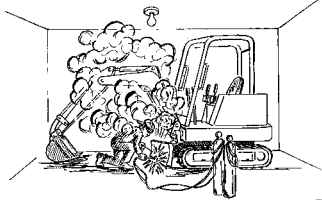 

B-14147

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.


### WRONG

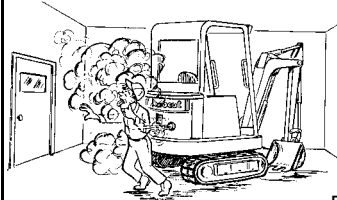 

B-14141

- ⚠ Vent exhaust to outside when engine must be run for service.
- ⚠ Exhaust system must be tightly sealed. Exhaust Fumes can kill without warning.


### WRONG

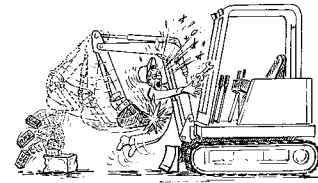 

B-14145

- ⚠ Always lower the bucket and blade to the ground before doing any maintenance.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.


### WRONG

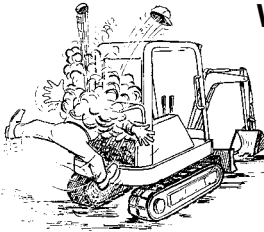 

B-14146

- ⚠ Stop, cool and clean engine of flammable materials before checking fluids.
- ⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.
- ⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- ⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

### WRONG

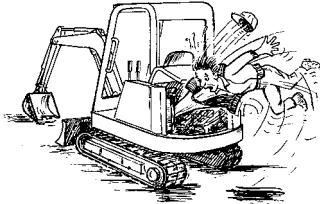 

B-14143

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- ⚠ Keep rear door closed except for service. Close and latch door before operating the excavator.

### WRONG



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



**Bobcat®**

## ALPHABETICAL INDEX

|  |         |   |       |
|--|---------|---|-------|
| AIR CLEANER .....  | 60-01   | HYDRAULIC PUMP .....  | 20-01 |
| AIR CLEANER SERVICE .....  | 10-01   | HYDRAULIC RESERVOIR .....   | 20-01 |
| ALTERNATOR .....   | 50-01   | HYDRAULIC SYSTEM .....  | 10-01 |
| ARM .....  | 40-01   | HYDRAULIC SYSTEM INFORMATION .....  | 20-01 |
| ARM CYLINDER .....   | 20-01   |   |       |
| BATTERY .....  | 50-01   | LEFT CONTROL LEVER (JOYSTICK)<br>(S/N 232512782 & Below, 232711433 & Below<br>and 232612157 & Below) .....  | 20-01 |
| BLADE .....  | 30-01   | LEFT CONTROL LEVER (JOYSTICK)<br>(S/N 232512783 & Above, 232711434 & Above<br>and 232612158 & Above) .....  | 20-01 |
| BLADE CONTROL .....  | 40-01   | LEFT CONSOLE .....  | 40-01 |
| BLADE CYLINDER .....   | 20-01   | LIFTING AND BLOCKING THE EXCAVATOR .....  | 10-01 |
| BOOM .....   | 40-01   | LIFTING THE EXCAVATOR .....   | 10-01 |
| BOOM CYLINDER .....  | 20-01   | LIGHTS .....  | 50-01 |
| BOOM OFFSET CYLINDER .....   | 20-01   | LUBRICATING THE EXCAVATOR .....   | 10-01 |
| BUCKET .....   | 40-01   |   |       |
| BUCKET CYLINDER .....  | 20-01   | MAIN RELIEF VALVES .....  | 20-01 |
| BUILD UP VALVE .....   | 20-01   | MANIFOLD ASSEMBLY<br>(S/N 232512782 & Below, 232711433 & Below<br>and 232612157 & Below) .....              | 20-01 |
| CAB .....  | 40-01   | MANIFOLD ASSEMBLY<br>(S/N 232512783 & Above, 232711434 & Above<br>and 232612158 & Above) .....              | 20-01 |
| CASE DRAIN FILTER .....  | 20-01   | MANIFOLD ASSEMBLY/ACCUMULATOR<br>(S/N 232512782 & Below, 232711433 & Below<br>and 232612157 & Below) .....  | 20-01 |
| CLAMP .....  | 40-01   | MANIFOLD ASSEMBLY/ACCUMULATOR<br>(S/N 232512783 & Above, 232711434 & Above<br>and 232612158 & Above) .....  | 20-01 |
| CONVERSIONS .....  | SPEC-01 | MICROSWITCH .....   | 50-01 |
| CONTROL LINKAGE ASSEMBLY .....   | 40-01   | MUFFLER .....   | 60-01 |
| CONTROL PATTERN SELECTOR VALVE .....   | 20-01   |   |       |
| CROSS PORT RELIEF VALVE .....  | 20-01   | OIL COOLER .....  | 20-01 |
| DIAGNOSTICS SERVICE CODES .....  | 50-01   | OPERATOR CAB (ROPS/TOPS) (If Equipped) .....  | 10-01 |
| DIRECT TO TANK VALVE .....   | 20-01   |   |       |
| ELECTRICAL SYSTEM INFORMATION .....  | 50-01   | PORT RELIEF VALVES .....  | 20-01 |
| ENGINE .....   | 60-01   | PRESSURE REDUCING VALVE .....   | 20-01 |
| ENGINE COMPONENTS AND TESTING .....  | 60-01   | PRESSURE RELIEF VALVE .....   | 70-01 |
| ENGINE COOLING SYSTEM .....  | 10-01   | PRESSURE SWITCH .....   | 70-01 |
| ENGINE FLYWHEEL .....  | 60-01   |   |       |
| ENGINE LUBRICATION SYSTEM .....  | 10-01   | RADIATOR .....  | 60-01 |
| ENGINE SPECIFICATIONS .....  | SPEC-01 | RECEIVER/DRIER .....  | 60-01 |
| ENGINE SPEED CONTROL .....   | 40-01   | RECONDITIONING THE ENGINE .....   | 60-01 |
| EXTENDIBLE ARM CYLINDER .....  | 20-01   | REGULAR MAINTENANCE .....   | 70-01 |
|  |         | RIGHT CONTROL LEVER (JOYSTICK)<br>(S/N 232512782 & Below, 232711433 & Below<br>and 232612157 & Below) ..... | 20-01 |
| FLOORMAT AND FLOOR PANELS .....  | 40-01   | RIGHT CONTROL LEVER (JOYSTICK)<br>(S/N 232512783 & Above, 232711434 & Above<br>and 232612158 & Above) ..... | 20-01 |
| FUEL, COOLANT AND LUBRICANTS .....   | SPEC-01 | RIGHT CONSOLE .....   | 40-01 |
| FUEL LEVEL SENDER .....  | 50-01   | RIGHT PEDAL AND LINKAGE .....   | 40-01 |
| FUEL SYSTEM .....  | 10-01   | RIGHT SIDE COVER .....  | 40-01 |
| FUEL TANK .....  | 40-01   | ROPS CANOPY .....   | 40-01 |
| HEATER AIR FILTERS (With Cab Option Only) .....  | 10-01   |   |       |
| HORN .....   | 40-01   |   |       |
| HYDRAULIC CONNECTION SPECS .....   | SPEC-01 |   |       |
| HYDRAULIC CONTROL VALVE<br>(S/N 232512782 & Below, 232711433 & Below<br>and 232612157 & Below) ..... | 20-01   |   |       |
| HYDRAULIC CONTROL VALVE<br>(S/N 232512783 & Above, 232711434 & Above<br>and 232612158 & Above) ..... | 20-01   |   |       |
| HYDRAULIC EXCAVATOR SPECS .....  | SPEC-01 |   |       |
| HYDRAULIC FLUID SPECIFICATIONS .....   | SPEC-01 |   |       |
| HYDRAULIC FILTER .....   | 20-01   |   |       |

|                                       |              |
|---------------------------------------|--------------|
| SAFETY .....                          | 70-01        |
| SEAT AND MOUNT .....                  | 40-01        |
| SERVICE SCHEDULE .....                | 10-01        |
| SPARK ARRESTOR MUFFLER .....          | 10-01        |
| STARTER .....                         | 50-01        |
| SWING CIRCLE GEAR .....               | 30-01        |
| SWING FRAME .....                     | 40-01        |
| SWING LOCK .....                      | 10-01        |
| SWING MOTOR .....                     | 20-01        |
| SWING MOTOR DRIVE CARRIER.....        | 20-          |
| SWIVEL JOINT .....                    | 20-01        |
| SYSTEM CHARGING AND RECLAMATION ..... | 40-01        |
| SYSTEM TROUBLESHOOTING CHART.....     | 70-01        |
|                                       |              |
| TAILGATE .....                        | 10-01        |
| TEMPERATURE/PRESSURE .....            | 40-01        |
| THERMOSTAT .....                      | 70-01        |
| TORQUE SPECIFICATIONS .....           | SPEC-01      |
| TRACKS .....                          | 30-01        |
| TRACK DAMAGE IDENTIFICATION.....      | 30-01        |
| TRACK FRAME .....                     | 30-01        |
| TRACK IDLER .....                     | 30-01        |
| TRACK ROLLER.....                     | 30-          |
| TRANSPORTING THE EXCAVATOR.....       | 10-01        |
| TRAVEL CONTROLS .....                 | 40-01        |
| TRAVEL MOTOR.....                     | 10-01, 20-01 |
| TROUBLESHOOTING.....                  | 60-01        |
| TWO SPEED SWITCH .....                | 50-01        |
|                                       |              |
| UPPERSTRUCTURE .....                  | 40-01        |

## CONTENTS

|  |         |
|--|---------|
| SAFETY INSTRUCTIONS .....                    | V       |
| FOREWORD.....                                | III     |
| SERIAL NUMBER LOCATIONS .....                | IX      |
| DELIVERY REPORT.....                         | IX      |
| BOBCAT EXCAVATOR IDENTIFICATION .....        | X       |
| SAFETY AND MAINTENANCE.....                  | 10-01   |
| HYDRAULIC SYSTEM .....                       | 20-01   |
| UNDERCARRIAGE.....                           | 30-01   |
| UPPERSTRUCTURE & SWING SECTION .....         | 40-01   |
| ELECTRICAL SYSTEM AND ANALYSIS .....         | 50-01   |
| ENGINE SERVICE .....                         | 60-01   |
| HEATING, VENTILATION, AIR CONDITIONING ..... | 70-01   |
| SPECIFICATIONS.....                          | SPEC-01 |

**SAFETY AND  
MAINTENANCE**

**HYDRAULIC  
SYSTEM**

**UNDERCARRIAGE**

**UPPERSTRUCTURE  
& SWING  
SECTION**

**ELECTRICAL  
SYSTEM AND  
ANALYSIS**

**ENGINE  
SERVICE**

**HEATING,  
VENTILATION,  
AIR CONDITIONING**

**SPECIFICATIONS**





# FOREWORD

 
This manual is for the Bobcat Hydraulic excavator mechanic. It provides necessary servicing and adjustment procedures for the hydraulic excavator and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the hydraulic excavator has had service or repair:


1. Check lift arm support device, replace if damaged. (Stored Position)




2. Check that ROPS mounting hardware is tightened and is Bobcat approved.

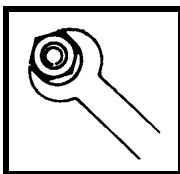

 3. The seat belt must be correctly installed, functional and in good condition.

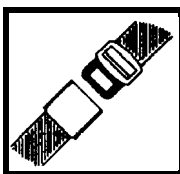

 
4. Inspect for loose or broken parts or connections.

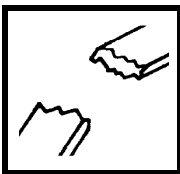


5. Machine signs must be legible and in the correct location.



 
6. Steering levers, control levers and foot pedals must return to neutral. Check that foot pedals lock and control lever locks are in working order.

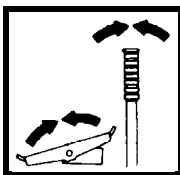

 
7. Inspect the air cleaner for damage or leaks. Check the condition of the element.

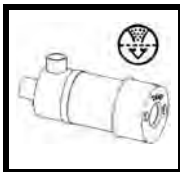

 
8. Check the electrical charging system.

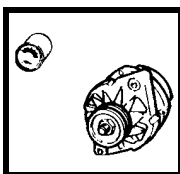

 
9. Safety treads must be in good condition.

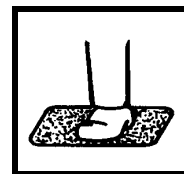

 
10. Check for correct function of indicator lamps (Optional on some models).

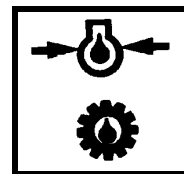

 
11. Check hydraulic fluid level, engine oil level and fuel supply.

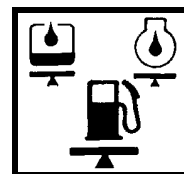

 
12. Inspect for fuel, oil or hydraulic fluid leaks.

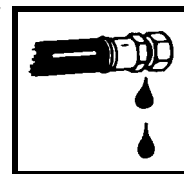

 
13. Lubricate the excavator.

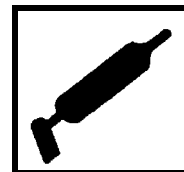

 14. Check the condition of the battery and cables.

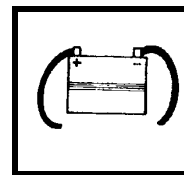

 Recommend to the owner that all necessary corrections be made before the machine is returned to service.

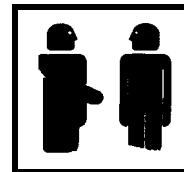



## SAFETY INSTRUCTIONS



### Safety Alert Symbol

This symbol with a warning statement means:  
“Warning, be alert! Your safety is involved!”  
Carefully read the message that follows.



## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



## WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

## IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator's Handbook fastened to the operator cab. It's brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Compact Excavator Operator Training Course is available through your local dealer or at [www.training.bobcat.com](http://www.training.bobcat.com) or [www.bobcat.com](http://www.bobcat.com). This course is intended to provide rules and practices of correct operation of the Bobcat Excavator. The course is available in English and Spanish versions.
- Service Safety Training Courses are available from your Bobcat dealer or at [www.training.bobcat.com](http://www.training.bobcat.com) or [www.bobcat.com](http://www.bobcat.com). They provide information for safe and correct service procedures.
- The Bobcat Compact Excavator Safety Video is available from your Bobcat dealer or at [www.training.bobcat.com](http://www.training.bobcat.com) or [www.bobcat.com](http://www.bobcat.com).

SI EXC-0206 SM

## **SAFETY INSTRUCTIONS (CONT'D)**

The dealer and owner/operator review the recommended uses of the product when delivered. If the owner/operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.



# **Call Before You Dig**

**1-888-258-0808**

When you call, you will be directed to a location in your state/city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.)

**Dear**

**Thanks very much for your visiting and  
patience.**

**Want to get more information,**

**Please click here, Go back to the page.**

**After your payment, you will have instant access to  
your download.**

**The Download Link will also be sent to your e-mail.**

**You will get the complete manual**

**Have any questions**

**please write to me**

**[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**