

 
337
341



Bobcat®

Service Manual

S/N 233311001 & Above
S/N 233211001 & Above
(D Series)

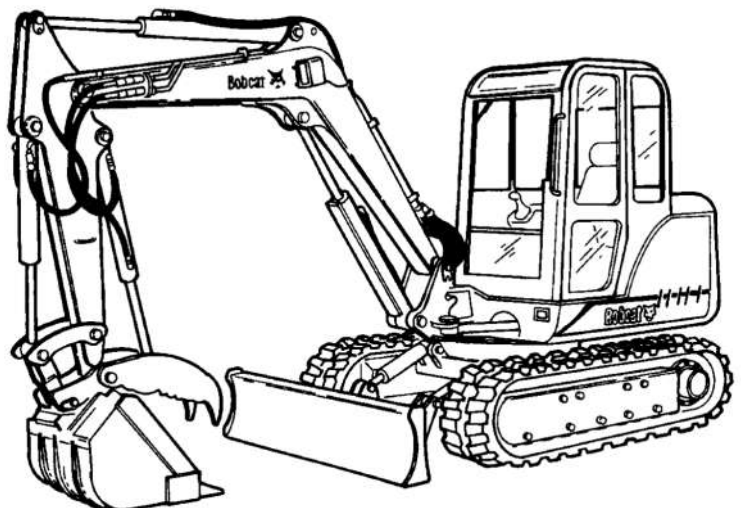

IR Ingersoll Rand
Compact Vehicle Technologies

Printed in U.S.A.

©Bobcat Company 2007

MAINTENANCE SAFETY



 
WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

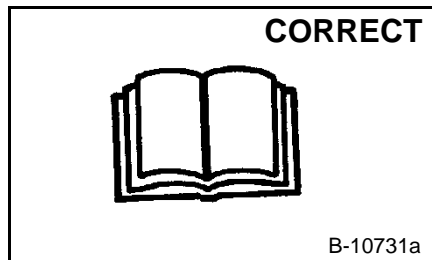


B-10731a

 - Never service the Bobcat Hydraulic Excavator without instructions.

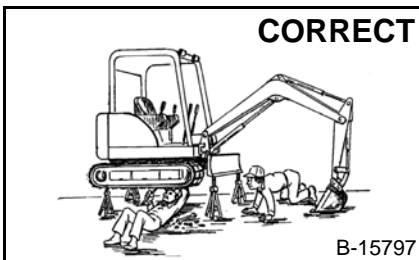


B-15797

 - Use the correct procedure to lift and support the excavator.
- Always lift the blade fully before installing jackstands.

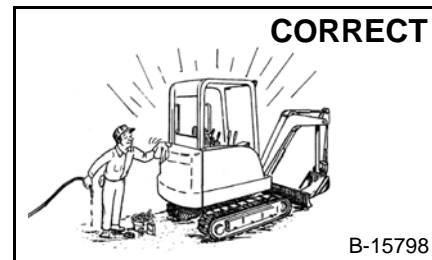

B-15798

 - Cleaning and maintenance are required daily.

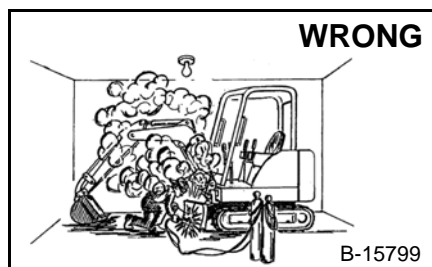


B-15799

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.




B-15800

 - Vent exhaust to outside when engine must be run for service.
- Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.

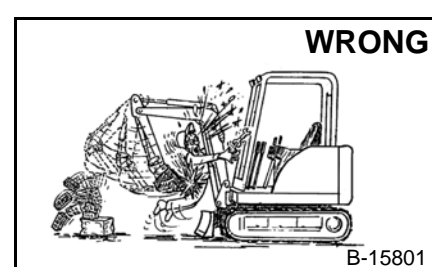


B-15801

 - Always lower the bucket and blade to the ground before doing any maintenance.
- Never modify equipment or add attachments not approved by Bobcat Company.

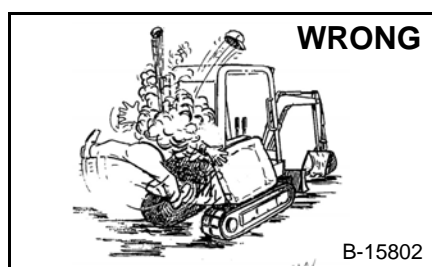

B-15802

 - Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust machine with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

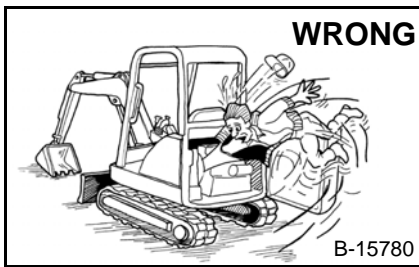

B-15780

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the excavator.



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	60-01	GENERAL AIR CONDITIONING SERVICE	
AIR CLEANER SERVICE	10-01	GUIDELINES	70-01
AIR CONDITIONING SERVICE	70-01	HEATER/AC FAN	70-01
AIR CONDITIONING SYSTEM FLOW	70-01	HEATER AIR FILTER	10-01
ALTERNATOR	50-01	HEATER COIL	70-01
ARM	40-01	HEATER VALVE	70-01
ARM CYLINDER	20-01	HORN	40-01
BASIC TROUBLESHOOTING	70-01	HYDRAULIC CONNECTION SPECS	SPEC-01
BATTERY	50-01	HYDRAULIC CONTROL VALVE ASSEMBLY	20-01
BLADE	30-01	HYDRAULIC EXCAVATOR SPECS	SPEC-01
BLADE CONTROL	40-01	HYDRAULIC FILTER	20-01
BLADE CYLINDER	20-01	HYDRAULIC FLUID RESERVOIR	20-01
BOOM	40-01	HYDRAULIC FLUID SPECIFICATIONS	SPEC-01
BOOM CYLINDER	20-01	HYDRAULIC PUMP	20-01
BOOM OFFSET CYLINDER	20-01	HYDRAULIC SYSTEM	10-01
BOOM OFFSET LOCK VALVE	20-01	HYDRAULIC SYSTEM INFORMATION	20-01
BUCKET	40-01	LEFT CONSOLE	40-01
BUCKET CYLINDER	20-01	LEFT CONTROL LEVER (JOYSTICK)	
BUILD UP VALVE	20-01	(S/N 233311870 & ABOVE AND	
CAB	40-01	233211878 & ABOVE)	20-01
CASE DRAIN FILTER	20-01	LEFT CONTROL LEVER (JOYSTICK)	
CLAMP CYLINDER	20-01	(S/N 233311869 & BELOW AND	
COMPONENTS	70-01	233211877 & BELOW)	20-01
COMPRESSOR	70-01	LIFTING AND BLOCKING THE EXCAVATOR	10-01
CONDENSOR	70-01	LIFTING THE EXCAVATOR	10-01
CONTROL LINKAGE ASSEMBLY	40-01	LIGHTS	50-01
CONTROL PATTERN SELECTOR VALVE	20-01	LUBRICATION OF THE EXCAVATOR	10-01
CONVERSIONS	SPEC-01	MAIN RELIEF VALVE	20-01
COOLING SYSTEM	10-01	MANIFOLD ASSEMBLY/ACCUMULATOR	20-01
CROSSPORT RELIEF VALVE	20-01	MUFFLER	60-01
DIAGNOSTICS SERVICE CODE	50-01	OIL COOLER	20-01
DIRECT TO TANK VALVE	20-01	OPERATOR CAB	10-01
DUAL SEQUENCE VALVE	20-01	PORT RELIEF VALVES	20-01
ELECTRICAL SYSTEM INFORMATION	50-01	PRESSURE REDUCING VALVE	20-01
ENGINE	60-01	PRESSURE RELIEF VALVE	70-01
ENGINE COMPONENTS AND TESTING	60-01	PRESSURE SWITCH	70-01
ENGINE LUBRICATION SYSTEM	10-01		
ENGINE SPECIFICATIONS	SPEC-01		
ENGINE SPEED CONTROL	40-01		
EVAPORATOR	70-01		
EVAPORATOR/HEATER UNIT	70-01		
EXPANSION VALVE	70-01		
FLOORMAT AND FLOOR PANELS	40-01		
FLYWHEEL AND HOUSING	60-01		
FUEL, COOLANT AND LUBRICANTS	SPEC-01		
FUEL LEVEL SENDER	50-01		
FUEL SYSTEM	10-01		
FUEL TANK	40-01		

ALPHABETICAL INDEX (CONT'D)

RADIATOR (S/N 233311422 & ABOVE, S/N 233211380 & ABOVE).....	60-01	TAILGATE.....	40-01
RADIATOR (S/N 233311421 & BELOW, S/N 233211379 & BELOW)	60-01	TAILGATE (S/N 233311550 & ABOVE, S/N 233211443 & ABOVE).....	10-01
RECEIVER/DRYER	70-01	TAILGATE (S/N 233311549 & BELOW, S/N 233211442 & BELOW)	10-01
RECONDITIONING THE ENGINE	60-01	TEMPERATURE/PRESSURE.....	70-01
REGULAR MAINTENANCE	70-01	THERMOSTAT	70-01
REMOVING AIR FROM HYDRAULIC SYSTEM	20-01	TORQUE SPECIFICATIONS	SPEC-01
RIGHT CONSOLE	40-01	TRACKS.....	30-01
RIGHT CONTROL LEVER (JOYSTICK) (S/N 233311870 & ABOVE AND 233211878 & ABOVE).....	20-01	TRACK DAMAGE IDENTIFICATION	30-01
RIGHT CONTROL LEVER (JOYSTICK) (S/N 233311869 & BELOW AND 233211877 & BELOW)	20-01	TRACK FRAME	30-01
RIGHT PEDAL AND LINKAGE.....	40-01	TRACK IDLER (RUBBER TRACK S/N 23331116 & ABOVE AND 23321117 & ABOVE, STEEL TRACK S/N 233311108 & ABOVE AND 233211100 & ABOVE.....	30-01
ROPS CANOPY.....	40-01	TRACK IDLER (RUBBER TRACK S/N 23331115 & BELOW AND 23321116 & BELOW STEEL TRACK S/N 233311107 & BELOW AND 233211099 & BELOW)	30-01
SAFETY.....	70-01	TRACK ROLLER (RUBBER TRACK S/N 23331116 & ABOVE AND 23321117 & ABOVE, STEEL TRACK S/N 233211108 & ABOVE AND 233211100 & ABOVE	30-01
SEAT AND SEAT MOUNT	40-01	TRACK ROLLER (RUBBER TRACK S/N 23331115 & BELOW AND 23321116 & BELOW, STEEL TRACK S/N 233311107 & BELOW AND 233211099 & BELOW	30-01
SERVICE SCHEDULE	10-01	TRANSPORTING THE EXCAVATOR	10-01
SPARK ARRESTOR MUFFLER (If Equipped)	10-01	TRAVEL CONTROLS.....	40-01
STARTER	50-01	TRAVEL CONTROL VALVE	20-01
SWING CIRCLE GEAR	30-01	TRAVEL MOTOR	10-01 & 20-01
SWING FRAME	40-01	TROUBLESHOOTING	60-01
SWING MOTOR	20-01	TWO SPEED SWITCH.....	50-01
SWING MOTOR DRIVE CARRIER	20-01		
SWIVEL JOINT	20-01	UPPERSTRUCTURE.....	40-01
SYSTEM CHARGING AND RECLAMATION	70-01		
SYSTEM TROUBLESHOOTING CHART	70-01	X-CHANGE TM	40-01

CONTENTS

FOREWORD..... III

SAFETY INSTRUCTIONS V

SERIAL NUMBER LOCATIONS IX

DELIVERY REPORT..... IX

BOBCAT EXCAVATOR IDENTIFICATION X

SAFETY AND MAINTENANCE..... 10-01

HYDRAULIC SYSTEM 20-01

UNDERCARRIAGE..... 30-01

UPPERSTRUCTURE & SWING SECTION 40-01

ELECTRICAL SYSTEM AND ANALYSIS 50-01

ENGINE SERVICE 60-01

HEATING, VENTILATION, AIR CONDITIONING 70-01

SPECIFICATIONS..... SPEC-01

**SAFETY &
MAINTENANCE**

**HYDRAULIC
SYSTEM**

UNDERCARRIAGE

**UPPERSTRUCTURE
& SWING SECTION**

**ELECTRICAL
SYSTEM &
ANALYSIS**

**ENGINE
SERVICE**

**HEATING,
VENTILATION,
AIR CONDITIONING**

SPECIFICATIONS



 
Bobcat®

FOREWORD


This manual is for the Bobcat Hydraulic excavator mechanic. It provides necessary servicing and adjustment procedures for the hydraulic excavator and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the hydraulic excavator has had service or repair:


1. Check that the ROPS/TOPS/FOPS is in good condition and is not modified.

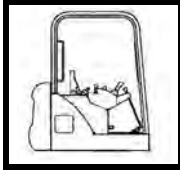


2. Check that ROPS/TOPS mounting hardware is tightened and is Bobcat approved.

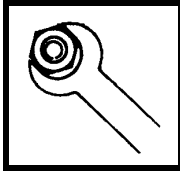

3. The seat belt must be correctly installed, functional and in good condition.

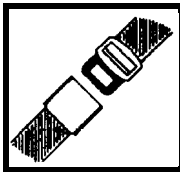

 
4. Inspect for loose or broken parts or connections.

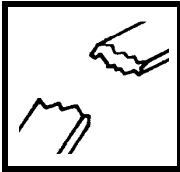


5. Machine signs must be legible and in the correct location.




6. Steering levers, control levers and foot pedals must return to neutral. Check that foot pedals lock and control lever locks are in working order.

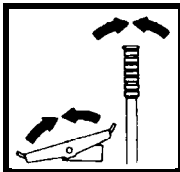

 
7. Inspect the air cleaner for damage or leaks. Check the condition of the element.

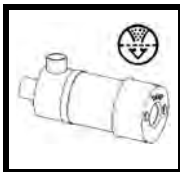

 
8. Check the electrical charging system.

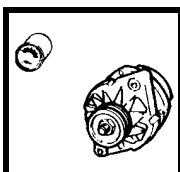

 
9. Safety treads must be in good condition.

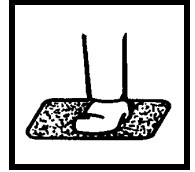

 
10. Check for correct function of indicator lamps (Optional on some models).

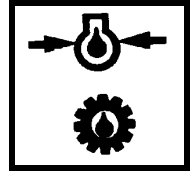

 
11. Check hydraulic fluid level, engine oil level and fuel supply.

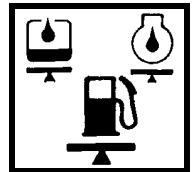

 
12. Inspect for fuel, oil or hydraulic fluid leaks.

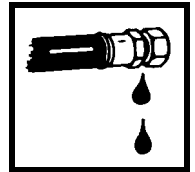

 
13. Lubricate the excavator.

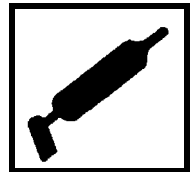

 14. Check the condition of the battery and cables.

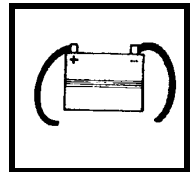

 Recommend to the owner that all necessary corrections be made before the machine is returned to service.

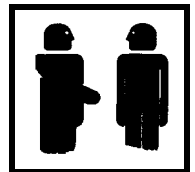



Bobcat®

SAFETY INSTRUCTIONS



Safety Alert Symbol

This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator's Handbook fastened to the operator cab. It's brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Compact Excavator Operator Training Course is available through your local dealer or at www.training.bobcat.com or www.bobcat.com. This course is intended to provide rules and practices of correct operation of the Bobcat Excavator. The course is available in English and Spanish versions.
- Service Safety Training Courses are available from your Bobcat dealer or at www.training.bobcat.com or www.bobcat.com. They provide information for safe and correct service procedures.
- The Bobcat Compact Excavator Safety Video is available from your Bobcat dealer or at www.training.bobcat.com or www.bobcat.com.

SI EXC-0206 SM

Dear

**Thanks very much for your visiting and
patience.**

Want to get more information,

Please click here, Go back to the page.

**After your payment, you will have instant access to
your download.**

The Download Link will also be sent to your e-mail.

You will get the complete manual

Have any questions

please write to me

admin@servicemanualperfect.com