

**753**

**INCLUDES  
HIGH FLOW  
OPTION**

 


**Bobcat®**

# Service Manual

S/N 508630001 & Above  
S/N 511476001 & Above  
S/N 512716001 & Above  
S/N 513911001–513911148  
S/N 515811001–515829999  
S/N 516211001–516219999

**EQUIPPED WITH  
BOBCAT INTERLOCK  
CONTROL SYSTEM (BICS™)**

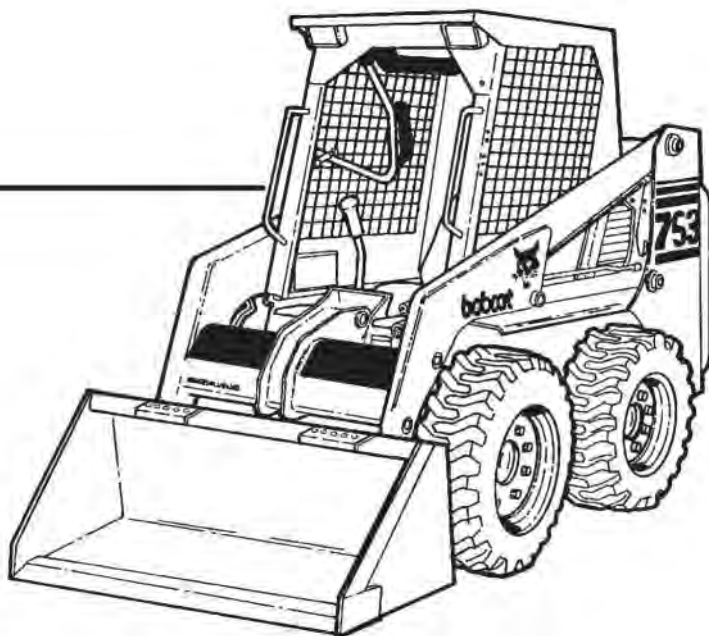



# MAINTENANCE SAFETY




## WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0903




**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

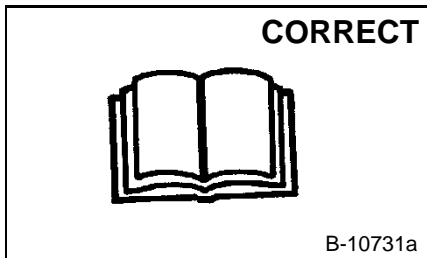

 
Never service the Bobcat Skid-Steer Loader without instructions.

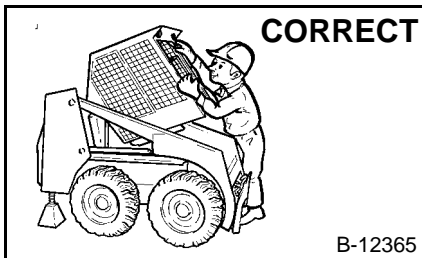

 
Use the correct procedure to lift or lower operator cab.

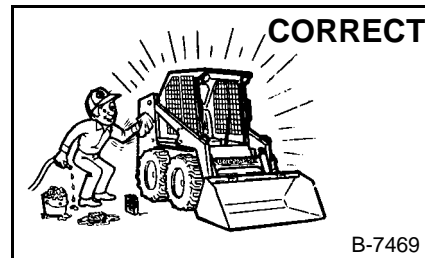

 
Cleaning and maintenance are required daily.

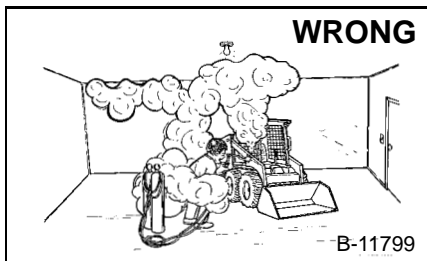

 
- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

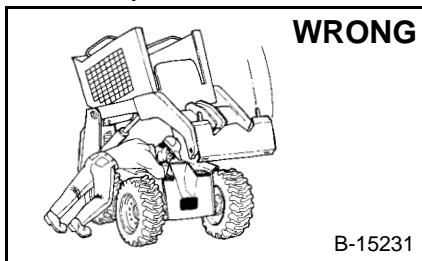

 
Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

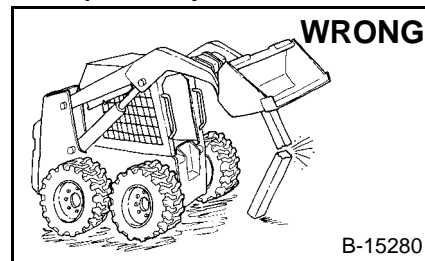

 - Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

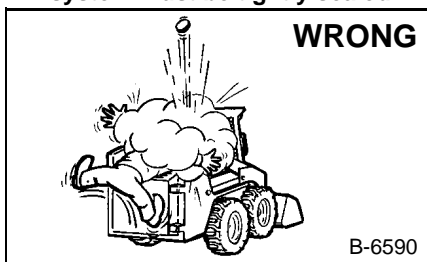

 - Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

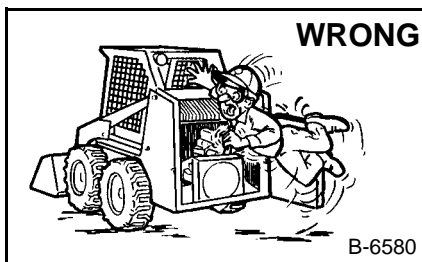

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.



- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.



**Bobcat®**

## ALPHABETICAL INDEX

ACTUATORS .....	10-1	IDLER GEAR AND CAMSHAFT .....	7-1
ACTUATOR VOLTAGE TEST .....	10-1	LIFT ARM SUPPORT DEVICE .....	1-1
A.H.C. COMPONENTS .....	10-1	LIFT ARMS .....	5-1
A.H.C./PWM CONTROLLER .....	10-1	LIFT CYLINDER(S) .....	2-1
A.H.C. HANDLE .....	10-1	LIFT LOCK BY-PASS VALVE .....	2-1
A.H.C. STEERING LEVER .....	10-1	LIFTING AND BLOCKING THE LOADER .....	1-1
AIR CLEANER .....	7-1	LIFTING THE LOADER .....	1-1
AIR CLEANER SERVICE .....	1-1	LOADER SPECIFICATIONS - 763 .....	9-1
ALTERNATOR .....	6-1	LUBRICATING THE LOADER .....	1-1
ALTERNATOR BELT .....	1-1	MONITOR SERVICE CODES .....	8-1
AXLE SEAL .....	4-1	MOTOR CARRIER .....	4-1
AXLE, SPROCKET AND BEARINGS .....	4-1	OIL COOLER .....	3-1
BATTERY .....	6-1	OIL PUMP .....	7-1
BICS™ SYSTEM CONTROLLER .....	8-1	OPERATOR CAB .....	1-1, 5-1
BICS VALVE .....	2-1	OPERATOR CAB GAS CYLINDER .....	5-1
BLOWER HOUSING/FAN GEARBOX .....	7-1	OPERATOR SEAT .....	5-1
BOBCAT INTERLOCK .....		OPERATION SENSING SYSTEM UNIT .....	8-1
CONTROL SYSTEM (BICS™) .....	8-1, 10-1	PARKING BRAKE .....	4-1
BOB-TACH .....	1-1, 5-1	PARKING BRAKE DISC .....	4-1
BOSS® DIAGNOSTIC TOOL .....	8-1	PISTON AND CONNECTING ROD .....	7-1
BOSS® INSTRUMENT PANEL .....	8-1	PIVOT PINS .....	1-1
CHAINCASE COVERS .....	4-1	RADIATOR .....	7-1
CHAINCASE FLUID .....	4-1	REAR DOOR .....	5-1
CONTROL INTERLOCK LINKAGE .....	2-1	REAR GRILL .....	5-1
CONTROL PANEL .....	3-1	REAR LIGHTS .....	5-1
CONTROL PEDALS .....	2-1	RELAY SWITCHES .....	6-1
CRANKSHAFT AND BEARINGS .....	7-1	REMOTE START SWITCH .....	1-1
CRANKSHAFT GEAR .....	7-1	ROCKER ARM AND SHAFT .....	7-1
CYLINDER BORE .....	7-1	RPM SENSOR .....	8-1
CYLINDER HEAD .....	7-1	SEAT BAR .....	5-1
DECIMAL & MILLIMETER EQUIVALENTS .....	9-1	SEAT BAR RESTRAINT SYSTEM .....	1-1
DRIVE BELT .....	1-1	SEAT BAR SENSOR .....	8-1
DRIVE BELT HOUSING .....	3-1	SEAT SENSOR .....	8-1
DRIVE CHAIN .....	4-1	SELECT VALVE (763H) .....	2-1
ELECTRICAL/HYDRAULIC (CONTROL REF.) .....	8-1	SENDER AND SENSOR .....	8-1
ELECTRICAL SYSTEM INFORMATION .....	6-1	SERVICE SCHEDULE .....	1-1
ENGINE .....	7-1	SPARK ARRESTOR MUFFLER .....	1-1
ENGINE COMPRESSION .....	7-1	SPRING LOADED DRIVE BELT TENSIONER .....	
ENGINE COOLING SYSTEM .....	1-1	PULLEY .....	3-1
ENGINE LUBRICATION SYSTEM .....	1-1	STANDARD INSTRUMENT PANEL .....	6-1
ENGINE MUFFLER .....	7-1	STANDARD TORQUE SPECIFICATIONS .....	
ENGINE SPECIFICATIONS .....	9-1	FOR BOLTS .....	9-1
ENGINE SPEED CONTROL .....	7-1	STARTER .....	6-1
FAN GEARBOX .....	1-1, 7-1	STEERING LINKAGE .....	3-1
FINAL DRIVE TRANSMISSION (CHAINCASE) .....	1-1	SWITCH HANDLE .....	10-1
FIXED DRIVE BELT TENSIONER PULLEY .....	3-1	STOPPING THE BOBCAT LOADER .....	1-1
FLYWHEEL .....	7-1	TILT LOCK VALVE .....	2-1
FRONT LIGHTS .....	6-1	TILT CYLINDER .....	2-1
FUEL CAMSHAFT .....	7-1	TIMING GEARS .....	7-1
FUEL INJECTION NOZZLES .....	7-1	TIMING GEARCASE COVER .....	7-1
FUEL INJECTION PUMP .....	7-1	TIRE MAINTENANCE .....	1-1
FUEL SYSTEM .....	1-1	TORQUE SPECIFICATIONS FOR LOADER .....	9-1
FUEL TANK .....	5-1	TOWING THE LOADER .....	1-1
GLOW PLUGS .....	7-1	TRACTION LOCK .....	8-1
HANDLE CONTROL UNIT .....	10-1	TRACTION LOCK GUIDES .....	4-1
HYDRAULIC CONTROL VALVE .....	2-1	TRANSPORTING THE LOADER .....	1-1
HYDRAULIC CONTROL VALVE (AHC) .....	10-1	TROUBLESHOOTING .....	2-1, 3-1, 6-1, 7-1, 10-1
HYDRAULIC CYLINDER IDENTIFICATION .....	2-1	TROUBLESHOOTING .....	
HYDRAULIC CYLINDERS .....	2-1	THE BOSS® & L.C.D. DISPLAY .....	8-1
HYDRAULIC FILTER HOUSING .....	2-1	U.S. TO METRIC CONVERSION .....	9-1
HYDRAULIC FLUID RESERVOIR .....	2-1	VALVE CLEARANCE .....	7-1
HYDRAULIC/HYDROSTATIC .....		VALVE, VALVE SEAT AND GUIDE .....	7-1
FLUID SPECIFICATIONS .....	9-1	WATER PUMP .....	7-1
HYDRAULIC/HYDROSTATIC SYSTEM .....	1-1		
HYDRAULIC PUMP .....	2-1		
HYDRAULIC SYSTEM INFORMATION .....	9-1		
HYDROSTATIC DRIVE MOTOR .....	3-1		
HYDROSTATIC DRIVE MOTOR 30 SERIES .....	3-1		
HYDROSTATIC PUMP .....	3-1		
HYDROSTATIC SYSTEM INFORMATION .....	3-1		



# CONTENTS

FOREWORD .....	ii
SAFETY INSTRUCTIONS .....	v
SERIAL NUMBER LOCATIONS .....	vii
DELIVERY REPORT .....	vii
BOBCAT LOADER IDENTIFICATION .....	viii
PREVENTIVE MAINTENANCE .....	1-1
HYDRAULIC SYSTEM .....	2-1
HYDROSTATIC SYSTEM .....	3-1
DRIVE SYSTEM .....	4-1
MAIN FRAME .....	5-1
ELECTRICAL SYSTEM .....	6-1
ENGINE SERVICE .....	7-1
SYSTEMS ANALYSIS .....	8-1
SPECIFICATIONS .....	9-1
ADVANCE HAND CONTROL SYSTEM .....	10-1

**CALIFORNIA  
PROPOSITION 65 WARNING**  
Diesel engine exhaust and some of its  
constituents are known to the State of California  
to cause cancer, birth defects and other  
reproductive harm.

**PREVENTIVE  
MAINTENANCE**

**HYDRAULIC  
SYSTEM**

**HYDROSTATIC  
SYSTEM**

**DRIVE  
SYSTEM**

**MAIN  
FRAME**

**ELECTRICAL  
SYSTEM**

**ENGINE  
SERVICE**

**SYSTEMS  
ANALYSIS**

**SPECIFICATIONS**

**ADVANCED  
HAND CONTROL  
SYSTEM**



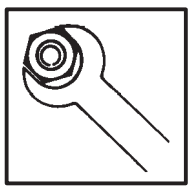
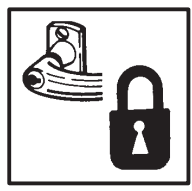
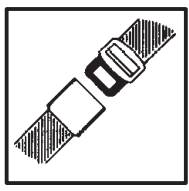
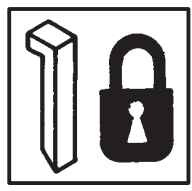
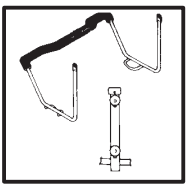
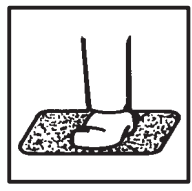
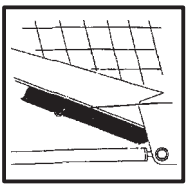
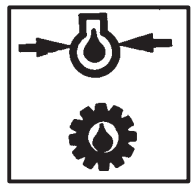

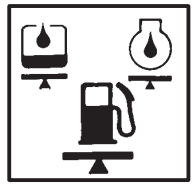
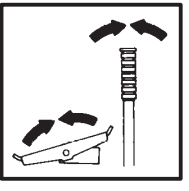
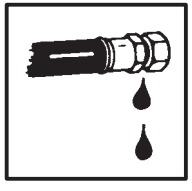







# FOREWORD

This manual is for the Bobcat loader mechanic. It provides necessary servicing and adjustment procedures for the Bobcat loader and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

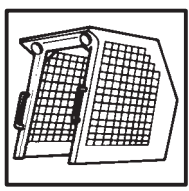
A general inspection of the following items must be made after the loader has had service or repair:

- |   |   |  |   |
|---|---|--|---|
| 1. Check that the ROPS/FOPS (Including sidescreens) is in good condition and is not modified. |    | 9. The parking brake must function correctly.                                      |    |
| 2. Check that ROPS mounting hardware is tightened and is Bobcat approved.                     |    | 10. Enclosure door latches must open and close freely.                             |    |
| 3. The seat belt must be correctly installed, functional and in good condition.               |    | 11. Bob-Tach wedges and linkages must function correctly and be in good condition. |    |
| 4. The seat bar and pedal interlocks must be correctly adjusted, clean and lubricated.        |   | 12. Safety treads must in good condition.  |   |
| 5. Check lift arm support device, replace if damaged.   |  | 13. Check for correct function of indicator lamps (Optional on some models).       |  |
| 6. Machine signs must be legible and in the correct location.                                 |  | 14. Check hydraulic fluid level, engine oil level and fuel supply.                 |  |
| 7. Steering levers and foot pedals must return to neutral.                                    |  | 15. Inspect for fuel, oil or hydraulic fluid leaks.                                |  |
| 8. Check for correct function of the work lights.   |  | 16. Lubricate the loader.  |  |

 
17. Check the condition of the battery and cables.

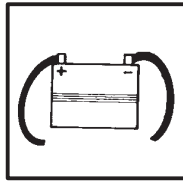

 
18. Inspect the air cleaner for damage or leaks. Check the condition of the element.

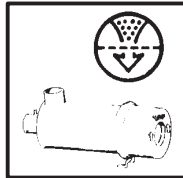

 
19. Check the electrical charging system.

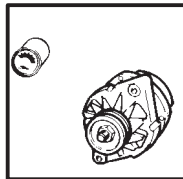

 
20. Check tires for wear and pressure.

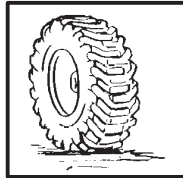

 21. Inspect for loose or broken parts or connections.

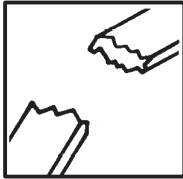

 
22. Operate the loader and check all functions.

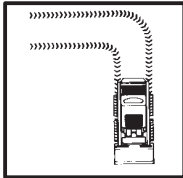


23. Check for any field modification not completed.



 24. Check for correct function of the Bobcat Interlock Control System (BICS™) before the machine is returned to the customer.

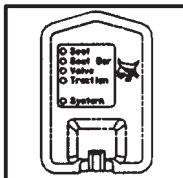

 Recommend to the owner that all necessary corrections be made before the machine is returned to service.

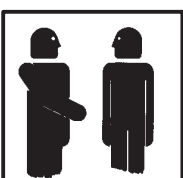

## SAFETY INSTRUCTIONS

 
# **WARNING**

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0199

The following publications provide information on the safe use and maintenance of the loader and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the loader gives operating information as well as routine maintenance and service procedures. It is a part of the loader and must stay with the machine when it is sold. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat loader dealer.
- The loader has machine signs (decals) which instruct on the safe operation and care. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat loader dealer.
- The loader has a plastic Operator's Handbook fastened to the operator cab. Its brief instructions are convenient to the operator. The Handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The EMI Safety Manual (available in Spanish) delivered with the loader gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Skid-Steer Loader Operator Training Course is available through your local dealer. This course is intended to provide rules and practices for correct operation of the Bobcat loader. The course is available in English and Spanish version.
- The Service Safety Training Course is available from your Bobcat dealer. This course provides information for safe and correct service procedures for Bobcat Skid-Steer loaders.
- The Bobcat Skid-Steer Loader Safety Video is available from your Bobcat Dealer.

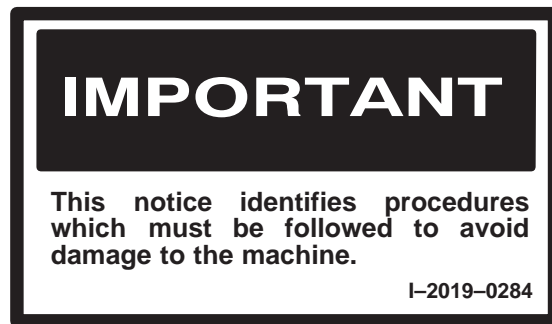

**Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

## SAFETY INSTRUCTIONS (Cont'd)

- Wear tight fitting clothing. Always wear safety glasses when maintaining or servicing loader. Safety glasses, hearing protection or loader special applications kit are required for some work. See your dealer for Bobcat Safety equipment.
- Know where fire extinguisher and first aid kit are located and how to use them.
- Do not use the Bobcat loader where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.
- The engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazard and overheating.
- Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part.
- Check fuel and hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Tighten or replace any parts that show leakage. Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.
- Follow any environmental safety regulations when disposing of used fluids such as engine oil, grease or anti-freeze.
- Do not use ether or starting fluids on engines which have glow plugs. These starting aids can cause explosion and injure you or bystanders.
- Always clean the loader and disconnect the battery before doing any welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the loader when welding. Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.
- Stop the engine and let it cool before adding fuel. No smoking!
- Use the procedure in the Operation & Maintenance or Service Manuals for connecting the battery.

A fire extinguisher is available from your local dealer. The fire extinguisher can be installed in the location shown **[A]**.



 
## SERIAL NUMBER LOCATIONS

Always use the serial number of the loader when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

### LOADER SERIAL NUMBER

The loader serial number plate is located on the inside of the left upright, above the grill [A].

Explanation of loader Serial Number:


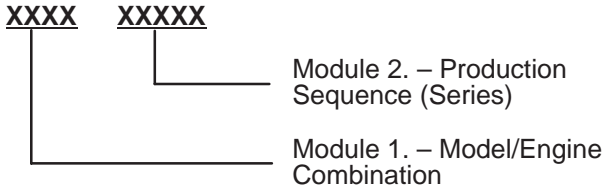


The four digit Model/Engine Combination module number identifies the model number and engine combination.

The five digit Production Sequence Number identifies the order which the loader is produced.

### ENGINE SERIAL NUMBER

  
The serial number is in the location shown [B].

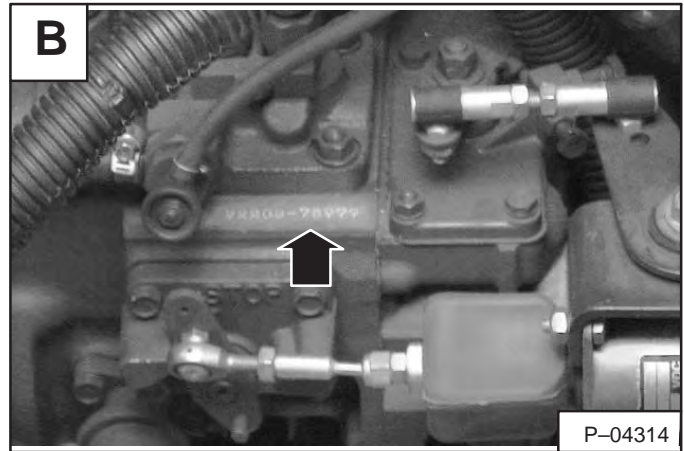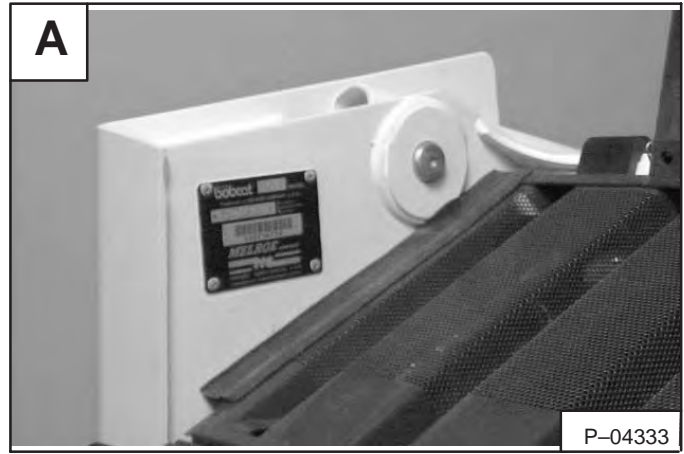


## DELIVERY REPORT

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the Bobcat loader is delivered. The form contents must be explained to the owner. Make sure it is filled out completely [C].
 
# BOBCAT LOADER IDENTIFICATION

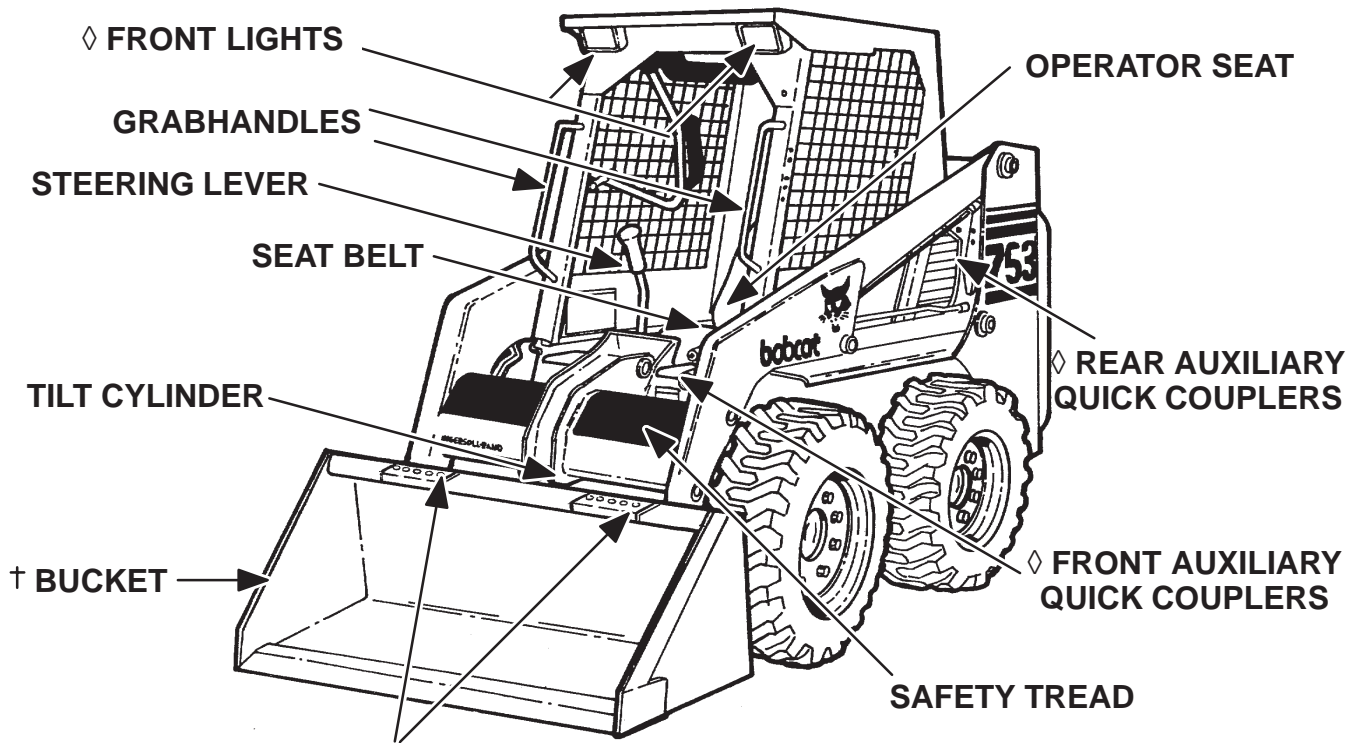

## BUCKET STEPS

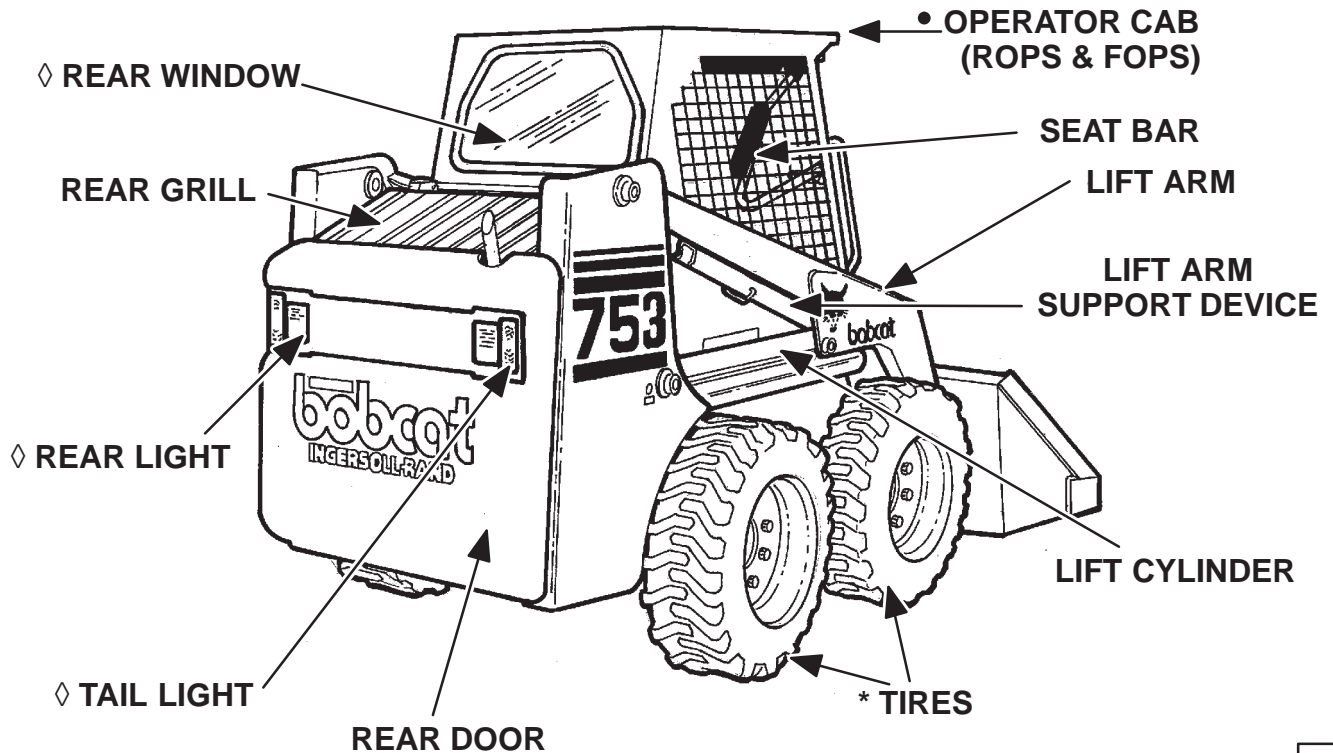 

◇ OPTIONAL OR FIELD ACCESSORY (Not Standard Equipment)

\* TIRES – Flotation tires (optional) are shown. The Bobcat loader is factory equipped with standard tires.

† BUCKET – Several different buckets and other attachments are available for the Bobcat loader.

• ROPS, FOPS – Roll Over Protective Structure, Falling Object Protective Structure, per SAE J1040 and ISO 3471, and Falling Object Protective Structure per SAE J1043 and ISO 3449, Level I. Level II is available. The Bobcat loader is base-equipped with a standard operator cab as shown. Extra insulated cab is available as an option (Reduced noise level).

## PREVENTIVE MAINTENANCE

## PREVENTIVE MAINTENANCE

	Page Number
AIR CLEANER SERVICE	
Replacing Filter Element .....	1-15
ALTERNATOR BELT	
Adjusting .....	1-23
BOB-TACH	
Inspection And Maintenance .....	1-36
DRIVE BELT	
Adjusting The Drive Belt Equipped With The Fixed Drive Idler .....	1-30
Adjusting The Drive Belt Equipped With The Spring Loaded Drive Idler .....	1-32
Replacing The Drive Belt .....	1-33
ENGINE COOLING SYSTEM	
Cleaning The Cooling System .....	1-21
Checking The Coolant Level .....	1-21
Replacing The Coolant .....	1-22
ENGINE LUBRICATION SYSTEM	
Checking Engine Oil .....	1-19
Replacing Oil And Filter .....	1-19
FAN GEARBOX	
Checking And Maintaining .....	1-23
FINAL DRIVE TRANSMISSION (CHAINCASE)	
Checking And Adding Oil .....	1-29
Removing Oil From The Chaincase .....	1-29
FUEL SYSTEM	
Filling The Fuel Tank .....	1-17
Fuel Filter .....	1-17
Fuel Specifications .....	1-17
Removing Air From The Fuel System .....	1-18
HYDRAULIC/HYDROSTATIC SYSTEM	
Checking And Adding Fluid .....	1-24
Replacing Hydraulic/Hydrostatic Filter .....	1-24
Breather Cap .....	1-26
Replacing Hydraulic Fluid .....	1-25
LIFT ARM SUPPORT DEVICE	
Disengaging The Lift Arm Support Device .....	1-8
Engaging The Lift Arm Support Device .....	1-7
LIFTING AND BLOCKING THE LOADER	
Procedure .....	1-4

Continued On Next Page

## PREVENTIVE MAINTENANCE (Cont'd)

	<b>Page Number</b>
LIFTING THE LOADER	
Four Point Lift .....	1-6
Single Point Lift .....	1-6
LUBRICATION OF THE BOBCAT LOADER	
Procedure .....	1-34
OPERATOR CAB	
Description .....	1-9
Lowering The Operator Cab .....	1-10
Raising The Operator Cab .....	1-9
Emergency Exit .....	1-11
PIVOT PINS .....	1-35
REMOTE START SWITCH	
Procedure .....	1-37
SEAT BAR RESTRAINT SYSTEM (Advanced Hand Controls)	
Description .....	1-14
Seat Bar Inspection .....	1-14
Seat Bar Maintenance .....	1-14
SEAT BAR RESTRAINT SYSTEM (Foot Pedals)	
Description .....	1-12
Seat Bar Inspection .....	1-12
Seat Bar Maintenance .....	1-12
SEAT BAR RESTRAINT SYSTEM (Mechanical Hand Controls)	
Description .....	1-13
Seat Bar Inspection .....	1-13
Seat Bar Maintenance .....	1-13
SERVICE SCHEDULE	
Chart .....	1-3
SPARK ARRESTOR MUFFLER	
Cleaning Procedure .....	1-27
STOPPING THE BOBCAT LOADER .....	1-5
TIRE MAINTENANCE	
Tire Mounting .....	1-28
Tire Rotation .....	1-28
Wheel Nuts .....	1-28
TOWING THE LOADER	
Procedure .....	1-5
TRANSPORTING THE LOADER	
Procedure .....	1-5



## SERVICE SCHEDULE

Maintenance work must be done at regular intervals. Failure to do so will result in excessive wear and early failures. The service schedule is a guide for correct maintenance of the Bobcat loader.

# WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0199

SERVICE SCHEDULE		HOURS					
ITEM	SERVICE REQUIRED	8-10	50	100	250	500	1000
Engine Oil	Check the oil level and add oil as needed.						
Engine Air Filter and Air System	Check condition indicator or display panel. Service only when required. Check for leaks and damaged components.						
Engine Cooling System	Clean debris from oil cooler, radiator and grill. Check coolant level in recovery tank (engine cold). Add coolant as needed.						
Tires	Check for damaged tires and correct air pressure.						
Seat Belt, Seat Bar, Foot Pedal or Hand Control Interlocks	Check the condition of seat belt. Check the seat bar, and foot pedal interlocks or hand control interlocks. Clean dirt and debris from moving parts.						
Safety Signs and Safety Tread	Check for damaged signs (decals) and safety tread. Replace any signs or safety treads that are damaged or worn.						
Indicators & Lights (Opt.)	Check for correct operation of all indicators & lights.						
Operator Cab	Check the fastening bolts, washers & nuts. Check the condition of cab.						
Lift Arms, Cyl., Bob-Tach Pivot Pins and Wedges	Lubricate with multi-purpose lithium based grease.						
Fuel Filter	Remove the trapped water.						
Bobcat Interlock Control System (BICS™)	Check BICS™ functions. Clean dirt, debris or objects from under and behind seat and around brake pedal as required.						
Hydraulic Fluid, Hoses and Tubelines	Check fluid level and add as needed. Check for damage and leaks. Repair or replace as needed.						
Final Drive Trans.(Chaincase)	Check oil level.						
Foot Pedals, Hand Controls, and Steering Levers	Check for correct operation. Repair or adjust as needed.						
Wheel Nuts	<input type="checkbox"/> Check for loose wheel nuts and tighten to 105–115 ft.-lbs. (142–156 Nm) torque.						
Parking Brake	Check operation.						
Spark Arrestor Muffler	Clean the spark chamber.						
Battery	Check cables, connections and electrolyte level. Add distilled water as needed						
Steering Shaft	Grease two fittings.						
Engine/Hydros. Drive Belt	* Check for wear or damage. Adjust as needed.						
Fan Drive Gearbox	Check gear lube level. Add as needed.						
Alternator Belt	Check belt tension and adjust as needed.						
Engine Oil and Filter	† Replace oil and filter. Use CD or better grade oil and Bobcat filter.						
Fuel Filter	Replace the filter element.						
Hydraulic Reservoir Breather Cap	Replace the reservoir breather cap.						
Hydraulic Reservoir	Replace the fluid.						
Final Drive Trans.(Chaincase)	Replace the fluid.						
Hydraulic/Hydrostatic Filter	● Replace the filter element.						
Case Drain Filters	Replace the filters.						
Bobcat Interlock Control System (BICS™)	Check lift arm by-pass control						

- Check wheel nut torque every 8 hours for the first 24 hours.
- Replace filter element after the first 50 hours and when the transmission warning light comes ON.
- Or every 12 months.
- \* Inspect the new belt after first 50 hours.
- † First oil and filter change must occur at 50 hours; 250 hours thereafter.

**Dear**

**Thanks very much for your visiting and  
patience.**

**Want to get more information,**

**Please click here, Go back to the page.**

**After your payment, you will have instant access to  
your download.**

**The Download Link will also be sent to your e-mail.**

**You will get the complete manual**

**Have any questions**

**please write to me**

**[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**