

Utility Vehicle

2200

2200S

2300



Bobcat®

Service Manual



S/N A59Z11001 & ABOVE (2200 DIESEL)


S/N A5KR11001 & ABOVE (2200 DIESEL) HOM.

S/N A59Y11001 & ABOVE (2200 GASOLINE)

S/N A5A111001 & ABOVE (2200S DIESEL)

S/N A5A011001 & ABOVE (2200S GASOLINE)

S/N A59W11001 & ABOVE (2300 DIESEL)

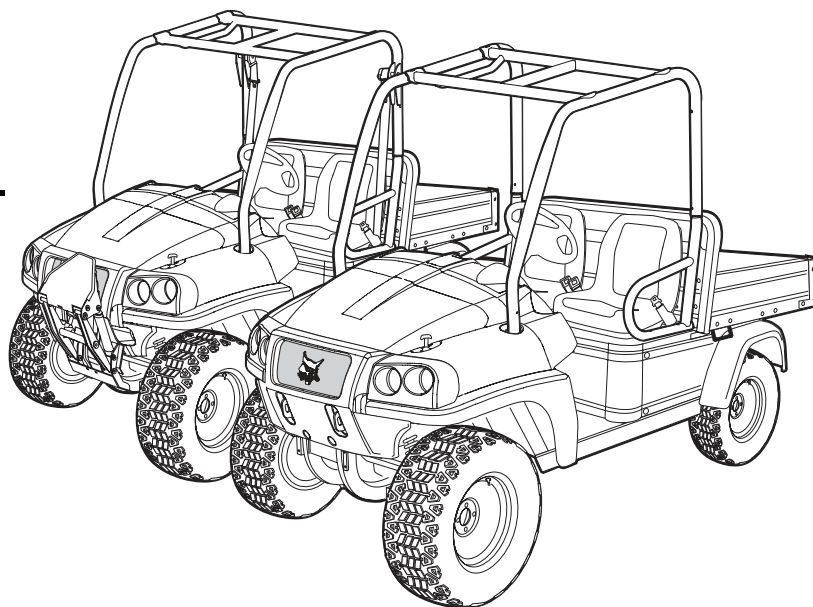

FOREWORD

Bobcat vehicles are designed and built to provide the ultimate in performance efficiency; however, proper maintenance and repair are essential for achieving maximum service life and continued safe and reliable operation.

This manual provides detailed information for the maintenance and repair of the Bobcat 2200, 2200 Homologated, 2200S and Bobcat 2300 vehicles, and should be thoroughly reviewed prior to servicing the vehicles. The procedures provided must be properly implemented, and the DANGER, WARNING, and CAUTION statements must be heeded.

This manual was written for the trained technician who already possesses knowledge and skills in electrical and mechanical repair. If the technician does not have such knowledge and skills, attempted service or repairs to the vehicle may render the vehicle unsafe. For this reason, Bobcat Company advises that all repairs and/or service be performed by an authorized Bobcat 2200 and 2200S distributor/dealer representative or by a Bobcat factory-trained technician.

It is the policy of Bobcat Company to assist its distributors and dealers in continually updating their service knowledge and facilities so they can provide prompt and efficient service for vehicle owners. Regional technical representatives, vehicle service seminars, periodic service bulletins, maintenance and service manuals, and other service publications also represent Bobcat Company's continuing commitment to customer support.

This manual covers all aspects of typical vehicle service; however, unique situations sometimes occur when servicing a vehicle. If it appears that a service question is not answered in this manual, you may write to us at: P.O. Box 204658; Augusta, GA 30917; Attention: Technical Services, or contact a Technical Service Representative at (706) 863-3000, ext. 3580.

Copyright © 2007, 2008, Bobcat Company.

This manual effective June 19, 2006.

WARNING

- **Read Section 1 – Safety before attempting any service on this vehicle.**
- **Before servicing vehicle, read complete section(s) and any referenced information that may be relevant to the service or repair to be performed.**

NOTE: *This manual represents the most current information at the time of publication. Bobcat Company is continually working to further improve its vehicles and other products. These improvements may affect servicing procedures. Any modification and/or significant change in specifications or procedures will be forwarded to all Bobcat 2200 and 2200S dealers and will, when applicable, appear in future editions of this manual.*

Damage to a vehicle or component thereof not resulting from a defect or that occurs due to unreasonable or unintended use, overloading, abuse, or neglect (including failure to provide reasonable or necessary maintenance as instructed in the vehicle owner's manual), accident or alteration, including increasing vehicle speed beyond factory specifications or modifications that affect the stability of the vehicle or the operation thereof, will void the warranty.

Bobcat Company reserves the right to change specifications and designs at any time without notice and without incurring any obligation or liability whatsoever.

There are no warranties expressed or implied in this manual. See the limited warranty found in the vehicle Operation and Maintenance Manual.

CONTENTS

SECTION 1 – SAFETY

General Warning	1-1
-----------------------	-----

SECTION 2A – VEHICLE SPECIFICATIONS: HONDA GAS & KUBOTA DIESEL POWERED

2200 and 2200S Specifications	2a-1
2300 Specifications	2a-3

SECTION 2B – VEHICLE SPECIFICATIONS: KAWASAKI GAS & KUBOTA DIESEL POWERED

2200 and 2200S Specifications	2b-1
2200 Homologated Specifications	2b-3
2300 Specifications	2b-5

SECTION 3 – GENERAL INFORMATION

General Information	3-1
Model Identification	3-1
Engine Serial Number Locations	3-2
Gasoline EngineS	3-2
Diesel Engine	3-2
Storage	3-2
Preparing the Vehicle for Extended Storage	3-3
Returning the Stored Vehicle to Service	3-4
Using A Booster Battery (Jump Starting)	3-5

SECTION 4 – BODY AND TRIM

Cleaning the Vehicle	4-1
Seat Cleaning	4-1
Front Body Repair	4-2
Light Scratches	4-2
Abrasions and Haze	4-2
Large Scratches and Abrasions	4-2

Front Body Components	4-3
Instrument Panel Removal	4-3
Instrument Panel Installation	4-3
Front Fascia Removal	4-4
Front Fascia Installation	4-4
Hood Removal	4-4
Hood Installation	4-4
Center Cowl Panel Removal	4-4
Center Cowl Panel Installation	4-5
Side Cowl Panel (Fender) Removal	4-5
Side Cowl Panel (Fender) Installation	4-5
Front Fender Flare Removal	4-6
Front Fender Flare Installation	4-6
Roll-Over Protective Structure (ROPS)	4-6
ROPS Removal	4-7
ROPS Installation	4-8
Seat	4-9
Seat Removal	4-9
Seat Adjustment	4-9
Seat Installation	4-9
Seat Support Removal	4-10
Seat Support Installation	4-10
Safety Belts	4-10
Safety Belt Removal	4-10
Safety Belt Installation	4-11
Cargo Bed – Electric Lift	4-11
Testing the Bed Lift Motor	4-11
Bed Lift Motor Removal	4-11
Bed Lift Motor Installation	4-12
Cargo Bed Removal	4-12
Cargo Bed Installation	4-12
Cargo Bed – Manual Lift	4-13
Cargo Bed Removal	4-13
Cargo Bed Installation	4-13
Rear Fender	4-15
Rear Fender Removal	4-15
Rear Fender Installation	4-15
Floor Mat	4-15
Floor Mat Removal	4-15
Floor Mat Installation	4-15

SECTION 5 – ACCELERATOR AND BRAKE PEDAL ASSEMBLIES

Accelerator Pedal	5-1
Accelerator Pedal Removal	5-1
Accelerator Pedal Installation	5-2
Accelerator Pedal and RPM Adjustment	5-2
Brake Pedal	5-3
Brake Pedal Removal	5-3
Brake Pedal Installation	5-3
Brake Pedal Adjustment	5-4
Park Brake Pedal	5-4
Park Brake Pedal Assembly Removal	5-4
Park Brake Pedal Assembly Installation	5-4

SECTION 6 – HYDRAULIC AND PARK BRAKE SYSTEMS

Brake System Inspection	6-1
Brake System Troubleshooting	6-3
Brake Pads and Caliper	6-5
Front Brake Pad and Caliper Removal	6-5
Front Brake Pad and Caliper Installation	6-7
Rear Brake Pad and Caliper Removal	6-8
Rear Brake Pad and Caliper Installation	6-9
Brake Disc and Hub	6-10
Front Wheel Disc and Hub Removal	6-10
Front Wheel Disc and Hub Installation	6-14
Rear Wheel Disc Removal	6-15
Rear Wheel Disc Installation	6-16
Hydraulic Line Replacement	6-17
Front Brake Line Removal	6-17
Front Brake Line Installation	6-17
Rear Brake Line Removal	6-18
Rear Brake Line Installation	6-19
Master Cylinder and Reservoir	6-20
Filling the Hydraulic System	6-20
Reservoir Removal	6-20
Reservoir Installation	6-20
Master Cylinder Removal	6-21
Master Cylinder Installation	6-21
Bleeding the Hydraulic Brake System	6-22
Bleeding Brakes on a DOT 5 Fluid Filled System	6-22
Purging the Hydraulic System	6-24

Park Brake System	6-25
Park Brake Adjustment	6-25
Park Brake Cable Adjustment	6-25
Park Brake Wheel Cables	6-26
Front Park Brake Cable Removal	6-27
Front Park Brake Cable Installation	6-28
Park Brake Equalizer Removal	6-28
Park Brake Equalizer Installation	6-28

SECTION 7 – STEERING AND FRONT SUSPENSION

Steering Wheel	7-1
Steering Wheel Removal	7-1
Steering Wheel Installation	7-2
Steering Column	7-2
Steering Column Removal	7-2
Steering Column Installation	7-3
Rack and Pinion	7-3
Rack and Pinion Removal	7-3
Rack and Pinion Installation	7-4
Rack and Pinion Disassembly	7-5
Rack and Pinion Assembly	7-9
Front Suspension	7-11
Wheel Alignment	7-11
Front Suspension Components	7-13
Steering Upright Removal	7-13
Upper A-Arm Removal	7-14
Upper A-Arm Installation	7-16
Lower A-Arm Removal	7-16
Lower A-Arm Installation	7-17
Front Coil-Over Shock Absorber Removal	7-18
Front Coil-Over Shock Absorber Installation	7-19
Steering Upright Installation	7-19

SECTION 8 – WHEELS AND TIRES

General Information	8-1
Wheels	8-2
Wheel Removal	8-2
Wheel Installation	8-2

Tires	8-2
Tire Removal	8-2
Tire Installation	8-3

SECTION 9 – REAR SUSPENSION

Rear Coil-Over Shock Absorber	9-1
Swing Arms	9-2
Swing Arm Removal	9-2
Swing Arm Installation	9-3

SECTION 10A – PERIODIC MAINTENANCE: HONDA GASOLINE & KUBOTA DIESEL VEHICLES

Periodic Service Schedule	10a-1
Periodic Lubrication Schedule – 2200	10a-4
Periodic Lubrication Schedule – 2300	10a-6
Lubricating The Attachment Arm And Interface	10a-7
Brake Fluid Reservoir	10a-8
Brake Fluid	10a-8
Engine Oil	10a-8
Oil Pressure – Gasoline Engine	10a-9
Engine Oil Level Check	10a-9
Engine Oil and Filter Change	10a-10
Oil Viscosity	10a-13
Gearcase Lubrication	10a-14
Lubrication Level Check for Front Differential, Transmission, and Rear Differential	10a-14
Lubrication Change for Front Differential, Transmission, and Rear Differential	10a-14
Hydraulic System – 2300 Vehicle	10a-16
Engine Coolant – Diesel Vehicles	10a-17
Engine Coolant Level Check	10a-17
Fueling Instructions	10a-17
Draining Water from Fuel Filter	10a-18
Battery	10a-19

SECTION 10B – PERIODIC MAINTENANCE: KAWASAKI GASOLINE & KUBOTA DIESEL POWERED VEHICLES

Periodic Service Schedule	10b-1
Periodic Lubrication Schedule - 2200	10b-4
Lubricating The Attachment Arm And Interface	10b-6
Brake Fluid Reservoir	10b-7
Brake Fluid	10b-7

Engine Oil	10b-7
Oil Pressure – Gasoline Engine	10b-8
Engine Oil Level Check	10b-8
Engine Oil and Filter Change	10b-8
Oil Viscosity	10b-11
Spark Plugs	10b-12
Spark Plug Cleaning And Inspection	10b-12
Spark Plug Gap Inspection	10b-12
Gearcase Lubrication	10b-13
Lubrication Level Check for Front Differential, Transmission, and Rear Differential	10b-13
Lubrication Change for Front Differential, Transmission, and Rear Differential	10b-13
Hydraulic System – 2300 Vehicle	10b-15
Engine Coolant – Diesel Vehicles	10b-16
Engine Coolant Level Check	10b-16
Fueling Instructions	10b-16
Draining Water from Fuel Filter	10b-17
Battery	10b-18

SECTION 11A – TROUBLESHOOTING AND ELECTRICAL SYSTEM: KAWASAKI POWERED GASOLINE VEHICLES

Troubleshooting Guide	11a-1
Wiring Diagram	11a-6
Test Procedures	11a-8
Index of Test Procedures	11a-8

SECTION 11B – TROUBLESHOOTING AND ELECTRICAL SYSTEM: HONDA POWERED GASOLINE VEHICLES

Troubleshooting Guide	11b-1
Wiring Diagram	11b-6
Test Procedures	11b-8
Index of Test Procedures	11b-8

SECTION 11C – TROUBLESHOOTING AND ELECTRICAL SYSTEM: DIESEL VEHICLES

Troubleshooting Guide	11c-1
Wiring Diagram	11c-6
Test Procedures	11c-12
Index of Test Procedures	11c-12

SECTION 12A – ELECTRICAL COMPONENTS: KAWASAKI POWERED GASOLINE VEHICLES

Starter and Starter Solenoid	12a-1
Relays	12a-1
Neutral Switch	12a-2
Carburetor Solenoid	12a-2
Carburetor Heater	12a-3
Voltage Regulator	12a-4
Warning Lights	12a-5
Fuel Gauge/Hour Meter	12a-6
Key Switch	12a-7
12-Volt Accessory Receptacle	12a-8
Bed Lift Switch	12a-9
Bed Lift Circuit Breaker	12a-9
Light Switch	12a-10
Fuse	12a-10
Reverse Warning Buzzer (If Equipped)	12a-11
Reverse Warning Buzzer Limit Switch (If Equipped)	12a-12
Front Differential Switch	12a-13
Fuel Level Sending Unit	12a-14
Ignition Coil and Charge Coil	12a-15
Oil Pressure Sensor	12a-15
Headlights	12a-15
Wire Harness Diodes	12a-16
Battery	12a-17
General Information	12a-17

SECTION 12B – ELECTRICAL COMPONENTS: HONDA POWERED GASOLINE VEHICLES

Starter and Starter Solenoid	12b-1
Relays	12b-1
Neutral Switch	12b-2
Carburetor Solenoid	12b-2
Voltage Regulator	12b-3
Warning Lights	12b-4
Fuel Gauge/Hour Meter	12b-5
Key Switch	12b-6
12-Volt Accessory Receptacle	12b-7
Bed Lift Switch	12b-8
Bed Lift Circuit Breaker	12b-8

Light Switch	12b-9
Fuse	12b-9
Reverse Warning Buzzer	12b-10
Reverse Warning Buzzer Limit Switch	12b-11
Fuel Level Sending Unit	12b-12
Ignition Coil and Charge Coil	12b-12
Charge Coil	12b-13
Oil Pressure Sensor	12b-13
Headlights	12b-13
Wire Harness Diodes	12b-14
Battery	12b-15
General Information	12b-15

SECTION 12C – ELECTRICAL COMPONENTS: DIESEL VEHICLES

Starter and Starter Solenoid	12c-1
Relays	12c-1
Neutral Switch	12c-2
Fuel Solenoid	12c-2
60-Amp Fusible Link	12c-3
Warning Lights	12c-4
Fuel Gauge/Hour Meter	12c-6
Key Switch	12c-7
12-Volt Accessory Receptacle	12c-7
Bed Lift Switch	12c-8
Bed Lift Circuit Breaker	12c-8
Light Switch	12c-9
Fuse	12c-9
Reverse Warning Buzzer (If Equipped)	12c-10
Reverse Warning Buzzer Limit Switch (If Equipped)	12c-11
Electric Fuel Pump	12c-12
Fuel Level Sending Unit	12c-12
Alternator	12c-13
Oil Pressure Sensor	12c-15
Headlights	12c-15
Thermostat Switch	12c-16
Fan	12c-17
Wire Harness Diodes	12c-18
Battery	12c-19
General Information	12c-19

SECTION 13A – KAWASAKI GASOLINE ENGINE, MUFFLER, FUEL SYSTEM, AND CLUTCHES

Gasoline Engine	13a-1
Engine Removal	13a-1
Engine Installation	13a-3
Oil Filter Hoses	13a-5
Exhaust System	13a-6
Muffler Removal	13a-6
Intermediate Pipe Removal	13a-7
Intermediate Pipe Installation	13a-7
Muffler Installation	13a-8
Fuel System	13a-9
Fuel Lines	13a-10
Fuel Filter	13a-10
Fuel Pump	13a-10
Carburetor	13a-10
Fuel Level Sending Unit	13a-13
Fuel Tank	13a-16
Fuel Shut-Off Valve	13a-19
Engine Control Linkages	13a-20
Accelerator Cable	13a-20
Choke Cable	13a-22
Engine Governor Arm	13a-24
Engine RPM Adjustment	13a-24
Air Intake System	13a-25
Air Filter Replacement	13a-25
Air Canister Removal	13a-26
Air Canister Installation	13a-26
Air Filter Intake Hose Removal	13a-27
Air Filter Intake Hose Installation	13a-27
Air Filter Outlet Hose Removal	13a-28
Air Filter Outlet Hose Installation	13a-28
Clutches	13a-29
Clutch Troubleshooting	13a-29
Drive Belt	13a-30
Drive Clutch	13a-31
Driven Clutch	13a-36
Clutch Cover	13a-39

SECTION 13B – HONDA GASOLINE ENGINE, MUFFLER, FUEL SYSTEM, AND CLUTCHES

Gasoline Engine	13b-1
Engine Removal	13b-1
Engine Installation	13b-3
Exhaust System	13b-5
Muffler Removal	13b-5
Intermediate Pipe Removal	13b-5
Intermediate Pipe Installation	13b-6
Muffler Installation	13b-6
Fuel System	13b-7
Fuel Lines	13b-8
Fuel Filter	13b-8
Fuel Pump	13b-8
Carburetor	13b-8
Fuel Level Sending Unit	13b-9
Fuel Tank	13b-12
Fuel Shut-Off Valve	13b-15
Oil Filter Hoses	13b-16
Engine Control Linkages	13b-16
Accelerator Cable	13b-16
Governor Guard	13b-19
Governor Cable	13b-19
Accelerator Cable Retention Clip Adjustment	13b-20
Ground Speed (Transmission) Governor Arm Adjustment	13b-21
Engine Governor Arm	13b-23
Engine RPM Adjustment	13b-23
Choke and Air Intake System	13b-24
Air Filter Replacement	13b-24
Choke Cable Removal	13b-25
Choke Cable Installation	13b-26
Air Canister Removal	13b-26
Air Canister Installation	13b-27
Air Filter Intake Hose Removal	13b-27
Air Filter Intake Hose Installation	13b-28
Air Filter Outlet Hose Removal	13b-28
Air Filter Outlet Hose Installation	13b-29

Clutches	13b-29
Clutch Troubleshooting	13b-30
Drive Belt	13b-30
Drive Clutch	13b-31
Driven Clutch	13b-36
Clutch Cover	13b-39

SECTION 13C – DIESEL ENGINE, MUFFLER, FUEL SYSTEM, AND CLUTCHES

Diesel Engine	13c-1
Engine Removal	13c-1
Engine Installation	13c-3
Exhaust System	13c-5
Muffler Removal	13c-5
Intermediate Pipe Removal	13c-5
Manifold Pipe Removal	13c-6
Manifold Pipe Installation	13c-6
Intermediate Pipe Installation	13c-6
Muffler Installation	13c-7
Fuel System	13c-8
Fuel Lines	13c-9
Fuel Filter Replacement	13c-9
Draining Water from the Secondary Fuel Filter	13c-9
Electric Fuel Pump	13c-11
Fuel Level Sending Unit	13c-12
Fuel Tank	13c-16
Engine Control Linkages	13c-19
Accelerator Cable	13c-19
Engine RPM Adjustment	13c-20
Air Intake System	13c-23
Air Filter Replacement	13c-23
Air Canister Removal	13c-23
Air Canister Installation	13c-24
Air Filter Intake Hose Removal	13c-24
Air Filter Intake Hose Installation	13c-25
Air Filter Outlet Hose Removal	13c-26
Air Filter Outlet Hose Installation	13c-26

Clutches	13c-27
Clutch Troubleshooting	13c-27
Drive Belt	13c-28
Drive Clutch	13c-29
Driven Clutch	13c-33
Clutch Cover	13c-35

SECTION 14 – DRIVETRAIN COMPONENTS

Half Shafts	14-1
Half Shaft Removal	14-1
Half Shaft Installation	14-3
Front Differential	14-4
Front Differential Removal	14-4
Front Differential Installation	14-6
Front Driveshaft	14-6
Front Driveshaft Removal	14-6
Front Driveshaft Installation	14-7
Rear Receiver Hitch	14-7
Rear Receiver Hitch Removal	14-7
Rear Receiver Hitch Installation	14-7
Rear Axle	14-8
Rear Axle Removal	14-8
Rear Axle Installation	14-10
Rear Driveshaft	14-11
Rear Driveshaft Removal	14-11
Rear Driveshaft Installation	14-12
Transmission	14-12
Transmission Removal	14-12
Transmission Installation	14-14
Forward/Reverse Shifter Cable	14-15
Forward/Reverse Shifter Handle	14-18
Rear Differential and Axle Shafts	14-18
Rear Differential and Axle Shaft Removal	14-18
Rear Differential and Axle Shaft Installation	14-20
Rear Wheel Bearings	14-20

SECTION 15 – RADIATOR AND COOLANT SYSTEM (DIESEL)

General Information	15-1
Engine Coolant Level Check	15-1
Engine Coolant Change	15-1

Coolant Reservoir	15-3
Coolant Reservoir Removal	15-3
Coolant Reservoir Installation	15-4
Radiator	15-4
Radiator Removal	15-4
Radiator Installation	15-5
Coolant Pipe Weldment	15-6
Coolant Pipe Weldment Removal	15-6
Coolant Pipe Weldment Installation	15-6
Fan	15-7
Fan Removal	15-7
Fan Installation	15-7

SECTION 16 – TRANSMISSION MODELS 421274 AND 421275

General Information	16-1
Model Identification	16-1
Service Fixture	16-2
Transmission Removal	16-2
Transmission Disassembly	16-3
Input Shaft Disassembly	16-8
Input Shaft Assembly	16-8
Intermediate Shaft Disassembly	16-8
Output Shaft Disassembly	16-12
Shifter Shaft Removal	16-13
Shifter Shaft Installation	16-14
Case Inspection	16-14
Shaft Seal Removal	16-15
Shaft Seal Installation	16-15
Output Shaft Assembly	16-15
Intermediate Shaft Assembly	16-18
Intermediate and Output Shaft Assembly	16-22
Transmission Assembly	16-23
Transmission Installation	16-27

SECTION 17 – FRONT DIFFERENTIAL MODELS 6203-01-139-S AND 6203-01-189-S

General Information	17-1
Axle Half Shaft Removal	17-1
Front Differential Removal	17-2
Tools Required For This Section	17-3

Front Differential Coil And Output Cover	17-3
Coil and Output Cover Removal	17-3
Coil and Output Cover Installation	17-6
Front Differential	17-8
Front Differential Disassembly	17-8
Front Differential Assembly	17-14
Front Differential Installation	17-18
Axle Half Shaft Installation	17-18

SECTION 18 – REAR DIFFERENTIAL MODELS 420366 AND 420851

General Information	18-1
Axle Shafts and Differential Removal	18-2
Rear Differential Disassembly	18-2
Pinion Gear Removal	18-4
Ring Gear Removal	18-6
Clutch Carrier Assembly	18-7
Ring Gear Installation	18-8
Pinion Gear Installation	18-9
Rear Differential Assembly	18-9
Axle Shafts and Differential Installation	18-11

SECTION 19 – KUBOTA D722 DIESEL ENGINE MANUAL

SECTION 20A – KAWASAKI FH680D GASOLINE ENGINE MANUAL

SECTION 20B – HONDA GX 620 GASOLINE ENGINE MANUAL

SECTION 21 – HYDRAULIC ATTACHMENT SYSTEM

Model Identification	21-1
Relieving Hydraulic System Pressure	21-1
To Relieve Hydraulic Fluid Pressure	21-1
Attachment Interface	21-2
Inspection	21-2
Removing and Installing the Attachment Arm Mechanism	21-3

Dear

**Thanks very much for your visiting and
patience.**

Want to get more information,

Please click here, Go back to the page.

**After your payment, you will have instant access to
your download.**

The Download Link will also be sent to your e-mail.

You will get the complete manual

Have any questions

please write to me

admin@servicemanualperfect.com