

S250

TURBO

S300

TURBO

INCLUDES HIGH FLOW



Bobcat®

Service Manual

S250


S/N 526011001 & Above

S/N 526111001 & Above

S300

S/N 525811001 & Above

S/N 525911001 & Above

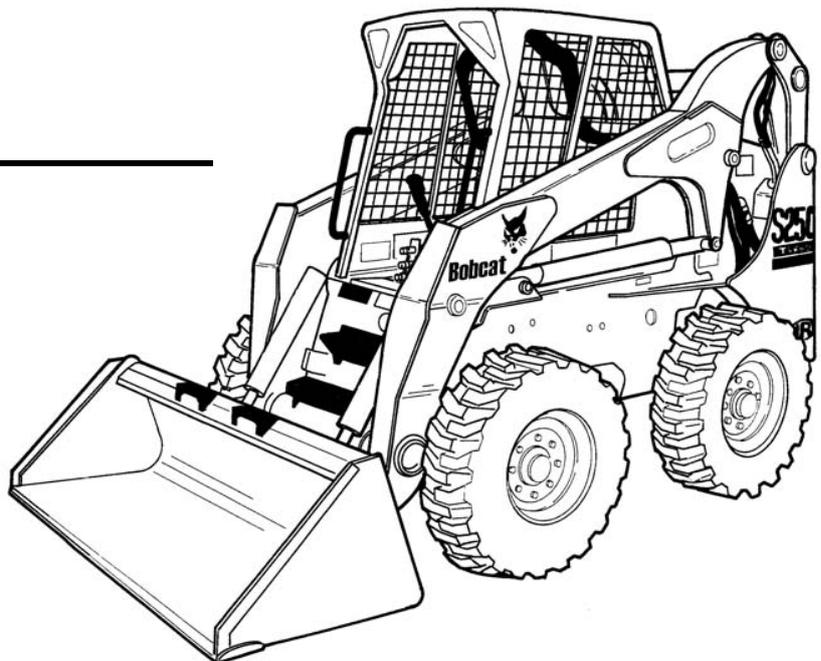

EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)

6902711 (3-06)

1 of 1073

IR Ingersoll Rand
Compact Vehicle Technologies

Printed in U.S.A.

© Bobcat Company 2006

MAINTENANCE SAFETY




WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

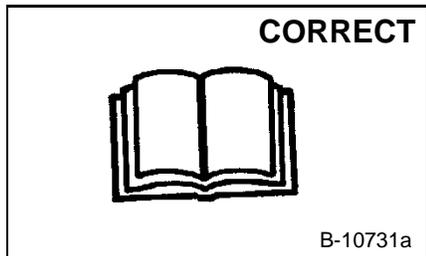


B-10731a

Never service the Bobcat Skid-Steer Loader without instructions.

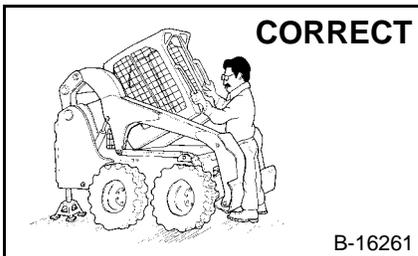


B-16261

Use the correct procedure to lift or lower operator cab.

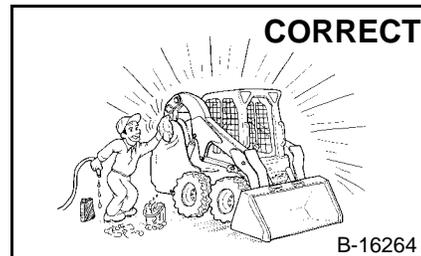


B-16264

Cleaning and maintenance are required daily.

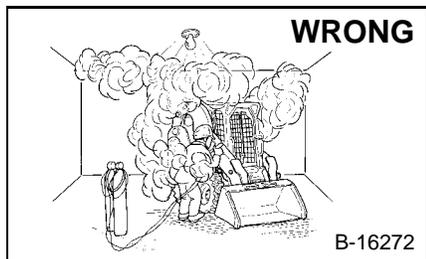


B-16272

- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

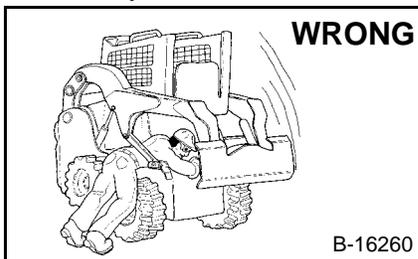


B-16260

Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

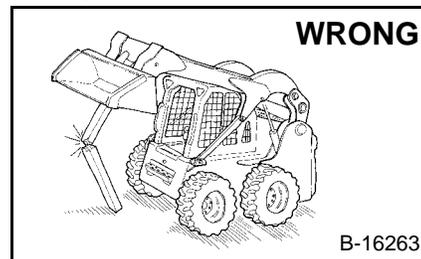


B-16263

- Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

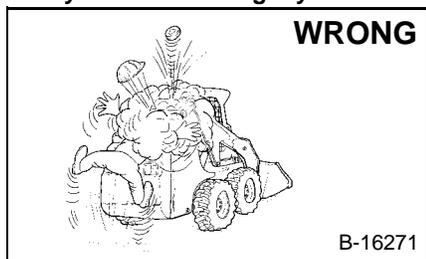

B-16271

- Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

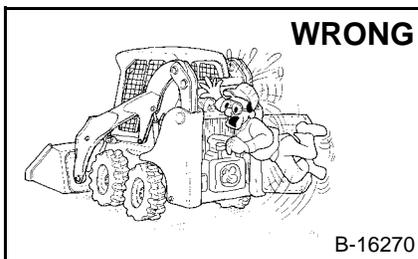

B-16270

- Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.



B-6589

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use genuine Bobcat replacement parts. The Service Safety Training Course is available from your Bobcat dealer.

MSW14-0805



Bobcat®

ALPHABETICAL INDEX

ADVANCED CONTROL SYSTEM (ACS)	60-01	EVAPORATOR/HEATER UNIT	80-01
AIR CLEANER	70-01	EXPANSION VALVE	80-01
AIR CLEANER SERVICE	10-01	FAN GEARBOX	10-01
AIR CONDITIONING SERVICE	80-01	FINAL DRIVE TRANSMISSION (CHAINCASE) ..	10-01
AIR CONDITIONING SYSTEM FLOW	80-01	FLYWHEEL AND HOUSING	70-01
ALTERNATOR	60-01	FLYWHEEL RPM SENSOR	60-01
 		FRONT AUXILIARY HYD. COUPLER BLOCK	20-01
BASIC TROUBLESHOOTING	80-01	FUEL SYSTEM	10-01
BATTERY	60-01	FUEL TANK	50-01
BICS™ SYSTEM	60-01	 	
BLOWER FAN	80-01	GENERAL AIR CONDITIONING SERVICE	
BOBCAT CONTROLLER	60-01	GUIDELINES	80-01
BOB-TACH	10-01, 50-01	 	
BRAKE	40-01	HEATER COIL	80-01
BRAKE (TWO-SPEED)	40-01	HEATER VALVE	80-01
BUCKET POSITION VALVE	20-01	HYDRAULIC CONNECTION SPECS	SPEC-01
 		HYDRAULIC CONTROL VALVE	
CALIBRATION	60-01	(ADVANCED CONTROL SYSTEM) (ACS)	20-01
CHAINCASE	40-01	HYDRAULIC CONTROL VALVE (1 PIECE CASTING)	
CHARGE PRESSURE	30-01	(ADVANCED CONTROL SYSTEM) (ACS)	20-01
COMPONENTS	80-01	HYDRAULIC CONTROL VALVE	
COMPRESSOR	80-01	(FOOT CONTROL)	20-01
CONDENSER	80-01	HYDRAULIC CONTROL VALVE (1 PIECE CASTING)	
CONTROL HANDLE	50-01	(FOOT CONTROL)	20-01
CONTROL HANDLE (ADVANCED CONTROL SYSTEM)		HYDRAULIC CONTROL VALVE (1 PIECE CASTING)	
(ACS) SELECTABLE HAND/FOOT CONTROL ...	50-01	(SELECTABLE JOYSTICK CONTROL) (SJC)	20-01
CONTROL HANDLE		HYDRAULIC CONTROL VALVE (2 PIECE CASTING)	
(SELECTABLE JOYSTICK CONTROL) (SJC)	50-01	(SELECTABLE JOYSTICK CONTROL) (SJC)	20-01
CONTROL PANEL (ADJUSTABLE PINTLES)	50-01	HYDRAULIC FLUID RESERVOIR	20-01
CONTROL PANEL (NON-ADJUSTABLE PINTLES) ..	50-01	HYDRAULIC FLUID SPECIFICATIONS	SPEC-01
CONTROL PANEL		HYDRAULIC/HYDROSTATIC FILTER	20-01
(SELECTABLE JOYSTICK CONTROL) (SJC)	50-01	HYDRAULIC/HYDROSTATIC SYSTEM	10-01
CONTROL PEDALS	50-01	HYDRAULIC PUMP	20-01
CONTROL PEDALS (ACS)	50-01	HYDRAULIC PUMP (CHARGE)	20-01
CONTROLLER (SELECTABLE JOYSTICK		HYDRAULIC PUMP (HI FLOW)	20-01
CONTROL) (SJC)	60-01	HYDRAULIC PUMP (SELECTABLE JOYSTICK	
CONVERSIONS	SPEC-01	CONTROL) (SJC)	20-01
COOLING FAN	70-01	HYDRAULIC PUMP (HI FLOW)	
CYLINDER (LIFT)	20-01	(SELECTABLE JOYSTICK CONTROL) (SJC)	20-01
CYLINDER (POWER BOB-TACH)	20-01	HYDRAULIC SYSTEM INFORMATION	20-01
CYLINDER (TILT)	20-01	HYDROSTATIC MOTOR	30-01
 		HYDROSTATIC MOTOR (TWO SPEED)	30-01
DIAGNOSTICS SERVICE CODES	60-01	HYDROSTATIC MOTOR CARRIER	30-01
DRIVE BELT	30-01	HYDROSTATIC MOTOR CARRIER	
DRIVE COMPONENTS	40-01	(SELECTABLE JOYSTICK CONTROL) (SJC)	30-01
 		HYDROSTATIC PUMP	30-01
ELECTRICAL/HYDRAULIC CONTROLS		HYDROSTATIC PUMP	
REFERENCE	60-01	(SELECTABLE JOYSTICK CONTROL) (SJC) ..	30-01
ELECTRICAL/HYDRAULIC CONTROLS REFERENCE		HYDROSTATIC SYSTEM INFORMATION	30-01
(SELECTABLE JOYSTICK CONTROL) (SJC)	60-01	 	
ELECTRICAL SYSTEM INFORMATION	60-01	INSIDE ACCESS PANEL	50-01
ENGINE	70-01	INSIDE ACCESS PANEL	
ENGINE COOLING SYSTEM	10-01	(SELECTABLE JOYSTICK CONTROL) (SJC)	50-01
ENGINE LUBRICATION SYSTEM	10-01	INSTRUMENT PANEL	60-01
ENGINE SPECIFICATIONS	SPEC-01		
ENGINE SPEED CONTROL	70-01		
ENGINE SPEED CONTROL (SELECTABLE			
JOYSTICK CONTROL) (SJC)	70-01		
EVAPORATOR	80-01		

ALPHABETICAL INDEX (CONT'D)

LIFT ARMS	50-01
LIFT ARM BY-PASS CONTROL VALVE	20-01
LIFT ARM SUPPORT DEVICE	10-01
LIFTING AND BLOCKING THE LOADER.....	10-01
LIGHTS	60-01
LOADER SPECIFICATIONS (S250)	SPEC-01
LOADER SPECIFICATIONS (S300)	SPEC-01
LUBRICATING THE LOADER.....	10-01
MAIN RELIEF VALVE (ACS).....	20-01
MAIN RELIEF VALVE (FOOT CONTROL).....	20-01
MAIN RELIEF VALVE (SELECTABLE JOYSTICK CONTROL) (SJC).....	20-01
MUFFLER.....	70-01
OIL COOLER (SEAL TO CONNECT) (STC).....	30-01
OPERATOR CAB	10-01, 50-01
OPERATOR SEAT	50-01
OPERATOR SEAT (SUSPENSION)	50-01
POWER BOB-TACH	10-01, 50-01
POWER BOB-TACH BLOCK	20-01
PRESSURE RELIEF VALVE	80-01
PRESSURE SWITCH.....	80-01
RADIATOR	70-01
REAR AUXILIARY DIVERTER.....	20-01
REAR DOOR	50-01
REAR GRILL	50-01
RECEIVER/DRIER	80-01
RECONDITIONING THE ENGINE	70-01
REGULAR MAINTENANCE	80-01
REMOTE START	10-01
RPM SENSOR.....	70-01
SAFETY.....	80-01
SEAT BAR	50-01
SEAT BAR SENSOR.....	60-01
SRVICE PC (LAPTOP COMPUTER)	60-01
SERVICE SCHEDULE	10-01
SPEED SENSOR (SELECTABLE JOYSTICK	60-01
CONTROL) (SJC).....	60-01
STARTER.....	60-01
SYSTEM CHARGING AND RECLAMATION	80-01
SYSTEM TROUBLESHOOTING CHART	80-01
TEMPERATURE/PRESSURE	80-01
THERMOSTAT	80-01
TIRE MAINTENANCE	10-01
TORQUE SPECIFICATIONS FOR BOLTS ...	SPEC-01
TOWING THE LOADER	10-01
TRACTION LOCK.....	60-01
TRANSPORTING THE BOBCAT LOADER	10-01
TROUBLESHOOTING.....	70-01

CONTENTS

FOREWORD.....	III
SAFETY INSTRUCTIONS	V
SERIAL NUMBER LOCATION	IX
DELIVERY REPORT.....	IX
BOBCAT LOADER IDENTIFICATION	X
SAFETY AND MAINTENANCE.....	10-01
HYDRAULIC SYSTEM	20-01
HYDROSTATIC SYSTEM.....	30-01
DRIVE SYSTEM	40-01
MAIN FRAME	50-01
ELECTRICAL SYSTEM & ANALYSIS	60-01
ENGINE SERVICE	70-01
HEATING, VENTILATION, AIR CONDITIONING.....	70-01
SPECIFICATIONS	SPEC-01

**SAFETY &
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

**DRIVE
SYSTEM**

MAIN FRAME

**ELECTRICAL
SYSTEM &
ANALYSIS**

**ENGINE
SERVICE**

HVAC

SPECIFICATIONS




Bobcat®

FOREWORD


This manual is for the Bobcat loader mechanic. It provides necessary servicing and adjustment procedures for the Bobcat loader and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, Starting procedure, daily checks, etc.

A general inspection of the following items must be made after the loader has had service or repair:


1. Check that the ROPS/FOPS (Including side screens) is in good condition and is not modified.

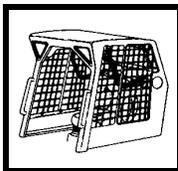


2. Check that ROPS mounting hardware is tightened and is Bobcat approved.

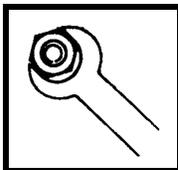


3. The seat belt must be correctly installed, functional and in good condition.

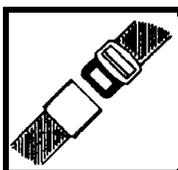

4. The seat bar must be correctly adjusted, clean and lubricated.

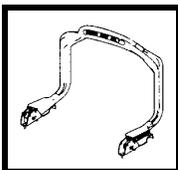


5. Check lift arm support device, replace if damaged.

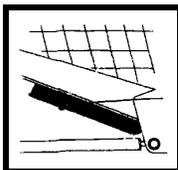

6. Machine signs must be legible and in the correct location.




7. Steering levers and foot pedals must return to neutral.

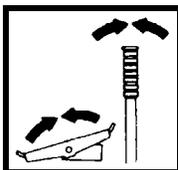


8. Check for correct function of the work lights




9. The parking brake must function correctly.

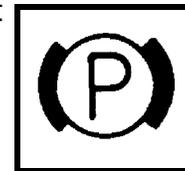


10. Enclosure door latches must open and close freely.

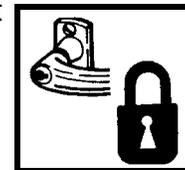


11. Bob-Tach wedges and linkages must function correctly and be in good condition.

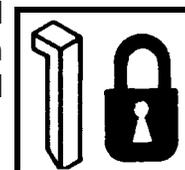


12. Safety treads must be in good condition.

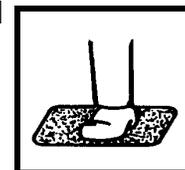


13. Check for correct function of indicator lamps (Optional on some models).

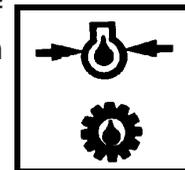

14. Check hydraulic fluid level, engine oil level and fuel supply.

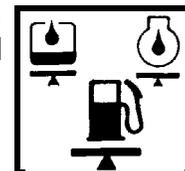


15. Inspect for fuel, oil or hydraulic fluid leaks.

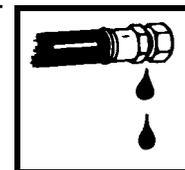


16. Lubricate the loader.




17. Check the condition of the battery and cables.

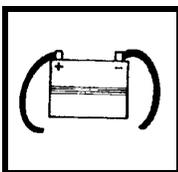


18. Inspect the air cleaner for damage or leaks. Check the condition of the element.

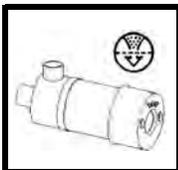


19. Check the electrical charging system.

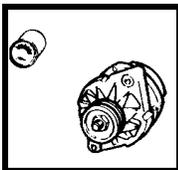


20. Check tires for wear and pressure.

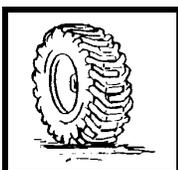

21. Inspect for loose or broken parts or connections.

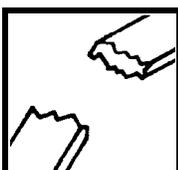


22. Operate the loader and check all functions.

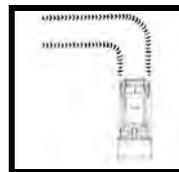


23. Check for any field modification not completed.



24. Check for correct function of the Bobcat Interlock Control System (BICS™) before the machine is returned to the customer.

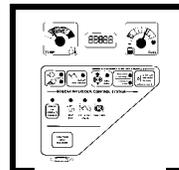

25. Recommend to the owner that all necessary corrections be made before the machine is returned to service.

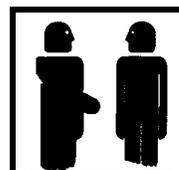

**CALIFORNIA
PROPOSITION 65 WARNING**
Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

SAFETY INSTRUCTIONS



Safety Alert Symbol

This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator's Handbook fastened to the operator cab. It's brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Skid-Steer Loader Operator Training Course is available through your local dealer or at www.training.bobcat.com or www.bobcat.com. This course is intended to provide rules and practices of correct operation of the Skid-Steer Loader. The course is available in English and Spanish versions.
- Service Safety Training Courses are available from your Bobcat dealer or at www.training.bobcat.com or www.bobcat.com. They provide information for safe and correct service procedures.
- The Skid-Steer Loader Safety Video is available from your Bobcat dealer or at www.training.bobcat.com or www.bobcat.com.

SI SSL-0206 SM

**S250, S300 Bobcat Loader
Service Manual**

SAFETY INSTRUCTIONS (CONT'D)

The dealer and owner/operator review the recommended uses of the product when delivered. If the owner/operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.



Call Before You Dig

1-888-258-0808

When you call, you will be directed to a location in your state/city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.)

SAFETY INSTRUCTIONS (CONT'D)

Fire Prevention

The machine and attachments have components that are at high temperature under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.


Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it will increase fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential hazard.

The spark arrestor muffler is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

- Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.
- The operator cab, engine compartment, and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazard and overheating.
- Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part.
- Check fuel and hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Tighten or replace any parts that show leakage. Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.
- Do not use ether or starting fluids on any engine which has glow plugs. These starting aids can cause explosion and injure you or bystanders.
- Always clean the machine, disconnect the battery, and disconnect the wiring from the controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding. Have good ventilation when grinding or welding painted parts. Wear a dust mask when grinding painted parts. Toxic dust or gas can be produced.
- Stop the engine and let it cool before adding fuel. **NO SMOKING!**

- Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.
- Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).

Figure 1

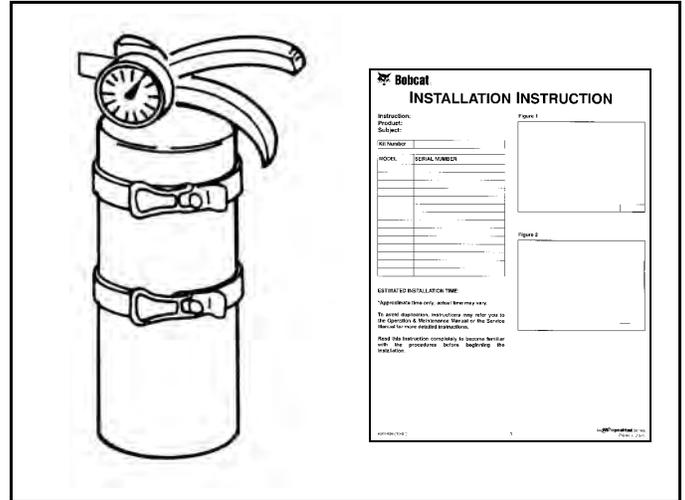

- Know where fire extinguishers and first aid kits are located and how to use them. Fire extinguishers are available from your Bobcat dealer **[Figure 1]**.



Bobcat®

SERIAL NUMBER LOCATION

Always use the serial number of the loader when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

Loader Serial Number

Figure 2



The loader serial number plate is located on the outside of the loader frame [Figure 2].


Explanation of loader Serial Number:

XXXX	XXXXX
Model 1.-Model/ Engine Combination	Model 2.-Production Sequence (Series)

1. The four digit Model/Engine Combination Module number identifies the model number and engine combination.
2. The five digit Production Sequence Number identifies the order which the loader is produced.

Engine Serial Number

Figure 3

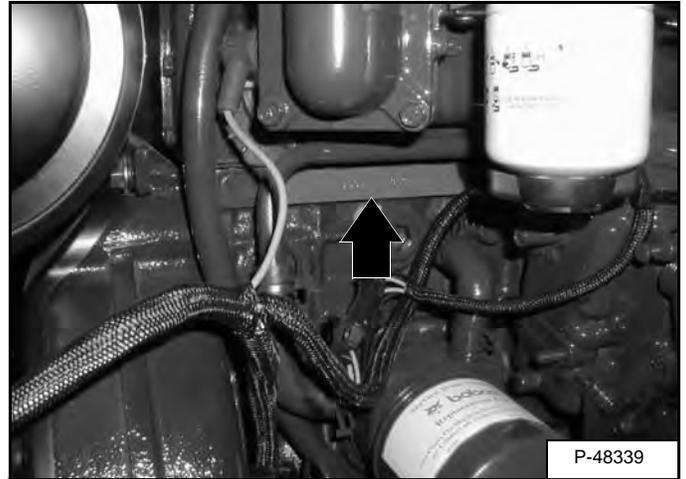


The engine serial number is located on the engine block [Figure 3].

DELIVERY REPORT

Figure 4

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the Bobcat loader is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely [Figure 4].

BOBCAT LOADER IDENTIFICATION

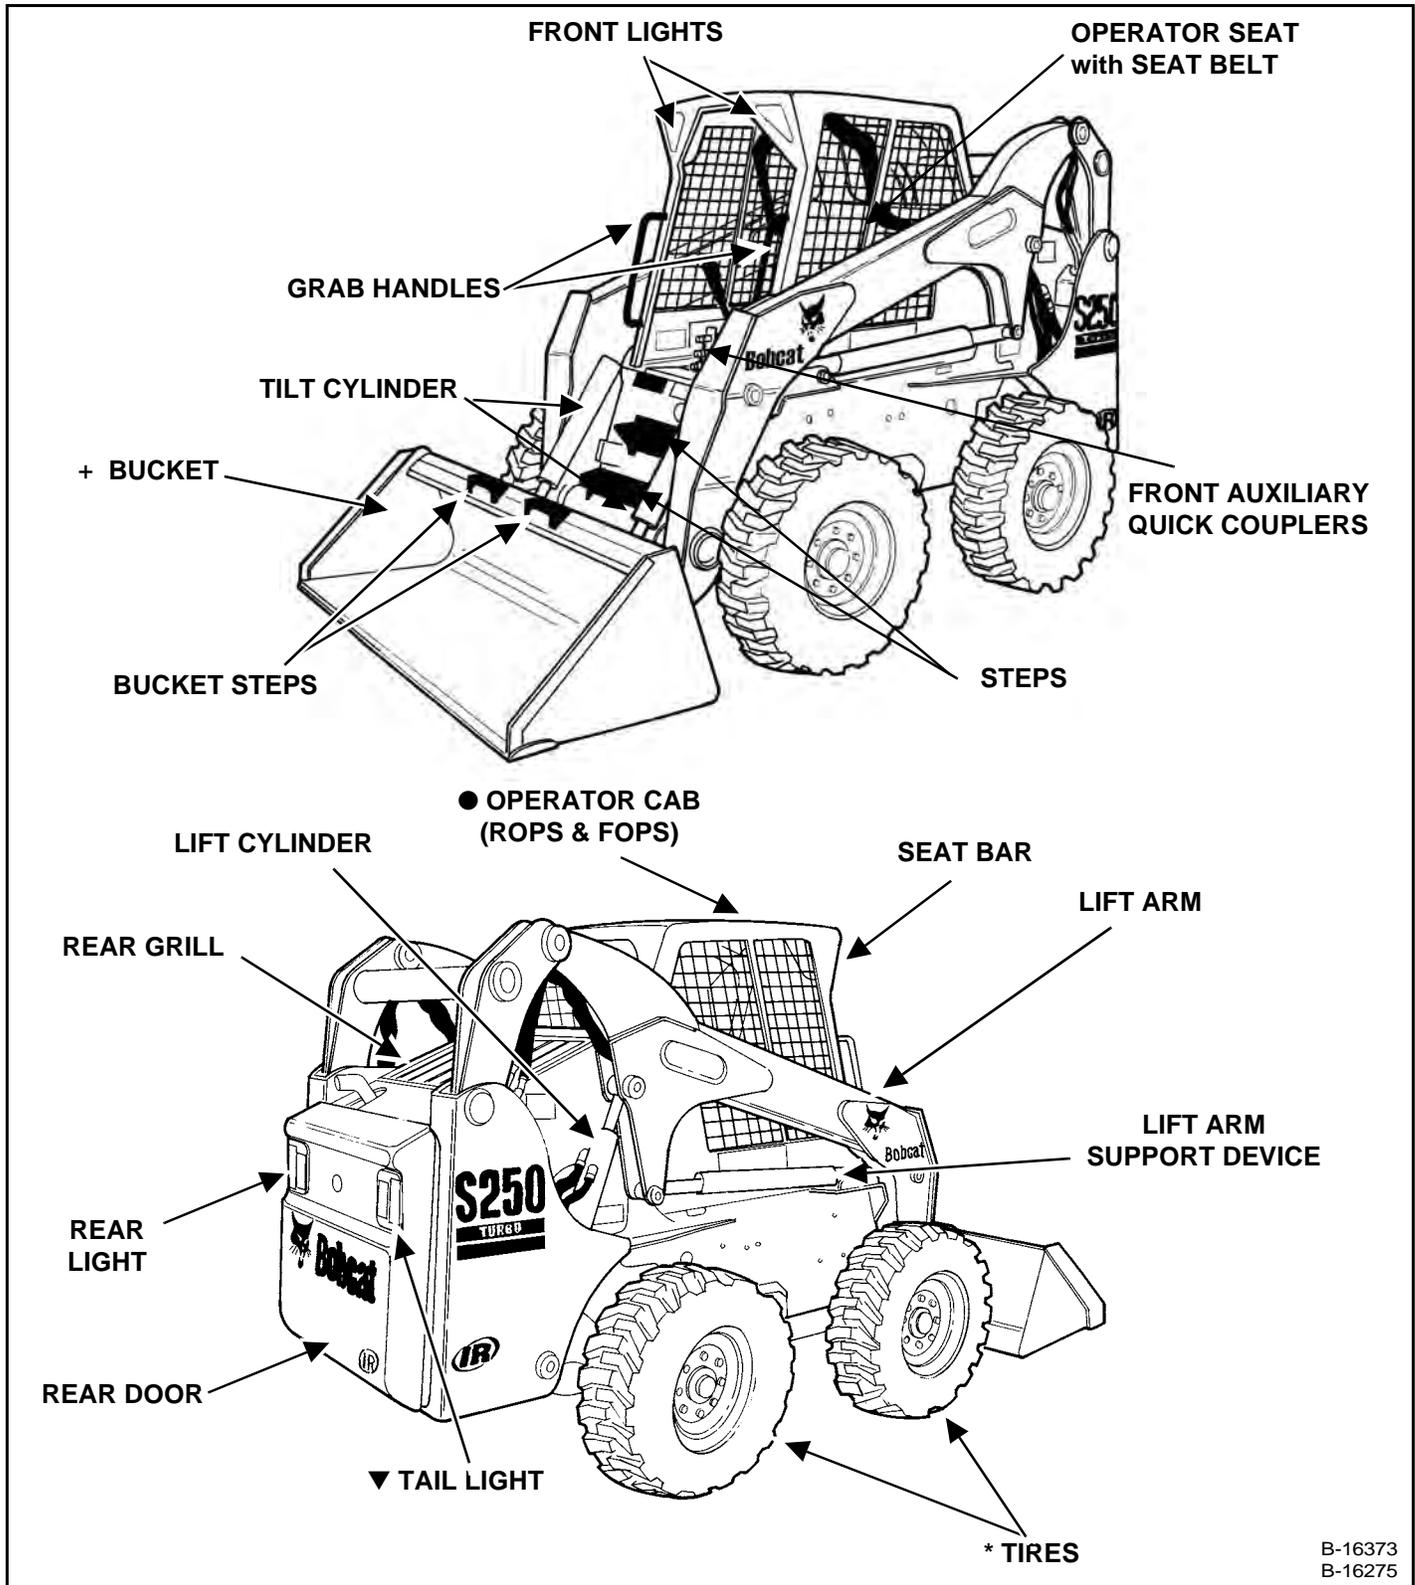

B-16373
B-16275

▼ OPTIONAL OR FIELD ACCESSORY (Not Standard Equipment)

* TIRES - Flotation tires ▼ are shown. The Bobcat loader is factory equipped with standard tires.

+ BUCKET - Several different buckets and other attachments are available for the Bobcat loader.

● ROPS, FOPS - Roll Over Protective Structure, per SAE J1040 and ISO 3471, and Falling Object Protective Structure per SAEJ1043 and ISO 3449, Level I. Level II is available. The Bobcat loader is base-equipped with a standard operator cab as shown. Extra insulated cab is available as an option (Reduced noise level).

SAFETY AND MAINTENANCE

SAFETY & MAINTENANCE

AIR CLEANER SERVICE	10-80-1
Replacing Filter Element	10-80-1
FAN GEARBOX	10-150-1
Inspection And Maintenance	10-150-1
ENGINE COOLING SYSTEM	10-90-1
Adding The Coolant	10-90-4
Checking The Coolant Level	10-90-3
Cleaning Cooling System	10-90-1
ENGINE LUBRICATION SYSTEM	10-110-1
Checking Engine Oil	10-110-1
Oil Chart	10-110-1
Replacing Oil And Filter	10-110-1
FAN GEARBOX	10-140-1
Checking And Adding Oil	10-140-1
FINAL DRIVE TRANSMISSION (CHAINCASE)	10-130-1
Checking And Adding Oil	10-130-1
Removing The Oil	10-130-1
FUEL SYSTEM	10-100-1
Filling The Fuel Tank	10-100-1
Fuel Filter	10-100-1
Fuel Specifications	10-100-1
Removing Air From The Fuel System	10-100-2
HYDRAULIC/HYDROSTATIC SYSTEM	10-120-1
Checking And Adding Fluid	10-120-1
Hydraulic Fluid Chart	10-120-1
Hydraulic/Hydrostatic Filter Replacement	10-120-2
Replacing Hydraulic Fluid And Case Drain Filters	10-120-3
LIFT ARM SUPPORT DEVICE	10-20-1
Installing The Lift Arm Support Device	10-20-1
Removing The Lift Arm Support Device	10-20-2
LIFTING AND BLOCKING THE LOADER	10-10-1
Procedure	10-10-1
LUBRICATING THE LOADER	10-160-1
Pivot Pins	10-160-3
Procedure	10-160-1

Continued On Next Page

SAFETY AND MAINTENANCE (CONT'D)

OPERATOR CAB	10-30-1
Description	10-30-1
Emergency Exit	10-30-2
Lowering The Operator Cab	10-30-2
Raising The Operator Cab	10-30-1
POWER BOB-TACH	10-151-1
Inspection And Maintenance	10-151-1
REMOTE START	10-60-1
Procedure	10-60-3
Procedure For Loader With Attachments Control Harness	10-60-2
Procedure For Loader W/O Attachments Control Harness	10-60-1
SERVICE SCHEDULE	10-70-1
Chart	10-70-1
LUBRICATING THE LOADER	10-170-1
Tire Mounting	10-170-1
Tire Rotation	10-170-1
Wheel Nuts	10-170-1
TOWING THE LOADER	10-50-1
Procedure	10-50-1
TRANSPORTING THE BOBCAT LOADER	10-40-1
Procedure	10-40-1

TIGHTEN ALL HARDWARD PER SIZE TO GRADE 5 TORQUE (SEE STANDARD TORQUE SPECIFICATIONS FOR BOLTS, SECTION SPEC-01) UNLESS OTHERWISE SPECIFIED.

Dear

**Thanks very much for your visiting and
patience.**

Want to get more information,

Please click here, Go back to the page.

**After your payment, you will have instant access to
your download.**

The Download Link will also be sent to your e-mail.

You will get the complete manual

Have any questions

please write to me

admin@servicemanualperfect.com