

T190
TURBO

T190
TURBO
HIGH FLOW

 


Bobcat®

Service Manual

G Series

(S/N 519311001 & Above)
(S/N 519411001 & Above)

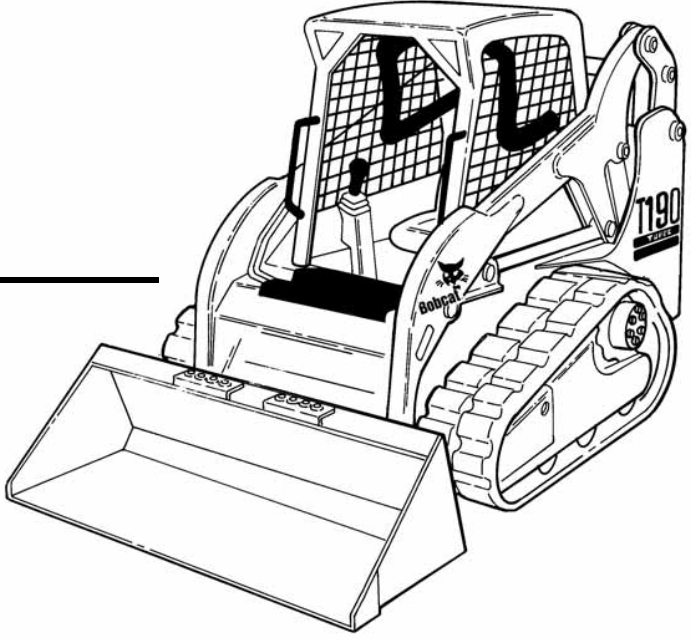

**EQUIPPED WITH
BOBCAT INTERLOCK
CONTROL SYSTEM (BICS™)**

6901117 (2-06)

IR Ingersoll Rand
Compact Vehicle Technologies
Printed in U.S.A.

© Bobcat Company 2006

MAINTENANCE SAFETY



 
WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0903




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

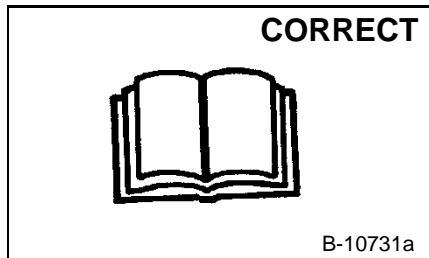

 
Never service the Bobcat Compact Track Loader without instructions.

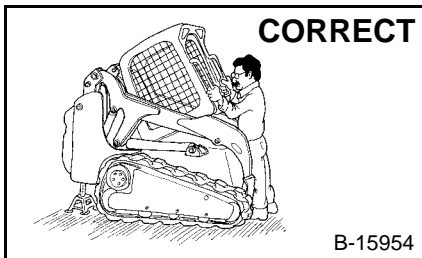

 
Use the correct procedure to lift or lower operator cab.

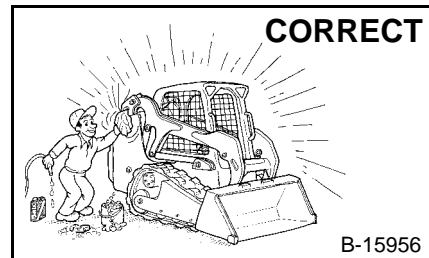

 
Cleaning and maintenance are required daily.

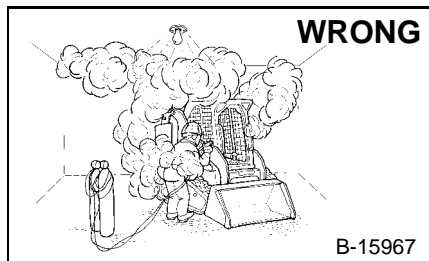

 
- Have good ventilation when welding or grinding painted parts.
- Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

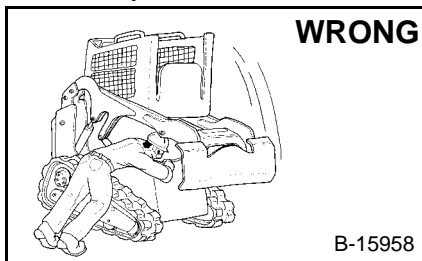

 
Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause lift arms to drop. Do not go under lift arms when raised unless supported by an approved lift arm support device. Replace it if damaged.

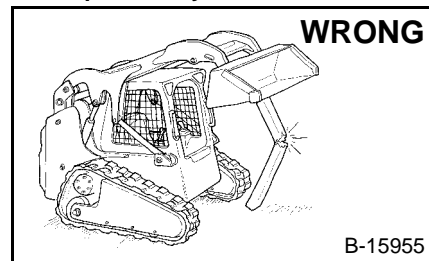

 
- Never work on loader with lift arms up unless lift arms are held by an approved lift arm support device. Replace if damaged.
- Never modify equipment or add attachments not approved by Bobcat Company.

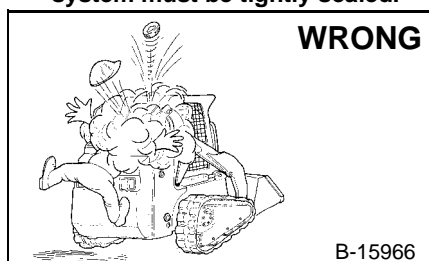

 - Stop, cool and clean engine of flammable materials before checking fluids.
- Never service or adjust loader with the engine running unless instructed to do so in the manual.
- Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.
- Never fill fuel tank with engine running, while smoking or when near open flame.

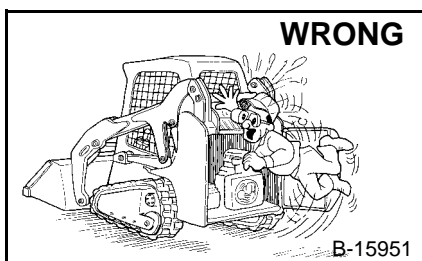

 - Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.
- Keep rear door closed except for service. Close and latch door before operating the loader.

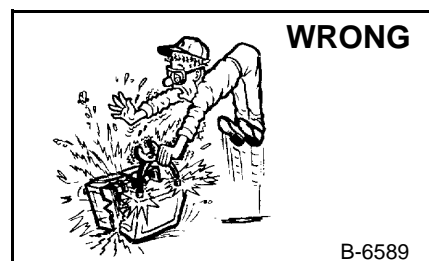

- Lead-acid batteries produce flammable and explosive gases.
- Keep arcs, sparks, flames and lighted tobacco away from batteries.
- Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**. The Service Safety Training Course is available from your Bobcat dealer.



Bobcat®

ALPHABETICAL INDEX

ADVANCED CONTROL SYSTEM (ACS)	60-01	FAN GEARBOX	10-01
ADVANCED CONTROL SYSTEM (ACS)	60-01	FLYWHEEL AND HOUSING	70-01
AIR CLEANER	70-01	FRONT AUXILIARY HYD. COUPLER BLOCK	20-01
AIR CLEANER SERVICE	10-01	FRONT AUXILIARY PRESSURE RELIEF BLOCK	20-01
AIR CONDITIONING SERVICE	80-01	FUEL SYSTEM	10-01
AIR CONDITIONING SYSTEM FLOW	80-01	FUEL TANK	50-01
ALTERNATOR (90 AMP)	60-01		
		GENERAL AIR CONDITIONING SERVICE	
BASIC TROUBLESHOOTING	80-01	GUIDELINES	80-01
BATTERY	60-01		
BICS™ SYSTEM	60-01	HEATER COIL	80-01
BOB-TACH	10-01,50-01	HEATER VALVE	80-01
BOBCAT CONTROLLER	60-01	HEATER/AC FAN	80-01
BRAKE	40-01	HYDRAULIC CONNECTION	
BUCKET POSITION VALVE	20-01	SPECIFICATIONS	SPEC-01
		HYDRAULIC CONTROL VALVE (ACS)	20-01
CHARGE PRESSURE	30-01	HYDRAULIC CONTROL VALVE (FOOT)	20-01
COMPONENTS	80-01	HYDRAULIC FILTER HOUSING	20-01
COMPRESSOR	80-01	HYDRAULIC FLUID RESERVOIR	20-01
CONDENSER	80-01	HYDRAULIC PUMP	20-01
CONTROL HANDLE	80-01	HYDRAULIC PUMP (HI FLOW)	20-01
CONTROL HANDLE (ADVANCED CONTROL		HYDRAULIC SYSTEM INFORMATION	20-01
SYSTEM) (ACS) SELECTABLE HAND/FOOT		HYDRAULIC/HYDROSTATIC FLUID	
CONTROL	50-01	SPECIFICATIONS	SPEC-01
CONTROL HANDLE (ADVANCED CONTROL		HYDRAULIC/HYDROSTATIC SYSTEM	10-01
SYSTEM) (ACS) ADVANCED HAND CONTROL	50-01	HYDROSTATIC MOTOR	30-01
CONTROL PANEL	50-01	HYDROSTATIC PUMP	30-01
CONTROL PEDALS	50-01	HYDROSTATIC SYSTEM INFORMATION	30-01
CONTROL PEDALS (ACS)	50-01		
CONVERSIONS	SPEC-01	INSTRUMENT PANEL	60-01
COOLING FAN	70-01		
CYLINDER (LIFT)	20-01	LIFT ARM	50-01
CYLINDER (POWER BOB-TACH)	20-01	LIFT ARM BY-PASS CONTROL VALVE	20-01
CYLINDER (TILT)	20-01	LIFT ARM SUPPORT DEVICE	10-01
		LIFTING AND BLOCKING THE LOADER	10-01
DIAGNOSTICS	60-01	LIGHTS	60-01
DRIVE BELT	30-01	LOADER SPECIFICATIONS	SPEC-01
DRIVE COMPONENTS	40-01	LUBRICATION OF THE BOBCAT LOADER	10-01
ELECTRICAL SYSTEM INFORMATION	60-01	MAIN RELIEF VALVE	20-01
ELECTRICAL/HYDRAULIC CONTROLS		MUFFLER	70-01
REFERENCE	60-01		
ENGINE	70-01	OIL COOLER	30-01
ENGINE COMPONENTS AND TESTING	70-01	OPERATOR CAB	10-01,50-01
ENGINE COOLING SYSTEM	10-01	OPERATOR SEAT	50-01
ENGINE LUBRICATION SYSTEM	10-01	OPERATOR SEAT (SUSPENSION)	50-01
ENGINE SPECIFICATIONS-			
KUBOTA V2003T-EB (TURBO)	SPEC-01	POWER BOB-TACH	50-01
ENGINE SPEED CONTROL	70-01	POWER BOB-TACH (OPTION)	10-01
EVAPORATOR	80-01	POWER BOB-TACH BLOCK	20-01
EVAPORATOR/HEATER UNIT	80-01	PRESSURE RELIEF VALVE	80-01
EXPANSION VALVE	80-01	PRESSURE SWITCH	80-01

ALPHABETICAL INDEX

RPM SENSOR.....	60-01
RADIATOR.....	70-01
REAR AUXILIARY DIVERTER VALVE (DUAL SHUTTLE)	20-01
REAR DOOR	50-01
REAR GRILL	50-01
RECEIVER/DRIER	80-01
RECONDITIONING THE ENGINE	70-01
REGULAR MAINTENANCE	80-01
REMOTE START	10-01
SAFETY.....	80-01
SEAT BAR	50-01
SEAT BAR SENSOR	60-01
SELECT VALVE.....	20-01
SERVICE SCHEDULE	10-01
SPARK ARRESTOR MUFFLER	10-01
STARTER	60-01
SYSTEM CHARGING AND RECLAMATION	80-01
SYSTEM TROUBLESHOOTING CHART	80-01
TEMPERATURE/PRESSURE	80-01
THERMOSTAT.....	80-01
TORQUE SPECIFICATIONS FOR BOLTS.....	SPEC-01
TOWING THE LOADER	10-01
TRACTION LOCK.....	60-01
TRANSPORTING THE BOBCAT LOADER.....	10-01
TROUBLESHOOTING.....	70-01
TURBOCHARGER	70-01

ACS-ADVANCED CONTROL SYSTEM
AHC-ADVANCED HAND CONTROL SYSTEM
BICS-BOBCAT INTERLOCK CONTROL SYSTEM

CONTENTS

FOREWORD.....	II
SAFETY INSTRUCTIONS	V
SERIAL NUMBER LOCATION	IX
DELIVERY REPORT.....	IX
BOBCAT LOADER IDENTIFICATION.....	X
SAFETY & MAINTENANCE	10-01
HYDRAULIC SYSTEM	20-01
HYDROSTATIC SYSTEM.....	30-01
DRIVE SYSTEM	40-01
MAIN FRAME	50-01
ELECTRICAL SYSTEM	60-01
ENGINE SERVICE	70-01
HEATING, VENTILATION, AIR CONDITIONING	80-01
SPECIFICATIONS.....	SPEC-01

**SAFETY &
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

**DRIVE
SYSTEM**

MAIN FRAME

**ELECTRICAL
SYSTEM &
ANALYSIS**

**ENGINE
SERVICE**

HVAC

 
SPECIFICATIONS

FOREWORD

This manual is for the Bobcat loader mechanic. It provides necessary servicing and adjustment procedures for the Bobcat loader and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, Starting procedure, daily checks, etc.

A general inspection of the following items must be made after the loader has had service or repair:


1. Check lift arm support device, replace if damaged. (Stored Position)

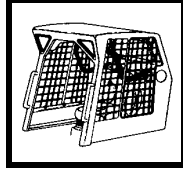


2. Check that ROPS mounting hardware is tightened and is Bobcat approved.



 
3. The seat belt must be correctly installed, functional and in good condition.

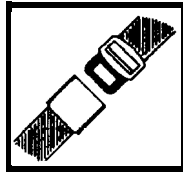

 4. The seat bar must be correctly adjusted, clean and lubricated.

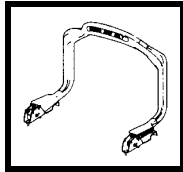

 
5. Check lift arm support device, replace if damaged.

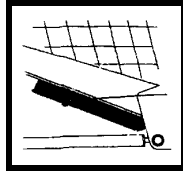

6. Machine signs must be legible and in the correct location.



 7. Steering levers and foot pedals must return to neutral.

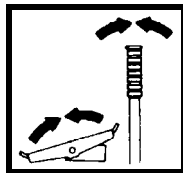


8. Check for correct function of the work lights.




9. The parking brake must function correctly.



 
10. Enclosure door latches must open and close freely.

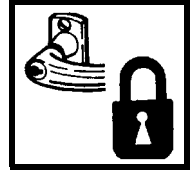

 
11. Bob-Tach wedges and linkages must function correctly and be in good condition.

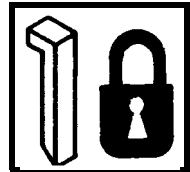

 
12. Safety treads must be in good condition.

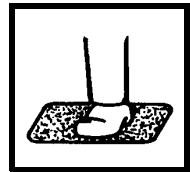

 
13. Check for correct function of indicator lamps (Optional on some models.)

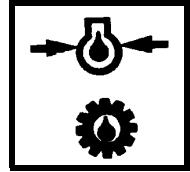

 
14. Check hydraulic fluid level, engine oil level and fuel supply.

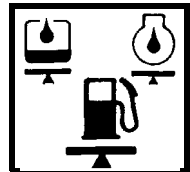

 
15. Inspect for fuel, oil or hydraulic fluid leaks.

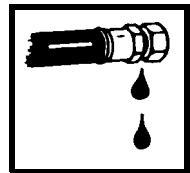

 
16. Lubricate the loader.

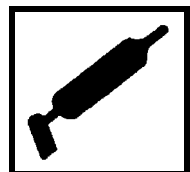

 
17. Check the condition of the battery and cables.

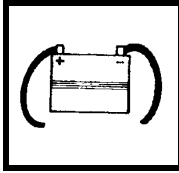

 22. Operate the loader and check all functions.

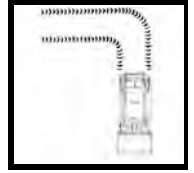

 
18. Inspect the air cleaner for damage or leaks. Check the condition of the element.

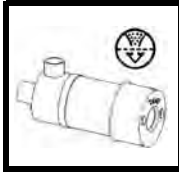


23. Check for any field modification not completed.



 
19. Check the electrical charging system.

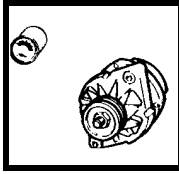

 
24. Check for correct function of the Bobcat Interlock Control System (BICST™) before the machine is returned to the customer.

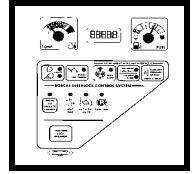

 
20. Check tracks for wear.

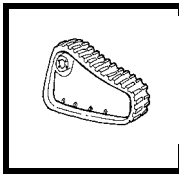

 Recommend to the owner that all necessary corrections be made before the machine is returned to service.

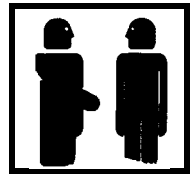

 21. Inspect for loosen or broken parts or connections.

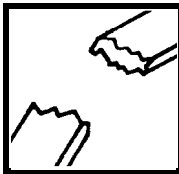

**CALIFORNIA
PROPOSITION 65 WARNING**
Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.



Bobcat®

SAFETY INSTRUCTIONS



Safety Alert Symbol

This symbol with a warning statement means:
“Warning, be alert! Your safety is involved!”
Carefully read the message that follows.



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator's Handbook fastened to the operator cab. It's brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Skid-Steer Loader Operator Training Course is available through your local dealer or at www.training.bobcat.com or www.bobcat.com. This course is intended to provide rules and practices of correct operation of the Skid-Steer Loader. The course is available in English and Spanish versions.
- Service Safety Training Courses are available from your Bobcat dealer or at www.training.bobcat.com or www.bobcat.com. They provide information for safe and correct service procedures.
- The Skid-Steer Loader Safety Video is available from your Bobcat dealer or at www.training.bobcat.com or www.bobcat.com.

SI SSL-0206 SM

T190 Bobcat Loader
Service Manual

SAFETY INSTRUCTIONS (CONT'D)

The dealer and owner/operator review the recommended uses of the product when delivered. If the owner/operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.



Call Before You Dig

1-888-258-0808

When you call, you will be directed to a location in your state/city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.)




Bobcat®

SERIAL NUMBER LOCATION

Always use the serial number of the loader when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

Loader Serial Number

 Figure 2

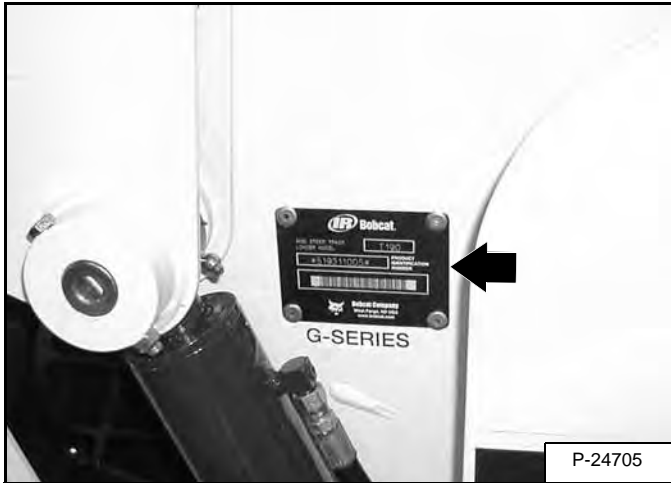

The loader serial number plate is located on the outside of the loader frame [Figure 2].


Explanation of loader Serial Number:

XXXX	XXXXX
Model 1.-Model/ Engine Combination	Model 2.-Production Sequence (Series)

1. The four digit Model/Engine Combination Module number identifies the model number and engine combination.
2. The five digit Production Sequence Number identifies the order which the loader is produced.

Engine Serial Number

 Figure 3

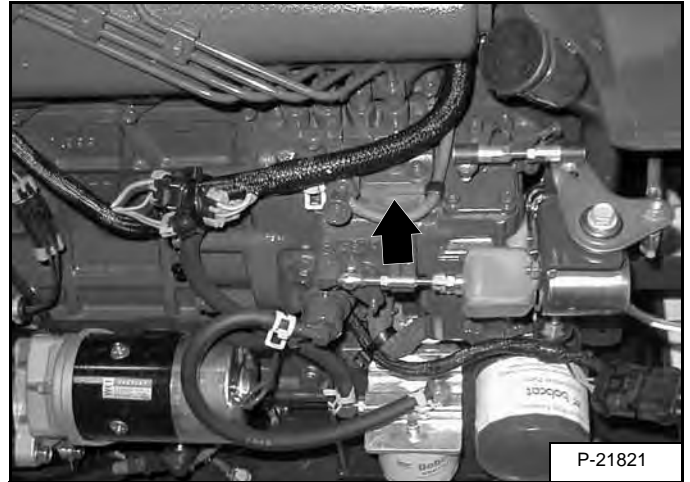


The engine serial number is in the location shown [Figure 3].

DELIVERY REPORT

Figure 4

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the Bobcat loader is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely [Figure 4].

 BOBCAT LOADER IDENTIFICATION

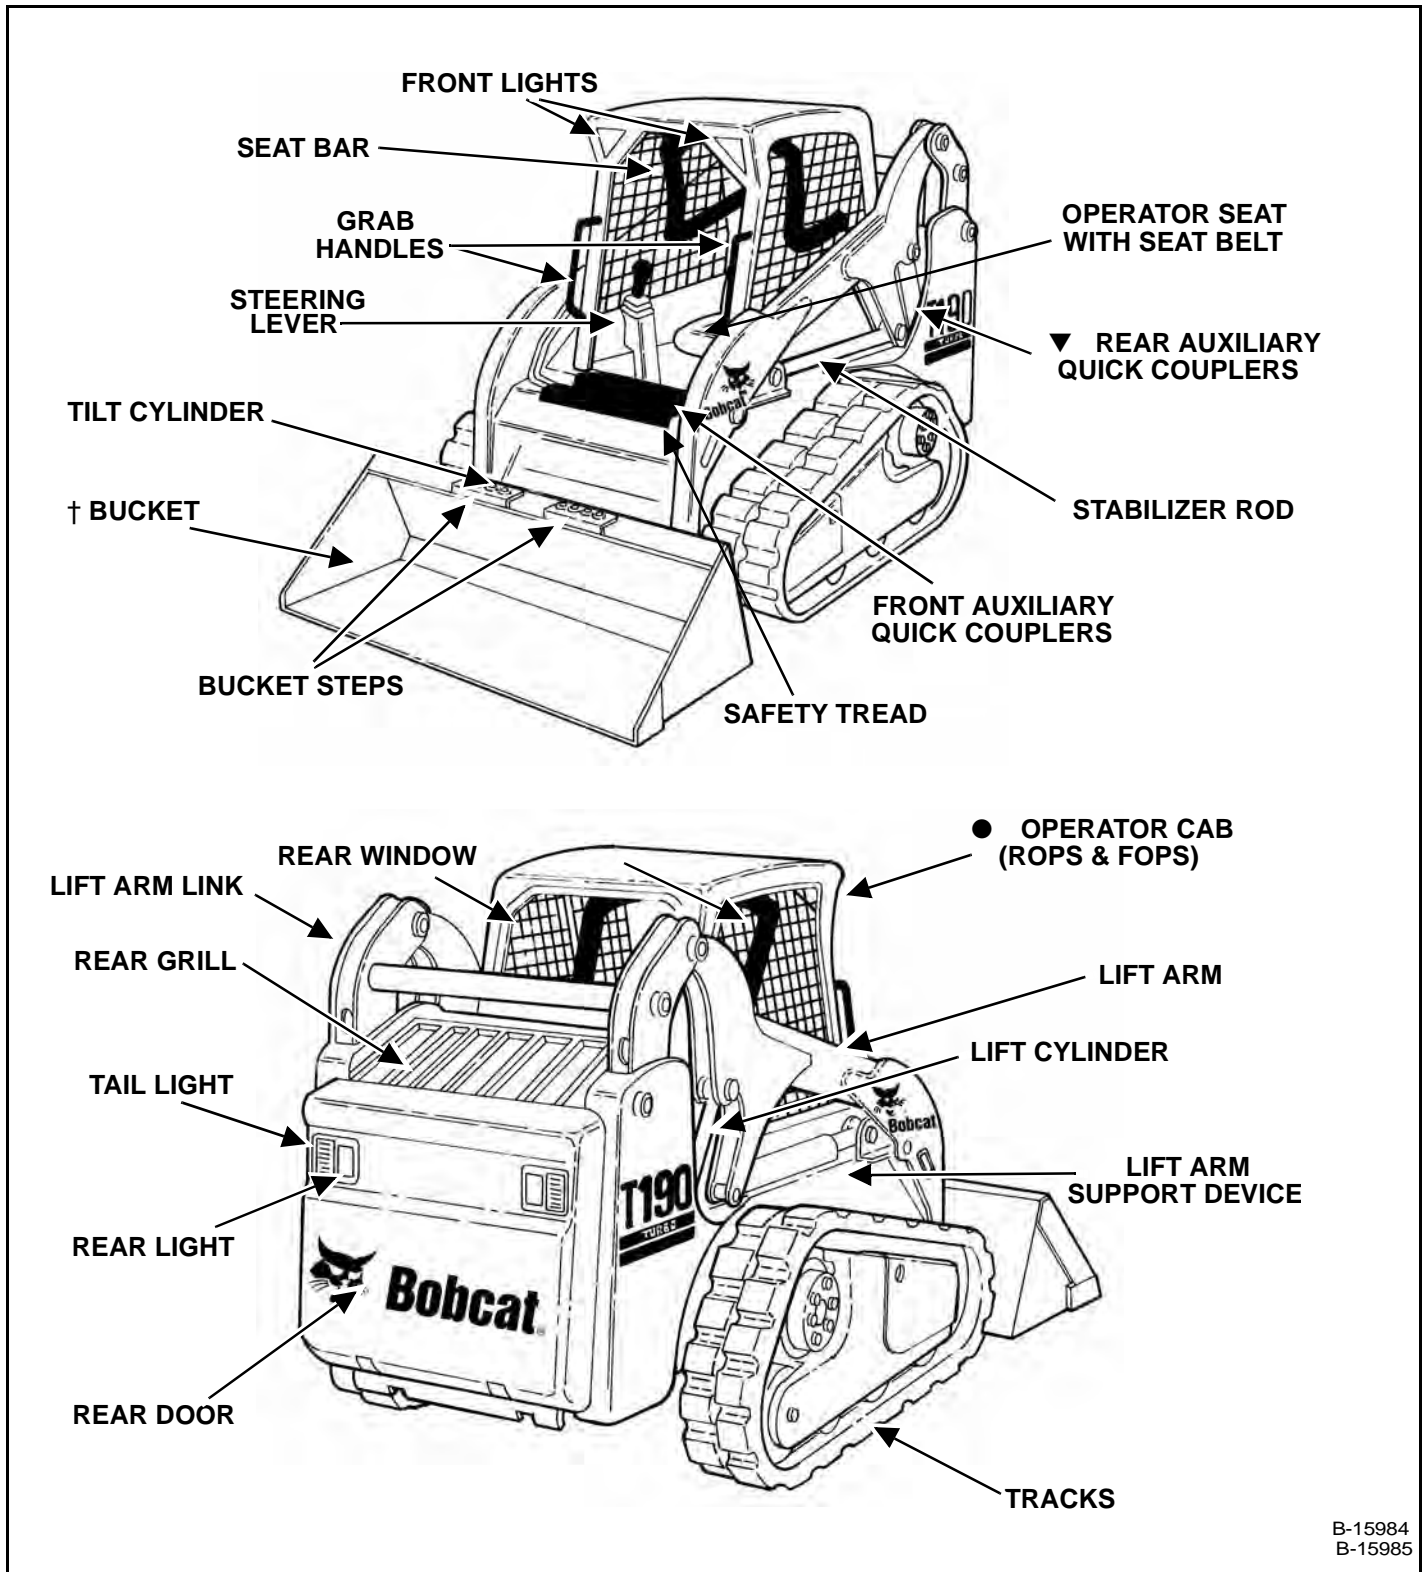

B-15984
B-15985

▼ OPTIONAL OR FIELD ACCESSORY (Not Standard Equipment)

+ BUCKET - Several different buckets and other attachments are available from the Bobcat loader.

● ROPS, FOPS - Roll Over Protective Structure, per SAE J1040 and ISO 3471, and Falling Object Protective Structure per SAEJ1043 and ISO 3449, Level I. Level II is available. The Bobcat loader is base-equipped with a standard operator cab as shown. Extra insulated cab is available as an option (Reduced noise level).

SAFETY & MAINTENANCE

AIR CLEANER SERVICE 10-80-1
 Replacing Filter Element 10-80-1

BOB-TACH 10-140-1
 Inspection And Maintenance 10-140-1

ENGINE COOLING SYSTEM 10-90-1
 Cleaning The Cooling System 10-90-1
 Checking The Coolant Level 10-90-2
 Replacing the Coolant 10-90-2

ENGINE LUBRICATION SYSTEM 10-110-1
 Checking Engine Oil 10-110-1
 Oil Chart. 10-110-1
 Replacing Oil And Filter. 10-110-1

FAN GEARBOX. 10-130-1
 Checking And Maintaining 10-130-1

FUEL SYSTEM 10-100-1
 Filling The Fuel Tank 10-100-1
 Fuel Filter. 10-100-2
 Fuel Specifications. 10-100-1
 Removing Air From The Fuel System 10-100-2

HYDRAULIC/HYDROSTATIC SYSTEM 10-120-1
 Breather Cap 10-120-3
 Checking And Adding Fluid 10-120-1
 Replacing Hydraulic Fluid 10-120-2
 Replacing Hydraulic/Hydrostatic Filter 10-120-1

LIFT ARM SUPPORT DEVICE 10-20-1
 Installing Lift Arm Support Device 10-20-1
 Removing Lift Arm Support Device 10-20-2

LIFTING AND BLOCKING THE LOADER 10-10-1
 Procedure 10-10-1
 Single Point Lift 10-10-2

LUBRICATION OF THE BOBCAT LOADER. 10-150-1
 Procedure 10-150-1

Continued On Next Page

SAFETY & MAINTENANCE (CONT'D)

OPERATOR CAB	10-30-1
Description	10-30-1
Emergency Exit	10-30-3
Lowering The Operator Cab	10-30-2
Raising The Operator Cab	10-30-1
POWER BOB-TACH (OPTION)	10-141-1
Inspection And Maintenance	10-141-1
REMOTE START	10-60-1
Procedure	10-60-1
SERVICE SCHEDULE	10-70-1
Chart	10-70-1
SPARK ARRESTOR MUFFLER	10-160-1
Cleaning Procedure	10-160-1
TOWING THE LOADER (S/N 519313198 & ABOVE)	10-51-1
Procedure	10-51-1
TOWING THE LOADER (S/N 519313197 & BELOW)	10-50-1
Procedure	10-50-1
TRANSPORTING THE BOBCAT LOADER	10-40-1
Procedure	10-40-1

Dear

**Thanks very much for your visiting and
patience.**

Want to get more information,

Please click here, Go back to the page.

**After your payment, you will have instant access to
your download.**

The Download Link will also be sent to your e-mail.

You will get the complete manual

Have any questions

please write to me

admin@servicemanualperfect.com