


V518



Bobcat[®]
VersaHANDLER

Service Manual

S/N 367610501, 367611001 & Above
S/N 367711001 & Above

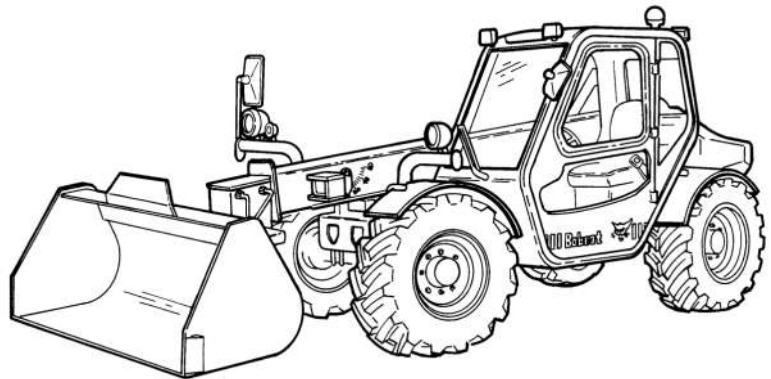

MAINTENANCE SAFETY



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903

CORRECT




B-10731a

- ⚠ Never service the Bobcat VersaHANDLER without instructions.



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.


CORRECT

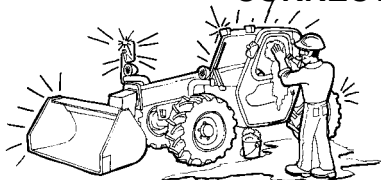

B-16082

- ⚠ Cleaning and maintenance are required daily.


WRONG

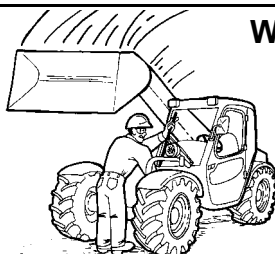

B-16080

- ⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting, component or a part failure can cause boom to drop. Do not go under boom when raised unless supported by an approved boom stop. Replace if damaged.


WRONG

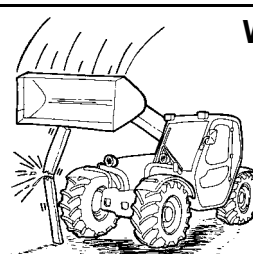

B-16079

- ⚠ Never work on VersaHANDLER with boom up unless boom is held by an approved boom stop. Replace if damaged.
- ⚠ Never modify equipment or add attachments not approved by Bobcat Company.


WRONG

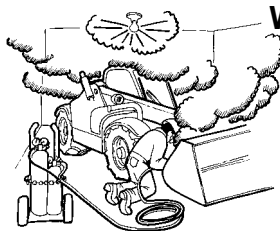

B-16081

- ⚠ Have good ventilation when welding or grinding painted parts.
- ⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.
- ⚠ Avoid exhaust fume leaks which can kill without warning. Exhaust system must be tightly sealed.

WRONG

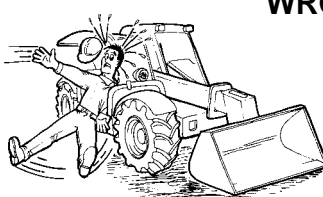

B-16078

- ⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.
- ⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used. Use eye protection approved for type of welding.

WRONG



B-6589

- ⚠ Lead-acid batteries produce flammable and explosive gases.
- ⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.
- ⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**.

MSW12-0805



Bobcat®

ALPHABETICAL INDEX

| | | | | |
|--|--|---|---|-----------|
| ACCUMULATOR..... | 20-210-01 | EXTENSION CYLINDER..... | 20-40-1 | |
| AIR CLEANER | 70-40-01 | FAN MOTOR | 20-140-1 | |
| AIR CLEANER SERVICE | 10-60-01 | FENDER..... | 50-110-1 | |
| AIR CONDITIONING SERVICE..... | 80-90-1 | FLOW CONTROL VALVE..... | 20-240-1 | |
| AIR CONDITIONING SYSTEM FLOW | 80-10-1 | FLYWHEEL AND HOUSING | 70-90-1 | |
| AIR INTAKE COWLING | 50-71-1 | FRONT AUXILIARY HYDRAULIC PRESSURE RELEASE VALVE .. | 20-230-1 | |
| ALTERNATOR | 60-30-1 | FRONT AXLE (FOR S/N 367611001 - 367612000 and S/ | N 367711001 - 367712000)..... | 40-30-1 |
| APPROVED BOOM STOP | 10-150-1 | FRONT AXLE (FOR S/N 367612001 & ABOVE, S/N | 367712001 & ABOVE)..... | 40-31-1 |
| AXLE AND DIFFERENTIAL (FRONT) (FOR S/N 367611001 - | 367612000 AND S/N 367711001 - 367712000) | 40-20-1 | FRONT WIPER MOTOR | 60-110-1 |
| AXLE AND DIFFERENTIAL (REAR) (For S/N 367611001 - | 367612000 and S/N 367711001 - 367712000)..... | 40-21-1 | FUEL SYSTEM..... | 10-80-1 |
| AXLE AND DIFFERENTIAL (FRONT) (For S/N 367612001 & | Above, S/N 367712001 & Above)..... | 40-22-11 | FUEL TANK | 50-80-1 |
| AXLE AND DIFFERENTIAL (REAR) (FOR S/N 367612001 & | ABOVE, S/N 367712001 & ABOVE)..... | 40-23-1 | GEAR PUMP | 20-130-1 |
| AXLE PIVOT FRAME | 40-01 | GENERAL AIR CONDITIONING SERVICE GUIDELINES.. | 80-60-1 | |
| AXLE TOE-IN (FOR S/N 367611001 - 367612000 and S/ | N 367711001 - 367712000) | 40-40-1 | HEATER ASSEMBLY | 80-170-1 |
| AXLE TOE-IN (FOR S/N 367612001 & ABOVE, S/N | 367712001 & ABOVE)..... | 40-41-1 | HYDRAULIC CONNECTION SPECIFICATIONS..... | SPEC-50-1 |
| AXLES (FRONT AND REAR) (For S/N 367611001 - | 367612000 and S/N 367711001 - 367712000) ... | 10-110-1 | HYDRAULIC CONTROL VALVE | 20-170-1 |
| AXLES (FRONT AND REAR) (For S/N 367612001 & | Above, S/N 367712001 & Above)..... | 10-111-1 | HYDRAULIC/HYDROSTATIC FLUID SPECIFICATIONS. SPEC-60-1 | |
| BASIC TROUBLESHOOTING | 80-50-1 | HYDRAULIC/HYDROSTATIC SYSTEM..... | 10-100-1 | |
| BATTERY..... | 60-20-1 | HYDRAULIC RESERVOIR..... | 20-150-1 | |
| BOOM ASSEMBLY | 50-30-1 | HYDRAULIC SYSTEM INFORMATION | 20-10-1 | |
| BRAKE LIGHT SWITCH | 60-100-1 | HYDROSTATIC DRIVE MOTOR | 30-30-1 | |
| BRAKE VALVE..... | 20-120-1 | HYDROSTATIC PUMP | 30-40-1 | |
| BUCKET POSITIONING CYLINDER..... | 20-30-1 | HYDROSTATIC SYSTEM INFORMATION..... | 30-10-1 | |
| CANOPY | 50-11-1 | INCHING SWITCH | 60-150-1 | |
| COMPONENTS | 80-20-1 | INNER BOOM | 50-40-1 | |
| COMPRESSOR | 80-110-1 | INSTRUMENT PANEL..... | 60-80-1 | |
| CONDENSER | 80-120-1 | JOYSTICK..... | 20-180-1 | |
| CONVERSIONS | SPEC-70-1 | JOYSTICK PANEL..... | 50-120-1 | |
| DASH COVER/STEERING COLUMN COVER.. | 50-130-1 | LATERAL OPERATOR RESTRAINT SYSTEM (LORS) | 10-170-1 | |
| DRIVE BOX (For S/N 367611001 - 367612000 and S/N | 367711001 - 367712000)..... | 20-70-1 | LATERAL OPERATOR RESTRAINT SYSTEM (LOR'S™).. | 60-50-1 |
| DRIVE BOX (FOR S/N 367612001 & ABOVE, S/N | 367712001 & ABOVE)..... | 20-71-1 | LIFT CYLINDER | 20-20-1 |
| DRIVESHAFT | 40-70-1 | LIFTING AND BLOCKING THE VERSAHANDLER..... | 10-10-1 | |
| ELECTRICAL SYSTEM INFORMATION | 60-10-1 | LIGHTS..... | 60-60-1 | |
| ENGINE AND ENGINE MOUNTS | 70-60-1 | LUBRICATION (For S/N 367611001 - 367612000 and S/ | N 367711001 - 367712000)..... | 10-120-1 |
| ENGINE COMPONENTS AND TESTING | 70-70-1 | LUBRICATION (For S/N 367612001 & Above and S/N | 367712001 & Above)..... | 10-121-1 |
| ENGINE COOLING SYSTEM..... | 10-70-1 | | | |
| ENGINE COVER | 10-160-1 | | | |
| ENGINE COVER | 50-70-1 | | | |
| ENGINE/HYDROSTAT ASSEMBLY | 70-80-1 | | | |
| ENGINE LUBRICATION SYSTEM..... | 10-01 | | | |
| ENGINE SPECIFICATIONS..... | SPEC-01 | | | |
| ENGINE SPEED CONTROL | 70-20-1 | | | |
| EVAPORATOR/BLOWER UNIT..... | 80-150-1 | | | |
| EXPANSION VALVE | 80-160-1 | | | |

ALPHABETICAL INDEX (CONT'D)

| | | | |
|--|-----------|--|----------------|
| MACHINE TORQUE SPECIFICATIONS | SPEC-30-1 | SYSTEM TROUBLESHOOTING CHART | 80-70-1 |
| MAIN RELIEF VALVE | 20-80-1 | TEMPERATURE/PRESSURE..... | 80-80-1 |
| MUFFLER..... | 70-30-1 | TIRE MAINTENANCE | 10-130-1 |
| OIL COOLER..... | 30-20-1 | TILT CYLINDER | 20-50-1 |
| OPERATOR CAB/CANOPY | 10-20-1 | TOP WIPER MOTOR..... | 60-120-1 |
| OPERATOR CAB..... | 50-10-1 | TORQUE SPECIFICATIONS FOR BOLTS ... | SPEC-40-1 |
| OPERATOR SEAT | 50-20-1 | TOW VALVE | 20-220-1 |
| PARKING BRAKE..... | 20-190-1 | TOWING THE VersaHANDLER (For S/N 367611001 - 367612000 and S/N 367711001 - 367712000) | 10-40-1 |
| PARKING BRAKE (FOR S/N 367612001 & ABOVE, S/N 367712001 & ABOVE)..... | 40-51-1 | TOWING THE VersaHANDLER (S/N 367612001 & Above, S/N 367712001 & Above) | 10-41-1 |
| PARKING BRAKE (FOR S/N 367611001 - 367612000 and S/N 367711001 - 367712000)..... | 40-50-1 | TRANSPORTING THE VERSAHANDLER | 10-30-1 |
| PEDAL ASSEMBLY | 60-140-1 | TRAVEL/SIGNAL LEVER..... | 60-70-1 |
| PORT RELIEF VALVES..... | 20-100-1 | TROUBLESHOOTING | 40-10-1, 70-01 |
| PRESSURE REDUCING VALVE..... | 20-200-1 | VersaHANDLER SPECIFICATIONS | SPEC-10-1 |
| PRESSURE SWITCH..... | 80-140-1 | WEAR PADS (FRONT) | 50-50-1 |
| QUICK TACH | 50-90-1 | WEAR PADS (REAR)..... | 50-60-1 |
| QUICK TACH CYLINDER..... | 20-90-1 | | |
| OIL COOLER/RADIATOR..... | 70-50-1 | | |
| REAR AXLE (FOR S/N 367611001 - 367612000 and S/N 367711001 - 367712000)..... | 40-90-1 | | |
| REAR AXLE (FOR S/N 367612001 & ABOVE, S/N 367712001 & ABOVE)..... | 40-91-1 | | |
| REAR REAR WEIGHTS | 50-100-1 | | |
| REAR WIPER MOTOR..... | 60-130-1 | | |
| RECEIVER/DRIER | 80-130-1 | | |
| RECONDITIONING THE ENGINE | 70-100-1 | | |
| REGULAR MAINTENANCE | 80-40-1 | | |
| SAFETY | 80-30-1 | | |
| SERVICE BRAKE (FOR S/N 367611001 - 367612000 and S/N 367711001 - 367712000)..... | 40-80-1 | | |
| SERVICE BRAKE (FOR S/N 367612001 & ABOVE, S/N 367712001 & ABOVE)..... | 40-81-1 | | |
| SERVICE SCHEDULE | 10-50-1 | | |
| SPARK ARRESTOR MUFFLER..... | 10-140-1 | | |
| STARTER | 60-40-1 | | |
| STEERING ANGLE ADJUSTMENT (FOR S/N 367611001 - 367612000 and S/N 367711001 - 367712000)..... | 40-60-1 | | |
| STEERING ANGLE ADJUSTMENT (FOR S/N 367612001 & ABOVE, S/N 367712001 & ABOVE) | 40-61-1 | | |
| STEERING CYLINDER (FRONT) | | | |
| STEERING CYLINDER (FRONT) (For S/N 367611001 - 367612000 and S/N 367711001 - 367612000)..... | 20-60-1 | | |
| STEERING CYLINDER (FRONT) (For S/N 367612001 & above, S/N 367712001 & above)..... | 20-61-1 | | |
| STEERING CYLINDER (REAR) (For S/N 367611001 - 367612000 and S/N 367711001 - 367712000)..... | 20-61-1 | | |
| STEERING CYLINDER (REAR) (For S/N 367612001 and above, S/N 367712001 and above)..... | 20-63-1 | | |
| STEERING MODE VALVE BLOCK | 20-110-1 | | |
| STEERING VALVE | 20-160-1 | | |
| SWITCH PANEL | 60-90-1 | | |
| SYSTEM CHARGING AND RECLAMATION | 80-100-1 | | |

CONTENTS

| | |
|--|---------|
| DELIVERY REPORT..... | X |
| FOREWORD..... | III |
| SAFETY INSTRUCTIONS | V |
| SERIAL NUMBER LOCATION | IX |
| BOBCAT VERSAHANDLER IDENTIFICATION | XI |
| SAFETY AND MAINTENANCE..... | 10-01 |
| HYDRAULIC SYSTEM | 20-01 |
| HYDROSTATIC SYSTEM..... | 30-01 |
| DRIVE SYSTEM | 40-01 |
| MAIN FRAME | 50-01 |
| ELECTRICAL SYSTEM AND ANALYSIS | 60-01 |
| ENGINE SERVICE | 70-01 |
| HEATING, VENTILATION, AIR CONDITIONING | 80-01 |
| SPECIFICATIONS..... | SPEC-01 |

**SAFETY &
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

**DRIVE
SYSTEM**

MAIN FRAME

**ELECTRICAL
SYSTEM &
ANALYSIS**

**ENGINE
SERVICE**

HVAC

SPECIFICATIONS




Bobcat®

FOREWORD


This manual is for the Bobcat VersaHANDLER mechanic. It provides necessary servicing and adjustment procedures for the Bobcat VersaHANDLER and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, starting procedure, daily checks, etc.

A general inspection of the following items must be made after the VersaHANDLER has had service or repair:


1. Check that ROPS/FOPS (Including right side window) is in good condition and is not modified.

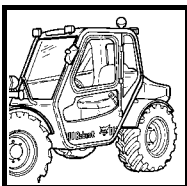


2. Check that ROPS mounting hardware is tightened and is Bobcat approved.

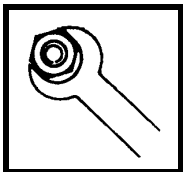

3. The seat belt must be correctly installed, functional and in good condition.

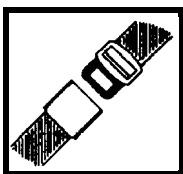


4. Check boom support device, replace if damaged.

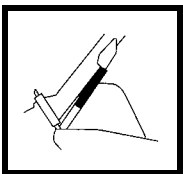

5. Machine signs must be legible and in the correct location.



6. Check tires for wear and pressure. Use only approved tires.

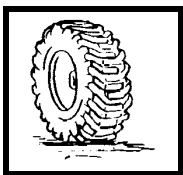


7. Check for correct function of the work lights.




8. The parking brake must function correctly.




9. Enclosure door latches must open and close freely.

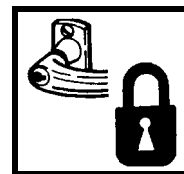


10. Attachment locking pins must function correctly and be in good condition.

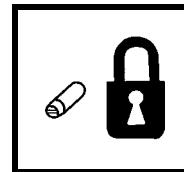


11. Safety treads must be in good condition.

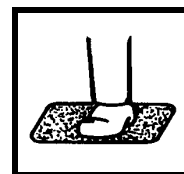


12. Check for correct function of indicator lamps and gauges.

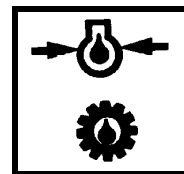


13. Check hydraulic fluid level, engine oil level and fuel supply.

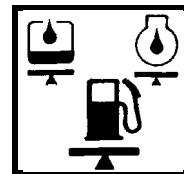


14. Inspect for fuel, oil or hydraulic fluid leaks.

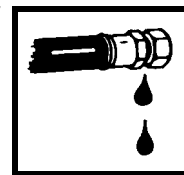


15. Lubricate the VersaHANDLER.

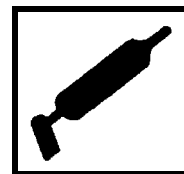


16. Check the condition of the battery and cables.

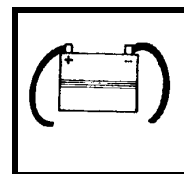


17. Inspect the air cleaner for damage or leaks. Check the condition of the element.

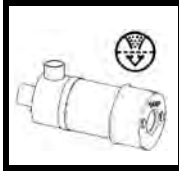

20. Operate the VersaHANDLER and check all functions.

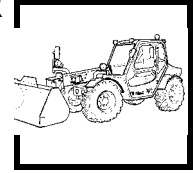


18. Check the electrical charging system.

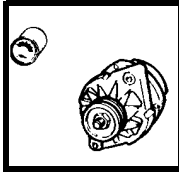


21. Check for any field modification not completed.




19. Inspect for loose or broken parts or connections.

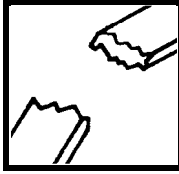

22. Recommend to the owner that all necessary corrections be made before the machine is returned to service.

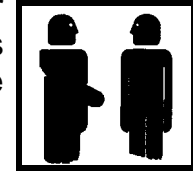

23. Check that LORS™ is in good condition and is not modified.

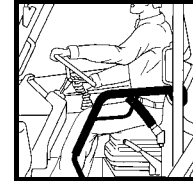

**CALIFORNIA
PROPOSITION 65 WARNING**
Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

SAFETY INSTRUCTIONS



Safety Alert Symbol

This symbol with a warning statement means:
“Warning, be alert! Your safety is involved!”
Carefully read the message that follows.



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator's Handbook fastened to the operator cab. It's brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The VersaHANDLER Operator Training Course is available through your local dealer or at www.training.bobcat.com or www.bobcat.com. This course is intended to provide rules and practices of correct operation of the VersaHANDLER.
- The VersaHANDLER Safety Video is available from your Bobcat dealer or at www.training.bobcat.com or www.bobcat.com.

SI VH-0206 SM

SAFETY INSTRUCTIONS (CONT'D)

The dealer and owner/operator review the recommended uses of the product when delivered. If the owner/operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.



Call Before You Dig

1-888-258-0808

When you call, you will be directed to a location in your state/city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.)

SAFETY INSTRUCTIONS (CONT'D)

Fire Prevention

The machine and attachments have components that are at high temperature under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.


Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it will increase fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential hazard.

The spark arrestor muffler is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

- Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.
- The operator cab, engine compartment, and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazard and overheating.
- Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part.
- Check fuel and hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Tighten or replace any parts that show leakage. Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.
- Do not use ether or starting fluids on any engine which has glow plugs. These starting aids can cause explosion and injure you or bystanders.
- Always clean the machine, disconnect the battery, and disconnect the wiring from the controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding. Have good ventilation when grinding or welding painted parts. Wear a dust mask when grinding painted parts. Toxic dust or gas can be produced.
- Stop the engine and let it cool before adding fuel. **NO SMOKING!**

- Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.
- Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).

Figure 1

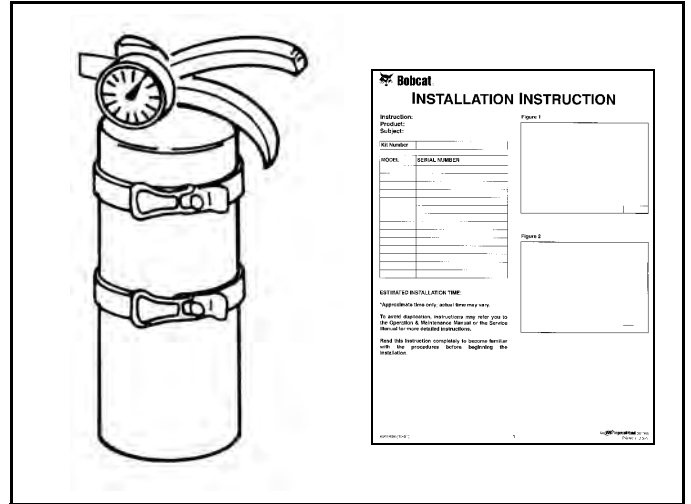

- Know where fire extinguishers and first aid kits are located and how to use them. Fire extinguishers are available from your Bobcat dealer [Figure 1].




Bobcat®

SERIAL NUMBER LOCATION

Always use the serial number of the VersaHANDLER when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

VersaHANDLER Serial Number

Figure 2

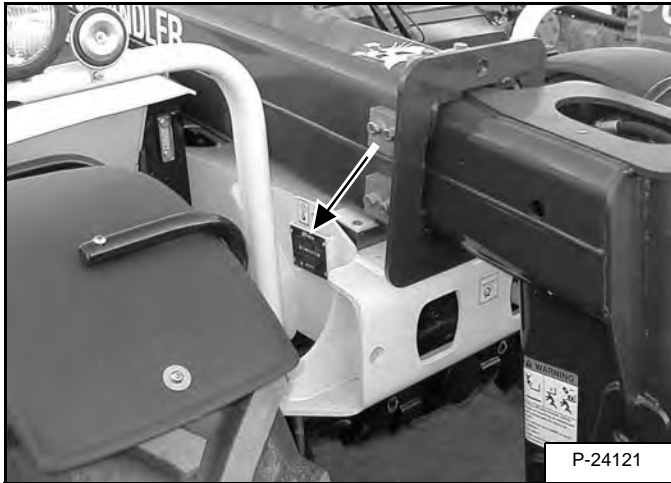


The front, on the right side of the chassis [Figure 2].

Engine Serial Number

Earlier Models

Figure 3

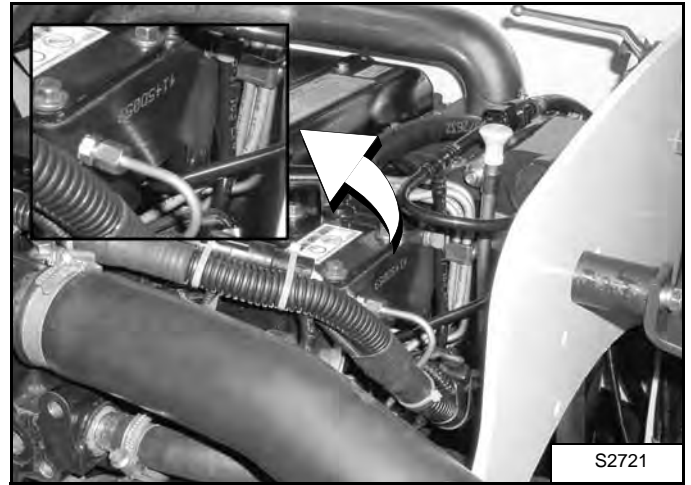

The engine serial number is stamped on a plate near the injection pump or at the rear of the cylinder block [Figure 3]. Always use the full number when ordering replacement parts.

Later Models

Figure 4



The engine serial number can be found on the cylinder block [Figure 4] in front of you when opening the engine cover. Always use the full number when ordering replacement parts.

Other Serial Numbers

Some components may also have serial numbers. Always use these serial numbers when requesting parts.



DELIVERY REPORT

Figure 5

The diagram shows a form layout for a 'DELIVERY REPORT'. It includes a title box, a 'WARNING' section, and several areas for text entry represented by horizontal lines. A reference number 'B-16315' is located in the bottom right corner of the form's frame.

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the VersaHANDLER is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely **[Figure 5]**.

BOBCAT VERSAHANDLER IDENTIFICATION

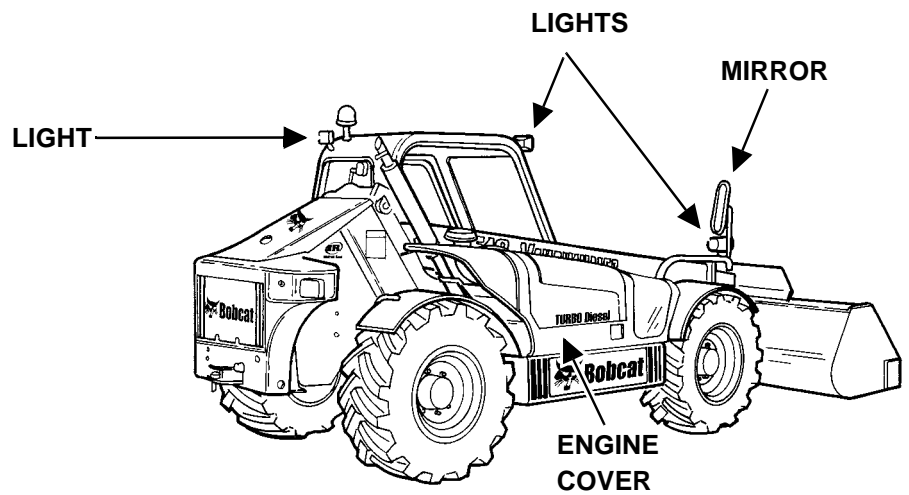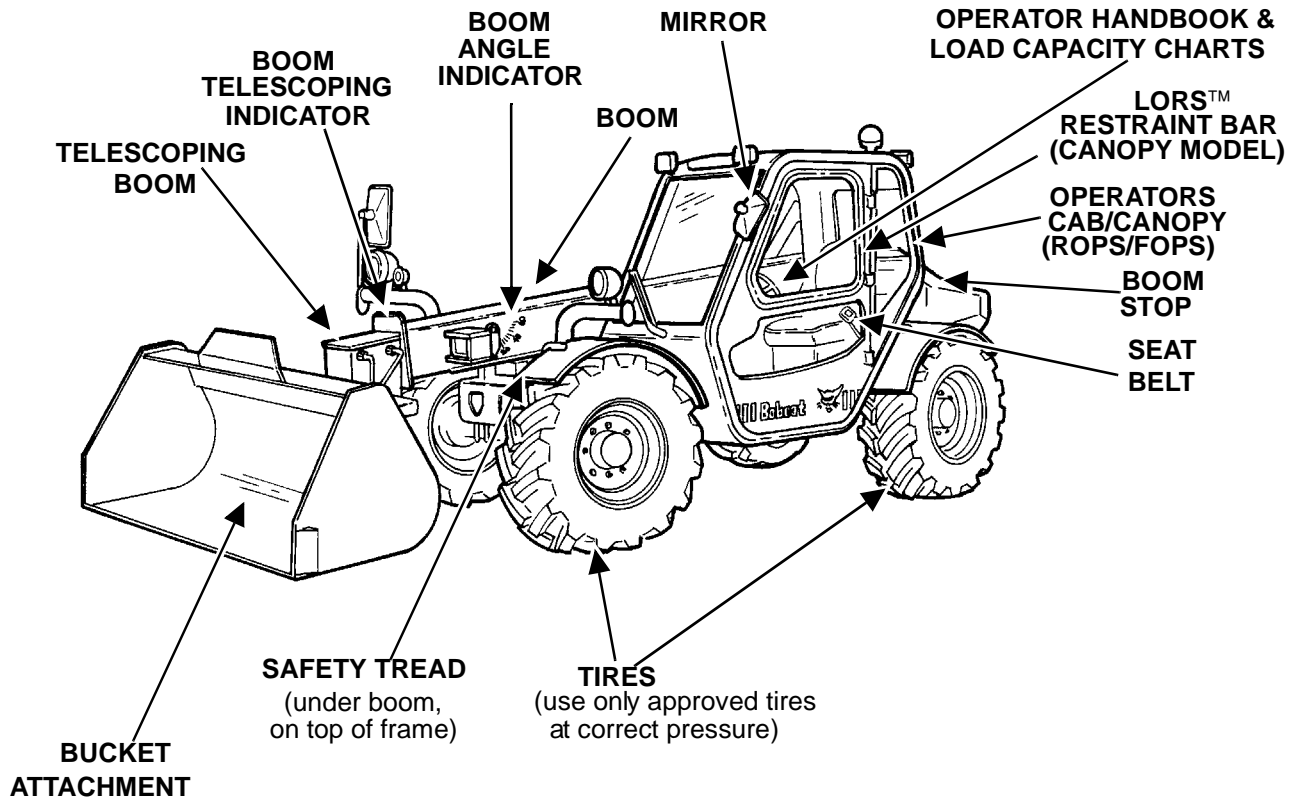

B-15886
B-23131



Bobcat®

Dear

**Thanks very much for your visiting and
patience.**

Want to get more information,

Please click here, Go back to the page.

**After your payment, you will have instant access to
your download.**

The Download Link will also be sent to your e-mail.

You will get the complete manual

Have any questions

please write to me

admin@servicemanualperfect.com