 




Bobcat®

Service Manual

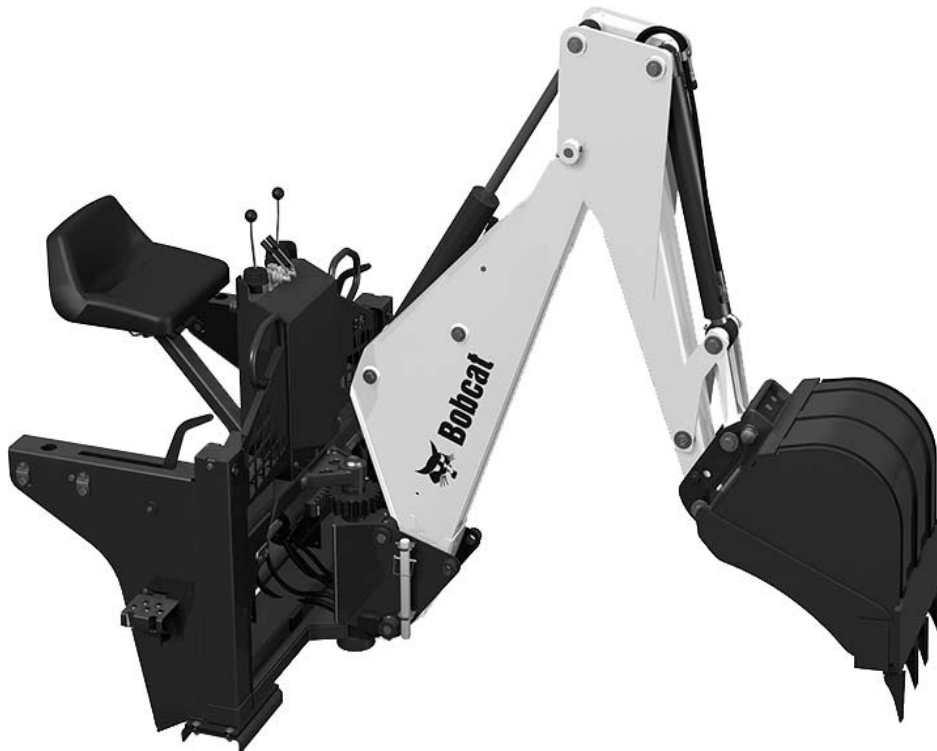

Backhoe

(Bob-Tach® Mounted) S/N 074600101 & Above

**(406) S/N 631010000 & Below
(406) S/N 631010001 & Above
(506) S/N 631110000 & Below
(506) S/N 631110001 & Above
(607) S/N 775002278 & Above
(607) S/N A5CW00101 & Above
(709) S/N 270007245 & Above**

**(709) S/N A54M00101 & Above
(709FDS) S/N 584101444 & Above
(709FDS) S/N A5F300101 & Above
(8811) S/N 630100101 & Above
(8811) S/N A55800101 & Above
(MO6) S/N 631200101 & Above**



MAINTENANCE SAFETY



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807











Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

CORRECT



P-90216

-  **Never service attachments / implements without instructions. See Operation & Maintenance Manual and Attachment / Implement Service Manual.**
-  **Cleaning and maintenance are required daily.**
-  **Never service or adjust attachment / implement with the engine running unless instructed to do so in manual.**
-  **Always lower the attachment / implement to the ground before lubricating or servicing.**
-  **Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate skin or eyes.**
-  **Stop, cool and clean engine of flammable materials before checking fluids.**
-  **Keep body, loose objects and clothing away from moving parts, electrical contacts, hot parts and exhaust.**
-  **Safety glasses are needed for eye protection from electrical arcs, battery acid, compressed springs, fluids under pressure and flying debris or when tools are used. Use eye protection approved for type of welding.**

MSW30-0409



Bobcat®

Dear

**Thanks very much for your visiting and
patience.**

Want to get more information,

Please click here, Go back to the page.

**After your payment, you will have instant access to
your download.**

The Download Link will also be sent to your e-mail.

You will get the complete manual

Have any questions

please write to me

admin@servicemanualperfect.com

CONTENTS

SAFETY AND MAINTENANCE	10-01
HYDRAULIC SYSTEM	20-01
MAINFRAME	30-01
SPECIFICATIONS	SPEC-01
ALPHABETICAL INDEX	INDEX-01



FOREWORD

SERIAL NUMBER LOCATION	1-7
Attachment Serial Number	1-7
DELIVERY REPORT	1-8
ATTACHMENT IDENTIFICATION	1-9
406 And 506 Backhoes	1-9
607 And 709 Backhoes With Telescoping Stabilizers	1-10
607 And 709 Backhoes With Outrigger Stabilizers	1-11
8811 Backhoe	1-12
MO6 Backhoe	1-13
Bob-Tach Mounted Backhoe	1-14



Bobcat®

SERIAL NUMBER LOCATION

Attachment Serial Number

Figure 1

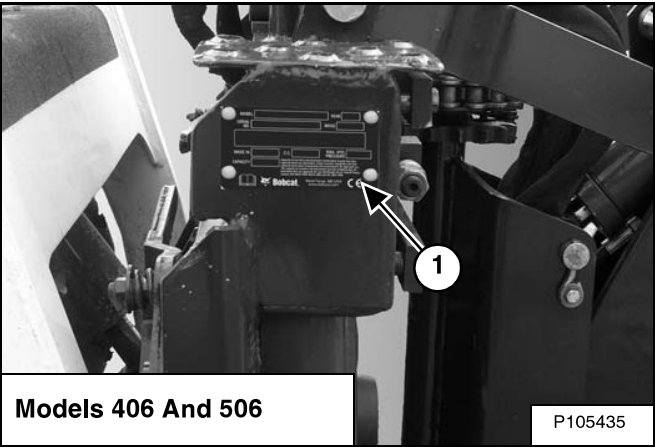 


Figure 2

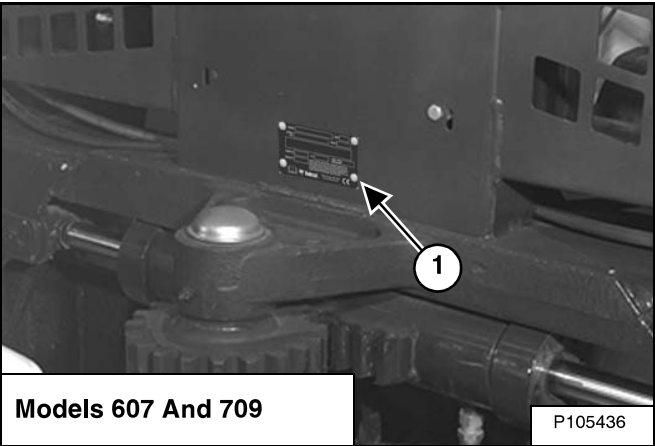 


Figure 3

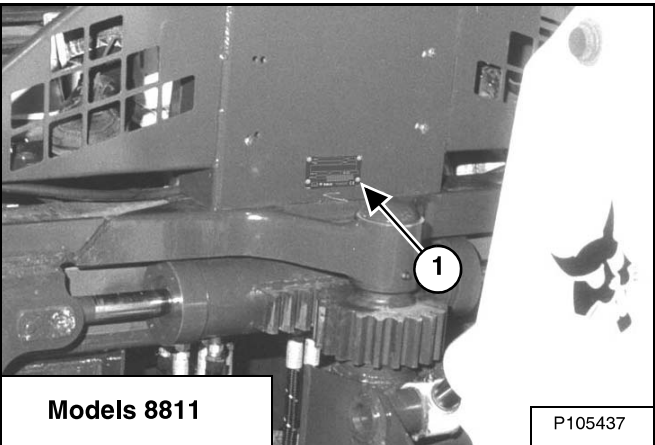 


Figure 4



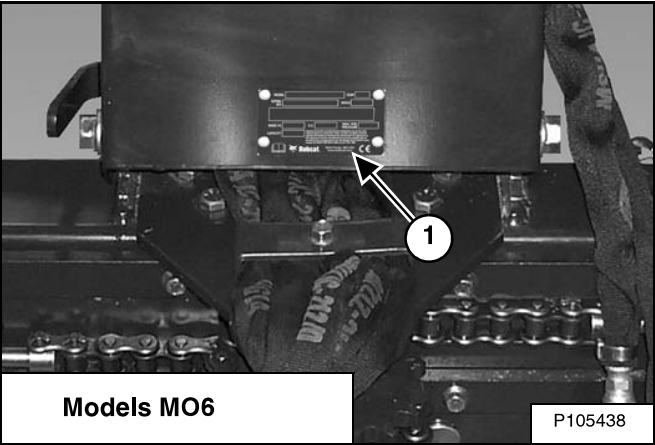 


Figure 5

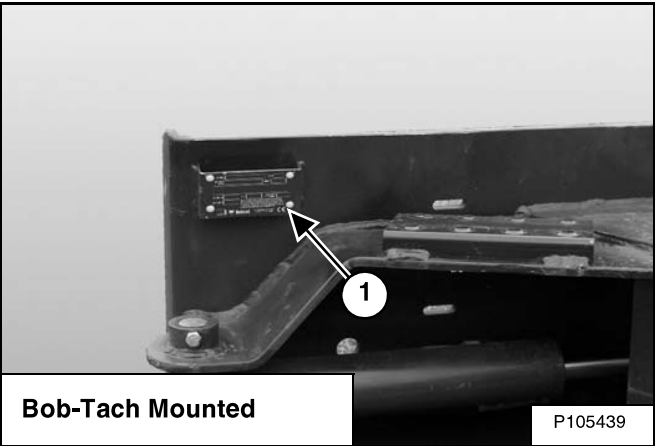 

Always use the serial number (Item 1) [Figure 1] through [Figure 5] of the backhoe when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

 
Figure 6



1-8

ATTACHMENT IDENTIFICATION

 
406 And 506 Backhoes

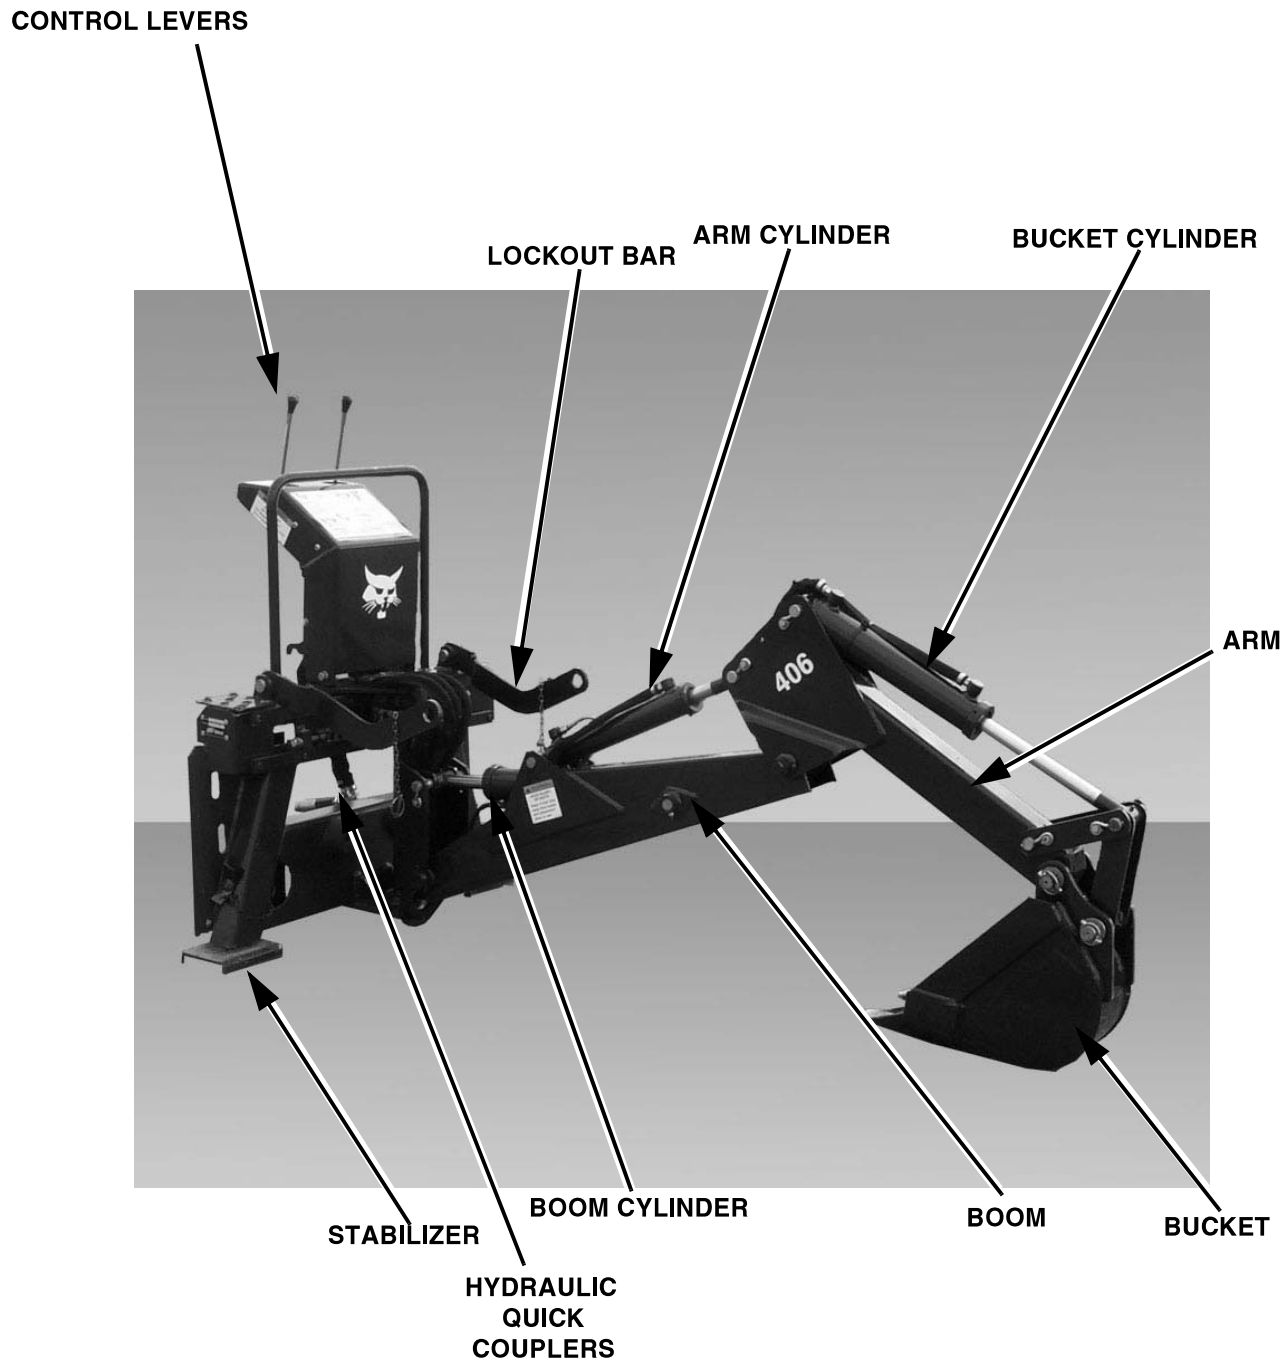

P-20605

ATTACHMENT IDENTIFICATION (CONT'D)

 
607 And 709 Backhoes With Telescoping Stabilizers

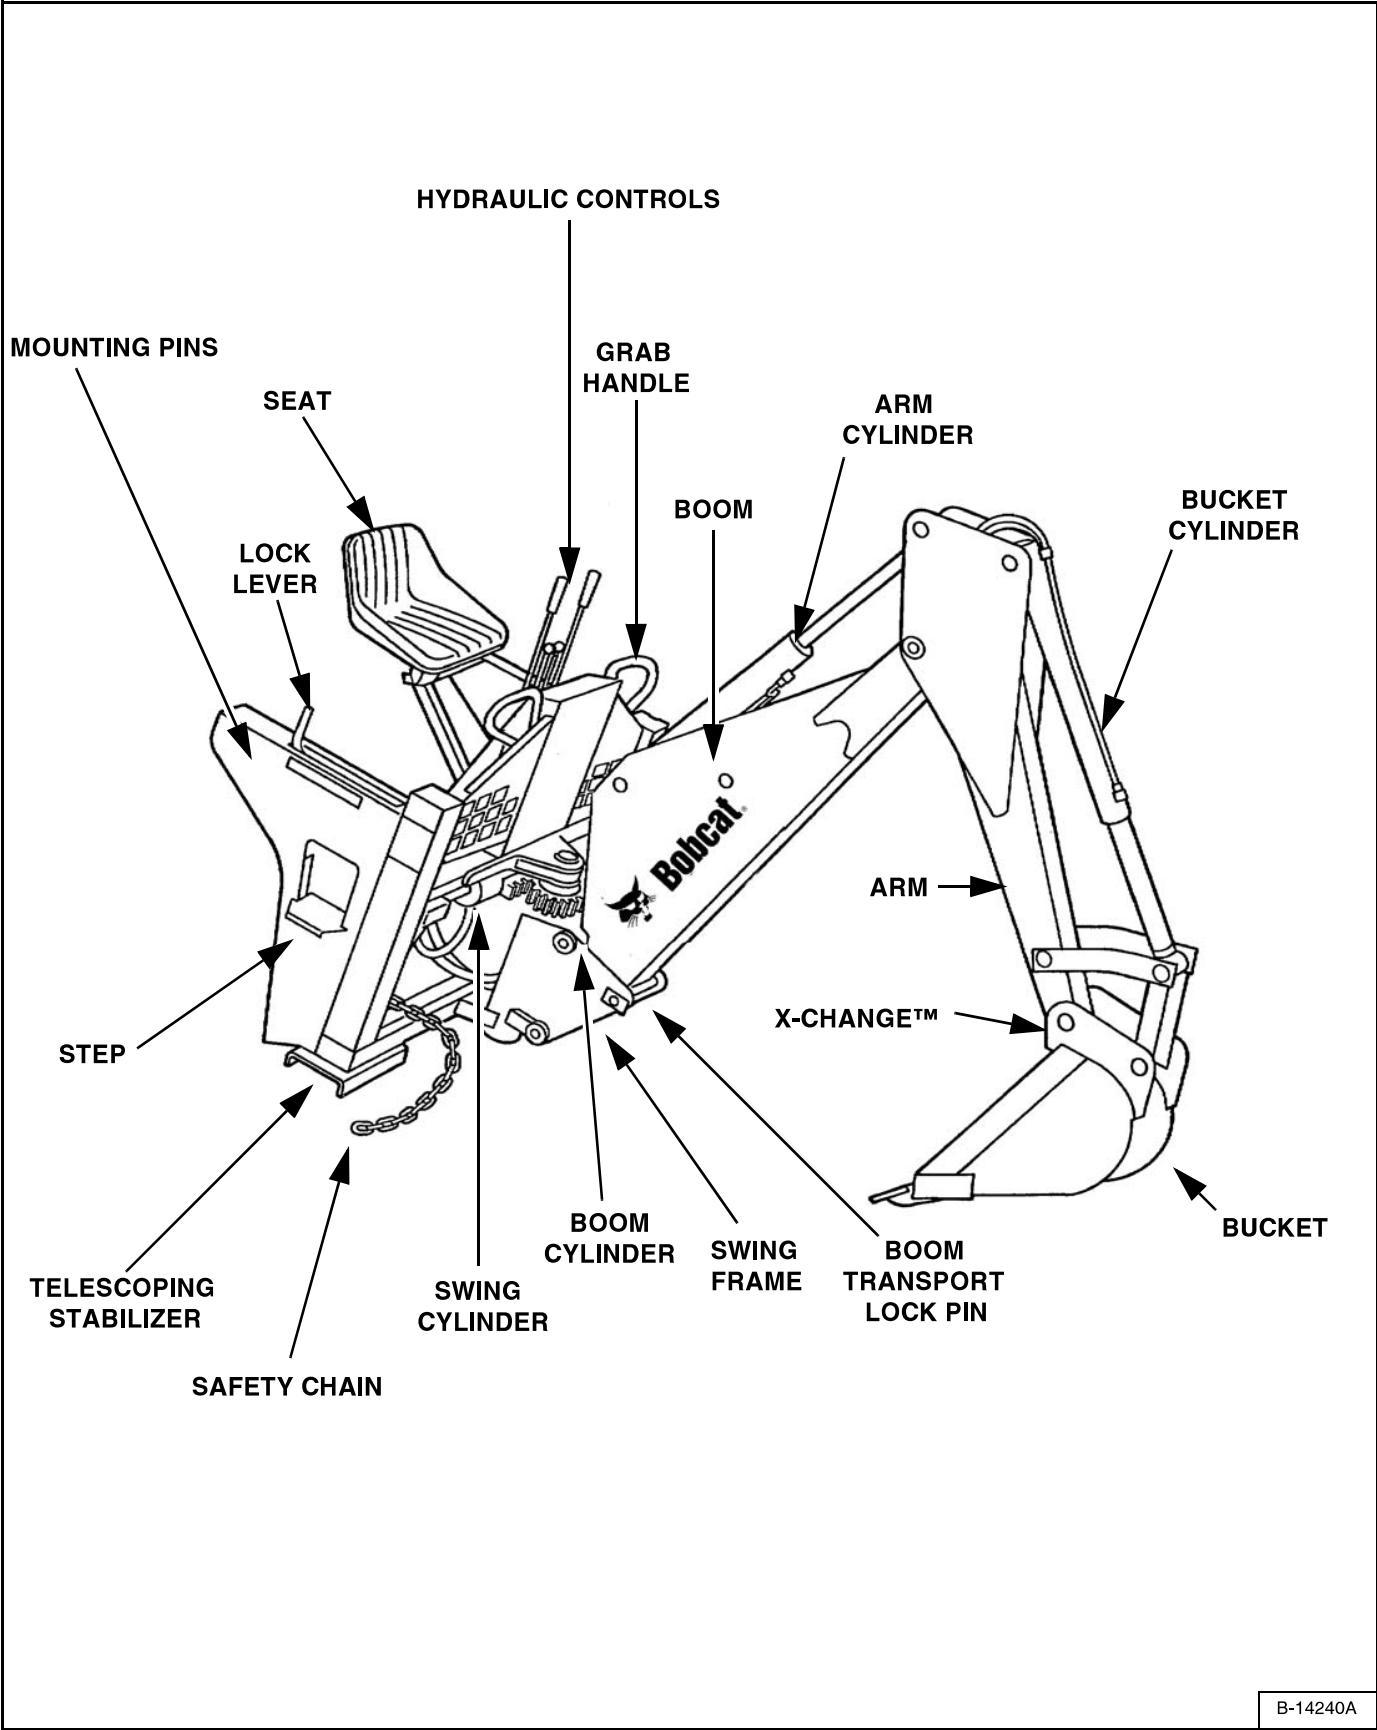

B-14240A

ATTACHMENT IDENTIFICATION (CONT'D)

 
607 And 709 Backhoes With Outrigger Stabilizers

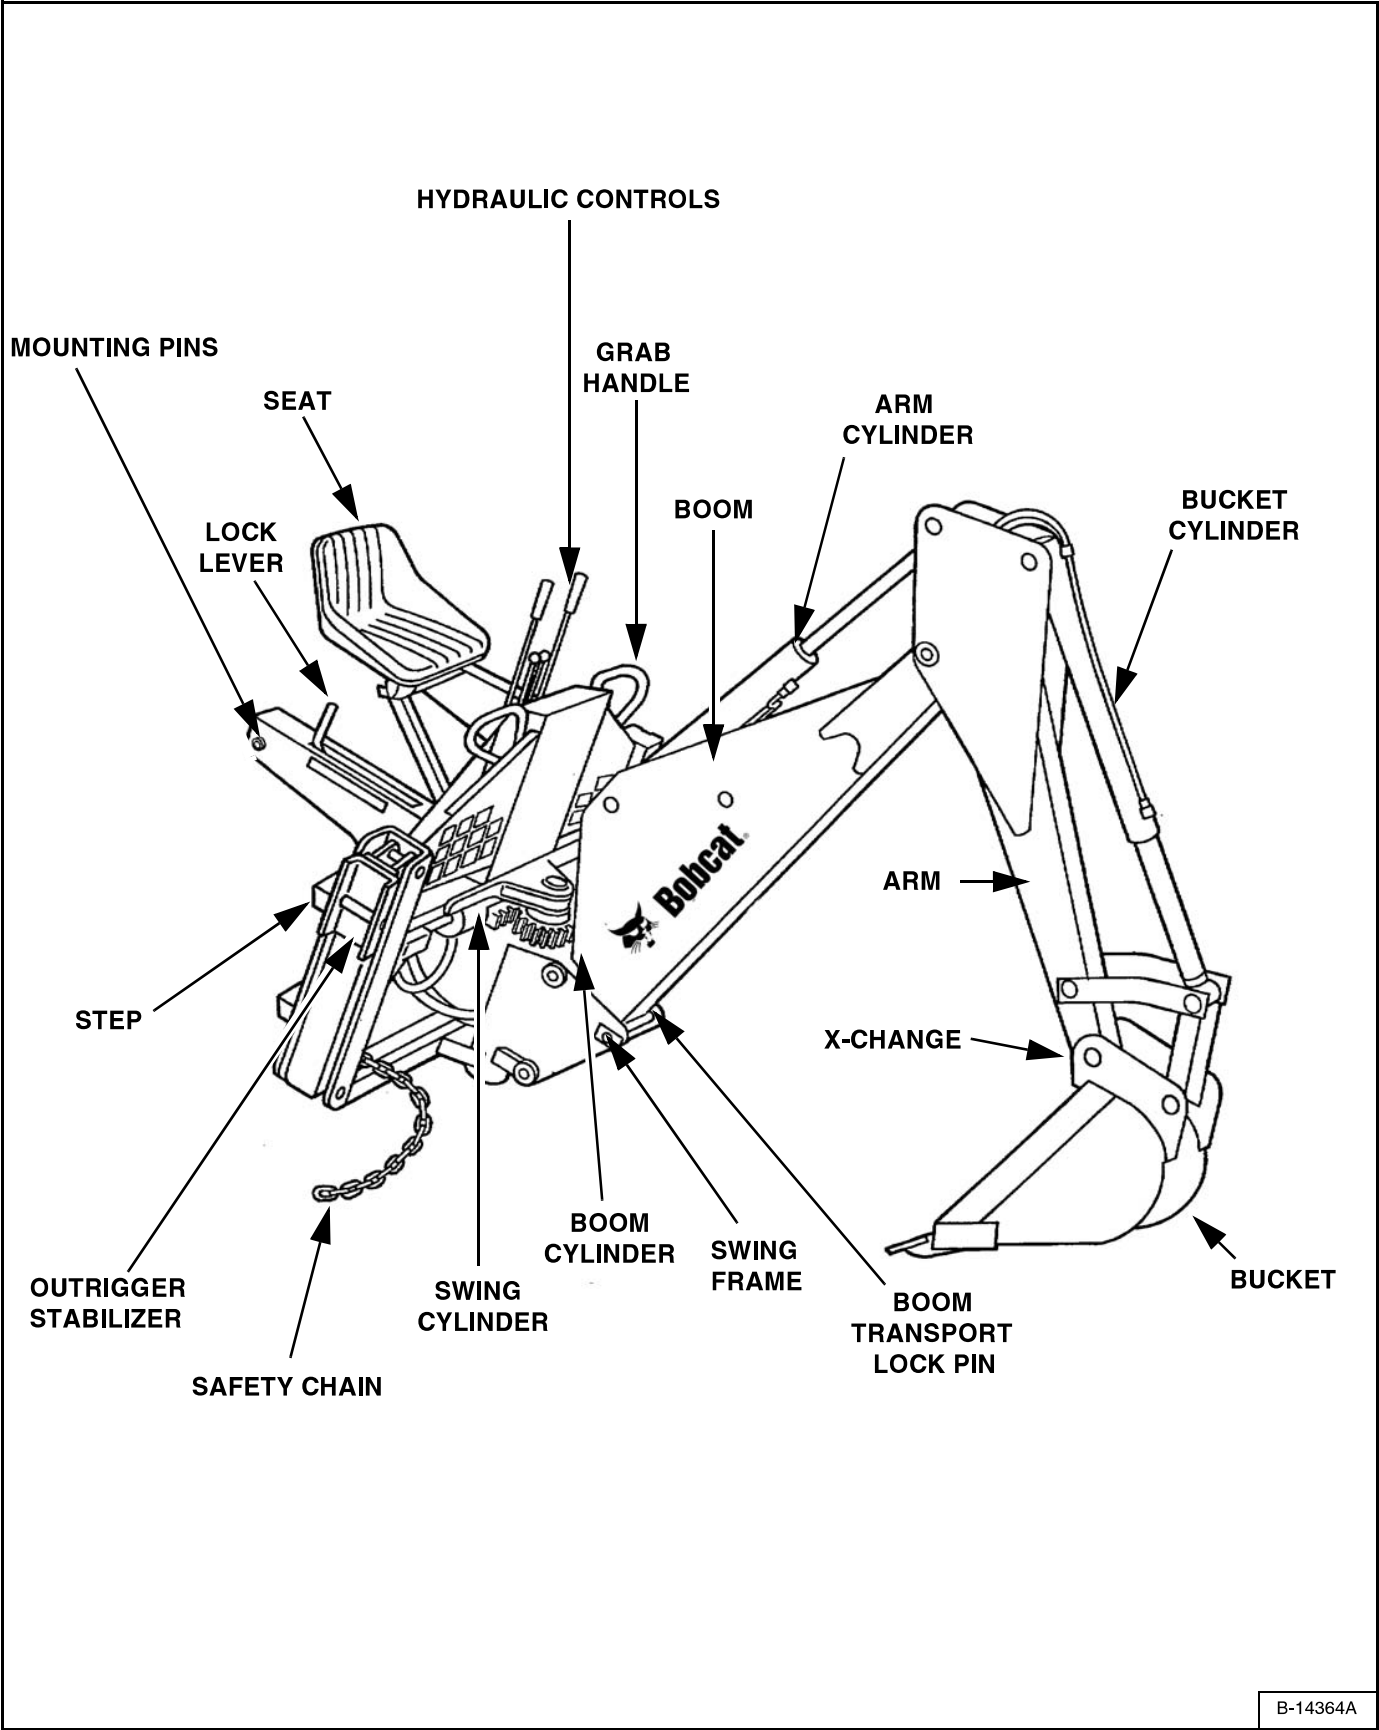

B-14364A

ATTACHMENT IDENTIFICATION (CONT'D)

 
8811 Backhoe

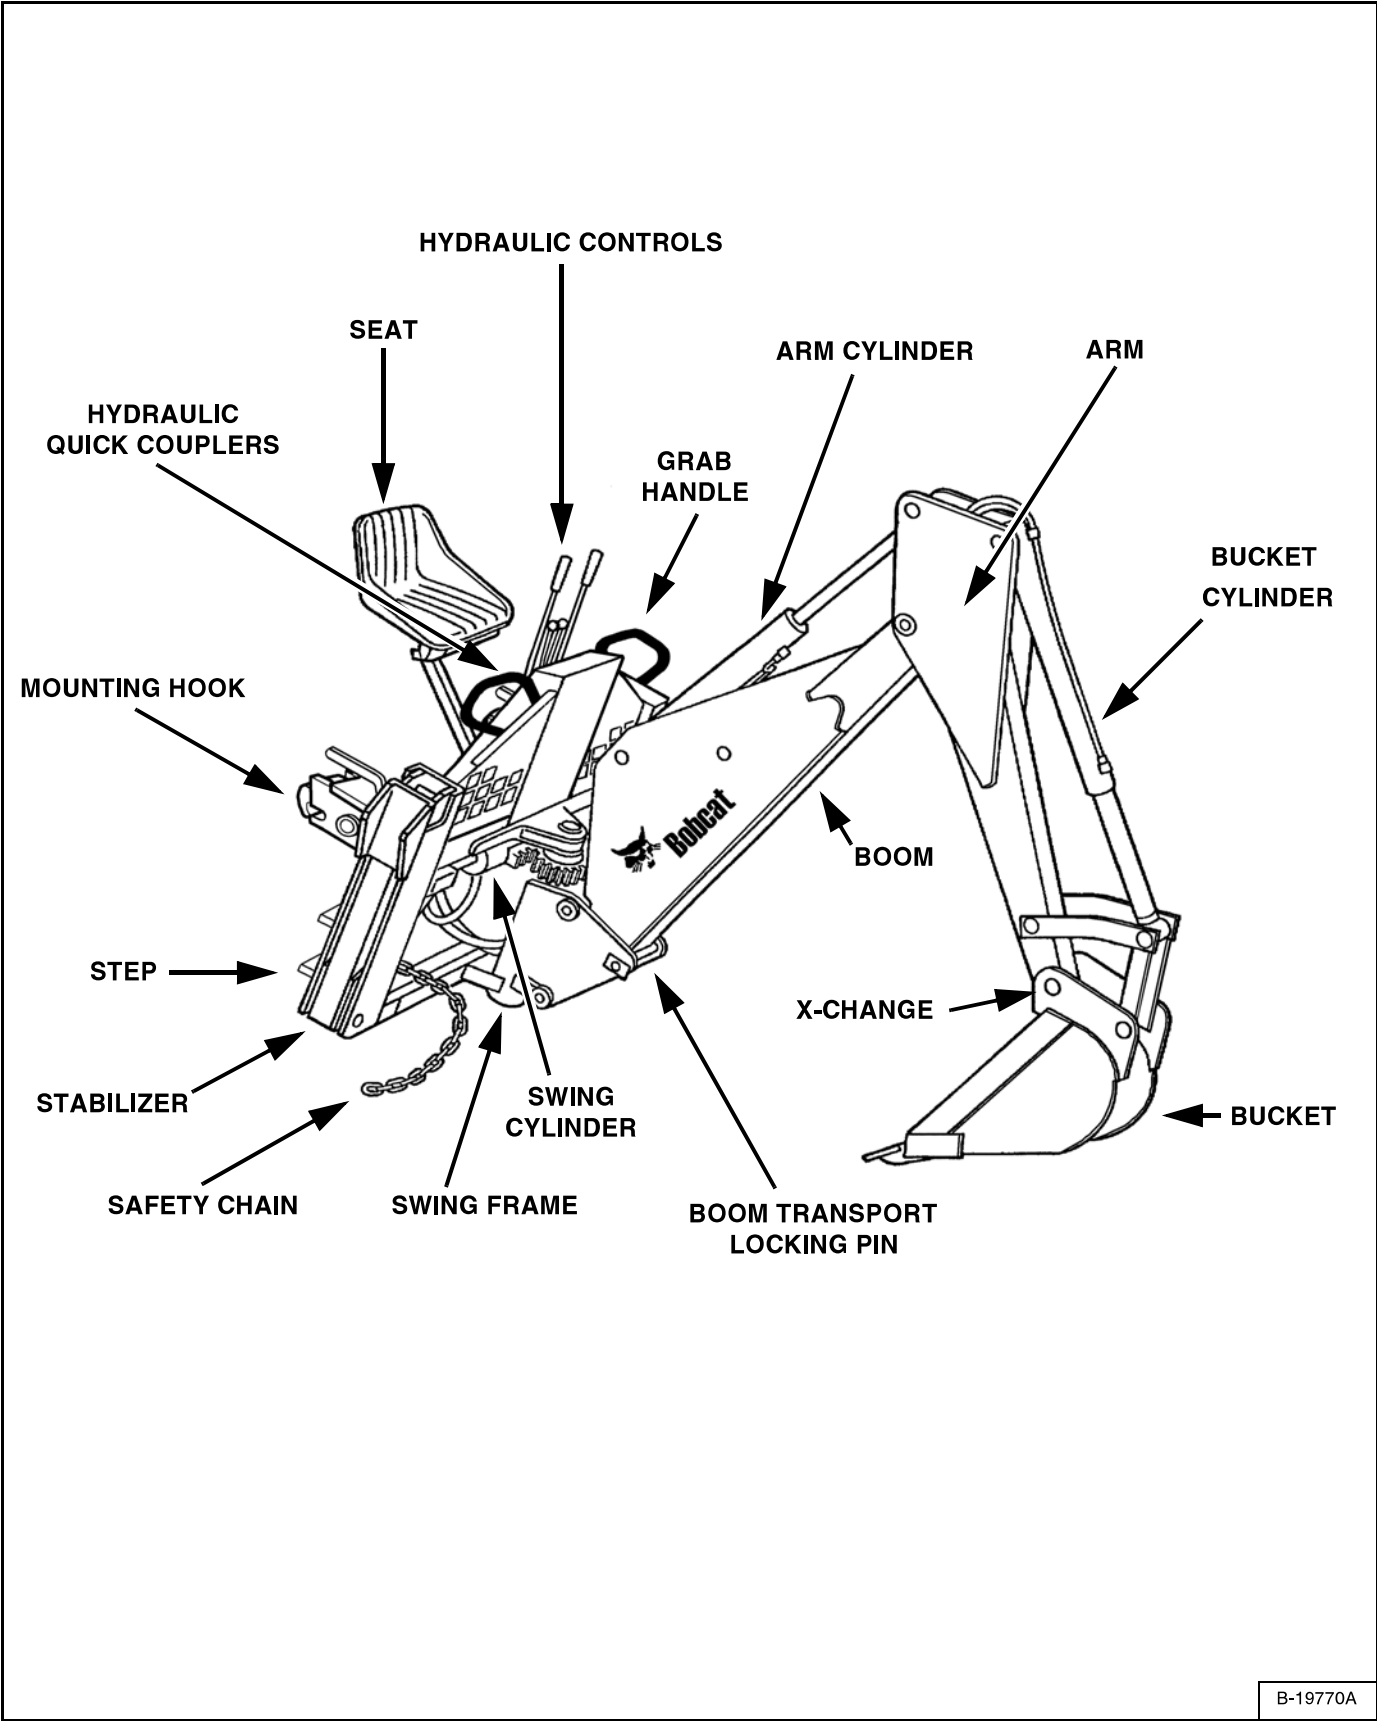

B-19770A

ATTACHMENT IDENTIFICATION (CONT'D)

 
MO6 Backhoe

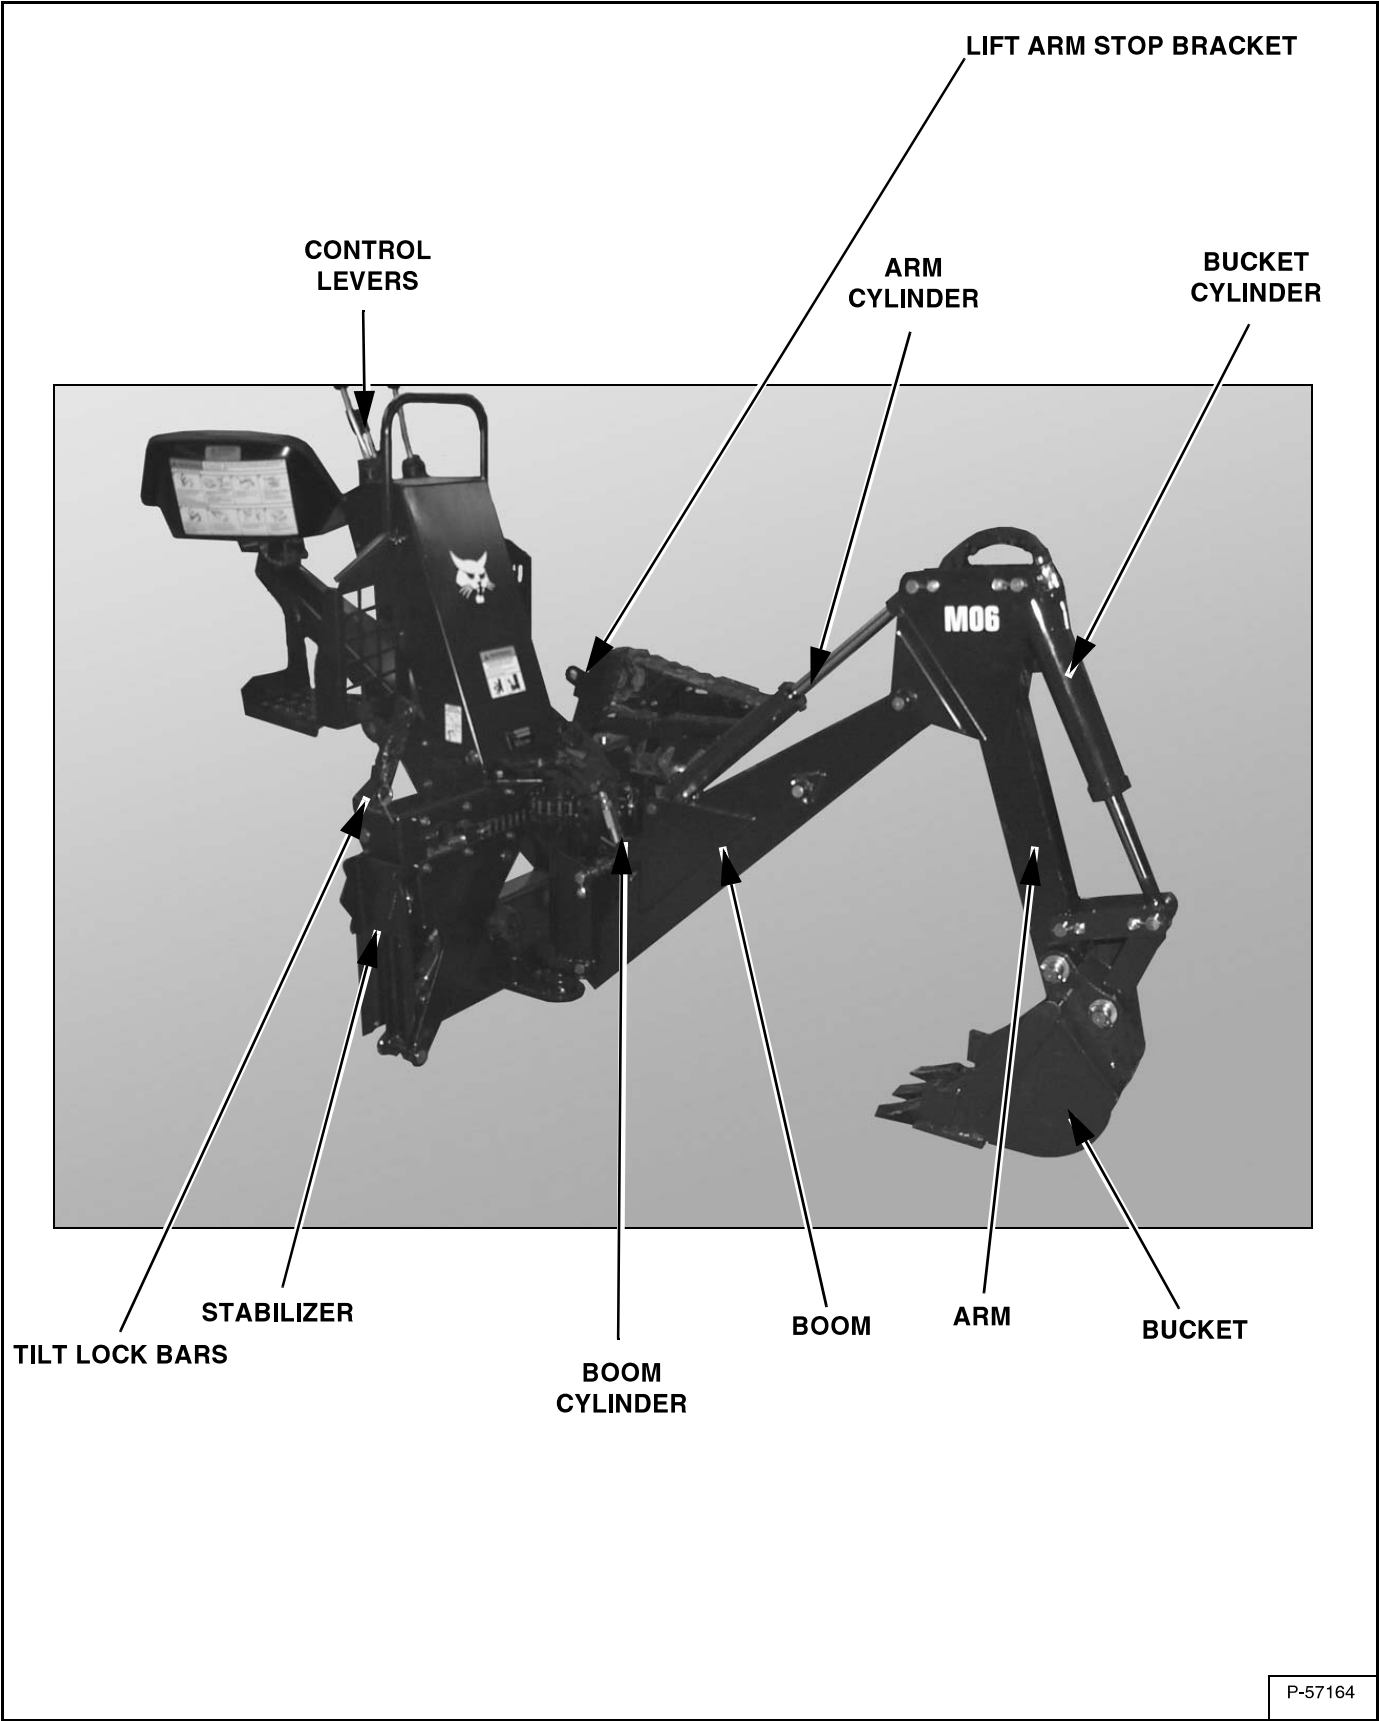

P-57164

ATTACHMENT IDENTIFICATION (CONT'D)

 Bob-Tach Mounted Backhoe

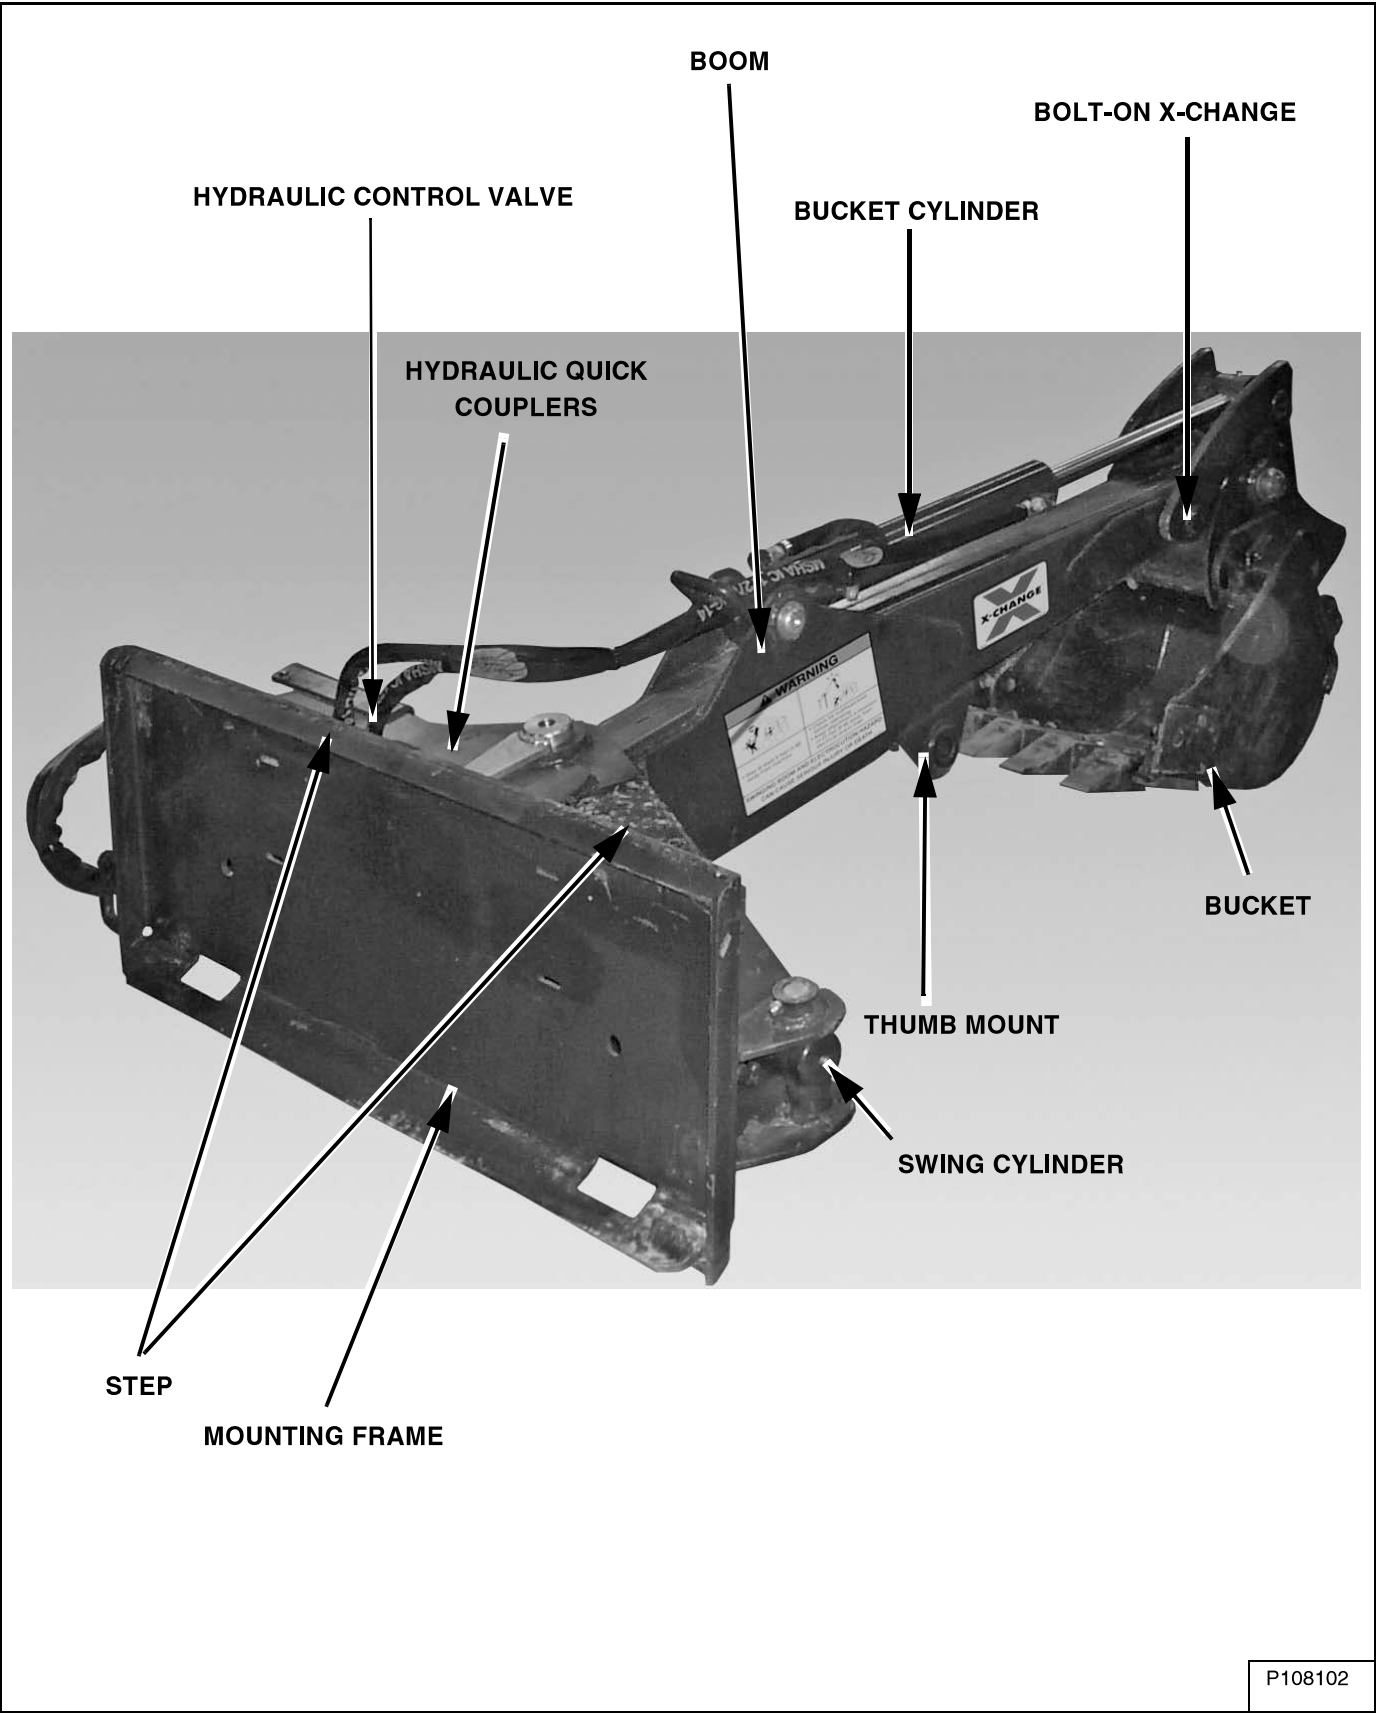

SAFETY AND MAINTENANCE

TROUBLESHOOTING	10-10-1
Chart (406 And 506)	10-10-1
Chart (607 And 709)	10-10-2
Chart (8811)	10-10-3
Chart (MO6)	10-10-4
LUBRICATING THE ATTACHMENT	10-20-1
Lubrication Locations (406 And 506)	10-20-1
Lubrication Locations (607 And 709)	10-20-3
Lubrication Locations (8811)	10-20-5
Lubrication Locations (MO6)	10-20-8
Lubrication Locations (Bob-Tach Mounted)	10-20-11
BOOM SWING ADJUSTMENT	10-30-1
Backhoe (406 And 506)	10-30-1
Backhoe (MO6)	10-30-2
DAILY INSPECTION	10-40-1
Bob-Tach®	10-40-1
Backhoe Inspection (406 And 506)	10-40-3
Backhoe Inspection (607 And 709)	10-40-4
Backhoe Inspection (8811)	10-40-5
Backhoe Inspection (MO6)	10-40-6
BUCKET REMOVAL	10-50-1
Procedure (406 And 506)	10-50-1
Procedure (MO6)	10-50-1
Procedure (Bob-Tach Mount)	10-50-2
SEAT ADJUSTMENT	10-60-1
Procedure (MO6)	10-60-1



Bobcat®