

CONTENTS

28/31/35 Mini-excavator 7-83260 SERVICE MANUAL

Table of Contents

Chapter 0 - GENERAL INFORMATION

0.1	SAFETY PRECAUTIONS	0-2
0.2	USING THE SERVICE MANUAL	0-3
0.2.1	Manual introduction	0-3
0.2.2	The structure of the manual	0-3
0.2.3	Page numbers	0-3
0.2.4	Highlight symbols	0-3
0.2.5	Special tools	0-3
0.2.6	Repairs and replacements	0-4
0.2.7	Repair time schedule	0-4
0.2.8	Service information releases	0-4
0.3	MACHINE SPECIFICATIONS	0-5
0.3.1	Machine dimensions	0-5
	General dimensions	0-5
	Machine bucket attachment dimensions	0-6
	Dozer blade dimensions	0-7
0.3.2	Weights and capacities	0-7
	Weights	0-7
	Capacities	0-7
0.3.3	General specifications	0-8
	Engine	0-8
	Fuel system and air cleaner	0-9
	Cooling system	0-9
	Transmission	0-9
	Hydraulic system	0-10

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

Contents

Electrical system	0-10
Permissible temperature	0-10
Lifting capacities	0-11
General torque figures	0-11
Recommended lubricants	0-15
Maintenance schedule	0-16

Chapter 1 - ENGINE

1.1 ENGINE DATA	1-2
1.1.1 Engine specifications	1-2
1.2 ENGINE MAINTENANCE	1-2
1.2.1 Removing and installing the engine	1-2
Removing the engine	1-2
Installing the engine	1-3
1.2.2 Removing and installing the main hydraulic pump drive coupling	1-4
Removing the main hydraulic pump drive coupling	1-4
Installing the main hydraulic pump drive coupling	1-4
1.3 ENGINE TROUBLESHOOTING	1-5

Annex A ENGINE MANUAL

Chapter 2 - COOLING SYSTEM

2.1 COOLING SYSTEM DATA	2-2
2.1.1 Cooling system specifications	2-2
2.1.2 Cooling system torque data	2-2
2.2 COOLING SYSTEM MAINTENANCE	2-3
2.2.1 Introduction	2-3
2.2.2 Principle of operation of the cooling system	2-3
2.2.3 Checking and topping up the engine coolant level	2-4
2.2.4 Checking and adjusting the fan belt tension	2-5
2.2.5 Checking the antifreeze solution	2-5
2.2.6 Checking the operation of the thermostat	2-6

Contents

2.2.7	Checking the radiator cap	2-6
2.2.8	Cleaning the radiator fins	2-7
2.2.9	Removing and installing the radiator and oil cooler	2-7
	Removing the radiator and oil cooler	2-7
	Installing the radiator and oil cooler	2-7
2.3	COOLING SYSTEM TROUBLESHOOTING	2-9
2.3.1	Engine overheats	2-9

Chapter 3 - FUEL, AIR, AND EXHAUST

3.1	FUEL, AIR, AND EXHAUST DATA	3-2
3.1.1	Fuel, air, and exhaust specifications	3-2
	Low pressure fuel system	3-2
	Air system	3-2
3.1.2	Fuel, air, and exhaust torque data	3-2
3.2	FUEL, AIR, AND EXHAUST MAINTENANCE	3-3
3.2.1	Principle of operation of the fuel, air, and exhaust systems	3-3
	Fuel (low pressure)	3-3
	Air	3-3
	Exhaust	3-3
3.2.2	Replacing the fuel filter	3-4
3.2.3	Draining condensate from the fuel tank	3-4
3.2.4	Draining the agglomerator	3-4
3.2.5	Venting air from the fuel system	3-5
3.2.6	Removing and installing the fuel tank	3-6
	Removing the fuel tank	3-6
	Installing the fuel tank	3-6
3.2.7	Cleaning the main air filter element	3-7
3.2.8	Replacing the air filter element	3-8
3.2.9	Replacing the exhaust system	3-8

3.3 FUEL, AIR, AND EXHAUST TROUBLESHOOTING	3-10
3.3.1 Starter motor turns but engine does not start	3-10
3.3.2 Fuel level lamp comes on	3-10
3.3.3 Air filter lamp comes on	3-10
3.3.4 Engine stalls when speed is low	3-10
3.3.5 Insufficient power	3-10
3.3.6 Fuel consumption high	3-11
3.3.7 Black exhaust smoke	3-11
3.3.8 Blue or white exhaust smoke	3-11

Chapter 4 - TRACK GEARBOX

4.1 TRACK GEARBOX DATA	4-2
4.1.1 Track gearbox specifications	4-2
4.1.2 Track gearbox torque data	4-2
4.2 TRACK GEARBOX MAINTENANCE	4-3
4.2.1 Principle of operation of the track gearbox (Typical)	4-3
Axial piston type hydraulic motor	4-3
Control valve	4-4
4.2.2 Checking the track gearbox oil level	4-6
4.2.3 Changing the track gearbox oil	4-6
4.2.4 Removing and installing the track gearbox	4-7
Removing the track gearbox	4-7
Installing the track gearbox	4-7
4.2.5 Disassembling, inspecting, and assembling the track gearbox	4-8
Disassembling the track gearbox	4-8
Inspecting the track gearbox	4-18
Assembling the track gearbox	4-19
4.3 TRACK GEARBOX TROUBLESHOOTING	4-33
4.3.1 The track gearbox does not turn	4-33
4.3.2 Turning is not stable	4-33

Contents

4.3.3	Direction of rotation is reversed	4-33
4.3.4	Oil leaks from joints	4-33

Chapter 5 - BRAKES

The track and slew brakes are included in their respective motor and reduction sections.

Chapter 6 - TRACK, FRAME, AND UNDERCARRIAGE

6.1	TRACK, FRAME, AND UNDERCARRIAGE DATA	6-2
6.1.1	Track, frame, and undercarriage specifications	6-2
6.1.2	Track, frame, and undercarriage torque data	6-2
6.1.3	Track, frame, and undercarriage wear limits	6-2
	Rubber track	6-2
	Metal track	6-3
	Lower roller	6-3
	Drive sprocket	6-3
	Idler	6-3
	Upper roller	6-4
	Track tensioner	6-4
6.2	TRACK, FRAME, AND UNDERCARRIAGE MAINTENANCE	6-5
6.2.1	Component identification	6-5
6.2.2	Cleaning the tracks	6-6
6.2.3	Removing, inspecting, and installing the rubber tracks	6-7
	Removing the rubber track	6-7
	Inspecting the rubber track	6-8
	Installing the rubber track	6-8
6.2.4	Removing, inspecting, and installing the metal tracks	6-9
	Removing the metal track	6-9
	Inspecting the metal track	6-10
	Installing the metal track	6-10
6.2.5	Adjusting the track tension	6-11

Contents

6.2.6	Removing and installing the lower roller	6-12
	Removing the lower roller	6-12
	Installing the lower roller	6-12
6.2.7	Disassembling, inspecting, and assembling the lower roller	6-13
	Disassembling the lower roller	6-13
	Inspecting the lower roller	6-13
	Assembling the lower roller	6-13
6.2.8	Removing and installing the upper roller	6-14
	Removing the upper roller	6-14
	Installing the upper roller	6-14
6.2.9	Disassembling, inspecting, and assembling the upper roller	6-15
	Disassembling the upper roller	6-15
	Inspecting the upper roller	6-16
	Assembling the upper roller	6-16
6.2.10	Removing and installing the idler and track tensioner	6-17
	Removing the idler and track tensioner	6-17
	Installing the idler and track tensioner	6-17
6.2.11	Disassembling, inspecting, and assembling the idler and track tensioner	6-19
	Disassembling the idler and track tensioner	6-19
	Inspecting the idler and track tensioner	6-19
	Assembling the idler and track tensioner	6-19
6.2.12	Removing, inspecting, and installing the sprocket	6-20
	Removing the sprocket	6-20
	Inspecting the sprocket	6-20
	Installing the sprocket	6-20
6.2.13	Removing and installing the dozer blade	6-21
	Removing the dozer blade	6-21
	Installing the dozer blade	6-21
6.2.14	Adjusting the track lever stroke	6-22

Contents

6.3 TRACK, FRAME, AND UNDERCARRIAGE TROUBLESHOOTING	6-23
6.3.1 Machine will not move in a straight line	6-23
6.3.2 Excessive wear of sprocket	6-23

Chapter 7 - CAB AND ROPS

7.1 CAB AND ROPS DATA	7-2
7.1.1 Cab and ROPS specifications	7-2
7.1.2 Cab and ROPS torque data	7-2
7.2 CAB AND ROPS MAINTENANCE	7-3
7.2.1 General information	7-3
7.2.2 Removing and installing the cab or ROPS	7-3
Removing the cab or ROPS	7-3
Installing the cab or ROPS	7-4
7.2.3 Checking the mounting integrity	7-4
7.2.4 Replacing the cab glazing	7-4
7.3 CAB OR ROPS TROUBLESHOOTING	7-4

This section is not applicable to the cab or ROPS.

Chapter 8 - SHEET METAL AND COVERS

8.1 SHEET METAL AND COVERS DATA	8-2
This section is not applicable to sheet metal and covers.	
8.2 SHEET METAL AND COVERS MAINTENANCE	8-2
8.2.1 Identification of covers	8-2
External covers	8-2
28 Internal covers	8-3
31/35 Internal covers	8-4
8.2.2 Removing and installing the covers and the seat	8-5
General	8-5
Removing the engine cover	8-5
Removing the bumpers	8-5
Removing the bulkhead	8-6

Removing the counterweight	8-6
Removing the sump guard	8-7
Removing the seat	8-7
Removing the suspension from the seat	8-9
Removing the bracket assembly	8-9
Removing the seat support	8-10
Removing the foot rest	8-11
Removing the tool box	8-11
Removing the floor plate	8-12
Installing the floor plate	8-12
Installing the tool box	8-13
Installing the foot rest	8-13
Installing the seat support	8-14
Installing the bracket assembly	8-14
Installing the suspension on the seat	8-15
Installing the seat	8-16
Installing the sump guard	8-18
Installing the counterweight	8-18
Installing the bulkhead	8-19
Installing the bumpers	8-19
Installing the engine cover	8-20
8.3 SHEET METAL AND COVERS TROUBLESHOOTING	8-21

This section is not applicable to sheet metal and covers.

Chapter 9 - ELECTRICAL SYSTEM

9.1 ELECTRICAL SYSTEM DATA	9-2
9.1.1 Electrical system specifications	9-2
9.1.2 Electrical system torque data	9-2
9.2 ELECTRICAL SYSTEM MAINTENANCE	9-2
9.2.1 Principle of operation of the electrical system	9-2

Contents

9.2.2	Removing and installing the alternator	9-6
	Removing the alternator	9-6
	Installing the alternator	9-6
9.2.3	Removing and installing the starter motor	9-7
	Removing the starter motor	9-7
	Installing the starter motor	9-7
9.2.4	Removing and installing the instrument cluster	9-8
	Removing the instrument cluster	9-8
	Installing the instrument cluster	9-8
9.2.5	Removing and installing the battery	9-8
	Removing the battery	9-8
	Installing the battery	9-8
9.2.6	Removing and installing the starter switch	9-9
	Removing the starter switch	9-9
	Installing the starter switch	9-9
9.2.7	Removing and installing relays	9-9
	Removing a relay	9-9
	Installing a relay	9-10
9.2.8	Removing and installing the heater	9-10
	Removing the heater	9-10
	Installing the heater	9-10
9.2.9	Removing and installing the wiper motor	9-11
	Removing the wiper motor	9-11
	Installing the wiper motor	9-11
9.2.10	Disassembling, inspecting, and assembling the alternator	9-11
9.2.11	Testing the alternator	9-11
9.2.12	Disassembling, inspecting, and assembling the starter motor	9-11
9.2.13	Disassembling and assembling the instrument cluster	9-11

9.3 ELECTRICAL SYSTEM TROUBLESHOOTING	9-12
9.3.1 Starter motor will not turn engine	9-12
9.3.2 Battery specific gravity reading low	9-12
9.3.3 Alternator not charging	9-12
9.3.4 Wash and wipe inoperative	9-12
9.3.5 Heater will not operate	9-13
9.3.6 Worklamp inoperative	9-13
9.3.7 Beacon inoperative	9-13
9.3.8 Circuits inoperative	9-13

Chapter 10 - HYDRAULIC SYSTEM (EXCEPT CYLINDERS)

10.1 HYDRAULIC SYSTEM DATA	10-2
10.1.1 Hydraulic system specifications	10-2
10.1.2 Hydraulic system torque data	10-3
Control valve	10-3
Main hydraulic pump	10-3
10.1.3 Hydraulic system special tools	10-4
10.2 HYDRAULIC SYSTEM MAINTENANCE	10-5
28 Hydraulic Circuit Diagram (up to Ser No. DBK0005010)	10-5
28 Hydraulic Circuit Diagram (from Ser No. DBK0005010)	10-6
31/35 Hydraulic Circuit Diagram (31, up to Ser No. DBK0006026/ 35, up to Ser No. DBK0007002)	10-7
31/35 Hydraulic Circuit Diagram (31, from Ser No. DBK0006026/ 35, from Ser No. DBK0007002)	10-8
10.2.1 Principle of operation of the hydraulic system and components	10-9
Main hydraulic pump	10-10
Control valve (28)	10-14
Control valve (31 and 35)	10-15
Control valve operation	10-17
Straight line travel function	10-18
Dipper-in function	10-19

	Two speed slew function	10-19
	Main relief valve	10-20
	Port relief valve	10-21
	Anti-cavitation valve	10-23
	Solenoid valve	10-24
	Servo controllers	10-25
	Servo control system	10-26
	Swivel joint	10-27
10.2.2	Checking the hydraulic oil level	10-28
10.2.3	Changing the hydraulic oil	10-28
10.2.4	Replacing the return filter cartridge	10-29
10.2.5	Pressurising the hydraulic tank	10-30
10.2.6	Venting air from the hydraulic system	10-30
10.2.7	Removing and installing the hydraulic tank	10-31
	Removing the hydraulic tank	10-31
	Installing the hydraulic tank	10-31
10.2.8	Removing and installing the main hydraulic pump	10-32
	Removing the main hydraulic pump	10-32
	Installing the main hydraulic pump	10-32
10.2.9	Replacing the main hydraulic pump seals	10-33
10.2.10	Removing and installing the auxiliary hydraulic pump	10-47
	Removing the auxiliary hydraulic pump	10-47
	Installing the auxiliary hydraulic pump	10-47
10.2.11	Replacing the auxiliary hydraulic pump seals	10-48
10.2.12	Removing and installing the control valve	10-49
	Removing the control valve	10-49
	Installing the control valve	10-50
10.2.13	Replacing the main and port relief valve seals	10-51
10.2.14	Replacing the anti-cavitation valve seals	10-53

Contents

10.2.15	Replacing a load check valve seal (31 and 35 only)	10-54
10.2.16	Replacing the spool seals (manually operated section)	10-54
10.2.17	Replacing the spool seals (servo operated section)	10-56
10.2.18	Replacing the slew flow control seals	10-57
10.2.19	Replacing the travelling and straight travelling spool seals	10-58
10.2.20	Replacing the control valve seals	10-59
10.2.21	Removing and installing the solenoid valve	10-65
	Removing the solenoid valve	10-65
	Installing the solenoid valve	10-65
10.2.22	Replacing the solenoid valve seals	10-66
10.2.23	Removing and installing the servo controller	10-66
	Removing the servo controller	10-66
	Installing the servo controller	10-66
10.2.24	Replacing the servo controller seals	10-67
10.2.25	Removing and installing the swivel joint	10-68
	Removing the swivel joint	10-68
	Installing the swivel joint	10-68
10.2.26	Replacing the swivel joint seals	10-69
10.2.27	Inspecting the swivel joint after assembly	10-70
10.2.28	Removing and installing the shuttle valve	10-70
	Removing the shuttle valve	10-70
	Installing the shuttle valve	10-71
10.2.29	Adjusting the main relief valve set pressure	10-72
10.2.30	Adjusting the solenoid valve relief set pressure	10-74
10.2.31	Checking the operation of the servo controls isolator and solenoid valve . .	10-75
10.2.32	Checking operation of the main hydraulic pump	10-75
10.2.33	Checking the main hydraulic pump discharge volume	10-76
10.2.34	Post-assembly test of the main hydraulic pump	10-77
10.2.35	Adjusting the port relief valve set pressure	10-78

Contents

10.2.36	Adjusting the slew cross line relief valve set pressure	10-79
10.2.37	Lowering the attachment after engine failure	10-81
10.3	HYDRAULIC SYSTEM TROUBLESHOOTING	10-82
10.3.1	Main hydraulic pump	10-82
	Pump will not discharge oil	10-82
	Noise level is high	10-82
	Oil leaks from oil seals	10-82
	Oil leaks from between housing and flange or cover	10-82
	Discharge volume is low	10-83
10.3.2	Control valve	10-83
	Oil leaks from spool seal	10-83
	Spool sliding movement not smooth	10-83
	Cylinder drops when shifting to a lifting operation	10-83
	Cylinder drops (will not hold in spool neutral position)	10-84
	Load will not move (pressure will not increase)	10-84
	Load does not move (pressure rises)	10-84
10.3.3	Solenoid valve	10-85
	Solenoid valve does not operate	10-85
10.3.4	Servo controllers	10-85
	Secondary pressure does not rise	10-85
	Secondary pressure does not stabilise	10-85
	Secondary pressure is high	10-85
10.3.5	Swivel joint	10-86
	External oil leakage	10-86
	Internal oil leakage	10-86

Chapter 11 - LOADER

This chapter is not applicable to the 28/31/35 mini-excavators.

Chapter 12 - BOOM, DIPPER, AND LINKAGE

12.1 BOOM, DIPPER, AND LINKAGE DATA	12-2
12.1.1 Boom, dipper, and linkage specifications	12-2
Bucket	12-2
Boom	12-3
Dipper	12-4
12.2 BOOM, DIPPER, AND LINKAGE MAINTENANCE	12-5
12.2.1 Greasing the pivot pins, the pedals, and the levers	12-5
12.2.2 Removing and installing the bucket	12-6
Removing the bucket	12-6
Installing the bucket	12-6
12.2.3 Removing and installing the bucket link	12-8
Removing the bucket link	12-8
Installing the bucket link	12-8
12.2.4 Removing and installing the dipper	12-9
Removing the dipper	12-9
Installing the dipper	12-9
12.2.5 Removing and installing the boom	12-10
Removing the boom	12-10
Installing the boom	12-11
12.2.6 Removing and installing the king post support, off-set arm, and linkage	12-12
Removing the king post support, off-set arm, and linkage	12-12
Installing the king post support, off-set arm, and linkage	12-12
12.3 BOOM, DIPPER, AND LINKAGE TROUBLESHOOTING	12-13

Chapter 13 - HYDRAULIC CYLINDERS

13.1 HYDRAULIC CYLINDERS DATA	13-2
13.1.1 Hydraulic cylinders specifications	13-2
Boom cylinder	13-2
Dipper cylinder	13-2

Bucket cylinder	13-2
Off-set cylinder	13-2
Dozer blade cylinder	13-2
13.2 HYDRAULIC CYLINDERS MAINTENANCE	13-3
13.2.1 Principle of operation of hydraulic cylinders (Typical)	13-3
13.2.2 Removing and installing cylinders	13-4
Removing and installing cylinders	13-4
13.2.3 Disassembling, inspecting, and assembling cylinders (Typical)	13-4
Disassembling cylinders	13-4
Inspecting cylinders after disassembly	13-5
Assembling cylinders	13-5
Inspecting cylinders after assembly	13-5
13.2.4 Cylinder leak test	13-6
External leak test	13-6
Internal leak test	13-6
13.2.5 Venting air from a hydraulic cylinder	13-6
13.3 HYDRAULIC CYLINDER TROUBLESHOOTING	13-7
13.3.1 Oil leaks from piston rod sliding surface	13-7
13.3.2 Oil leaks from the outer circumference of the rod cover	13-7
13.3.3 Cylinder natural fall is 0,5 mm or greater	13-7
13.3.4 Boom or dipper cylinder will not operate or operation is slow or there is no power	13-8
13.3.5 Off-set cylinder will not operate	13-8
13.3.6 Bucket cylinder does not move or there is no power	13-8
13.3.7 Dozer blade cylinder does not move or there is no power	13-9
13.3.8 Boom drops temporarily when operating lever is pulled gently	13-9
13.3.9 Boom cylinder natural fall is excessive	13-9
13.3.10 Dipper or bucket cylinder natural fall is excessive	13-9
13.3.11 Dozer blade cylinder natural fall is excessive or dozer blade will not hold up the machine	13-9

Chapter 14 - SUPERSTRUCTURE (INCLUDING SLEW MOTOR)

14.1 SUPERSTRUCTURE (INCLUDING SLEW MOTOR DATA)	14-2
14.1.1 Superstructure (including slew motor) specifications (28, up to Ser No. DBK0005010/31, up to Ser No. DBK0006026/35, up to Ser No. DBK0007002)	14-2
14.1.2 Superstructure (including slew motor) torque data (28, up to Ser No. DBK0005010/31, up to Ser No. DBK0006026/35, up to Ser No. DBK0007002)	14-2
14.2 SUPERSTRUCTURE (INCLUDING SLEW MOTOR) MAINTENANCE	14-3
14.2.1 Principle of operation of slewing	14-3
Slew bearing	14-3
Slew motor (28, up to Ser No. DBK0005010/31, up to Ser No. DBK0006026/35, up to Ser No. DBK0007002)	14-4
Reduction gear	14-4
Relief valve	14-5
Parking brake	14-6
Timer valve	14-7
Bypass valve	14-7
Slew motor (28, from Ser No. DBK0005010/31, from Ser No. DBK0006026/35, from Ser No. DBK0007002)	14-8
14.2.2 Removing and installing the superstructure	14-10
Removing the superstructure	14-10
Installing the superstructure	14-10
14.2.3 Removing and installing the control lever stands	14-11
Removing the control lever stands	14-11
Installing the control lever stands	14-11
14.2.4 Removing and installing the slew motor	14-12
Removing the slew motor	14-12
Installing the slew motor	14-12
14.2.5 Removing and installing the slew bearing (ring)	14-12
Removing the slew bearing	14-12
Installing the slew bearing	14-13

CASE CORPORATION	18	Man 7-83260 GB October 1998
------------------	----	--------------------------------

Chapter 0
GENERAL INFORMATION
