

# 9030B Excavator

## Service Manual No. 7-62192

### Table of Contents

Description	Section No.	Form No.
<b>General</b>		
	Tab 1	
Loctite Product Chart		8-98900
Safety, General Information and Torque Specifications	1001	7-62010
Specifications	1002	7-62940
<b>Engines</b>		
	Tab 2	
Engine Removal and Installation	2000	7-62950
Engine Radiator and Oil Cooler and Cooling System Reservoir	2001	7-63100
6-590 Diesel Engine Specification Details	2401	8-26064
Cylinder Head and Valve Train	2415	8-26074
Cylinder Block	2425	8-26085
Lubrication System	2445	8-26093
Cooling System	2455	8-26104
Turbocharger	2465	8-26111
Turbocharger Failure Analysis	2565	9-78235
<b>Fuel System</b>		
	Tab 3	
Fuel, Tank, Filters and Lines	3001	7-62980
Fuel System and Filters	3410	8-26132
Injection Pump	3412	8-26144
Fuel Injectors	3413	8-26153
<b>Electrical</b>		
	Tab 4	
Electrical Specifications and Troubleshooting	4001	7-62400
Electrical Schematic Foldout in Rear Pocket		7-15350
Battery Testing, Maintenance and Booster Battery Connections	4002	7-62060
Controller	4003	7-62070
<b>Tracks</b>		
	Tab 5	
Tracks, Rollers and Idlers	5002	7-62970
<b>Power Train</b>		
	Tab 6	
Drive Motor and Final Drive Transmission	6002	7-62090
Swing Motor and Swing Reduction Gear	6003	7-62980
<b>Hydraulics</b>		
	Tab 8	
Cleaning the Hydraulic System	8000	7-62110
Hydraulic Specifications, Troubleshooting and Pressure Checks	8001	7-62410
Hydraulic Schematic Foldout in Rear Pocket		7-15360
Main Hydraulic Pump	8002	7-62990
Main Hydraulic Control Valve	8003	7-62130
Cylinders	8004	7-63000

**CASE CORPORATION**  
 700 State Street  
 Racine, WI 53404 U.S.A.

**CASE CANADA CORPORATION**  
 3350 South Service Road  
 Burlington, ON L7N 3M6 CANADA

**Reprinted**

© 1999 Case Corporation  
 Printed in U.S.A.  
 April, 1999

Description	Section No.	Form No.
Hydraulics (Cont'd)	Tab 8	
Hand Control Valves, Foot Left and Right Travel Control Valves, Shuttle Valve and Accumulator	8005	7-63010
Eight Spool Solenoid Valve, Swing Lock and Swing Brake Solenoid Valve and Free Swing Solenoid Valve	8006	7-62160
Cushion Control Valve	8007	7-62170
Auxiliary Hydraulics	8008	7-62180
Hydraulic Pilot Filter, Hydraulic Inline Filter and Bypass Oil Filter	8011	7-63020
Hydraulic Swivel	8013	7-62230
Mounted Equipment	Tab 9	
Upper Structure and Counterweight	9002	7-63030
Boom, Arm and Bucket	9003	7-63040
Seat Mounting and Belts	9004	7-62260
Cab and Cab Equipment	9005	7-63050
Air Conditioner Troubleshooting	9006	7-62280
Air Conditioner System Service	9008	7-62300
Air Conditioner Components Service	9009	7-62310

# LOCTITE PRODUCT CHART

Product	Color	Similar Products	Gap (In Inches)	Strength (Steel/Steel)	Working Temperature Range-Fahrenheit	Fixture/Full Cure (Steel/Steel) Time	Primer	Description
#3	Dark Brown					24 hr	N/A	Form a Gasket (works with oil, fuel or grease) Pliable
80	Yellow					Fast	N/A	Weatherstrip Adhesive
123	Clear					N/A	N/A	Parts Cleaner Fluid
220	Blue	290	0.003	57/143 in lbs	-65 to +250	6 min/24 hrs	747	Wicking Threadlocker
221	Purple	222	0.005	75/44 in lbs	-65 to +300	2 min/24 hrs	747	Low Strength Threadlocker
222	Purple		0.005	53/30 in lbs	-65 to +300	20 min/24 hrs	764	Low Strength Threadlocker (Small Screws)
225	Brown	222	0.010	45/25 in lbs	-65 to +300	7 min/24 hrs	747	Low Strength Threadlocker
242	Blue		0.005	80/50 in lbs	-65 to +300	10 min/24 hrs	764	Medium Strength Threadlocker
262	Red	271	0.005	160/190 in lbs	-65 to +300	5 min/24 hrs	747	High Strength Threadlocker
270	Green	271	0.007	160/320 in lbs	-65 to +300	3 min/24 hrs	747	High Strength Threadlocker
271	Red	262	0.007	160/320 in lbs	-65 to +300	10 min/24 hrs	764	High Strength Threadlocker
272	Red	620	0.007	180/220 in lbs	-65 to +450	30 min/24 hrs	764	High Temperature, High Strength
275	Green	277	0.010	210/300 in lbs	-65 to +300	3 min/24 hrs	747	High Strength Threadlocker
277	Red		0.010	225/300 in lbs	-65 to +300	60 min/24 hrs	764	High Strength Threadlocker
290	Green		0.003	85/350 in lbs	-65 to +300	6 min/24 hrs	764	Wicking Threadlocker
*404	Clear	495	0.006	3200 psi	-65 to +180	30 sec/24 hrs	NA	Instant Adhesive
*406	Clear		0.004	3200 psi	-65 to +180	15 sec/24 hrs	N/A	Surface Insensitive Adhesive
*409	Clear	454	0.008	2500 psi	-65 to +180	50 sec/24 hrs	N/A	Gel Instant Adhesive
*414	Clear		0.006	2500 psi	-65 to +180	30 sec/24 hr	N/A	Instant Adhesive
*415	Clear	454	0.010	2500 psi	-65 to +180	50 sec/24 hrs	N/A	Gap Filling Instant Adhesive (Metals)
*416	Clear	454	0.010	2500 psi	-65 to +180	50 sec/24 hrs	N/A	Gap Filling Instant Adhesive (Plastics)
*420	Clear		0.002	2500 psi	-65 to +180	15 sec/24 hrs	N/A	Wicking Instant Adhesive
*422	Clear	454	0.020	2800 psi	-65 to +180	60 sec/24 hrs	N/A	Gap Filling Instant Adhesive
*430	Clear		0.005	2500 psi	-65 to +180	20 sec/24 hrs	N/A	Metal Bonding Adhesive
*445	White/Black		0.250	2000 psi	-65 to +180	5 min/24 hrs	N/A	Fast Setting 2 Part Epoxy
*454	Clear		0.010	3200 psi	-65 to +180	15 sec/24 hrs	N/A	Surface Insensitive Gen Instant Adhesive
*495	Clear		0.004	2500 psi	-65 to +180	20 sec/24 hrs	N/A	General Purpose Instant Adhesive
*496	Clear		0.005	2500 psi	-65 to +180	20 sec/24 hrs	N/A	Metal Bonding Adhesive
504	Brt Orange	515	0.030	750 psi	-65 to +300	90 min/24 hrs	None	Rigid Gasket Eliminator
509	Light Blue		0.020	750 psi	-65 to +320	6 hr/72 hrs	764	Flange Sealant
510	Red		0.020	1000 psi	-65 to +400	30 min/24 hrs	764	High Temperature, Gasket Eliminator
515	Purple		0.010	750 psi	-65 to +300	1 hr/24 hrs	764	Gasket Eliminator 515

Rac 8-98902 \* Products 404-496 (except for #445) are all instant adhesives (super glues) they differ mostly in viscosity

Printed in U.S.A.

# LOCTITE PRODUCT CHART

Product	Color	Similar Products	Gap (In Inches)	Strength (Steel/Steel)	Working Temperature Range-Fahrenheit	Fixture/Full Cure (Steel/Steel) Time	Primer	Description
518	Red	515	0.030	500psi	-65 to +300	1 hr/24 hrs	764	Gasket Eliminator 518 for Aluminum
542	Brown	569	N/A	132/92 in lbs	-65 to +300	2 hr/24 hrs	747	Hydraulic Sealant
545	Purple		N/A	25/20 in lbs	-65 to +300	4 hr/24 hrs	747	Low Strength Pneumatic/Hydraulic Sealant
549	Orange	504	0.020	2500 psi	-65 to +300	2 hr/24 hrs	747	Instant Seal Plastic Gasket
554	Red	277	0.015	240/240 in lbs	-65 to +300	2 to 4 hrs/24 hrs	764	Refrigerant Sealant
567	White	592	N/A	500 psi	-65 to +400	4 hrs/24 hrs	764	Pipe Sealant for Stainless Steel
568	Orange	277	0.015	2500 psi	-65 to +300	12 hrs/24 hrs	764	Plastic Gasket
569	Brown	545	0.010	40/25 in lbs	-65 to +300	1 hr/24 hrs	764	Hydraulic Sealant
570	Brown	592	N/A	25/40 in lbs	-65 to +300	6 hrs/72 hrs	764	Steam Sealant
571	Brown	592	0.015	40/20 in lbs	-65 to +300	2 to 4 hrs/24 hrs	764	Pipe Sealant
572	White	578.575	N/A	80/27 in lbs	-65 to +300	24 hrs/72 hrs	None	Gasketing
592	White		0.020	500 psi	-65 to +400	4 hrs/72 hrs	736	Pipe Sealant with Teflon
593	Black		0.250	400 psi	-95 to +400	30 min/24 hrs	N/A	RTV Silicone
601	Green	609	0.005	3000 psi	-65 to +300	10 min/24 hrs	764	Current PIN #609
609	Green		0.005	3000 psi	-65 to +300	10 min/24 hrs	764	General Purpose Retaining Compound
620	Green	640	0.015	3000 psi	-65 to +450	30 min/24 hrs	747	High Temperature Retaining Compound
635	Green	680	0.010	4000 psi	-65 to +300	1 hr/24 hrs	747	High Strength Retaining Compound
638	Green	680	0.015	4100 psi	-65 to +300	10 min/24 hrs	747	High Strength Retaining Compound
640	Green	620	0.007	3000 psi	-65 to +400	1 hr/24 hrs	747	High Temperature Retaining Compound
660	Silver		0.020	3000 psi	-65 to +300	20 min/24 hrs	764	Quick Metal
675	Green	609	0.005	3000 psi	-65 to +300	20 min/24 hrs	747	General Purpose Retaining Compound
680	Green	635	0.015	4000 psi	-65 to +300	10 min/24 hrs	747	High Strength Retaining Compound
706	Clear	755	N/A	N/A	N/A	N/A	N/A	Cleaning Solvent
707	Amber		N/A	N/A	N/A	N/A	N/A	Activator for Structural Adhesives
736	Amber		N/A	N/A	N/A	N/A	N/A	Primer NF
738	Amber		N/A	N/A	N/A	N/A	N/A	Depend Activator
747	Yellow	N/A	N/A	N/A	N/A	N/A	N/A	Primer T
751	Clear		N/A	N/A	N/A	N/A	N/A	Activator for Structural Adhesives
755	Clear		N/A	N/A	N/A	N/A	N/A	Cleaning Solvent
764	Green		N/A	N/A	N/A	N/A	N/A	Primer N
767	Silver		N/A	N/A	-65 to +1600	N/A	N/A	Anti-Seize Lubricant

**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**


# Section 1001

## SAFETY, GENERAL INFORMATION AND TORQUE SPECIFICATIONS

## TABLE OF CONTENTS


SAFETY .....	3
GENERAL INFORMATION .....	5
STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS .....	6

## SAFETY


 This symbol means **ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED.** The message that follows the symbol contains important information about safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death. SB001


To prevent injury always follow the Warning, Caution and Danger notes in this section and throughout the manual.


Put the warning tag shown below on the key for the keyswitch when servicing or repairing the machine. One warning tag is supplied with each machine. Additional tags Part Number 331-4614 are available from your service parts supplier.

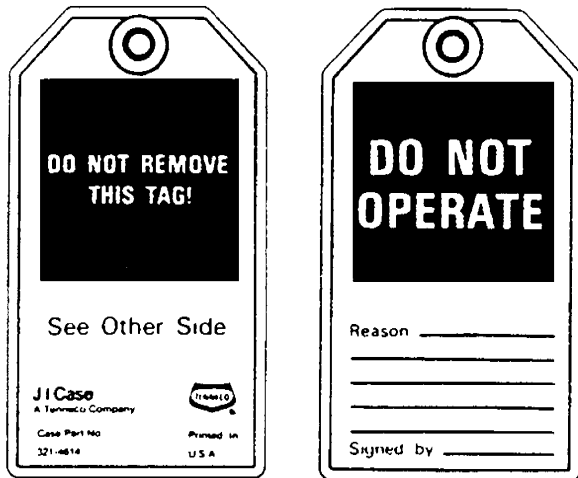



1001-01


 **WARNING:** Read the operator's manual to familiarize yourself with the correct control functions. 46-27


 **WARNING:** Operate the machine and equipment controls from the seat position only. Any other method could result in serious injury. 48-55


 **WARNING:** This is a one man machine, no riders allowed. 35-8

 **WARNING:** Before starting engine, study Operator's Manual safety messages. Read all safety signs on machine. Clear the area of other persons. Learn and practice safe use of controls before operating. It is your responsibility to understand and follow manufacturers instructions on machine operation, service and to observe pertinent laws and regulations. Operator's and Service Manuals may be obtained from your Case dealer. SA055

 **WARNING:** If you wear clothing that is too loose or do not use the correct safety equipment for your job, you can be injured. Always wear clothing that will not catch on objects. Extra safety equipment that can be required includes hard hat, safety shoes, ear protection, eye or face protection, heavy gloves and reflector clothing. 45-3A

 **WARNING:** When working in the area of the fan belt with the engine running, avoid loose clothing if possible, and use extreme caution. 35-4

 **WARNING:** When doing checks and tests on the equipment hydraulics, follow the procedures as they are written. **DO NOT** change the procedure. 47-44

 **WARNING:** When putting the hydraulic cylinders on this machine through the necessary cycles to check operation or to remove air from a circuit, make sure all people are out of the way. 47-45





**WARNING:** Use insulated gloves or mittens when working with hot parts. 47-41A



**CAUTION:** Lower all attachments to the ground or use stands to safely support the attachments before you do any maintenance or service. 49-11



**CAUTION:** Pin sized and smaller streams of hydraulic oil under pressure can penetrate the skin and result in serious infection. If hydraulic oil under pressure does penetrate the skin, seek medical treatment immediately. Maintain all hoses and tubes in good condition. Make sure all connections are tight. Make a replacement of any tube or hose that is damaged or thought to be damaged. **DO NOT** use your hand to check for leaks, use a piece of cardboard or wood. 40-6A



**CAUTION:** When removing hardened pins such as a pivot pin, or a hardened shaft, use a soft head (brass or bronze) hammer or use a driver made from brass or bronze and a steel head hammer. 46-17



**CAUTION:** When using a hammer to remove and install pivot pins or separate parts using compressed air or using a grinder, wear eye protection that completely encloses the eyes (approved goggles or other approved eye protectors). 46-13



**CAUTION:** Use suitable floor (service) jacks or chain hoist to raise wheels or tracks off the floor. Always block machine in place with suitable safety stands. 40-7A



**CAUTION:** When servicing or repairing the machine, keep the shop floor and operator's compartment and steps free of oil, water, grease, tools, etc. Use an oil absorbing material and/or shop cloths as required. Use safe practices at all times. 40-8



**CAUTION:** Some components of this machine are very heavy. Use suitable lifting equipment or additional help as instructed in this Service Manual. 40-10



**DANGER:** Engine exhaust fumes can cause death. If it is necessary to start the engine in a closed place, remove the exhaust fumes from the area with an exhaust pipe extension. Open the doors and get outside air into the area. 48-56



**WARNING:** When the battery electrolyte is frozen, the battery can explode if (1), you try to charge the battery, or (2), you try to jump start and run the engine. To prevent the battery electrolyte from freezing, try to keep the battery at full charge. If you do not follow these instructions, you or others in the area can be injured. SA033

## GENERAL INFORMATION

### CLEANING

Clean all metal parts except bearings, in a suitable cleaning solvent or by steam cleaning. Do not use caustic soda for steam cleaning. After cleaning, dry and put oil on all parts. Clean oil passages with compressed air. Clean bearings in a suitable cleaning solvent, dry the bearings completely and put oil on the bearings.

### INSPECTION

Check all parts when the parts are disassembled. Replace all parts that have wear or damage. Small scoring or grooves can be removed with a hone or crocus cloth. Complete a visual inspection for indications of wear, pitting and the replacement of parts necessary to prevent early failures.

### BEARINGS

Check bearings for easy action. If bearings have a loose fit or rough action replace the bearing. Wash bearings with a suitable cleaning solvent and permit to air dry. **DO NOT DRY BEARINGS WITH COMPRESSED AIR.**

### NEEDLE BEARINGS

Before you press needle bearings in a bore always remove any metal protrusions in the bore or edge of the bore. Before you press bearings into position put petroleum jelly on the inside and outside diameter of the bearings.

### GEARS

Check all gears for wear and damage. Replace gears that have wear or damage.

### OIL SEALS, O-RINGS AND GASKETS

Always install new oil seals, O-rings and gaskets. Put petroleum jelly on seals and O-rings.

### SHAFTS

Check all shafts that have wear or damage. Check the bearing and oil seal surfaces of the shafts for damage.

### SERVICE PARTS

Always install genuine Case service parts. When ordering refer to the Parts Catalog for the correct part number of the genuine Case replacement items. Failures due to the use of other than genuine Case replacement parts are not covered by warranty.


### LUBRICATION

Only use the oils and lubricants specified in the Operator's or Service Manuals. Failures due to the use of non-specified oils and lubricants are not covered by warranty.

# STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS

## TIGHTENING OF CAP SCREWS, NUTS


Tighten alternately so that tightening torque can be applied evenly. The numbers in the figure below indicate the order of tightening.

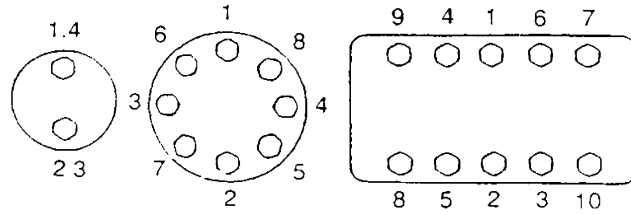

1001-02

Apply engine oil to the thread portion of the cap screw so that uniform tightening torque is obtained.

The cap screws and nuts that cannot be inspected externally or those as indicated in the assembly/installation sections should be saftied with lockwire, cotter pin or bent washer.

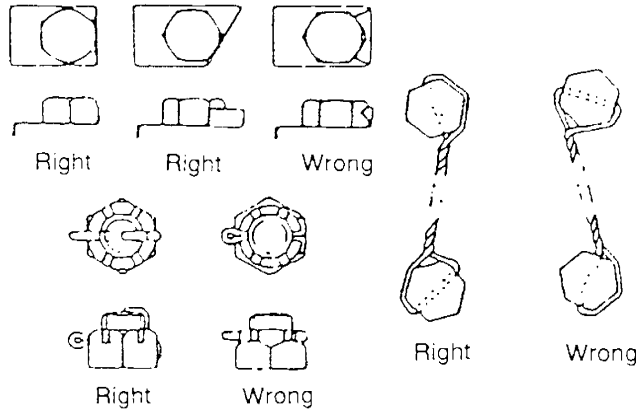

1001-03

Cap screws which have had Loctite used (white residue remains after removal) should be cleaned with light oil or suitable cleaning solvent and dried. Apply 2-3 drops of Loctite to the thread portion of the cap screw and then tighten.

## TORQUE TABLE

Tighten cap screws and nuts according to the table below if there are no other special instructions.

Cap Screw Name Size (Size)			M6	M8	M10	M12	M14	M16	M18	M20
<b>Cap Screw</b>	Spanner	[mm]	10	13	17	19	22	24	27	30
		[in.]	0.39	0.51	0.67	0.75	0.87	0.95	1.06	1.18
	Tightening torque	[Nm]	6.9	15.7	32.3	58.8	98.0	137.2	196.0	274.0
		[lb-ft]	5.1	11.6	23.9	43.4	72.3	101.2	144.6	202.4
<b>Socket Head Cap Screw</b>	Spanner	[mm]	5	6	8	10	12	14	14	17
		[in.]	0.20	0.24	0.32	0.39	0.47	0.55	0.55	0.67
	Tightening torque	[Nm]	8.8	21.6	42.1	78.4	117.6	176.4	245.0	343.0
		[lb-ft]	6.5	15.9	31.1	57.8	86.8	130.1	180.8	253.1



# **Section 1002**



## **SPECIFICATIONS**

## TABLE OF CONTENTS

MODEL AND PIN NUMBERS .....	3
GENERAL SPECIFICATIONS .....	4
Capacities .....	4
Drawbar Pull .....	4
Drive Speed .....	4
Electrical System .....	4
Fluids and Lubricants .....	5
Fuel .....	5
Hydraulic System .....	5
Tracks, Rollers and Idlers .....	6
Weights .....	12
GAUGE TABLE .....	13
ENGINE SPECIFICATIONS	
<b>IMPORTANT:</b> <i>This engine was made by using the metric system. All measurements and checks must be made with metric tools to make sure of accurate readings when inspecting parts.</i>	
RUN-IN INSTRUCTIONS .....	15
Run-In Procedure .....	15
Engine Cooling System .....	16
Engine Lubrication .....	16
GENERAL ENGINE SPECIFICATIONS .....	17
General .....	17
Pistons and Connecting Rods .....	17
Main Bearings .....	17
Engine Lubricating System .....	17
Fuel System .....	18
DETAILED ENGINE SPECIFICATIONS .....	19
Cylinder Block .....	19
Pistons .....	19
Piston Pins .....	19
Piston Rings .....	20
Cylinder Head .....	20
Lifters .....	20
Connecting Rods .....	20
Crankshaft .....	21
Camshaft .....	22
Turbocharger .....	22
Gear Train .....	22
Rocker Arm Assembly .....	22
Intake Valves .....	23
Exhaust Valves .....	23
Valve Springs .....	23
9030B TRANSPORTING DIMENSION (3.0M / 9 FT. 10 IN. ARM) .....	24

# MODEL AND PIN NUMBERS

When ordering parts or when requesting information or assistance, always give the identification numbers of your machine. Write the model and PIN numbers of your machine on the lines below.

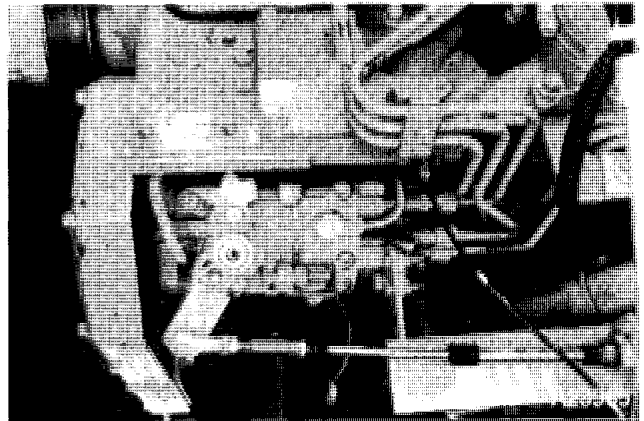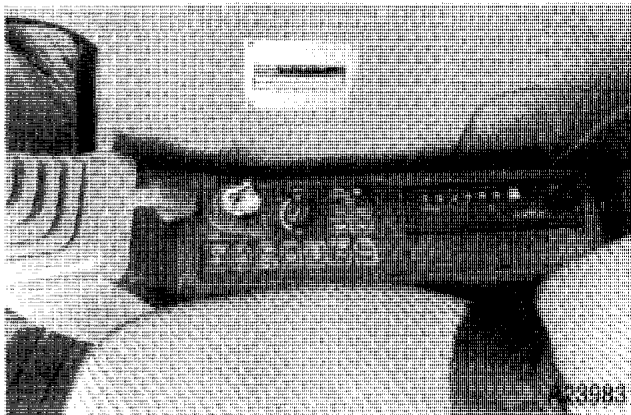

Machine Model Number \_\_\_\_\_

Machine PIN Number \_\_\_\_\_

Engine Serial Number \_\_\_\_\_



## GENERAL SPECIFICATIONS

### Capacities

Engine Crank Case Capacity .....	14.2 liters	3.8 US gallons
Engine Cooling System .....	25.5 liters	6.7 US gallons
Fuel Tank .....	310 liters	81.9 US gallons
Hydraulic Oil Tank Capacity .....	120 liters	31.7 US gallons
Total Hydraulic System Capacity .....	200 liters	53 US gallons
Final Drive Case Capacity .....	4.7 liters	1.2 US gallons
Swing Drive Case Capacity .....	5.0 liters	1.3 US gallons
Track Front Idlers .....	180 cc	5.94 oz
Track Lower Rollers .....	210 cc	6.93 oz
Track Upper Roller .....	50 cc	1.65 oz

**NOTE:** *These capacities are only a guide to the quantities. Always use the dipstick, sight gauges or level plug to make sure that fluid levels are correct.*

### Drawbar Pull

Drawbar Pull .....	18656 kg	41140 lb
--------------------	----------	----------

### Drive Speed

Drive Speed: High .....	5.5 km/h	3.4 mph
Drive Speed: Middle .....	3.3 km/h	2.0 mph
Drive Speed: Low .....	2.3 km/h	1.4 mph

### Electrical System

Type of System .....	24 volts negative ground
Alternator	
Manufacturer .....	Robert Bosch
Output .....	45 amperes
Batteries	
Number of batteries required .....	2
Voltage of each battery .....	12 volts
Reserve capacity .....	160 minutes
Cold cranking capacity at -17°C (0°F) .....	800 amperes
Load for capacity (load) test .....	400 amperes
Starter Motor	
Manufacturer .....	Nippondenso
Voltage .....	24 volts

## Fluids and Lubricants

Batteries.....	add drinking or distilled water
Engine Coolant Solution.....	refer to page 16
Engine Lubrication.....	refer to page 16
Fuel.....	refer to entry on page 5
Hydraulic System.....	CASE MS-1210 TCH FLUID
Final Drive Lubricant.....	API GL-4 90
Swing Drive Case Lubricant.....	API GL-4 90
Track Roller and Front Idler Lubricant.....	Case IH No. 1 Single Grade engine oil SAE 80
Turntable Ring Gear Lubricant.....	No. 2 EP lithium grease
Grease Fitting Lubricant.....	No. 2 EP lithium grease

## Fuel

Use Number Two Diesel fuel having a grade of ASTM D 975-Grade 2-D.

## Hydraulic System

### Hydraulic Pump

Kawasaki K3V112DT-1M4R-9C12 (KRJ3785)

Displacement.....	96.9 cm <sup>3</sup> /rev x 2	5.91 in <sup>3</sup> /rev x 2
Working Pressure: Set.....	320 Bar	4646 psi
Working Pressure: Maximum.....	350 (travel) Bar	5082 (travel) psi
Speed.....	2070 min <sup>-1</sup>	2070 min <sup>-1</sup>
Maximum Flow.....	201 l/min <sup>-1</sup>	53.1 gpm <sup>-1</sup>
Minimum Flow.....	50 l/min <sup>-1</sup>	13.21 gpm <sup>-1</sup>

### Regulator

Proportional Pressure Reducing Valve

Maximum Primary Pressure.....	39.2 Bar	569 psi
Maximum Back Pressure (Allowable Pressure).....	9.8 Bar	142 psi
Secondary Pressure Range Setting.....	0 ~ 39.2 Bar	0 ~ 569 psi
Maximum Flow Rate.....	6 l/min	1.6 gpm
Flow in Drain Line:.....	Maximum 0.2 l (0.4 pints)/min at secondary pressure = 0 ~ 39.2 Bar	0 ~ 569 psi
	Maximum 1.2 l (2.5 pints)/min at secondary pressure = 19.6 Bar	285 psi

Hydraulic Oil Test Temperature.....	45 ~ 55°C	113 ~ 131°F
-------------------------------------	-----------	-------------

### Circuit Relief Valves:

Main Relief: standard.....	318 ±20 Bar	4612 ±290 psi
Main Relief: pressure raising.....	343 ±20 Bar	4975 ±290 psi
Boom Port Relief: raising.....	382 ±15 Bar	5540 ±217 psi
Boom Port Relief: lowering.....	245 ±15 Bar	3553 ±217 psi
Bucket Port Relief: open, close.....	382 ±15 Bar	5540 ±217 psi
Arm Port Relief: open, close.....	382 ±15 Bar	5540 ±217 psi
Swing Port Relief; left, right.....	304 ±15 Bar	4409 ±217 psi
Left Travel Port Relief: rear, front.....	402 ±20 Bar	5830 ±290 psi
Right Travel Port Relief: rear, front.....	402 ±20 Bar	5830 ±290 psi
Pilot Relief.....	40 ±3 Bar	580 ±43 psi


# Tracks, Rollers and Idlers

## Lower Mechanism (with standard 600 grouser shoe)

Total Length .....	4170 mm	13 ft 8.3 in.
Total Width .....	2800 mm	9 ft 2.3 in.
Total Weight (approximate) .....	6700 kg	14774 lb

## Drive Sprocket

Sprocket:	a	standard value .....	66 mm	2.60 in.
		service limit .....	60 mm	2.36 in.
	b	standard value .....	582.5 mm	22.95 in.
		service limit .....	576.5 mm	22.71 in.
	c	standard value .....	659 mm	25.96 in.
		service limit .....	653 mm	25.73 in.
	d	standard value .....	644.6 mm	25.40 in.
		service limit .....	—	—
	P	standard value .....	190 mm	7.49 in.
		service limit .....	—	—

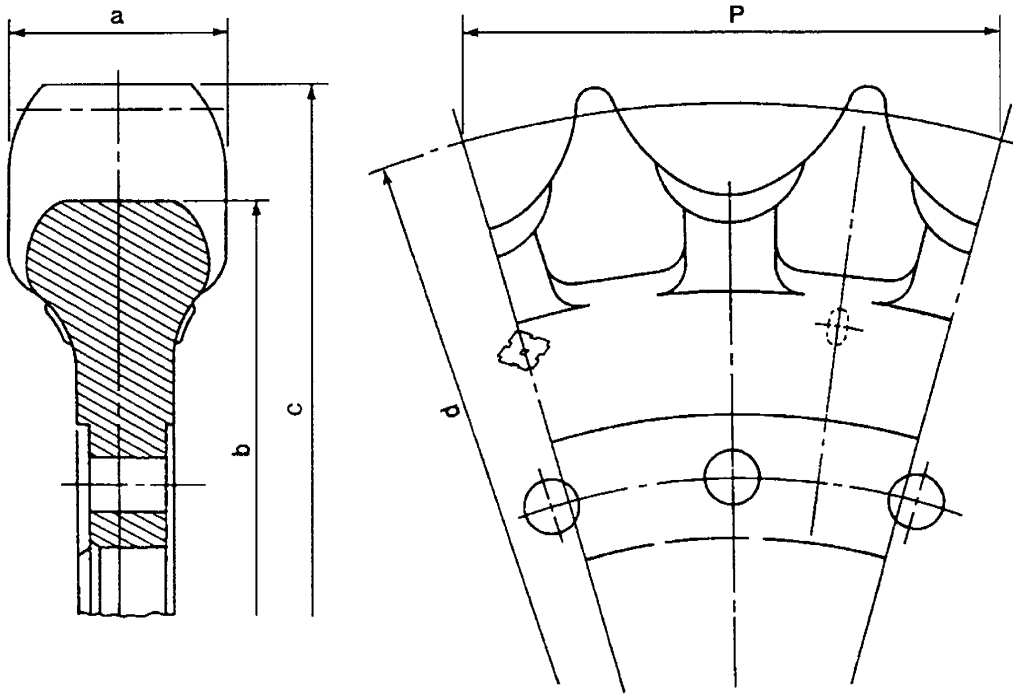


**Drive Sprocket**

**NOTE:** Refer to Gauge Table for measurement gauges to be used.

Take-Up Roller  
Take-Up Roller:

	a	standard value	.....	494 mm	19.46 in.
		service limit	.....	490 mm	19.31 in.
	b	standard value	.....	21 mm	0.83 in.
		service limit	.....	—	—
	c	standard value	.....	84 mm	3.31 in.
		service limit	.....	80 mm	3.15 in.
Shaft:	d	standard value	.....	65 mm	2.56 in.
		service limit	.....	64.5 mm	2.54 in.
Bushing:	d	standard value	.....	65 mm	2.56 in.
		service limit	.....	65.8 mm	2.59 in.
	e	standard value	.....	69 mm	2.72 in.
		service limit	.....	68.6 mm	2.70 in.
Hub:	f	standard value	.....	12.4 mm	0.49 in.
		service limit	.....	11.9 mm	0.47 in.

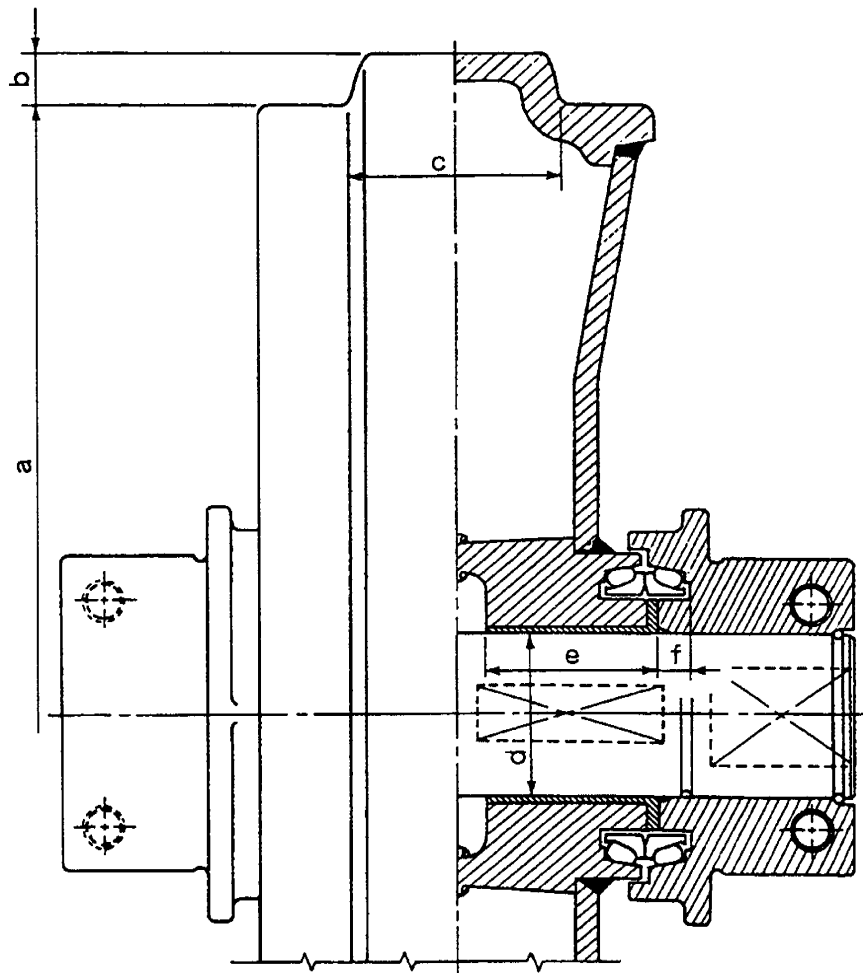


Take-Up Roller


**NOTE:** Refer to Gauge Table for measurement gauges to be used.

Upper Roller

Carrier Roller:	a standard value .....	120 mm	4.73 in.
	service limit.....	112 mm	4.41 in.
	b standard value .....	10 mm	0.39 in.
	service limit .....	—	—
	c standard value .....	85 mm	3.35 in.
	service limit.....	79 mm	3.11 in.
Shaft:	d standard value .....	46 mm	1.81 in.
	service limit.....	45.5 mm	1.79 in.
Bushing:	d standard value .....	46 mm	1.81 in.
	service limit.....	46.8 mm	1.84 in.
	e standard value .....	83 mm	3.27 in.
	service limit.....	82.6 mm	3.25 in.
Thrust Plate:	f standard value .....	5.5 mm	0.22 in.
	service limit.....	5.0 mm	0.20 in.
Cover:	g standard valve .....	23 mm	0.91 in.
	service limit.....	22.5 mm	0.89 in.
Slide Plate	h standard value .....	50.7 mm	2.00 in.
Plate:	service limit.....	40 mm or until chamfering is gone	1.58 in. or until chamfering is gone

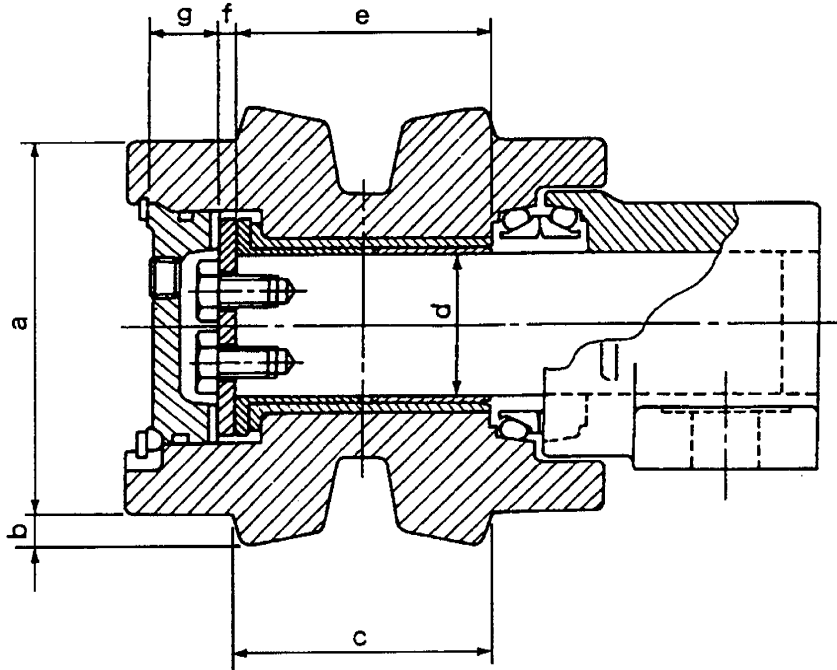

Upper Roller

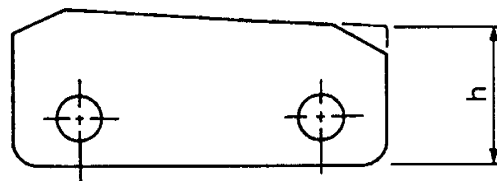

Slide Plate

**NOTE:** Refer to Gauge Table for measurement gauges to be used.


Lower Roller (Inside)  
Track Roller (Inside):

Shaft:

Bushing:

Collar:

a	standard value	.....150 mm	5.91 in.
	service limit	.....142 mm	5.59 in.
b	standard value	.....15 mm	0.59 in.
	service limit	.....—	—
c	standard value	.....86 mm	3.39 in.
	service limit	.....80 mm	3.15 in.
e	standard value	.....65 mm	2.56 in.
	service limit	.....64.5 mm	2.54 in.
e	standard value	.....65 mm	2.56 in.
	service limit	.....65.8 mm	2.59 in.
f	standard value	.....69 mm	2.72 in.
	service limit	.....68.6 mm	2.70 in.
g	standard value	.....28.8 mm	1.13 in.
	service limit	.....28.3 mm	1.11 in.

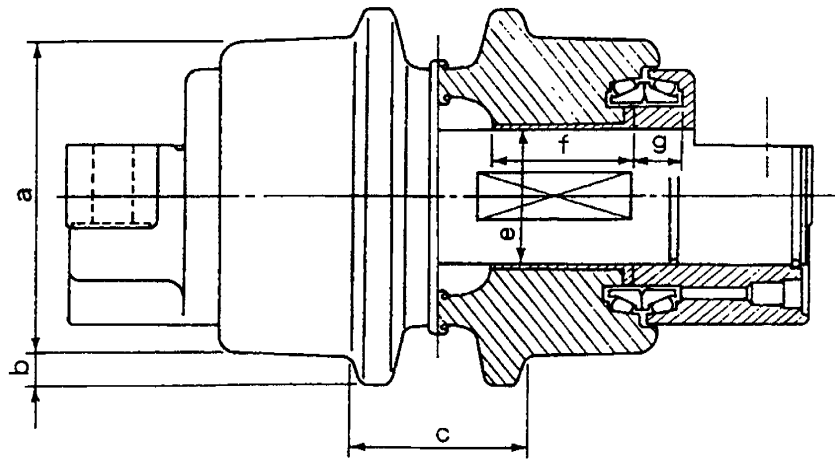

**Lower Roller (Inside)**

**NOTE:** Refer to Gauge Table for measurement gauges to be used.