

I650M Tier 2 Crawler Dozer

*PIN NCDCI6500 and above; PIN NDDCI6500 and above;
PIN NEDCI6000 and above; PIN NFDCI6000 and above*

SERVICE MANUAL

Part number 47907870

2nd edition English

October 2015

Replaces part number 47619921

© 2015 CNH Industrial America LLC. All Rights Reserved.

CASE
CONSTRUCTION



SERVICE MANUAL

1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Non-regulated [NCDC16500 -] , 1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Non-regulated [NDDC16500 -] , 1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Non-regulated [NEDC16000 -] , 1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Non-regulated [NFDC16000 -] , 1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Non-regulated [NCDC16500 -] , 1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Non-regulated [NDDC16500 -] , 1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Non-regulated [NEDC16000 -] , 1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Non-regulated [NFDC16000 -] , 1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Non-regulated [NCDC16500 -] , 1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Non-regulated [NDDC16500 -] , 1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Non-regulated [NEDC16000 -] , 1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Non-regulated [NFDC16000 -]

Link Product / Engine

Product	Market Product	Engine
1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Non-regulated [NCDC16500 -]	Middle East Africa	F4HFA613M*E001
1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Non-regulated [NCDC16500 -]	Asia Pacific	F4HFA613M*E001
1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Non-regulated [NCDC16500 -]	Australia New Zealand	F4HFA613M*E001
1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Non-regulated [NCDC16500 -]	Latin America	F4HFA613M*E001
1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Non-regulated [NDDC16500 -]	Middle East Africa	F4HFA613M*E001
1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Non-regulated [NDDC16500 -]	Australia New Zealand	F4HFA613M*E001
1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Non-regulated [NDDC16500 -]	Asia Pacific	F4HFA613M*E001
1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Non-regulated [NDDC16500 -]	Latin America	F4HFA613M*E001
1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Non-regulated [NEDC16000 -]	Middle East Africa	F4HFA613M*E001
1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Non-regulated [NEDC16000 -]	Latin America	F4HFA613M*E001
1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Non-regulated [NEDC16000 -]	Asia Pacific	F4HFA613M*E001
1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Non-regulated [NEDC16000 -]	Australia New Zealand	F4HFA613M*E001
1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Non-regulated [NFDC16000 -]	Asia Pacific	F4HFA613M*E001
1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Non-regulated [NFDC16000 -]	Australia New Zealand	F4HFA613M*E001
1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Non-regulated [NFDC16000 -]	Latin America	F4HFA613M*E001
1650M Bulldozer (BD) Blade, Extra Long Track (XLT) - Non-regulated [NFDC16000 -]	Middle East Africa	F4HFA613M*E001

Product	Market Product	Engine
1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Non-regulated [NCDC16500 -]	Asia Pacific	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Non-regulated [NCDC16500 -]	Australia New Zealand	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Non-regulated [NCDC16500 -]	Middle East Africa	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Non-regulated [NCDC16500 -]	Latin America	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Non-regulated [NDDC16500 -]	Middle East Africa	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Non-regulated [NDDC16500 -]	Asia Pacific	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Non-regulated [NDDC16500 -]	Latin America	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Non-regulated [NDDC16500 -]	Australia New Zealand	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Non-regulated [NEDC16000 -]	Asia Pacific	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Non-regulated [NEDC16000 -]	Australia New Zealand	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Non-regulated [NEDC16000 -]	Latin America	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Non-regulated [NEDC16000 -]	Middle East Africa	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Non-regulated [NFDC16000 -]	Australia New Zealand	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Non-regulated [NFDC16000 -]	Latin America	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Non-regulated [NFDC16000 -]	Asia Pacific	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Extra Long Track (XLT) - Non-regulated [NFDC16000 -]	Middle East Africa	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Non-regulated [NCDC16500 -]	Latin America	F4HFA613M*E001

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

Product	Market Product	Engine
1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Non-regulated [NCDC16500 -]	Middle East Africa	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Non-regulated [NCDC16500 -]	Australia New Zealand	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Non-regulated [NCDC16500 -]	Asia Pacific	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Non-regulated [NDDC16500 -]	Latin America	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Non-regulated [NDDC16500 -]	Australia New Zealand	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Non-regulated [NDDC16500 -]	Asia Pacific	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Non-regulated [NDDC16500 -]	Middle East Africa	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Non-regulated [NEDC16000 -]	Middle East Africa	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Non-regulated [NEDC16000 -]	Australia New Zealand	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Non-regulated [NEDC16000 -]	Latin America	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Non-regulated [NEDC16000 -]	Asia Pacific	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Non-regulated [NFDC16000 -]	Middle East Africa	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Non-regulated [NFDC16000 -]	Asia Pacific	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Non-regulated [NFDC16000 -]	Latin America	F4HFA613M*E001
1650M Power Angle Tilt (PAT) Blade, Low Ground Pressure (LGP) - Non-regulated [NFDC16000 -]	Australia New Zealand	F4HFA613M*E001

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.206] Fuel filters	10.3
[10.304] Engine lubrication system.....	10.4
[10.310] Aftercooler.....	10.5
[10.400] Engine cooling system	10.6
[10.414] Fan and drive	10.7
Hydrostatic drive.....	29
[29.218] Pump and motor components.....	29.1
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.105] Charge pump.....	35.4
[35.359] Main control valve.....	35.5
[35.741] Dozer blade cylinders	35.6
Tracks and track suspension.....	48
[48.130] Track frame and driving wheels.....	48.1
[48.100] Tracks	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4

[48.140] Dropbox and final drive	48.5
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.011] Fuel tank system	55.2
[55.014] Engine intake and exhaust system.....	55.3
[55.015] Engine control system.....	55.4
[55.030] Service brake electrical system	55.5
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.6
[55.100] Harnesses and connectors.....	55.7
[55.201] Engine starting system	55.8
[55.202] Cold start aid	55.9
[55.301] Alternator.....	55.10
[55.302] Battery.....	55.11
[55.408] Warning indicators, alarms, and instruments	55.12
[55.512] Cab controls.....	55.13
[55.518] Wiper and washer system.....	55.14
[55.DTC] FAULT CODES.....	55.15
Dozer blade and arm.....	86
[86.110] Dozer blade	86.1
[86.124] Dozer pushbeams and struts	86.2
Tools	89
[89.128] Ripper assembly	89.1
Platform, cab, bodywork, and decals	90
[90.160] Cab interior trim and panels.....	90.1

[90.124] Pneumatically-adjusted operator seat.....	90.2
[90.100] Engine hood and panels	90.3



INTRODUCTION

Contents

INTRODUCTION

Foreword - Important notice regarding equipment servicing (*)	3
Safety rules (*)	4
Safety rules - Ecology and the environment (*)	5
Safety rules - Do not operate tag (*)	6
Safety rules (*)	7
Basic instructions - Shop and assembly (*)	15
Torque - Minimum tightening torques for normal assembly (*)	17
Torque - Standard torque data for hydraulics (*)	20
Maintenance chart (*)	22
Basic instructions - Moving a disabled machine (*)	24
Hydraulic contamination (*)	33
Consumables Loctite® Product Chart (*)	34
Conversion factors (*)	40
General specification (*)	42
Capacities (*)	46
Product identification (*)	47
Product identification - Machine orientation (*)	49

(*) See content for specific models

Foreword - Important notice regarding equipment servicing

1650M

ANZ --- APAC --- LA --- MEA

All repair and maintenance work listed in this manual must be carried out only by qualified dealership personnel, strictly complying with the instructions given, and using, whenever possible, the special tools.

Anyone who performs repair and maintenance operations without complying with the procedures provided herein shall be responsible for any subsequent damages.

The manufacturer and all the organizations of its distribution chain, including - without limitation - national, regional, or local dealers, reject any responsibility for damages caused by parts and/or components not approved by the manufacturer, including those used for the servicing or repair of the product manufactured or marketed by the manufacturer. In any case, no warranty is given or attributed on the product manufactured or marketed by the manufacturer in case of damages caused by parts and/or components not approved by the manufacturer.

The manufacturer reserves the right to make improvements in design and changes in specifications at any time without notice and without incurring any obligation to install them on units previously sold. Specifications, descriptions, and illustrative material herein are as accurate as known at time of publication but are subject to change without notice.

In case of questions, refer to your CASE CONSTRUCTION Sales and Service Networks.

Safety rules

1650M

ANZ --- APAC --- LA --- MEA


Personal safety





This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible death or injury.

Throughout this manual you will find the signal words DANGER, WARNING, and CAUTION followed by special instructions. These precautions are intended for the personal safety of you and those working with you.

Read and understand all the safety messages in this manual before you operate or service the machine.

 DANGER indicates a hazardous situation that, if not avoided, will result in death or serious injury.

 WARNING indicates a hazardous situation that, if not avoided, could result in death or serious injury.

 CAUTION indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

FAILURE TO FOLLOW DANGER, WARNING, AND CAUTION MESSAGES COULD RESULT IN DEATH OR SERIOUS INJURY.

Machine safety

NOTICE: Notice indicates a situation that, if not avoided, could result in machine or property damage.

Throughout this manual you will find the signal word Notice followed by special instructions to prevent machine or property damage. The word Notice is used to address practices not related to personal safety.

Information

NOTE: Note indicates additional information that clarifies steps, procedures, or other information in this manual.

Throughout this manual you will find the word Note followed by additional information about a step, procedure, or other information in the manual. The word Note is not intended to address personal safety or property damage.

Safety rules - Ecology and the environment

1650M

ANZ --- APAC --- LA --- MEA

Soil, air, and water quality is important for all industries and life in general. When legislation does not yet rule the treatment of some of the substances that advanced technology requires, sound judgment should govern the use and disposal of products of a chemical and petrochemical nature.

Familiarize yourself with the relative legislation applicable to your country, and make sure that you understand this legislation. Where no legislation exists, obtain information from suppliers of oils, filters, batteries, fuels, anti-freeze, cleaning agents, etc., with regard to the effect of these substances on man and nature and how to safely store, use, and dispose of these substances.

Helpful hints

- Avoid the use of cans or other inappropriate pressurized fuel delivery systems to fill tanks. Such delivery systems may cause considerable spillage.
- In general, avoid skin contact with all fuels, oils, acids, solvents, etc. Most of these products contain substances that may be harmful to your health.
- Modern oils contain additives. Do not burn contaminated fuels and or waste oils in ordinary heating systems.
- Avoid spillage when you drain fluids such as used engine coolant mixtures, engine oil, hydraulic fluid, brake fluid, etc. Do not mix drained brake fluids or fuels with lubricants. Store all drained fluids safely until you can dispose of the fluids in a proper way that complies with all local legislation and available resources.
- Do not allow coolant mixtures to get into the soil. Collect and dispose of coolant mixtures properly.
- The air-conditioning system contains gases that should not be released into the atmosphere. Consult an air-conditioning specialist or use a special extractor to recharge the system properly.
- Repair any leaks or defects in the engine cooling system or hydraulic system immediately.
- Do not increase the pressure in a pressurized circuit as this may lead to a component failure.
- Protect hoses during welding. Penetrating weld splatter may burn a hole or weaken hoses, allowing the loss of oils, coolant, etc.

Battery recycling

Batteries and electric accumulators contain several substances that can have a harmful effect on the environment if the batteries are not properly recycled after use. Improper disposal of batteries can contaminate the soil, groundwater, and waterways. CASE CONSTRUCTION strongly recommends that you return all used batteries to a CASE CONSTRUCTION dealer, who will dispose of the used batteries or recycle the used batteries properly. In some countries, this is a legal requirement.



Mandatory battery recycling

NOTE: *The following requirements are mandatory in Brazil.*

Batteries are made of lead plates and a sulfuric acid solution. Because batteries contain heavy metals such as lead, CONAMA Resolution 401/2008 requires you to return all used batteries to the battery dealer when you replace any batteries. Do not dispose of batteries in your household garbage.

Points of sale are obliged to:

- Accept the return of your used batteries
- Store the returned batteries in a suitable location
- Send the returned batteries to the battery manufacturer for recycling

Safety rules - Do not operate tag

1650M

ANZ --- APAC --- LA --- MEA

▲ WARNING

Maintenance hazard!

Before you start servicing the machine, attach a DO NOT OPERATE warning tag to the machine in a visible area.

Failure to comply could result in death or serious injury.

W0004A

Attach a DO NOT OPERATE (TAG) to the machine in an area that is clearly visible whenever the machine is not operating properly and/or requires service.

Complete the tag information for the "REASON" the tag is attached by describing the malfunction or service required. Validate the reason for attaching the tag by signing your name in the designated area on the tag.

The tag should only be removed by the person who signed and attached the tag, after validating the repairs or services have been completed.



87358697 1

Tag Components

- A. DO NOT REMOVE THIS TAG! - (Warning) The tag should only be removed by the person who signed and attached the tag, after validating the repairs or services have been completed.
- B. See Other Side - (Reference to additional information on opposite side of the tag.)
- C. CNH Part Number - (Request this part number from you Service Parts Dealer to obtain this DO NOT OPERATE tag.)
- D. DO NOT OPERATE - (Warning!)
- E. REASON - (Area for describing malfunction or service required before operation.)
- F. Signed by - (Signature area - to be signed by the person validating the reason for installation of the tag.)

Safety rules

1650M

ANZ --- APAC --- LA --- MEA

General safety rules

Use caution when operating the machine on slopes. Raised equipment, full tanks and other loads will change the center of gravity of the machine. The machine can tip or roll over when near ditches and embankments or uneven surfaces.

Never permit anyone other than the operator to ride on the machine.

Never operate the machine under the influence of alcohol, drugs, or while otherwise impaired.

When digging or using ground engaging attachments be aware of buried cables. Contact local utilities to determine the locations of services.

Pay attention to overhead power lines and hanging obstacles. High voltage lines may require significant clearance for safety.

Hydraulic oil or diesel fuel leaking under pressure can penetrate the skin, causing serious injury or infection.

- DO NOT use your hand to check for leaks. Use a piece of cardboard or paper.
- Stop engine, remove key and relieve the pressure before connecting or disconnecting fluid lines.
- Make sure all components are in good condition and tighten all connections before starting the engine or pressurizing the system.
- If hydraulic fluid or diesel fuel penetrates the skin, seek medical attention immediately.
- Continuous long term contact with hydraulic fluid may cause skin cancer. Avoid long term contact and wash the skin promptly with soap and water.

Keep clear of moving parts. Loose clothing, jewelry, watches, long hair, and other loose or hanging items can become entangled in moving parts.

Wear protective equipment when appropriate.

DO NOT attempt to remove material from any part of the machine while it is being operated or components are in motion.

Make sure all guards and shields are in good condition and properly installed before operating the machine. Never operate the machine with shields removed. Always close access doors or panels before operating the machine.

Dirty or slippery steps, ladders, walkways, and platforms can cause falls. Make sure these surfaces remain clean and clear of debris.

A person or pet within the operating area of a machine can be struck or crushed by the machine or its equipment. DO NOT allow anyone to enter the work area.

Raised equipment and/or loads can fall unexpectedly and crush persons underneath. Never allow anyone to enter the area underneath raised equipment during operation.

Never operate engine in enclosed spaces as harmful exhaust gases may build up.

Before starting the machine, be sure that all controls are in neutral or park lock position.

Start the engine only from the operator's seat. If the safety start switch is bypassed, the engine can start with the transmission in gear. Do not connect or short across terminals on the starter solenoid. Attach jumper cables as described in the manual. Starting in gear may cause death or serious injury.

Always keep windows, mirrors, all lighting, and Slow Moving Vehicle (SMV) emblem clean to provide the best possible visibility while operating the machine.

Operate controls only when seated in the operator's seat, except for those controls expressly intended for use from other locations.

Before leaving the machine:

1. Park machine on a firm level surface.
2. Put all controls in neutral or park lock position.
3. Engage park brake. Use wheel chocks if required.
4. Lower all hydraulic equipment — Implements, header, etc.
5. Turn off engine and remove key.

When, due to exceptional circumstances, you would decide to keep the engine running after leaving the operator's station, then the following precautions must be followed:

1. Bring the engine to low idle speed.
2. Disengage all drive systems.

3. **⚠ WARNING**

**Some components may continue to run down after disengaging drive systems.
Make sure all drive systems are fully disengaged.
Failure to comply could result in death or serious injury.**

W0113A

Shift the transmission into neutral.

4. Apply the parking brake.

⚠ General maintenance safety ⚠

Keep area used for servicing the machine clean and dry. Clean up spilled fluids.

Service machine on a firm level surface.

Install guards and shields after servicing the machine.

Close all access doors and install all panels after servicing the machine.

Do not attempt to clean, lubricate, clear obstructions or make adjustments to the machine while it is in motion or while the engine is running.

Always make sure working area is clear of tools, parts, other persons and pets before you start operating the machine.

Unsupported hydraulic cylinders can lose pressure and drop the equipment causing a crushing hazard. Do not leave equipment in a raised position while parked or during service, unless securely supported.

Jack or lift the machine only at jack or lift points indicated in this manual.

Incorrect towing procedures can cause accidents. When towing a disabled machine follow the procedure in this manual. Use only rigid tow bars.

Stop the engine, remove key and relieve pressure before disconnecting or connecting fluid lines.

Stop the engine and remove key before disconnecting or connecting electrical connections.

Scalding can result from incorrect removal of coolant caps. Cooling system operates under pressure. Hot coolant can spray out if a cap is removed while the system is hot. Allow system to cool before removing cap. When removing a cap turn it slowly to allow pressure to escape before completely removing the cap.

Replace damaged or worn tubes, hoses, electrical wiring, etc.

Engine, transmission, exhaust components, and hydraulic lines may become hot during operation. Take care when servicing such components. Allow surfaces to cool before handling or disconnecting hot components. Wear protective equipment when appropriate.

When welding, follow the instructions in the manual. Always disconnect the battery before welding on the machine. Always wash your hands after handling battery components.

Wheels and tires

Make sure tires are correctly inflated. Do not exceed recommended load or pressure. Follow instructions in the manual for proper tire inflation.

Tires are heavy. Handling tires without proper equipment could cause death or serious injury.

Never weld on a wheel with a tire installed. Always remove tire completely from wheel prior to welding.

Always have a qualified tire technician service the tires and wheels. If a tire has lost all pressure, take the tire and wheel to a tire shop or your dealer for service. Explosive separation of the tire can cause serious injury.

DO NOT weld to a wheel or rim until the tire is completely removed. Inflated tires can generate a gas mixture with the air that can be ignited by high temperatures from welding procedures performed on the wheel or rim. Removing the air or loosening the tire on the rim (breaking the bead) will NOT eliminate the hazard. This condition can exist whether tires are inflated or deflated. The tire MUST be completely removed from the wheel or rim prior to welding the wheel or rim.

Driving on public roads and general transportation safety

Comply with local laws and regulations.

Use appropriate lighting to meet local regulations.

Make sure SMV emblem is visible.

Make sure brake pedal latch is engaged. Brake pedals must be locked together for road travel.

Use safety chains for trailed equipment when provided with machine or equipment.

Lift implements and attachments high enough above ground to prevent accidental contact with road.

When transporting equipment or machine on a transport trailer, make sure it is properly secured. Be sure the SMV on the equipment or machine is covered while being transported on a trailer.

Be aware of overhead structures or power lines and make sure the machine and/or attachments can pass safely under.

Travel speed should be such that complete control and machine stability is maintained at all times.

Slow down and signal before turning.

Pull over to allow faster traffic to pass.

Follow correct towing procedure for equipment with or without brakes.

Make sure the booms are locked in the cradles with the locking pins provided.

Fire and explosion prevention

Fuel or oil leaked or spilled on hot surfaces or electrical components can cause a fire.

Crop materials, trash, debris, bird nests, or flammable material can ignite on hot surfaces.

Always have a fire extinguisher on or near the machine.

Make sure the fire extinguisher(s) is maintained and serviced according to the manufacturer's instructions.

At least once each day and at the end of the day remove all trash and debris from the machine especially around hot components such as engine, transmission, exhaust, battery, etc. More frequent cleaning of your machine may be necessary depending on the operating environment and conditions.

At least once each day, remove debris accumulation around moving components such as bearings, pulleys, belts, gears, cleaning fan, etc. More frequent cleaning of your machine may be necessary depending on the operating environment and conditions.

Inspect the electrical system for loose connections or frayed insulation. Repair or replace loose or damaged parts.

Do not store oily rags or other flammable material on the machine.

Do not weld or flame cut any items that contain flammable material. Clean items thoroughly with non-flammable solvents before welding or flame-cutting.

Do not expose the machine to flames, burning brush, or explosives.

Promptly investigate any unusual smells or odors that may occur during operation of the machine.

General battery safety

Always wear eye protection when working with batteries.

Do not create sparks or have open flame near battery.

Ventilate when charging or using in an enclosed area.

Disconnect negative (-) first and reconnect negative (-) last.

When welding on the machine, disconnect both terminals of the battery.

Do not weld, grind, or smoke near a battery.

When using auxiliary batteries or connecting jumper cables to start the engine, use the procedure shown in the operator's manual. Do not short across terminals.

Follow manufacturer's instructions when storing and handling batteries.

Battery post, terminals, and related accessories contain lead and lead compounds. Wash hands after handling. This is a California Proposition 65 warning.

Battery acid causes burns. Batteries contain sulfuric acid. Avoid contact with skin, eyes, or clothing. Antidote (external): Flush with water. Antidote (eyes): flush with water for 15 minutes and seek medical attention immediately. Antidote (internal): Drink large quantities of water or milk. Do not induce vomiting. Seek medical attention immediately.

Keep out of reach of children and other unauthorized persons.

Instructional seat safety

Passengers are not permitted to ride on the machine.

The instructional seat is to be used only when training a new operator or when a service technician is diagnosing a problem.

When required for the purposes of training or diagnostics, only one person may accompany the operator and that person must be seated in the instructional seat.

When the instructional seat is occupied, the following precautions must be followed:

- Machine should be driven only at slow speeds and over level ground.
- Avoid driving on highways or public roads.
- Avoid quick starts or stops.
- Avoid sharp turns.
- Always wear correctly adjusted seat belts.
- Keep door closed at all times.

Operator presence system

Your machine is equipped with an operator presence system to prevent the use of some features while the operator is not in the operator's seat.

The operator presence system should never be disconnected or bypassed.

If the system is inoperable, the system must be repaired.

Reflectors and warning lights

Flashing amber warning lights must be used when operating on public roads. Refer to Chapter 5 — Transport Operations for complete identification and operating instructions.

Seat belts

Seat belts must be worn at all times.

Seat belt inspection and maintenance:

- Keep seat belts in good condition.
- Keep sharp edges and items that can cause damage away from the belts.
- Periodically check belts, buckles, retractors, tethers, slack take-up system, and mounting bolts for damage and wear.
- Replace all parts that have damage or wear.
- Replace belts that have cuts that can make the belt weak.
- Check that bolts are tight on the seat bracket or mounting.
- If belt is attached to seat, make sure seat or seat brackets are mounted securely.
- Keep seat belts clean and dry.
- Clean belts only with soap solution and warm water.
- Do not use bleach or dye on the belts because this can make the belts weak.
- Refer to Chapter 4 — Operating Instructions for proper use and adjustment of seat belts.

Air-conditioning system

The air-conditioning system is under high pressure. Do not disconnect any lines. The release of high pressure can cause serious injury.

The air-conditioning system contains gases that are harmful to the environment when released into the atmosphere. Do not attempt to service or repair the system.

Service, repair, or recharging must be performed only by a trained service technician.

Personal Protective Equipment (PPE)

Wear Personal Protective Equipment (PPE) such as hard hat, eye protection, heavy gloves, hearing protection, protective clothing, etc.

Do Not Operate tag

Before you start servicing the machine, attach a 'Do Not Operate' warning tag to the machine in an area that will be visible.

Hazardous chemicals

If you are exposed to or come in contact with hazardous chemicals you can be seriously injured. The fluids, lubricants, paints, adhesives, coolant, etc. required for the function of your machine can be hazardous. They may be attractive and harmful to domestic animals as well as humans.

Material Safety Data Sheets (MSDS) provide information about the chemical substances within a product, safe handling and storage procedures, first aid measures and procedures to be taken in the event of a spill or accidental release. MSDS are available from your dealer.

Before you service your machine check the MSDS for each lubricant, fluid, etc. used in this machine. This information indicates the associated risks and will help you service the machine safely. Follow the information in the MSDS, on manufacturer containers, as well as the information in this manual when servicing the machine.

Dispose of all fluids, filters, and containers in an environmentally safe manner according to local laws and regulations. Check with local environmental and recycling centers or your dealer for correct disposal information.

Store fluids and filters in accordance with local laws and regulations. Use only appropriate containers for the storage of chemicals or petrochemical substances.

Keep out of reach of children or other unauthorized persons.

Additional precautions are required for applied chemicals. Obtain complete information from the manufacturer or distributor of the chemicals before using them.

Utility safety

When digging or using ground-engaging equipment, be aware of buried cables and other services. Contact your local utilities or authorities, as appropriate to determine the locations of services.

Make sure the machine has sufficient clearance to pass in all directions. Pay special attention to overhead power lines and hanging obstacles. High voltage lines may require significant clearance for safety. Contact local authorities or utilities to obtain safe clearance distances from high voltage power lines.

Retract raised or extended components, if necessary. Remove or lower radio antennas or other accessories. Should a contact between the machine and an electric power source occur, the following precautions must be taken:

- Stop the machine movement immediately.
- Apply the park brake, stop the engine, and remove the key.
- Check if you can safely leave the cab or your actual position without contact with electrical wires. If not, stay in your position and call for help. If you can leave your position without touching lines, jump clear of the machine to make sure you do not make contact with the ground and the machine at the same time.