

PARTS MANUAL

**H400HD, H400HDS, H450HD,
H450HDS
(C236)**

CUSTOMER EDITION

HYSTER

SECTIONS

1	FRAME
2	ENGINE ASSEMBLY
3	FUEL SYSTEM
4	ELECTRICAL SYSTEM
5	TRANSMISSION
6	DRIVE AXLE
7	STEERING SYSTEM
8	BRAKE SYSTEM
9	HYDRAULIC SYSTEM
10	MAST-TWO STAGE VISTA
11	ATTACHMENTS
12	OPTIONS
13	FIELD CONVERSION KITS
14	NUMERICAL INDEX

This Parts Manual is divided into 14 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
ADD ON OPTION KITS	13-2
AIR CONDITIONER	
CLIMATE CONTROL CAB	1-82
AIR CONDITIONER ASSEMBLY	
CLOSED CAB WITH AIRCO	1-70
AIR CONDITIONER HOSES, COMPRESSOR, AND ATTACHING PARTS	1-38
S/N C236E01524N →	1-42
ALTERNATE CONFIGURATION	1-40
AIR CONDITIONER SYSTEM	
CLIMATE CONTROL CAB	1-80
AIR CONDITIONER SYSTEM ASSEMBLY	
CLOSED CAB WITH AIRCO	1-68
AIR DUCT	
CLOSED CAB WITH AIRCO OR CLIMATE CONTROL	12-2
AIR DUCT ASSEMBLY	
AIR CONDITIONING - CLOSED CAB WITH AIRCO OR WITH CLIMATE CONTROL	1-76
HEATER - CLOSED CAB WITHOUT AIRCO	1-62
AIR HEATER STARTING AID	
TIER 3 ENGINE	2-22
AIR INTAKE CONNECTION	
TIER 3 ENGINE	3-26
TIER 4(F) ENGINE	3-27
AIR INTAKE MANIFOLD	
TIER 3 ENGINE	3-28
TIER 4(F) ENGINE	3-29
AIR INTAKE SYSTEM	
TIER 3 ENGINE	3-10
TIER 4(F) ENGINE	3-12
AIR TRANSFER CONNECTION	
TIER 3 AND TIER 4(F) ENGINE	3-30
ALTERNATOR AND MOUNTING	
TIER 3 AND TIER 4(F) ENGINE	4-119
ARMREST ASSEMBLY	
OPEN AND CLOSED CAB	1-86
AUXILIARY COOLING PLUMBING	
TIER 4(F) ENGINE	2-23
B	
BACK-UP ALARM	4-116
BELT TENSIONER	
TIER 3 AND TIER 4(F) ENGINE	2-24
BOW-SHACKLES	12-4
BRAKE PEDAL AND LINKAGE	8-2
BRAKE PEDAL ASSEMBLY	8-16
BRAKE SYSTEM	
PAGE 1 OF 3	8-8
PAGE 2 OF 3	8-10
PAGE 3 OF 3	8-14

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
BRAKE VALVE AND ATTACHING PARTS	8-4
ALTERNATE CONFIGURATION	8-6
C	
CAB	
CLOSED - PAGE 1 OF 2	1-96
CLOSED - PAGE 2 OF 2	1-98
OPEN - PAGE 1 OF 2	1-92
OPEN - PAGE 2 OF 2	1-94
CAB ATTACHING PARTS	
OPEN AND CLOSED CAB	1-100
CAB DOOR	
LEFT HAND - CLOSED CAB	1-54
RIGHT HAND - CLOSED CAB	1-52
CAB FLOORMATS	
OPEN AND CLOSED CAB	1-90
CAB HEATER PLUMBING	
TIER 3 AND TIER 4(F) ENGINE	2-25
CAB MAIN DOOR WINDOW	
RIGHT AND LEFT HAND - CLOSED CAB	1-56
CAB MOUNTING AND TILT	1-24
ALTERNATE CONFIGURATION	1-26
CAB RECIRCULATING FAN	
CLOSED CAB ONLY	12-5
CAB SUNSHADE	
REAR - CLOSED CAB ONLY	12-8
TOP - CLOSED CAB ONLY	12-6
CAB TILT CYLINDER	1-30
CAB TILT PUMP	
ELECTRIC	1-36
CAB TILT PUMP AND ATTACHING PARTS	1-34
CAB WINDOWS INSTALLATION	
CLOSED CAB	1-88
CAMSHAFT	
TIER 3 AND TIER 4(F) ENGINE	2-26
CARRIAGE	
PAGE 1 OF 2 - ALL MODELS	11-14
PAGE 2 OF 2 - H400HD/HDS	11-16
PAGE 2 OF 2 - H450HD/HDS	11-20
CLIMATE CONTROL SYSTEM	1-78
CLUTCH ASSEMBLY	
K1	5-24
K2	5-26
K3	5-28
K4	5-30
KR	5-32
KV	5-34
COMPRESSOR ASSEMBLY	1-44

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
CONDENSER	
CLOSED CAB WITH AIRCO OR WITH CLIMATE CONTROL	1-74
CONDENSER SYSTEM	
CLOSED CAB WITH AIRCO OR WITH CLIMATE CONTROL	1-72
CONNECTING RODS AND PISTONS	
TIER 3 ENGINE	2-28
TIER 4(F) ENGINE	2-30
CONTROL PANEL ASSEMBLY	
HEATER	4-117
HEATER AND AIR CONDITIONER	4-118
CONTROL VALVE	
PAGE 1 OF 2	5-20
PAGE 2 OF 2	5-21
CONTROLLER	
SEAT BELT SEQUENCER	12-10
CONVERSION KITS	13-2
CONVERTER	5-7
COOLANT PLUMBING	
TIER 4(F) ENGINE	2-32
COOLING SYSTEM	
TIER 3 ENGINE	2-12
TIER 4(F) ENGINE	2-14
COUNTERWEIGHT	1-57
CRANKCASE BREATHER	
TIER 3 ENGINE	2-33
TIER 4(F) ENGINE	2-34
CRANKCASE BREATHER PLUMBING	
TIER 4(F) ENGINE	2-36
CRANKSHAFT AND BEARINGS	
TIER 3 ENGINE	2-38
CYLINDER BLOCK	
TIER 3 ENGINE	2-40
TIER 4(F) ENGINE	2-42
CYLINDER HEAD	
TIER 3 AND TIER 4(F) ENGINE	2-44
D	
DASH ASSEMBLY	
CLOSED CAB	1-102
DC-DC CONVERTER AND ATTACHING PARTS	12-11
DEF SUPPLY MODULE	3-20
DEF SYSTEM	
PAGE 1 OF 2	3-16
PAGE 2 OF 2	3-18
DIFFERENTIAL AND CARRIER	6-8
DIPSTICK AND TUBE	
TIER 4(F) ENGINE	2-46
DIPSTICK MOUNTING	
TIER 4(F) ENGINE	2-18

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
DIRECTIONAL CONTROL VALVE ASSEMBLY	
FIVE-FUNCTION	11-10
SEVEN-FUNCTION	11-12
DRIVE AXLE ASSEMBLY	6-4
DRIVE AXLE MOUNTING	6-2
DRIVE TIRES AND WHEELS	6-14
DRIVE TRAIN	5-8
DUST PANEL	
TIER 3 ENGINE	12-12
E	
ELECTRIC HORN	1-50
ELECTRICAL SYSTEM	
TIER 3 ENGINE - PAGE 1 OF 2	4-4
TIER 3 ENGINE - PAGE 2 OF 2	4-6
TIER 4(F) ENGINE - PAGE 1 OF 2	4-8
TIER 4(F) ENGINE - PAGE 2 OF 2	4-10
EMPTY SEAT ENGINE SHUTDOWN	12-13
ENGINE BLOCK HEATER	
120 VOLT	12-14
240 VOLT	12-15
ENGINE BREATHER MOUNTING	
TIER 4(F) ENGINE	2-19
ENGINE CONNECTION	5-9
ENGINE CONTROL MODULE AND SENSORS	
TIER 3 ENGINE	4-120
TIER 4(F) ENGINE	4-122
ENGINE COOLANT VENT	
TIER 3 ENGINE	2-47
TIER 4(F) ENGINE	2-48
ENGINE MOUNTING	
TIER 3 ENGINE	2-20
TIER 4(F) ENGINE	2-21
ETR CONTROL MODULE WIRE HARNESS	
TIER 4(F) ENGINE	4-124
ETR MODULE WIRING	
TIER 3 ENGINE	4-125
EXHAUST MANIFOLD	
TIER 3 ENGINE	2-49
TIER 4(F) ENGINE	2-50
EXHAUST OUTLET CONNECTION	
TIER 3 ENGINE	2-51
TIER 4(F) ENGINE	2-52
EXHAUST PIPE	
DRT - TIER 4(F) ENGINE	2-8
EXHAUST RECIRCULATION	
TIER 4(F) ENGINE	2-54
EXHAUST RECIRCULATION WATER PLUMBING	
TIER 4(F) ENGINE	2-56

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
EXHAUST SYSTEM	
TIER 3 ENGINE	2-4
TIER 4(F) ENGINE	2-6
F	
FAN DRIVE	
TIER 3 ENGINE	2-58
TIER 4(F) ENGINE	2-59
FAN SPACER	
TIER 3 ENGINE	2-60
FLOORPLATES AND COVERS	1-4
FLYWHEEL	
TIER 3 AND TIER 4(F) ENGINE	2-61
FLYWHEEL HOUSING	
TIER 3 AND TIER 4(F) ENGINE	2-62
FORK GUIDE	
HOOK TYPE	11-9
PIN TYPE	11-8
FORK POSITIONER CYLINDER	11-6
FORKS	
PIN TYPE	11-4
QUICK DISCONNECT TYPE	11-2
FRONT GEAR COVER	
TIER 3 AND TIER 4(F) ENGINE	2-64
FUEL DRAIN PLUMBING	
TIER 4(F) ENGINE	3-31
FUEL FILTER	
TIER 4(F) ENGINE	3-32
FUEL FILTER AND WIRE HARNESS	
TIER 3 ENGINE	3-33
FUEL FILTER PLUMBING	
TIER 3 ENGINE	3-34
TIER 4(F) ENGINE	3-35
FUEL FILTER WITH WATER SEPARATOR	
TIER 4(F) ENGINE	3-36
FUEL HOSES	
TIER 3 ENGINE	3-22
TIER 4(F) ENGINE	3-24
FUEL INJECTOR PLUMBING	
TIER 3 ENGINE	3-44
TIER 4(F) ENGINE	3-46
FUEL INJECTORS	
TIER 3 ENGINE	3-48
TIER 4(F) ENGINE	3-49
FUEL INLET FITTING	
TIER 3 ENGINE	3-37
TIER 4(F) ENGINE	3-38
FUEL PLUMBING	
TIER 3 ENGINE	3-39

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
FUEL PUMP	
TIER 3 ENGINE	3-40
TIER 4(F) ENGINE	3-42
FUEL TANK	3-14
G	
GEAR DRIVEN PUMP DRIVE	
TIER 3 AND TIER 4(F) ENGINE	2-65
GEAR PUMP ASSEMBLY	9-28
H	
HAND PUMP	1-32
HEADER HOSES	10-32
HEAT SHIELD	
TIER 4(F) ENGINE	2-66
HEATED TOP WINDOW	
CLOSED CAB ONLY	12-16
HEATER AND AIR DUCT	
CLOSED CAB WITHOUT AIRCO	1-61
HEATER ASSEMBLY	
CLOSED CAB WITHOUT AIRCO	1-66
HEATER HOSES	1-45
HEATER SYSTEM	
CLOSED CAB WITHOUT AIRCO	1-64
HOOD	1-58
HYDRAULIC CONTROL VALVE AND ATTACHING PARTS	9-30
HYDRAULIC CONTROL VALVE ASSEMBLY	
AUXILIARY SECTION ASSEMBLY	9-44
HIC, BRAKE/ACCUMULATOR BLOCK ASSEMBLY	9-38
HIC, MID-INLET BLOCK ASSEMBLY	9-42
LIFT SECTION ASSEMBLY, LH	9-36
LIFT SECTION ASSEMBLY, RH	9-34
TILT SECTION ASSEMBLY	9-40
HYDRAULIC CONTROLS	
JOYSTICK - FORK LIFT TRUCK	9-2
HYDRAULIC LEVERS	
FOUR-LEVER CONTROL PANEL - WITH CLAMPING	9-8
FOUR-LEVER CONTROL PANEL - WITHOUT CLAMPING	9-9
THREE-LEVER CONTROL PANEL	9-7
TWO-LEVER CONTROL PANEL	9-6
HYDRAULIC SUPPLY AND RETURN	
PAGE 1 OF 3	9-10
PAGE 2 OF 3	9-12
PAGE 3 OF 3 - H440HDS, H450HDS	9-14
PAGE 3 OF 3 - H400HD, H450HD	9-16
PAGE 3 OF 3 - H440HDS, H450HDS - ALTERNATE CONFIGURATION	9-20
PAGE 3 OF 3 - H400HD, H450HD - ALTERNATE CONFIGURATION	9-22
HYDRAULIC TANK	9-26

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
I	
INDICATOR DISPLAY AND CONTROLS	4-14
INNER MAST	10-8
INSULATION MATS AND AIR DUCT	
CLOSED CAB WITH AIRCO OR WITH CLIMATE CONTROL	12-18
J	
JOYSTICK ASSEMBLY	
FORK LIFT TRUCK	9-4
L	
LABELS	
HYDRAULIC CONTROLS	1-104
PAGE 1 OF 2	1-106
PAGE 2 OF 2	1-108
LIFT CYLINDER	
H400HD, HDS	10-20
H450HD, HDS	10-24
LIFTING BRACKETS	
TIER 3 ENGINE	2-67
TIER 4(F) ENGINE	2-68
LIGHTS	
DIRECTIONAL AND MARKER (→ PENDING PER ECN 68709-43)	4-108
DIRECTIONAL AND MARKER - LED (PENDING PER ECN 68709-43 →)	4-109
DRIVE AND REAR	4-112
FRONT FENDER	4-106
MAST WORK	4-114
STROBE - WITH CONDENSER	4-110
STROBE - WITHOUT CONDENSER	4-111
TAIL	4-107
M	
MAIN LIFT	
PAGE 1 OF 2	10-12
PAGE 2 OF 2	10-16
MAP READING LIGHT	
CLOSED CAB ONLY	12-20
MAST INSTALLATION	10-2
MIRRORS	12-21
MONOTROL PEDAL ASSEMBLY	3-8
MUD FLAPS	12-22
MUFFLER/CATALYTIC CONVERTER ASSEMBLY	
DOC - TIER 4(F) ENGINE	2-9
SCR - TIER 4(F) ENGINE	2-10
O	
OIL COOLER	
TIER 3 ENGINE	2-69
TIER 4(F) ENGINE	2-70
OIL DIPSTICK	5-18

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
OIL FILTER	
TIER 3 AND TIER 4(F) ENGINE	2-71
OIL LEVEL GAUGE	
TIER 3 ENGINE	2-72
OIL PAN	
TIER 3 AND TIER 4(F) ENGINE	2-73
OIL PUMP	
TIER 3 ENGINE	2-74
OUTER MAST	10-4
OUTPUT	5-19
P	
PARK BRAKE ASSEMBLY	6-10
PEDAL LINKAGE	
FORWARD/REVERSE LEVER	3-4
MONOTROL	3-6
PIVOT ARM ASSEMBLY	
OPEN AND CLOSED CAB	1-84
PLUG, COOLANT HEATER STARTING AID	
TIER 3 AND TIER 4(F) ENGINE	2-75
POWER SUPPLY POWER BOARD	
TIER 3 ENGINE	4-128
TIER 4(F) ENGINE	4-130
POWER TAKE-OFF	5-13
PRESSURE FILTER	5-15
PRESSURE OIL PUMP	5-14
PRESSURE REGULATOR	5-16
R	
RADIATOR ASSEMBLY	2-17
RADIO CONSOLE AND ATTACHING PARTS	
CLOSED CAB ONLY	12-24
RAIN TOP	
OPEN CAB ONLY	12-26
REAR GEAR HOUSING	
TIER 3 AND TIER 4(F) ENGINE	2-76
REAR GEAR TRAIN MOUNTING	
TIER 3 AND TIER 4(F) ENGINE	2-77
REAR LOCKING CONSOLE	
CLOSED CAB ONLY	12-27
RELAYS AND FUSES	4-36
ALTERNATE PART	4-54
ROCKER LEVERS	
TIER 3 ENGINE	2-78
TIER 4(F) ENGINE	2-80
S	
SEAT ASSEMBLY	
SUSPENSION	1-20
SEAT ASSEMBLY, AIR SUSPENSION	1-10

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
DELUXE	1-12
WITH THREE POINT SEAT BELT	1-14
SEAT ASSEMBLY, MECHANICAL SUSPENSION	1-8
SECOND 12V SOCKET OPTION	
ONLY WITH DC-DC CONVERTER	12-28
START AID	12-29
STARTER MOTOR	
TIER 3 AND TIER 4(F) ENGINE	2-82
STEER AXLE ASSEMBLY	7-2
STEER COLUMN ASSEMBLY	7-8
ALTERNATE CONFIGURATION	7-10
STEER CYLINDER	7-6
STEER HOSES	7-18
ALTERNATE CONFIGURATION	7-20
STEER TIRES AND WHEELS	7-16
STEERING COLUMN	7-12
STEERING CONTROL UNIT ASSEMBLY	7-14
STUD GROUNDING	
TIER 4(F) ENGINE	2-83
SUSPENSION KIT ASSEMBLY	1-18
SWITCHES	4-126
T	
TELEMETRY KITS	13-2
THERMOSTAT	
TIER 3 AND TIER 4(F) ENGINE	2-84
THROTTLE AND INCHING SENSORS	3-2
TILT CYLINDERS	10-28
TILT HYDRAULICS	10-30
TILT PLATFORM ASSEMBLY	1-28
ALTERNATE CONFIGURATION	1-29
TRAINING SEAT	
CLOSED CAB ONLY	12-30
TRANSMISSION ATTACHING HOSES	5-4
ALTERNATE CONFIGURATION	5-5
TRANSMISSION ATTACHING PARTS	5-2
TRANSMISSION CONTROL	4-12
TRANSMISSION HOUSING	
PAGE 1 OF 2	5-10
PAGE 2 OF 2	5-12
TRANSMISSION SENSORS	5-17
TURBOCHARGER	
TIER 3 ENGINE	2-85
TIER 4(F) ENGINE	2-86
TURBOCHARGER PLUMBING	
TIER 3 ENGINE	2-88
TIER 4(F) ENGINE	2-90

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
U	
UNIVERSAL SHAFT	5-36
V	
VALVE COVER	
TIER 3 ENGINE	2-92
TIER 4(F) ENGINE	2-94
VALVE TAPPETS	
TIER 3 ENGINE	2-96
VIBRATION DAMPER	
TIER 4(F) ENGINE	2-97
W	
WATER INLET CONNECTION	
TIER 3 ENGINE	2-98
TIER 4(F) ENGINE	2-99
WATER OUTLET CONNECTION	
TIER 3 AND TIER 4(F) ENGINE	2-100
WATER PUMP AND DRIVE BELT	
TIER 3 AND TIER 4(F) ENGINE	2-101
WET BRAKE ASSEMBLY	6-12
WINDOW KITS	13-2
WINDOW WIPER SYSTEM	
REAR AND ROOF WIPER KITS - AND FRONT WIPER OPTIONS	1-48
WASHER BOTTLE KIT - CLOSED CAB ONLY	1-46
WIRE HARNESS	
ARMREST	4-16
CAB LIGHTS	4-20
CAB REAR LIGHTS	4-22
CAB SIDE CONSOLE - PAGE 1 OF 3	4-24
CAB SIDE CONSOLE - PAGE 2 OF 3	4-28
CAB SIDE CONSOLE - PAGE 3 OF 3	4-32
CAB SIDE CONSOLE - PAGE 1 OF 4, ALTERNATE PART	4-40
CAB SIDE CONSOLE - PAGE 2 OF 4, ALTERNATE PART	4-44
CAB SIDE CONSOLE - PAGE 3 OF 4, ALTERNATE PART	4-48
CAB SIDE CONSOLE - PAGE 4 OF 4, ALTERNATE PART	4-52
CAB TILT (→ PENDING PER ECN 68717-32)	4-57
CAB TILT (PENDING PER ECN 68717-32 →)	4-58
CAB UNDERFLOOR	4-60
CARRIAGE	4-63
CHASSIS - PAGE 1 OF 5	4-66
CHASSIS - PAGE 2 OF 5	4-68
CHASSIS - PAGE 3 OF 5 (→ S/N C236E01510M)	4-70
CHASSIS - PAGE 3 OF 5 (S/N C236E01511M →)	4-72
CHASSIS - PAGE 4 OF 5	4-74
CHASSIS - PAGE 5 OF 5	4-76
CLOSED CAB	4-78
CLOSED CAB - ALTERNATE CONFIGURATION	4-82
ECM ADAPTER - TIER 3 ENGINE	4-85

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
ECM/EAS - TIER 4(F) ENGINE	4-86
ECO/ELO-HIP - TIER 4(F) ENGINE	4-89
FRONT LIGHTS	4-90
HOOD SPINE - TIER 3 ENGINE	4-91
HOOD SPINE - TIER 4(F) ENGINE	4-92
MAST LIGHT EXTENSION	4-93
MAST WORK LIGHT	4-94
OPEN CAB	4-95
POWERTRAIN	4-96
REAR	4-98
REAR WIPER EXTENSION - CLOSED CAB	4-99
SIDE AND INDICATOR LIGHTS	4-100
STEER COLUMN	4-101
TAIL LIGHTS	4-102
WASH PUMPS - CLOSED CAB	4-103
WIRE HARNESS AND SWITCH ASSEMBLY	
MONOTROL PEDAL	4-104
WIRE MESH ROOF PROTECTION	12-32

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPA	US Environmental Protection Agency	UL Type GS	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the next page.

HYSTER UNIT CODE D001 NORTH AMERICA 06/2001

TABLE OF CONTENTS

DESCRIPTION	PAGE
AIR INTAKE AND FILTER DIESEL (→ D/B 11/98).....	3-22
AIR INTAKE AND FILTER DIESEL (D/B 11/96 →).....	
AIR INTAKE AND FILTER GASOLINE AND LPG.....	
ALTERNATOR GASOLINE, LPG, AND DIESEL.....	
ALTERNATOR TYPES GS, LPS, AND DS.....	
AUXILIARY FUNCTION TUBE TWO AND THREE STAGE FULL P.....	

SECTION 13 NUMERICAL INDEX

PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.
142	3-4	19	10-13	25	11-27	29	12-31	12	16719	3-36	5
12445	3-32	19	10-17	6	11-31	25	16751	3-16	16849	3-34	21
	3-34	1	10-27	11	11-32	37	16849	3-36	16849	3-36	20
			11-11	6	8-4	45	16863	3-28	16863	3-28	17
			14	13	8-8	34	16865	3-6	16865	3-6	18
			12	6	9-7	9	16882	4-27	16882	4-27	41
			3	17	9-7	19		9-7		9-7	30
			9	10	9-11	9		9-11		9-11	27
			23	46	9-11	17		10-10		10-10	36
			27	46	10-9	21		10-13		10-13	32
			26	14	10-9	28		11-7		11-7	24
			28	14	10-13	16		11-9		11-9	17
			50	14	11-7	19					

SECTIONS

- 1
- 2
- 3
- 4
- 5 BRAKE/ACC
- 6
- 7 MAST-TWO STAG
- 8 MAST-THREE ST
- 9 MAST-TWO ST
- 10
- 11

TRANSMISSION HOUSING S/N D001H-2628

KEY:
A: Diesel
B: Gasoline and LPG

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
		Transmission	1	1
	2022547	Transmission	1	1
	2023329	Case	2	2
1	2021670	Bearing Cap	4	4
2	2023418	Washer	1	1
3	296429	Bolt	2	2
4	293947	Cover	2	2
5	2021390	Colter Pin	4	4
6	1371656	O-Ring	1	1
7	2021329	Plug	4	4
8	2021915	Housing	22	22
9	2021675	Pin	39	39
10	2021336	Bolt	1	1
11	287860	Lockwasher	1	1
12	292682	Hydraulic Pump	1	1
13		Figure 5-3	8	8
14	2021345	Gasket	1	1
15	214364	Bolt	1	1
16	296418	Washer	1	1
17	2021388	Temperature Switch	1	1
18	2021389	Breather	9	9
19	2021383	Dipstick	9	9
20	292515	Bolt	2	2
21	136692	Nut	3	3
22	292527	Bolt	3	2
23	292531	Capscrew	4	4
24	292583	Lockwasher	4	4
25	293637	Bolt	1	1
26	296420	Washer	1	1
	996403	Transmission Kit (Includes Item 7)	1	1
	996405	Transmission Kit (Includes Item 14)	1	1

This Parts Manual is divided into 11 major sections which are listed above. Quick be made by placing the right thumb on the tab of the desired section, bending the pages to the corresponding tab.

© Copy Right Date HYSTER COMPANY See Service Manual for service procedures. 5-15

HOW TO FIND THE DESIRED PART NUMBER

WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the Sections Page. Choose the general area of reference most likely to include the part.
2. Turn to the section you chose. Use the Section Table of Contents to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Table of Contents (Page i).
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS KNOWN:

5. Use the Numerical Index (Page 14-1) to find the part number. Turn to the page listed and locate the part as indicated by the item number.

GENERAL:

The assembly breakdowns include part numbers, descriptions, quantities required, keys and footnotes to help in selecting correct parts.

6. Parts Supersession Information. Part numbers that have this history will be displayed in the parts list in the order that they were superseded (from oldest to newest). The superseded part numbers will be shown with a line through them.

Five periods in the PART NO. column (.) indicate that the part is either *Not Serviced Separately* or there is a reference to another figure. A figure reference is denoted by a pointing hand followed by a figure number in the DESCRIPTION column (☞ Figure 10)

7. Keys are used to show two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C", "D", or "E" and the corresponding quantity column to find the required parts. Two periods in the QTY column (..) indicate that the part is not used for that assembly.
8. Indented descriptions under the DESCRIPTION column are used to indicate assemblies and

subparts of assemblies. In the example on the previous page, *BEARING CAP* (Item 2) is a subpart of the major assembly *CASE*.

9. Quantities shown are for one assembly. The quantities of the subpart *BEARING CAP* are indicated as two and two. This means two per *CASE* assembly.
10. Serial number breaks identify the most current parts information and are shown as follows:
 - **S/N D001H2628**
Indicates last serial number affected.
 - S/N D001H2629** →
Indicates the first serial number affected.
 - S/N D001H1553** ↔ **S/N D001H3291**
Indicates a range of serial numbers affected.

ECN numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information and are identified as follows:

- **S/N Pending Per ECN 63243**
Indicates a pending serial number for last unit affected.
- S/N Pending Per ECN 63243** →
Indicates a pending serial number for first unit affected.

Date breaks are used to indicate when a change occurred but a subsequent serial number break was not recorded. This is an arbitrary date usually based on the ECN release and are identified as follows:


- **D/B 3/00**
Indicates that a change occurred sometime within that month for the item affected.
- D/B 3/00** →
Indicates that a change occurred sometime within that month for the item affected.
- D/B 3/00** ↔ **D/B 4/00**
Indicates a range of production dates of the item affected.

Contact your local dealer for Hyster lift trucks for serial number information for items with a ECN or a date break.

ORDERING PARTS:


When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.

For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.

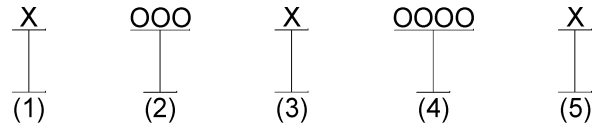IDENTIFICATION OF TRUCK SERIAL NUMBERS

- (1) and (2) The first letter and three numbers indicate the truck unit code.
- (3) The second letter indicates the plant of manufacture.
- (4) The four or five digit number indicates the production sequence number of the truck.
- (5) The final letter indicates the year of manufacture starting with "A" in 1957, 1980, and 2003.
The letters "I", "O", and "Q" will not be used.

For pending serial numbers contact your local dealer for Hyster lift trucks.

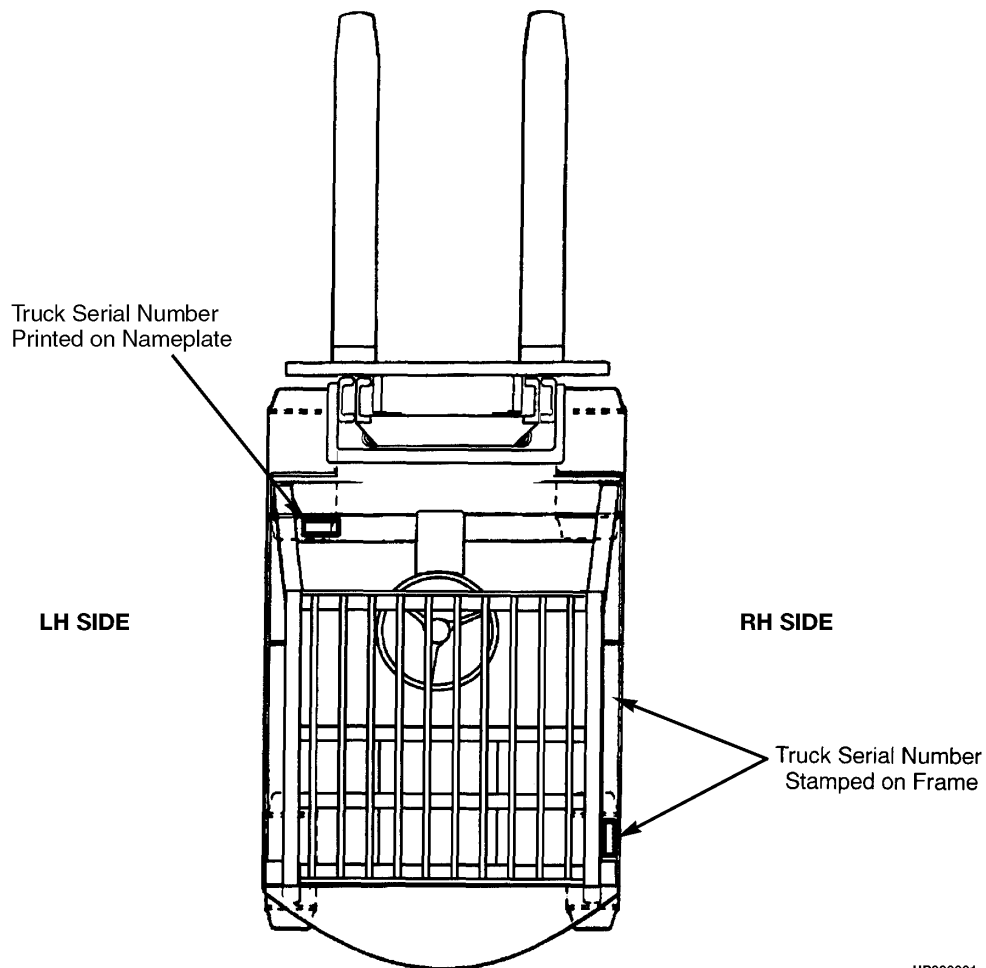

HP990001

Parts referred to in this book as right or left hand parts are in accordance with the illustration above.