

# **PARTS MANUAL**

---

**RS45-27CH, RS45-31CH,  
RS46-36CH, RS46-41L-CH,  
RS46-41S-CH, RS46-41LS-CH  
(D222)**

**CUSTOMER EDITION**

---

***HYSTER***



**SECTIONS**

<b>1</b>	<b>FRAME</b>
<b>2</b>	<b>ENGINES</b>
<b>3</b>	<b>FUEL SYSTEM</b>
<b>4</b>	<b>ELECTRICAL SYSTEM</b>
<b>5</b>	<b>TRANSMISSION</b>
<b>6</b>	<b>DRIVE AXLE</b>
<b>7</b>	<b>STEERING SYSTEM</b>
<b>8</b>	<b>BRAKE SYSTEM</b>
<b>9</b>	<b>HYDRAULIC SYSTEM</b>
<b>10</b>	<b>BOOM</b>
<b>11</b>	<b>OPTIONS</b>
<b>12</b>	<b>FIELD CONVERSION KITS</b>
<b>13</b>	<b>NUMERICAL INDEX</b>

This Parts Manual is divided into 13 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.



**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**

**TABLE OF CONTENTS**

DESCRIPTION	PAGE
<b>A</b>	
ACCESSORY DRIVE PULLEY	
TIER 3 ENGINE .....	2-21
TIER 4(F) ENGINE .....	2-22
AIR CLEANER PLUMBING	
TIER 3 ENGINE .....	2-23
AIR CONDITIONER	
CLIMATE CONTROL CAB .....	1-98
AIR CONDITIONER ASSEMBLY .....	1-94
AIR CONDITIONER SYSTEM .....	1-96
CLIMATE CONTROL CAB .....	1-102
AIR CONDITIONING HOSES	
TIER 3 ENGINE .....	1-76
TIER 4(F) ENGINE (→ S/N D222E01549N) .....	1-78
TIER 4(F) ENGINE (S/N D222E01550N →) .....	1-80
AIR DUCT .....	11-2
AIR DUCT ASSEMBLY	
AIR CONDITIONING .....	1-92
HEATER .....	1-86
AIR HORN .....	1-82
AIR INTAKE CONNECTION	
TIER 3 ENGINE .....	3-9
TIER 4(F) ENGINE .....	3-10
AIR INTAKE HOSE	
TIER 3 AND TIER 4(F) ENGINE .....	3-8
AIR INTAKE MANIFOLD	
TIER 3 ENGINE .....	3-12
AIR INTAKE SYSTEM	
TIER 3 ENGINE .....	3-4
TIER 4(F) ENGINE .....	3-6
AIR TRANSFER CONNECTION	
TIER 3 ENGINE .....	3-11
TIER 4(F) ENGINE .....	2-24
ALTERNATOR	
TIER 3 AND TIER 4(F) ENGINE .....	4-22
ALTERNATOR DRIVE PULLEY	
TIER 3 ENGINE .....	4-27
ALTERNATOR MOUNTING	
TIER 3 ENGINE .....	4-24
TIER 4(F) ENGINE .....	4-26
ARMREST ASSEMBLY .....	1-104
AUTOMATIC GREASING PUMP .....	9-30
AUTOMATIC GREASING SYSTEM	
PAGE 1 OF 2 .....	9-18
PAGE 2 OF 2 .....	9-20
AUXILIARY COOLING PLUMBING	
TIER 4(F) ENGINE .....	2-25

**TABLE OF CONTENTS (continued)**

DESCRIPTION	PAGE
<b>B</b>	
BELT TENSIONER	
TIER 4(F) ENGINE .....	2-26
BLOCK ASSY AND HOSES, TWIN 12-PORT	
WITH METERING UNIT NUMBERS 9 AND 10 - BASE TRUCK .....	9-22
BLOCK ASSY AND HOSES, TWIN 4-PORT	
WITH METERING UNIT NUMBER 3 - BOOM REAR .....	9-26
WITH METERING UNIT NUMBERS 9 AND 10 - BOOM REAR .....	9-28
BLOCK ASSY AND HOSES, TWIN 7-PORT	
WITH METERING UNIT NUMBERS 9 AND 10 - BOOM FRONT .....	9-24
BOOM	
PAGE 1 OF 4 .....	10-4
PAGE 2 OF 4 .....	10-6
PAGE 3 OF 4 .....	10-8
PAGE 4 OF 4 .....	10-12
BOOM DERRICKING CYLINDER ASSEMBLY .....	10-18
BOOM DERRICKING CYLINDER MOUNTING .....	10-16
BOOM MOUNTING .....	10-2
BRAKE PEDAL AND LINKAGE .....	8-8
BRAKE PEDAL ASSEMBLY .....	8-6
BRAKE SYSTEM	
PAGE 1 OF 2 .....	8-2
PAGE 2 OF 2 .....	8-4
BRAKE VALVE AND ATTACHING BRAKE HOSES .....	8-10
BREATHER PLUMBING	
TIER 3 ENGINE .....	2-27
TIER 4(F) ENGINE .....	2-28
BUMPERS .....	11-4
INSET .....	11-5
<b>C</b>	
CAB ATTACHING PARTS	
PAGE 1 OF 4 .....	1-46
PAGE 2 OF 4 .....	1-47
PAGE 3 OF 4 .....	1-48
PAGE 4 OF 4 .....	1-51
CAB DOOR	
LEFT HAND .....	1-52
RIGHT HAND .....	1-54
CAB FLOORMATS .....	1-68
CAB MAIN DOOR WINDOW	
RIGHT AND LEFT HAND .....	1-56
CAB MOUNTING	
NON-POWERED SLIDING CAB .....	1-38
POWERED SLIDING CAB .....	1-42
CAB RECIRCULATING FAN .....	11-6
CAB SUNSHADE	
REAR .....	1-58
REAR .....	11-8

**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
TOP .....	1-57
TOP .....	11-7
CAB WINDOWS INSTALLATION .....	1-70
CABIN HEATER PLUMBING	
TIER 4(F) ENGINE .....	2-29
CAM FOLLOWER LEVERS	
TIER 3 ENGINE .....	2-30
CAMSHAFT	
TIER 3 ENGINE .....	2-32
CLIMATE CONTROL SYSTEM .....	1-100
COMBINATION MANIFOLD ASSEMBLY	
PAGE 1 OF 2 .....	9-42
PAGE 2 OF 2 .....	9-44
COMPRESSOR ASSEMBLY	
TIER 4(F) ENGINE .....	1-84
COMPRESSOR MOUNTING	
TIER 3 ENGINE .....	2-34
TIER 4(F) ENGINE .....	2-36
CONDENSER ASSEMBLY	
24V .....	1-120
CONTROL PANEL ASSEMBLY	
HEATER .....	4-20
HEATER AND AIR CONDITIONER .....	4-21
CONTROLLER	
SEAT BELT SEQUENCER .....	11-10
COOLANT HEATER STARTING AID	
TIER 3 ENGINE .....	2-37
COOLER ASSEMBLY .....	2-10
COOLING SYSTEM	
TIER 3 ENGINE .....	2-6
TIER 4(F) ENGINE .....	2-8
CORROSION RESISTOR	
TIER 3 ENGINE .....	2-38
COUNTERWEIGHT	
RS45-27/31, RS46-36 .....	1-20
RS46-41L/LS .....	1-19
RS46-41S .....	1-18
COVERS .....	1-16
CRANKSHAFT	
TIER 3 ENGINE .....	2-40
CRANKSHAFT MAIN BEARINGS	
TIER 3 ENGINE .....	2-41
CYLINDER BLOCK	
TIER 3 ENGINE .....	2-42
TIER 4(F) ENGINE .....	2-46
CYLINDER BLOCK PLUMBING	
TIER 3 ENGINE .....	2-44
CYLINDER HEAD	
TIER 3 ENGINE .....	2-48



## TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
<b>D</b>	
DASH ASSEMBLY .....	1-103
DC-DC CONVERTER AND ATTACHING PARTS .....	11-11
DEF SUPPLY MODULE .....	3-47
DEF SYSTEM	
TIER 4(F) ENGINE .....	3-44
DIFFERENTIAL AND CARRIER ASSEMBLY .....	6-4
DRIVE AXLE MOUNTING .....	6-2
DRIVE SHAFT .....	5-42
DRIVE WHEELS AND TIRES	
18.00 X 25 (→ S/N D222E01554N) .....	6-14
18.00 X 25 (S/N D222E01555N →) .....	6-16
18.00 X 33 .....	6-18
<b>E</b>	
ELECTRICAL SYSTEM	
SHEET 1 OF 4 .....	4-4
SHEET 2 OF 4 .....	4-6
SHEET 3 OF 4 (→ PENDING PER ECN 68671-27) .....	4-10
SHEET 3 OF 4 (PENDING PER ECN 68671-27 →) .....	4-12
SHEET 4 OF 4 .....	4-14
EMPTY SEAT ENGINE SHUTDOWN .....	11-12
ENGINE BLOCK HEATER 240V .....	11-13
ENGINE CONTROL MODULE	
TIER 4(F) ENGINE .....	4-28
ENGINE CONTROL SYSTEM	
TIER 3 ENGINE .....	4-34
ENGINE COOLANT PLUMBING	
TIER 4(F) ENGINE .....	2-50
ENGINE MOUNTING	
TIER 3 ENGINE .....	2-19
TIER 4(F) ENGINE .....	2-20
ENGINE OIL FILL	
TIER 3 ENGINE .....	2-52
TIER 4(F) ENGINE .....	2-54
ENGINE SUPPORT	
TIER 4(F) ENGINE .....	2-55
ETR CONTROL MODULE WIRE HARNESS	
TIER 4(F) ENGINE .....	4-30
EXHAUST MANIFOLD	
TIER 3 ENGINE .....	2-56
TIER 4(F) ENGINE .....	2-57
EXHAUST OUTLET CONNECTION	
TIER 3 ENGINE .....	2-58
EXHAUST PIPE	
DRT - TIER 4(F) ENGINE .....	2-16
EXHAUST RECIRCULATION	
TIER 4(F) ENGINE .....	2-59

**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
EXHAUST RECIRCULATION AIR PLUMBING	
TIER 4(F) ENGINE .....	2-61
EXHAUST RECIRCULATION WATER PLUMBING	
TIER 4(F) ENGINE .....	2-60
EXHAUST SYSTEM	
TIER 3 ENGINE .....	2-12
TIER 4(F) ENGINE .....	2-14
EXTENSION CYLINDER	
BOOM .....	10-14
<b>F</b>	
FAN DRIVE AND MOUNTING	
TIER 4(F) ENGINE .....	2-62
FAN DRIVE AND SPACER	
TIER 3 ENGINE .....	2-63
FENDERS .....	1-14
FLOORPLATES AND STEPS	
WITH RH STAIRS .....	1-4
WITHOUT RH STAIRS .....	1-6
FLYWHEEL	
TIER 3 ENGINE .....	2-67
TIER 4(F) ENGINE .....	2-68
FLYWHEEL HOUSING	
TIER 3 ENGINE .....	2-64
TIER 4(F) ENGINE .....	2-66
FRONT DRIVE TRAIN	
TIER 3 ENGINE .....	2-69
FRONT ENGINE SUPPORT	
TIER 3 ENGINE .....	2-70
FRONT GEAR COVER	
TIER 3 ENGINE .....	2-72
TIER 4(F) ENGINE .....	2-74
FRONT GEAR TRAIN ACCESSORY MOUNTING	
TIER 4(F) ENGINE .....	2-75
FUEL DRAIN PLUMBING	
TIER 4(F) ENGINE .....	3-22
FUEL FILTER	
TIER 3 ENGINE .....	3-24
TIER 4(F) ENGINE .....	3-26
WIF - TIER 3 ENGINE .....	3-39
FUEL FILTER PLUMBING	
TIER 3 ENGINE .....	3-30
TIER 4(F) ENGINE .....	3-32
FUEL FILTERS	
TIER 4(F) ENGINE .....	3-28
FUEL HOSES	
TIER 3 ENGINE .....	3-41
TIER 4(F) ENGINE .....	3-42

## TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
FUEL INJECTOR	
TIER 3 ENGINE .....	3-33
FUEL INJECTOR PLUMBING	
TIER 4(F) ENGINE .....	3-34
FUEL PUMP ASSEMBLY	
TIER 3 ENGINE .....	3-14
FUEL PUMP COUPLING	
TIER 3 ENGINE .....	3-17
FUEL PUMP DRIVE	
TIER 3 ENGINE .....	3-18
FUEL PUMP INTAKE FITTING	
TIER 3 AND TIER 4(F) ENGINE .....	3-19
FUEL PUMP PLUMBING	
TIER 3 ENGINE .....	3-20
FUEL SUPPLY PLUMBING	
TIER 4(F) ENGINE .....	3-38
FUEL TANK .....	3-40
FUEL TRANSFER PUMP	
TIER 4(F) ENGINE .....	3-36
<b>G</b>	
GEAR HOUSING	
TIER 3 ENGINE .....	2-76
TIER 4(F) ENGINE .....	2-77
<b>H</b>	
HANDRAILS	
WITH POWER SLIDING CAB .....	1-8
WITHOUT POWER SLIDING CAB .....	1-10
HEAT SHIELD	
TIER 4(F) ENGINE .....	2-78
HEATED TOP WINDOW .....	11-14
HEATER AND AIR DUCT .....	1-85
HEATER AND CONTROL PANEL ASSEMBLIES .....	1-88
HEATER ASSEMBLY .....	1-90
HEATER HOSES	
TIER 3 ENGINE .....	1-72
TIER 4(F) ENGINE .....	1-74
HUB ASSEMBLY .....	6-6
HYDRAULIC CONTROL VALVES MOUNTING .....	9-46
HYDRAULIC CONTROLS	
JOYSTICK .....	9-54
HYDRAULIC MOTOR	
POWERED SLIDING CAB .....	9-52
HYDRAULIC PUMPS AND ATTACHING PARTS .....	9-14
HYDRAULIC SYSTEM	
PAGE 1 OF 3 .....	9-2
PAGE 2 OF 3 .....	9-6
PAGE 3 OF 3 .....	9-10

**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
HYDRAULIC TANK .....	9-50
<b>I</b>	
IDLER GEAR	
TIER 3 ENGINE .....	2-80
INDICATOR DISPLAY AND CONTROLS .....	4-18
INSULATION MATS AND AIR DUCT .....	11-16
INTAKE CONNECTOR	
AIR COMPRESSOR - TIER 3 ENGINE .....	2-82
INTAKE MANIFOLD	
TIER 4(F) ENGINE .....	2-83
<b>J</b>	
JOYSTICK ASSEMBLY .....	9-56
<b>L</b>	
LABELS	
SWITCHES .....	1-110
LIFTING BRACKET	
TIER 3 ENGINE .....	2-84
LIFTING BRACKETS	
TIER 4(F) ENGINE .....	2-85
LIGHT BAR AND MOUNT	
TWISTLOCK MODULE .....	1-108
LIGHT SWITCHES .....	4-136
LIGHTS	
ENGINE COMPARTMENT .....	4-42
FRONT .....	4-44
STROBE .....	4-46
TAIL AND BACKUP ALARM .....	4-47
WORK .....	4-48
LOAD LIMITER	
COLOR DISPLAY .....	4-38
MONOCHROME .....	4-40
LOWERING CONTROL VALVE	
LOAD HOLDING VALVE - TELESCOPING .....	10-20
LOAD HOLDING VALVE - DERRICKING .....	10-22
<b>M</b>	
MAIN CONTROL VALVE ASSEMBLY .....	9-40
MANIFOLD ASSEMBLY	
POWERED SLIDING CAB .....	1-45
MAP READING LIGHT .....	11-18
MIRRORS	
FRONT FENDER - WITHOUT FULL STROKE POWER SLIDING CAB .....	1-64
FRONT FENDER - WITH FULL STROKE POWER SLIDING CAB .....	1-66
MUFFLER/CATALYTIC CONVERTER ASSEMBLY	
DOC - TIER 4(F) ENGINE .....	2-18
SCR - TIER 4(F) ENGINE .....	2-17

**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
<b>O</b>	
OIL COOLER	
TIER 4(F) ENGINE .....	2-87
OIL COOLER AND FILTER HEAD ADAPTER	
TIER 3 ENGINE .....	2-96
OIL COOLER WATER PLUMBING	
TIER 3 ENGINE .....	2-86
OIL FILLER	
TIER 3 ENGINE .....	2-91
TIER 4(F) ENGINE .....	2-92
OIL FILTER	
TIER 3 ENGINE .....	2-93
TIER 4(F) ENGINE .....	2-94
OIL LEVEL GAUGE	
TIER 3 ENGINE .....	2-89
TIER 4(F) ENGINE .....	2-90
OIL PAN	
TIER 3 ENGINE .....	2-98
TIER 4(F) ENGINE .....	2-100
OIL PUMP AND ATTACHING PARTS	
TIER 3 ENGINE .....	2-102
<b>P</b>	
PARK BRAKE ASSEMBLY .....	6-12
PARK BRAKE RETAINER .....	6-10
PEDAL LINKAGE	
FORWARD/REVERSE LEVER .....	3-48
PISTON AND CONNECTING ROD	
TIER 3 ENGINE .....	2-104
PIVOT ARM ASSEMBLY .....	1-106
PLUG, COOLANT HEATER STARTING AID	
TIER 4(F) ENGINE .....	2-106
POWER SLIDING CAB OPERATOR ACCESSORIES	
CAB WITH AIR CONDITIONER .....	1-118
CAB WITH HEATER .....	1-116
PROXIMITY SWITCH ASSEMBLY	
CAB MOUNTING .....	4-50
REAR HARNESS .....	4-51
<b>R</b>	
RADIATOR PLUMBING	
TIER 3 ENGINE .....	2-108
RADIO CONSOLE AND ATTACHING PARTS .....	11-20
REAR LOCKING CONSOLE .....	11-22
RELAYS AND FUSES .....	4-72
REMOTE OIL FILTER ATTACHING PARTS	
TIER 4(F) ENGINE .....	2-110
ROCKER LEVER HOUSING	
TIER 3 ENGINE .....	2-111

**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
TIER 4(F) ENGINE .....	2-112
<b>S</b>	
SEAT ASSEMBLY	
SUSPENSION .....	1-34
SEAT ASSEMBLY, AIR SUSPENSION .....	1-24
DELUXE .....	1-26
WITH THREE POINT SEAT BELT .....	1-28
SEAT ASSEMBLY, MECHANICAL SUSPENSION .....	1-22
SECOND 12V SOCKET OPTION .....	11-23
SENSOR ASSEMBLY	
BOOM ANGLE AND EXTENSION .....	4-49
SERVICE BRAKE ASSEMBLY .....	6-8
SOUND REDUCTION	
TIER 3 ENGINE .....	11-24
TIER 4(F) ENGINE .....	11-26
STABILIZER CYLINDER .....	9-36
STABILIZER VALVE .....	9-38
STABILIZER HYDRAULICS .....	9-32
START AID .....	11-28
STARTER	
TIER 4(F) ENGINE .....	4-31
STARTER MOTOR AND MOUNTING	
TIER 3 ENGINE .....	4-32
STEER AXLE AND ATTACHING PARTS .....	7-2
STEER AXLE ASSEMBLY	
PAGE 1 OF 2 .....	7-4
PAGE 2 OF 2 .....	7-6
STEER COLUMN ASSEMBLY .....	7-18
ALTERNATE CONFIGURATION .....	7-20
STEER CYLINDER .....	7-7
STEER HOSES .....	7-8
STEER TIRES AND WHEELS	
18.00 X 25 (→ S/N D222E01554N) .....	7-10
18.00 X 25 (S/N D222E01555N →) .....	7-12
18.00 X 33 .....	7-13
STEERING COLUMN .....	7-22
STEERING CONTROL UNIT .....	7-14
STEERING CONTROL VALVE .....	7-16
STORAGE COMPARTMENT AND RUNNING BOARDS .....	1-12
SUSPENSION KIT ASSEMBLY .....	1-32
<b>T</b>	
TELEMETRY KITS .....	12-2
THERMOSTAT	
TIER 3 ENGINE .....	2-114
TIER 4(F) ENGINE .....	2-115
THERMOSTAT HOUSING	
TIER 3 ENGINE .....	2-116

**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
THROTTLE AND INCHING SENSORS .....	3-50
TRAINING SEAT .....	11-29
TRANSMISSION	
CASE AND REAR COVER .....	5-8
CONTROL VALVE .....	5-40
FIRST SPEED CLUTCH SHAFT .....	5-28
FIRST SPEED GEARS .....	5-19
FIRST SPEED SHAFT AND IDLER GEAR .....	5-32
FORWARD CLUTCH SHAFT .....	5-20
FORWARD, REVERSE AND SECOND, - AND THIRD OR FOURTH CLUTCH SHAFTS .....	5-18
FOURTH SPEED CLUTCH SHAFT .....	5-30
INPUT DRIVE GEARS .....	5-12
OUTPUT SHAFT .....	5-34
PUMP DRIVE .....	5-14
REGULATOR VALVE AND HYDRAULIC PUMP .....	5-36
REMOTE FILTER AND ADAPTER .....	5-38
REVERSE AND SECOND CLUTCH SHAFT .....	5-26
THIRD SPEED CLUTCH SHAFT .....	5-22
THIRD SPEED GEARS .....	5-24
TORQUE CONVERTER AND DRIVE PLATE .....	5-16
TORQUE CONVERTER HOUSING .....	5-4
TURBINE SHAFT, STATOR SUPPORT, OIL BAFFLE .....	5-10
TRANSMISSION CONTROL .....	4-16
TRANSMISSION HOSES	
TIER 3 ENGINE .....	5-44
TIER 4(F) ENGINE .....	5-46
TRANSMISSION MOUNTING .....	5-2
TURBOCHARGER	
TIER 3 ENGINE .....	2-118
TIER 4(F) ENGINE .....	2-120
TURBOCHARGER PLUMBING	
TIER 3 ENGINE .....	2-122
TURBOCHARGER WATER PLUMBING	
TIER 4(F) ENGINE .....	2-124
<b>V</b>	
VALVE COVER	
TIER 3 ENGINE .....	2-126
TIER 4(F) ENGINE .....	2-128
VIBRATION DAMPER	
TIER 3 ENGINE .....	2-130
TIER 4(F) ENGINE .....	2-131
<b>W</b>	
WATER PUMP	
TIER 3 ENGINE .....	2-132
WATER PUMP AND CONNECTIONS	
TIER 4(F) ENGINE .....	2-134

**TABLE OF CONTENTS (continued)**

DESCRIPTION	PAGE
WINDOW WIPER SYSTEM	
REAR AND ROOF WIPER KITS - AND FRONT WIPER OPTIONS .....	1-62
WASHER BOTTLE KIT - CLOSED CAB ONLY .....	1-60
WIRE HARNESS	
ATTACHMENT SIGNALS - CAB TO FRAME .....	4-52
BOOM EXTENSION - STANDARD SPREADER 1 .....	4-53
BOOM EXTENSION - STANDARD SPREADER 2 .....	4-54
BOOM EXTENSION - INTERMODAL HANDLER .....	4-55
BOOM LIGHTS .....	4-56
BOOM LIGHTS, INNER AND OUTER .....	4-57
BOOM LIGHTS, INNER AND OUTER - ALTERNATE CONFIGURATION .....	4-58
BOOM VALVES .....	4-59
CAB SIDE CONSOLE - PAGE 1 OF 3 .....	4-60
CAB SIDE CONSOLE - PAGE 2 OF 3 .....	4-64
CAB SIDE CONSOLE - PAGE 3 OF 3 .....	4-68
CAB UNDERFLOOR .....	4-76
CHASSIS - SHEET 1 OF 3 .....	4-80
CHASSIS - SHEET 2 OF 3 .....	4-82
CHASSIS - SHEET 3 OF 3 .....	4-86
CLOSED CAB .....	4-90
COOLANT LEVEL SWITCH - TIER 3 ENGINE .....	4-92
COOLANT LEVEL SWITCH - TIER 4(F) ENGINE .....	4-93
ECO/ELO-HIP .....	4-94
ENGINE AFTERTREATMENT SYSTEM/ECM - TIER 4(F) ENGINE .....	4-96
ENGINE COMPARTMENT .....	4-99
ENGINE ECM ADAPTER - TIER 3 ENGINE .....	4-100
ENGINE POWER - CAB TO FRAME .....	4-102
FRONT LIGHTS .....	4-103
HYDRAULICS .....	4-104
LMI CAN CONNECTION - CAB TO FRAME .....	4-106
LMI COLOR DISPLAY .....	4-107
LMI COLOR DISPLAY - OPTIONAL .....	4-108
LMI MONOCHROME DISPLAY .....	4-109
LMI MONOCHROME DISPLAY - OPTIONAL .....	4-110
PDM .....	4-112
POWERTRAIN - FULL FLOW .....	4-116
POWERTRAIN CAN CONNECTION - CAB TO FRAME .....	4-115
POWERTRAIN SIGNAL 1 - CAB TO FRAME .....	4-120
POWERTRAIN SIGNAL 2 - CAB TO FRAME .....	4-121
REAR .....	4-122
REAR - ALTERNATE CONFIGURATION .....	4-123
REAR CAB .....	4-124
REAR WIPER EXTENSION .....	4-126
STABILIZER .....	4-127
STABILIZER VALVE .....	4-129
STEER COLUMN .....	4-131
STOP BUTTON, FRONT .....	4-135
STOP BUTTON, REAR .....	4-134
TWIST MODULE AND LMI DISPLAY .....	4-132



**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
WIF FUEL FILTER - TIER 3 ENGINE .....	4-133
WIRING ACCESSORIES	
ELECTRONIC CONTROL MODULE - TIER 3 ENGINE .....	4-36

**ABBREVIATIONS QUICK REFERENCE SHEET**

Listed below are abbreviations used in parts manuals to denote the following expressions:

<b>TERM</b>	<b>DEFINITION</b>	<b>TERM</b>	<b>DEFINITION</b>
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPA	US Environmental Protection Agency	UL Type GS	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

## HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the next page.

**HYSTER** UNIT CODE D001 NORTH AMERICA 06/2001

**TABLE OF CONTENTS**

DESCRIPTION	PAGE
AIR INTAKE AND FILTER DIESEL (⇒ D/B 11/98)	3-22
AIR INTAKE AND FILTER DIESEL (D/B 11/96 ⇒)	
AIR INTAKE AND FILTER GASOLINE AND LPG	
ALTERNATOR GASOLINE, LPG, AND DIESEL	
ALTERNATOR TYPES GS, LPS, AND DS	
AUXILIARY FUNCTION TUBE TWO AND THREE STAGE FULL F	

**SECTION 13 NUMERICAL INDEX**

PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.
142	3-4	19	10-13	25		11-27	29	12-31	12		
12445	3-32	19	10-17	6		11-31	25	16719	3-36	5	
	3-34	1	10-27	11		11-32	37	16751	3-16	27	
			11	11		9-7	9	16849	3-34	21	
			12	6	16485	8-4	29		3-38	20	
			13	13		8-4	45	16863	3-28	17	
			14	13		8-8	34	16865	3-6	18	
			17	6		9-7	9		4-27	41	
			18	17		9-11	9	16882	9-7	30	
			19	10		9-11	17		9-11	27	
			23	46		10-9	21		10-10	36	
			27	46		10-9	28		10-13	32	
			28	14		10-13	16		11-7	24	
			29	14		11-7	19		11-9	17	

**SECTIONS**

- 1
- 2
- 3
- 4
- 5 BRAKE/ACC
- 6
- 7 MAST-TWO STAG
- 8 MAST-THREE ST
- 9 MAST-TWO ST
- 10
- 11

**TRANSMISSION HOUSING** ⇒ S/N D001H-2628

KEY:  
A: Diesel  
B: Gasoline and LPG

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
1	202547	Transmission	1	1
2	2023329	Transmission	1	1
3	2021670	Case	2	2
4	2023418	Bearing Cap	4	4
5	296429	Washer	4	4
6	293947	Bolt	1	1
7	2021390	Cover	2	2
8	1371656	Colter Pin	4	4
9	2021915	O-Ring	1	1
10	2021329	Plug	4	4
11	2021675	Housing	22	22
12	2021336	Pin	39	39
13	287860	Lockwasher	1	1
14	292682	Hydraulic Pump	1	1
15	2021345	⇒ Figure 5-3	1	1
16	214364	Gasket	8	8
17	296418	Bolt	1	1
18	2021388	Washer	1	1
19	2021389	Temperature Switch	1	1
20	2021383	Breather	9	9
21	292515	Dipstick	9	9
22	136692	Bolt	2	2
23	292527	Nut	3	3
24	292531	Bolt	3	2
25	292583	Capscrew	4	4
26	293637	Lockwasher	4	4
	296420	Bolt	4	4
	296420	Washer	1	1
	996403	Transmission Kit (Includes Item 7)	1	1
	996405	Transmission Kit (Includes Item 14)	1	1

This Parts Manual is divided into 11 major sections which are listed above. Quick be made by placing the right thumb on the tab of the desired section, bending the pages to the corresponding tab.

©Copy Right Date HYSTER COMPANY See Service Manual for service procedures. 5-15

HP990004

## HOW TO FIND THE DESIRED PART NUMBER

### WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the Sections Page. Choose the general area of reference most likely to include the part.
2. Turn to the section you chose. Use the Section Table of Contents to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

### WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Table of Contents (Page i).
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

### WHEN THE PART NUMBER IS KNOWN:

5. Use the Numerical Index (Page 13-1) to find the part number. Turn to the page listed and locate the part as indicated by the item number.

### GENERAL:

The assembly breakdowns include part numbers, descriptions, quantities required, keys and footnotes to help in selecting correct parts.

6. Parts Supersession Information. Part numbers that have this history will be displayed in the parts list in the order that they were superseded (from oldest to newest). The superseded part numbers will be shown with a line through them.

Five periods in the PART NO. column (. . . . .) indicate that the part is either *Not Serviced Separately* or there is a reference to another figure. A figure reference is denoted by a pointing hand followed by a figure number in the DESCRIPTION column (☞ Figure 10)

7. Keys are used to show two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C", "D", or "E" and the corresponding quantity column to find the required parts. Two periods in the QTY column (..) indicate that the part is not used for that assembly.
8. Indented descriptions under the DESCRIPTION column are used to indicate assemblies and

subparts of assemblies. In the example on the previous page, *BEARING CAP* (Item 2) is a subpart of the major assembly *CASE*.

9. Quantities shown are for one assembly. The quantities of the subpart *BEARING CAP* are indicated as two and two. This means two per *CASE* assembly.
10. Serial number breaks identify the most current parts information and are shown as follows:
  - **S/N D001H2628**  
Indicates last serial number affected.
  - S/N D001H2629** →  
Indicates the first serial number affected.
  - S/N D001H1553** ↔ **S/N D001H3291**  
Indicates a range of serial numbers affected.

ECN numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information and are identified as follows:

→ **S/N Pending Per ECN 63243**

Indicates a pending serial number for last unit affected.

**S/N Pending Per ECN 63243** →

Indicates a pending serial number for first unit affected.

Date breaks are used to indicate when a change occurred but a subsequent serial number break was not recorded. This is an arbitrary date usually based on the ECN release and are identified as follows:

→ **D/B 3/00**

Indicates that a change occurred sometime within that month for the item affected.

**D/B 3/00** →

Indicates that a change occurred sometime within that month for the item affected.

**D/B 3/00** ↔ **D/B 4/00**

Indicates a range of production dates of the item affected.

Contact your local dealer for Hyster lift trucks for serial number information for items with a ECN or a date break.

### ORDERING PARTS:

When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.

For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.