

PARTS MANUAL

**S135FT, S155FT
(E024)**

CUSTOMER EDITION

HYSTER

SECTIONS

1	FRAME
2	ENGINES
3	FUEL SYSTEM
4	ELECTRICAL SYSTEM
5	TRANSMISSION
6	DRIVE AXLE
7	STEERING SYSTEM
8	BRAKE SYSTEM
9	HYDRAULIC SYSTEM
10	MAST-TWO STAGE LIMITED FREE-LIFT
11	MAST-THREE STAGE FULL FREE-LIFT
12	OPTIONS
13	FIELD CONVERSION KITS
14	NUMERICAL INDEX

This Parts Manual is divided into 14 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
ACCUMULATOR	12-8
ADD ON TELEMETRY KITS	13-8
ADD-ON OPTION KITS	13-2
AIR FILTER	
GASOLINE AND LPG	3-10
AIR INTAKE	
CUMMINS QSB 3.3L DIESEL	3-8
GM 4.3L, GASOLINE AND LPG - GFI (→ S/N E024V02385J)	3-4
GM 4.3L, GASOLINE AND LPG - PSI (S/N E024V02386J →)	3-6
AIR INTAKE MANIFOLD	
CUMMINS QSB 3.3L DIESEL	2-108
ALTERNATOR AND MOUNTING	
CUMMINS QSB 3.3L DIESEL	4-44
GM 4.3L LPG - PSI OPTION (S/N E024V02386J →)	4-34
ARMREST ASSEMBLY	
MINI-LEVER MODULES - SEMI-SUSPENSION SEAT WITH HIP RESTRAINTS (S/N E024V01943H → INC. 01938)	1-38
MINI-LEVER MODULES - FULL SUSPENSION SEAT (S/N E024V01943H → INC. 01938)	1-40
ASSEMBLED ENGINE	
GM 4.3L GASOLINE AND LPG (GFI OPTION) - SHEET 1 OF 3	2-20
GM 4.3L GASOLINE AND LPG (GFI OPTION) - SHEET 2 OF 3	2-24
GM 4.3L GASOLINE AND LPG (GFI OPTION) - SHEET 3 OF 3	2-28
ATTACHMENT MOUNTING KITS	13-7
AUDIBLE ALARM KITS	13-3
AUXILIARY FUNCTION HOSES	
TWO AND THREE STAGE MASTS	12-30
AUXILIARY ONE AND TWO SECTIONS	
MANUAL CONTROL VALVE - THREE AND FOUR FUNCTION	9-28
AUXILIARY ONE SECTION	
ELECTRONIC CONTROL VALVE - THREE, FOUR, AND FIVE FUNCTION (→ 6/2009)	9-46
ELECTRONIC CONTROLLER - THREE, FOUR AND FIVE FUNCTION (6/2009 →)	9-48
AUXILIARY TUBE EXTENSION KIT	13-6
AUXILIARY TUBE EXTENSIONS	
THREE STAGE FULL FREE LIFT WITH SIDE SHIFT FORK POSITIONER CARRIAGE - WITHOUT QUICK DISCONNECT FITTINGS	12-64
THREE STAGE FULL FREE LIFT WITH SIDE SHIFT FORK POSITIONER CARRIAGE - MANUAL HYDRAULICS WITH QUICK DISCONNECT FITTINGS	12-66
THREE STAGE FULL FREE LIFT WITH SIDE SHIFT FORK POSITIONER CARRIAGE - E-HYDRAULICS WITH QUICK DISCONNECT FITTINGS	12-68
THREE STAGE FULL FREE-LIFT - WITHOUT QUICK DISCONNECT FITTINGS (S/N B514V02372H →)	12-58
THREE STAGE FULL FREE-LIFT - MANUAL HYDRAULICS WITH QUICK DISCONNECT FITTINGS (S/N B514V02372H →)	12-60
THREE STAGE FULL FREE-LIFT - E-HYDRAULICS WITH QUICK DISCONNECT FITTINGS (S/N B514V02372H →)	12-62
TWO STAGE LIMITED FREE-LIFT - WITHOUT QUICK DISCONNECT FITTINGS (S/N B513V01890H →)	12-52

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
TWO STAGE LIMITED FREE-LIFT - MANUAL HYDRAULICS WITH QUICK DISCONNECT FITTINGS (S/N B513V01890H →)	12-54
TWO STAGE LIMITED FREE-LIFT - E-HYDRAULICS WITH QUICK DISCONNECT FITTINGS (S/N B513V01890H →)	12-56
AUXILIARY TWO SECTION	
ELECTRONIC CONTROL VALVE - FOUR AND FIVE FUNCTION (→ 6/2009)	9-50
ELECTRONIC CONTROL VALVE - FOUR AND FIVE FUNCTION (6/2009 →)	9-52
AXLE HOUSING	
LEFT HAND	6-8
B	
BACK-UP ALARM	12-7
BATTERY CABLES	
CUMMINS QSB 3.3L DIESEL	4-48
GM 4.3L GASOLINE AND LPG	4-30
BRAKE AND INCHING PEDAL CONVERSION	13-2
BRAKE COOLING SYSTEM	
SINGLE AND DUAL PEDAL	8-18
BRAKE MASTER CYLINDER ASSEMBLY	8-17
BRAKE PEDAL LINKAGE	
DUAL PEDAL (→ S/N E024V02090H EXC. 02086)	8-10
DUAL PEDAL (S/N E024V02091H → INC. 02068)	8-14
SINGLE PEDAL (→ S/N E024V02090H EXC. 02086)	8-2
SINGLE PEDAL (S/N E024V02091H → INC. 02068)	8-6
C	
CAMSHAFT	
CUMMINS QSB 3.3L DIESEL	2-86
CAMSHAFT AND OIL PAN	
GM 4.3L GASOLINE AND LPG - GFI OPTION (→ S/N E024V02385J)	2-54
GM 4.3L GASOLINE AND LPG - PSI OPTION (S/N E024V02386J →)	2-58
CARRIAGE	
THREE STAGE FULL FREE-LIFT	11-20
TWO STAGE LIMITED FREE-LIFT	10-12
CHARGE PUMP	5-44
COIL ASSEMBLY	
GM 4.3L GASOLINE AND LPG - GFI OPTION (→ S/N E024V02385J)	2-70
CONTROL VALVE	
THREE SPEED TRANSMISSION	5-26
TWO SPEED TRANSMISSION	5-42
CONTROL VALVE AND STEERING UNIT ASSEMBLY	
ELECTRO-HYDRAULIC - THREE FUNCTION (6/2009 →)	9-34
ELECTRO-HYDRAULIC - FOUR AND FIVE FUNCTION (6/2009 →)	9-38
ELECTRONIC CONTROL - THREE FUNCTION (→ 6/2009)	9-32
ELECTRONIC CONTROL - FOUR AND FIVE FUNCTION (→ 6/2009)	9-36
MANUAL CONTROL - THREE FUNCTION	9-20
MANUAL CONTROL - FOUR FUNCTION	9-22
CONTROL VALVE LOCKOUT GROUP	
MANUAL CONTROL VALVE	9-24

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
COOLANT HOSES	
GM 4.3L LPG WITH CAB - PSI	3-39
COOLING	
CUMMINS QSB 3.3L DIESEL	2-16
GM 4.3L GASOLINE AND LPG	2-12
COUNTERWEIGHT	1-10
COWL ELECTRICAL	
ELECTRIC HYDRAULIC	4-8
MANUAL HYDRAULIC	4-10
COWL MOUNT	1-12
CRANKCASE BREATHER	
CUMMINS QSB 3.3L DIESEL	2-102
CRANKSHAFT	
CUMMINS QSB 3.3L DIESEL	2-100
CRANKSHAFT PULLEY	
GM 4.3L, GASOLINE AND LPG - PSI OPTION (S/N E024V02386J →)	2-47
CYLINDER BLOCK	
CUMMINS QSB 3.3L DIESEL	2-82
GM 4.3L GASOLINE AND LPG	2-48
CYLINDER HEAD	
CUMMINS QSB 3.3L DIESEL	2-80
GM 4.3L GASOLINE AND LPG	2-52
D	
DIFFERENTIAL	6-10
DISTRIBUTER AND COIL	
GM 4.3L GASOLINE AND LPG - PSI OPTION (S/N E024V02386J →)	2-71
DISTRIBUTOR ASSEMBLY	
GM 4.3L, GASOLINE AND LPG	4-29
DRIVE AXLE AND ATTACHING PARTS	
WET BRAKE	6-4
DRIVE AXLE HOUSING AND HUB	6-6
DRIVE TIRE AND WHEEL	6-2
E	
E-HYDRAULIC CONTROL CONVERSION KITS	
ELECTRICAL MOUNTING PLATE	
GM 4.3L LPG - PSI OPTION (S/N E024V02386J →)	2-39
ELECTRICAL MOUNTING PLATE AND LIFTING EYE	
GM 4.3L GASOLINE - PSI OPTION	2-40
ELECTRICAL SYSTEM	
RIGHT HAND CHASSIS	4-4
ELECTRO HYDRAULIC POPPET VALVE	
ELECTRONIC CONTROL VALVE - THREE, FOUR, AND FIVE FUNCTION	9-44
ELECTRONIC CONTROL LEVERS	
MINI-LEVER MODULE (FOUR FUNCTION) (→ S/N E024V01942H)	4-60
MINI-LEVER MODULES (THREE FUNCTION) (→ S/N E024V01942H)	4-58
ELECTRONIC CONTROL MODULE AND SENSORS	
CUMMINS QSB 3.3L DIESEL	4-42

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
ELECTRONIC LEVER LABELS	
MINI LEVER DUAL FUNCTION	1-48
MINI LEVER SINGLE FUNCTION	1-46
ENGINE CONTROL MODULE AND SENSORS	
GM 4.3L LPG - PSI OPTION (S/N E024V02386J →)	4-24
GM 4.3L GASOLINE - PSI OPTION	4-26
ENGINE CONTROL MODULE MOUNTING	4-36
ENGINE ELECTRICAL SYSTEM	
CUMMINS QSB 3.3L DIESEL	4-38
GM 4.3L GASOLINE AND LPG - GFI OPTION	4-18
GM 4.3L GASOLINE AND LPG - PSI OPTION	4-22
ENGINE MOUNTING	
CUMMINS QSB 3.3L DIESEL	2-76
GM 4.3L GASOLINE AND LPG	2-30
EXHAUST MANIFOLD	
CUMMINS QSB 3.3L DIESEL	2-84
EXHAUST MANIFOLDS	
GM 4.3L GASOLINE AND LPG - PSI OPTION (S/N E024V02386J →)	2-44
EXHAUST SYSTEM	
CUMMINS QSB 3.3L	2-10
GM 3.4L GASOLINE AND LPG - PSI OPTION (S/N E024V02386J →)	2-6
GM 4.3L GASOLINE AND LPG - GFI OPTION	2-4
EXHAUST WRAPS	
GM 4.3L GASOLINE AND LPG	2-8
F	
FAN ASSEMBLY	
CUMMINS QSB 3.3L DIESEL	2-75
GM 4.3L GASOLINE AND LPG - PSI OPTION (S/N E024V02386J →)	2-38
FAN MOUNT ASSEMBLY	
GM 4.3L GASOLINE AND LPG - GFI OPTION	2-34
GM 4.3L, GASOLINE AND LPG - PSI OPTION (S/N E024V02386J →)	2-36
FIRE EXTINGUISHER	12-6
FLOORPLATES AND COVERS	1-6
FLYWHEEL AND HOUSING	
CUMMINS QSB 3.3L DIESEL	2-78
GM 4.3L GASOLINE AND LPG	2-32
FORK POSITIONER ASSEMBLY	12-16
FORK POSITIONER CYLINDER	12-18
FORKS	
STANDARD TAPER - CLASS IV	1-42
FORWARD CLUTCH HIGH AND OUTPUT SHAFT	
THREE SPEED TRANSMISSION - FWD2	5-22
FORWARD CLUTCH LOW	
TWO SPEED TRANSMISSION	5-40
FORWARD CLUTCH LOW AND SECOND SHAFT	
THREE SPEED TRANSMISSION - FWD1, RANGE2	5-20
FREE-LIFT	
THREE STAGE FULL FREE-LIFT	11-16

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
FREE-LIFT CYLINDER	
THREE STAGE FULL FREE-LIFT	11-18
FUEL CAP	
DIESEL	3-46
FUEL FILTER	
CUMMINS QSB 3.3L DIESEL	3-55
FUEL FILTER PLUMBING	
CUMMINS QSB 3.3L DIESEL	3-52
FUEL INJECTION PUMP	
CUMMINS QSB 3.3L DIESEL	3-47
FUEL INJECTOR AND INJECTOR PLUMBING	
CUMMINS QSB 3.3L DIESEL	3-48
FUEL PUMP PLUMBING	
CUMMINS QSB 3.3L DIESEL	3-50
FUEL SENDER AND ATTACHING PARTS	
GM 4.3L GASOLINE - PSI OPTION	3-16
FUEL SYSTEM	
CUMMINS QSB 3.3L DIESEL	3-44
GM 4.3L LPG - PSI (S/N E024V02386J →)	3-26
GM 4.3L GASOLINE - GFI OPTION	3-12
GM 4.3L GASOLINE - PSI	3-14
GM 4.3L LPG - GFI (→ S/N E024V02385J)	3-22
FULL SUSPENSION SEAT	
MANUAL AND ELECTRO-HYDRAULIC — SWIVEL AND NON SWIVEL - SHEET 1 OF 3 (S/N E024V01943H →)	1-30
SHEET 2 OF 3 (S/N E024V01943H →)	1-34
WITH AND WITHOUT ELECTRONIC CONTROLS (→ S/N E024V01942H)	1-26
FULL SUSPENSION SWIVEL SEAT	
WITH AND WITHOUT ELECTRONIC CONTROLS (→ S/N E024V01942H)	1-28
FUSE BOX	
GM 4.3L LPG - PSI OPTION (S/N E024V02386J →)	4-16
G	
GEAR PUMP	9-10
GEAR PUMP ASSEMBLY	9-8
H	
HAND LEVERS	
FOUR FUNCTION - WITH DETENTED LEVERS	9-16
FOUR FUNCTION - WITHOUT DETENTED LEVERS	9-18
THREE FUNCTION - WITH DETENTED LEVERS	9-12
THREE FUNCTION - WITHOUT DETENTED LEVERS	9-14
HANG-ON SIDE-SHIFT CARRIAGE AND HOSES	
WITH FORK POSITIONER	12-10
WITHOUT FORK POSITIONER (→ S/N B513V01979J) (→ S/N B514V02564J)	12-12
WITHOUT FORK POSITIONER (S/N B513V01980J →) (S/N B514V02565J →)	12-14
HEADER HOSE AND ATTACHING PARTS	
THREE STAGE FULL FREE-LIFT - 147.2 INCH LIFT-HEIGHT (S/N B514V02372H →)	12-44
THREE STAGE FULL FREE-LIFT - 182.7-218.1 INCH LIFT-HEIGHT (S/N B514V02372H →)	12-48

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
HEADER HOSE AND AUXILIARY TUBE	
THREE STAGE FULL FREE-LIFT (→ S/N B514V02371H)	12-40
TWO STAGE LIMITED FREE-LIFT	10-14
TWO STAGE LIMITED FREE-LIFT (→ S/N B513V01889H)	12-32
HEADER HOSE CONVERSION KITS	
HEADER HOSES	
TWO STAGE LIMITED FREE-LIFT (S/N B513V01890H →)	12-36
HOIST HOSE AND ATTACHING PARTS	9-65
HOOD ASSEMBLY	1-2
HYDRAULIC CONTROL CONVERSIONS	13-4
HYDRAULIC FILTER	9-6
HYDRAULIC SUPPLY AND RETURN	9-2
I	
IMPACT SENSOR	4-68
INNER MAST	
THREE STAGE FULL FREE-LIFT	11-6
TWO STAGE LIMITED FREE-LIFT	10-4
INSTRUMENT CLUSTER	4-12
INTAKE AIR FUEL MODULE	
GM 4.3L GASOLINE - PSI OPTION	2-68
INTERMEDIATE MAST	
THREE STAGE FULL FREE-LIFT	11-4
L	
LABELS	
EXTERIOR	1-52
HYDRAULIC CONTROL LABELS - CONTROL LEVER	1-56
INTERIOR	1-50
LIFTING BRACKET	
CUMMINS QSB 3.3L DIESEL	2-115
LIGHT KITS	13-3
LIGHTS	
STOP, TAIL, TURN, BACKUP, AND STROBE	4-50
LOAD BACKREST EXTENSION	1-44
LOAD WEIGH ELECTRICAL	4-70
LPG CONVERTER	
GM 4.3L LPG - PSI OPTION (S/N E024V02386J →)	3-37
LPG LOCK OFF	
GM 4.3L - PSI OPTION (S/N E024V02386J →)	3-38
LPG REGULATOR AND MIXER	
GM 4.3L - PSI OPTION (S/N E024V02386J →)	3-36
LPG TANK BRACKET	
SWING OUT	3-40
SWING OUT/ DROP DOWN	3-42
M	
MAIN LIFT	
THREE STAGE FULL FREE-LIFT	11-8
TWO STAGE LIMITED FREE-LIFT	10-6

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
MAIN LIFT CYLINDER	
THREE STAGE FULL FREE-LIFT	11-12
TWO STAGE LIMITED FREE-LIFT	10-10
MAST ELECTRICAL	4-57
MID INLET SECTION	
MANUAL AND ELECTRONIC CONTROL VALVE - THREE, FOUR AND FIVE FUNCTION	9-31
MINI LEVER MODULE LABELS	
HYDRAULIC CONTROL FUNCTIONS	1-54
MINI-LEVER CONTROLS	
WITH ARMREST - THREE FUNCTION (S/N E024V01943H →)	4-62
WITH ARMREST - FOUR FUNCTION (S/N E024V01943H →)	4-64
WITH ARMREST - FIVE FUNCTION (S/N E024V01943H →)	4-66
MIRRORS	12-4
MISCELLANEOUS CONVERSION KITS	13-8
MONOTROL PEDAL ASSEMBLY	3-58
N	
NON SUSPENSION SEAT	
WITH HIP RESTRAINT (→ S/N E024V01942H)	1-16
WITHOUT ELECTRONIC CONTROLS (S/N E024V01943H →)	1-18
WITHOUT ELECTRONIC CONTROLS - OPTIONAL	1-20
O	
OIL FILTER AND COOLER	
CUMMINS QSB 3.3L DIESEL	2-92
OIL LEVEL GAUGE	
CUMMINS QSB 3.3L DIESEL	2-116
OIL PAN	
CUMMINS QSB 3.3L DIESEL	2-94
OIL PUMP	
GM 4.3L GASOLINE AND LPG	2-72
OIL PUMP AND FRONT GEAR COVER	
CUMMINS QSB 3.3L DIESEL	2-90
OUTER MAST	
THREE STAGE FULL FREE-LIFT	11-2
TWO STAGE LIMITED FREE-LIFT	10-2
OUTLET SECTION	
ELECTRONIC CONTROL VALVE - THREE, FOUR AND FIVE FUNCTION WITHOUT ANTI-STALL SOLENOID (→ 6/2009)	9-54
ELECTRONIC CONTROL VALVE - THREE, FOUR, AND FIVE FUNCTION WITH ANTI-STALL SOLENOID (6/2009 →)	9-56
MANUAL CONTROL VALVE - THREE AND FOUR FUNCTION	9-30
OUTPUT SHAFT	
TWO SPEED TRANSMISSION	5-38
OVERHEAD GUARD	1-14
P	
PARK BRAKE ASSEMBLY	
→ S/N E024V02090H	8-22
S/N E024V02091H →	8-24

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
PISTON AND CONNECTING ROD CUMMINS QSB 3.3L DIESEL	2-104
POWER DISTRIBUTION MODULE GFI OPTION (→ S/N E024V02385J)	4-14
PRE-CLEANER AND MOUNT CUMMINS QSB 3.3L DIESEL	3-11
PRESSURE REGULATOR	12-24
PULLEY AND TENSIONER GM 4.3L, GASOLINE AND LPG - PSI OPTION (S/N E024V02386J →)	2-42
PUMP DRIVE	5-46
R	
REGULATOR GM 4.3L LPG - GFI OPTION (→ S/N E024V02385J)	3-34
REMOTE KEY SWITCH	4-56
REPLACEMENT KITS	13-8
REVERSE CLUTCH TWO SPEED TRANSMISSION	5-36
REVERSE CLUTCH AND FIRST SHAFT THREE SPEED TRANSMISSION - REV1, RANGE 1	5-24
ROCKER ARM SHAFT CUMMINS QSB 3.3L DIESEL	2-106
S	
SEALED ALTERNATOR AND MOUNTING CUMMINS QSB 3.3L DIESEL	4-46
GM 4.3L GASOLINE AND LPG	4-35
SEAT ATTACHING PARTS NOT INCLUDED WITH SEAT - SHEET 3 OF 3 (S/N E024V01943H →)	1-36
SEAT CONVERSION KITS	13-2
SEMI SUSPENSION SEAT WITH AND WITHOUT ELECTRONIC CONTROLS (→ S/N E024V01942H)	1-22
SEMI-SUSPENSION SEAT WITH AND WITHOUT ELECTRONIC CONTROLS (S/N E024V01943H →)	1-24
SIDE-SHIFT ASSEMBLY	12-20
WITHOUT FORK POSITIONER (S/N B513V01980J →) (S/N B514V02565J →)	12-26
SIDE-SHIFT CYLINDER	12-22
WITHOUT FORK POSITIONER (S/N B513V01980J →) (S/N B514V02565J →)	12-28
SPARK PLUGS AND WIRES GM 4.3L GASOLINE AND LPG - PSI OPTION (S/N E024V02386J →)	4-28
STARTER GM 4.3L	4-32
STARTER MOTOR CUMMINS QSB 3.3L DIESEL	4-47
STARTING AID CUMMINS QSB 3.3L DIESEL	2-114
STEER AXLE	7-12
STEER CONTROL UNIT	7-8
STEER CYLINDER	7-14

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
STEER TIRE AND WHEEL	7-15
STEERING COLUMN AND ATTACHING PARTS	
DIESEL	7-3
GASOLINE AND LPG	7-2
STEERING COLUMN ASSEMBLY	
GASOLINE AND LPG	7-4
ISOLATED, DIESEL	7-6
STEERING LINES	7-10
STROBE LIGHT (LED)	12-2
T	
THERMOSTAT	
CUMMINS QSB 3.3L DIESEL	2-112
THERMOSTAT AND WATER OUTLET HOUSING	
GM 4.3L LPG - PSI OPTION (S/N E024V02386J →)	2-45
GM 4.3L GASOLINE - PSI OPTION	2-46
THROTTLE BODY	
GM 4.3L LPG - PSI OPTION (S/N E024V02386J →)	3-32
GM 4.3L GASOLINE - PSI OPTION	3-20
THROTTLE BODY ASSEMBLY	
GM 4.3L LPG (→ S/N E024V01900H EXC. 01888)	3-28
GM 4.3L LPG - GFI OPTION (S/N E024V01901H ↔ S/N E024V02385J INC. 01888)	3-30
THROTTLE BODY ASSEMBLY AND FUEL RAIL	
GM 4.3L GASOLINE - GFI OPTION	3-18
THROTTLE PEDAL AND ATTACHING PARTS	
MONOTROL PEDAL	3-56
THROTTLE PEDAL ASSEMBLY AND ATTACHING PARTS	
STANDARD PEDAL	3-60
TILT CYLINDER AND MAST INSTALLATION	9-58
TILT CYLINDERS	9-60
TILT HYDRAULICS	9-62
TILT SECTION	
ELECTRONIC CONTROL VALVE - THREE, FOUR AND FIVE FUNCTION	9-42
TORQUE CONVERTER	
CUMMINS QSB 3.3L DIESEL	5-8
GM 4.3L GASOLINE AND LPG	5-6
TRANSMISSION ASSEMBLY	
THREE SPEED - SHEET 1 OF 2 (→ S/N E024V01853G)	5-12
THREE SPEED - SHEET 2 OF 2 (→ S/N E024V01853G)	5-14
THREE SPEED - SHEET 1 OF 2 (S/N E024V01854G →)	5-16
THREE SPEED - SHEET 2 OF 2 (S/N E024V01854G →)	5-18
TWO SPEED - SHEET 1 OF 2 (→ S/N E024V01787G)	5-28
TWO SPEED - SHEET 2 OF 2 (→ S/N E024V01787G)	5-30
TWO SPEED - SHEET 1 OF 2 (S/N E024V01788G →)	5-32
TWO SPEED - SHEET 2 OF 2 (S/N E024V01788G →)	5-34
TRANSMISSION COOLING LINES	
CUMMINS QSB 3.3L DIESEL	5-2
GM 4.3L LPG	5-4

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
TRANSMISSION ELECTRICAL SYSTEM	
THREE SPEED TRANSMISSION	4-54
TWO SPEED TRANSMISSION	4-52
TRANSMISSION MOUNT	5-10
TURBOCHARGER	
CUMMINS QSB 3.3L DIESEL	2-96
TURBOCHARGER PLUMBING	
CUMMINS QSB 3.3L DIESEL	2-98
V	
VALVE ASSEMBLY, LIFT AND LOWER	
ELECTRONIC CONTROL VALVE - THREE, FOUR AND FIVE FUNCTION	9-40
VALVE ASSEMBLY, LIFT AND TILT	
MANUAL CONTROL VALVE - THREE AND FOUR FUNCTION	9-26
VALVE COVER	
CUMMINS QSB 3.3L DIESEL	2-88
VALVE COVER AND INLET MANIFOLD	
GM 4.3L GASOLINE AND LPG - GFI OPTION (→ S/N E024V02385J)	2-62
GM 4.3L GASOLINE AND LPG - PSI OPTION (S/N E024V02386J →)	2-66
VENT LINES	9-64
VIBRATION DAMPER	
CUMMINS QSB 3.3L DIESEL	2-113
W	
WATER BYPASS	
GM 4.3L GASOLINE - PSI OPTION	2-74
WATER OULET CONNECTION	
CUMMINS QSB 3.3L DIESEL	2-117
WATER PUMP AND PULLEY	
CUMMINS QSB 3.3L DIESEL	2-110
WATER SEPARATOR	
CUMMINS QSB 3.3L DIESEL	3-54
WET BRAKE ASSEMBLY	6-12
WIRE HARNESS	
ALTERNATOR - CUMMINS QSB 3.3L DIESEL	4-120
COWL WITH FORWARD/REVERSE - MANUAL HYDRAULICS	4-162
COWL WITH FORWARD/REVERSE LEVER - ELECTRONIC HYDRAULICS	4-154
COWL WITH MONOTROL PEDAL - ELECTRONIC HYDRAULICS	4-150
COWL WITH MONOTROL PEDAL - MANUAL HYDRAULICS	4-158
ELECTRONIC CONTROL VALVE - THREE FUNCTION	4-138
ELECTRONIC CONTROL VALVE - FOUR FUNCTION	4-140
ELECTRONIC CONTROL VALVE - FIVE FUNCTION	4-142
ENGINE - CUMMINS QSB 3.3L DIESEL	4-98
ENGINE, GASOLINE GM 4.3L - 2008-2009 SERIES (→ S/N E024V01900H EXC. 01888)	4-100
ENGINE, LPG, GM 4.3L - 2008-2009 SERIES (→ S/N E024V01900H EXC. 01888)	4-108
LEFT HAND CHASSIS - GM 4.3L LPG (→ S/N E024V01900H EXC. 01888)	4-127
LEFT HAND CHASSIS - GM 4.3L LPG (2010 SERIES)(WITH PREMIUM LOW FUEL SENSOR) (S/N E024V01901H → INC. 01888)	4-130

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
LEFT HAND CHASSIS - GM 4.3L LPG (2010 SERIES)(WITHOUT PREMIUM LOW FUEL SENSOR) (S/N E024V01901H → INC. 01888)	4-132
LEFT HAND CHASSIS - GM 4.3L GASOLINE (→ S/N E024V01900H EXC. 01888)	4-134
LEFT HAND CHASSIS - GM 4.3L GASOLINE (SERIES 2010) (S/N E024V01901H → INC. 01888)	4-136
LIGHTS	4-166
LOW FUEL SENSOR	4-168
RIGHT HAND CHASSIS - GM 4.3L GASOLINE AND LPG (→ S/N E024V02154H)	4-72
RIGHT HAND CHASSIS - GM 4.3L GASOLINE AND LPG (S/N E024V02155H →)	4-78
RIGHT HAND CHASSIS - CUMMINS QSB 3.3L DIESEL (→ S/N E024V02164H)	4-84
RIGHT HAND CHASSIS - CUMMINS QSB 3.3L DIESEL (S/N E024V02165H →)	4-90
SEALED ALTERNATOR - CUMMINS QSB 3.3L DIESEL	4-122
SEALED ALTERNATOR - GM 4.3L GASOLINE AND LPG	4-125
SEAT JUMPER	4-96
TRANSMISSION - THREE SPEED	4-144
TRANSMISSION - TWO SPEED	4-148
WIRE HARNESS (ENGINE)	
GM 4.3L GASOLINE (2010 SERIES) (S/N E024V01901H → INC. 01888)	4-104
GM 4.3L LPG (GFI OPTION) - 2010 SERIES (S/N E024V01901H ↔ S/N E024V02385J INC. 01888)	4-112
GM 4.3L, LPG - PSI OPTION (S/N E024V02386J →)	4-116

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPA	US Environmental Protection Agency	UL Type GS	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the next page.

HYSTER UNIT CODE D001 NORTH AMERICA 06/2001

TABLE OF CONTENTS

DESCRIPTION	PAGE
AIR INTAKE AND FILTER DIESEL (→ D/B 11/98)	3-22
AIR INTAKE AND FILTER DIESEL (D/B 11/96 →)	
AIR INTAKE AND FILTER GASOLINE AND LPG	
ALTERNATOR GASOLINE, LPG, AND DIESEL	
ALTERNATOR TYPES GS, LPS, AND DS	
AUXILIARY FUNCTION TUBE TWO AND THREE STAGE FULL F	

SECTION 13 NUMERICAL INDEX

PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.
142	3-4	19	10-13	25	11-27	29	12-31	12	16719	3-36	5
12445	3-32	19	10-17	6	11-31	25	16751	3-16	16849	3-34	21
	3-34	1	10-27	11	11-32	37	16849	3-36	16849	3-36	20
			11-11	6	8-4	29	16863	3-28	16863	3-28	17
			11-21	11	8-4	45	16865	3-6	16865	3-6	18
			12	6	9-7	9	16882	4-27	16882	4-27	41
			3	17	9-7	19		9-7		9-7	30
			9	10	9-11	9		9-11		9-11	27
			23	46	9-11	17		10-10		10-10	36
			27	46	10-9	21		10-13		10-13	32
			26	14	10-9	28		11-7		11-7	24
			28	14	10-13	16		11-9		11-9	17
			50	14	11-7	19					

SECTIONS

- 1
- 2
- 3
- 4
- 5 BRAKE/ACC
- 6
- 7 MAST-TWO STAG
- 8 MAST-THREE ST
- 9 MAST-TWO ST
- 10
- 11

TRANSMISSION HOUSING
S/N D001H-2628

KEY:
A: Diesel
B: Gasoline and LPG

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
		Transmission	1	1
		Case	1	1
1	2021670	Bearing Cap	2	2
2	2023418	Washer	4	4
3	296429	Bolt	4	4
4	293947	Cover	1	1
5	2021390	Colter Pin	2	2
6	1371656	O-Ring	4	4
7	2021329	Plug	1	1
8	2021915	Housing	22	22
9	2021675	Pin	39	39
10	2021336	Bolt	1	1
11	287860	Lockwasher	1	1
12	292682	Hydraulic Pump	1	1
13		Figure 5-3	8	8
14	2021345	Gasket	1	1
15	214364	Bolt	1	1
16	296418	Washer	1	1
17	2021388	Temperature Switch	1	1
18	2021389	Breather	9	9
19	2021383	Dipstick	9	9
20	292515	Bolt	2	2
21	136692	Nut	3	3
22	292527	Bolt	3	2
23	292531	Capscrew	4	4
24	292583	Lockwasher	4	4
25	293637	Bolt	1	1
26	296420	Washer	1	1
	996403	Transmission Kit (Includes Item 7)	1	1
	996405	Transmission Kit (Includes Item 14)	1	1

This Parts Manual is divided into 11 major sections which are listed above. Quick be made by placing the right thumb on the tab of the desired section, bending the pages to the corresponding tab.

© Copy Right Date HYSTER COMPANY See Service Manual for service procedures. 5-15

HOW TO FIND THE DESIRED PART NUMBER

WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the Sections Page. Choose the general area of reference most likely to include the part.
2. Turn to the section you chose. Use the Section Table of Contents to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Table of Contents (Page i).
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS KNOWN:

5. Use the Numerical Index (Page 14-1) to find the part number. Turn to the page listed and locate the part as indicated by the item number.

GENERAL:

The assembly breakdowns include part numbers, descriptions, quantities required, keys and footnotes to help in selecting correct parts.

6. Parts Supersession Information. Part numbers that have this history will be displayed in the parts list in the order that they were superseded (from oldest to newest). The superseded part numbers will be shown with a line through them.

Five periods in the PART NO. column (.) indicate that the part is either *Not Serviced Separately* or there is a reference to another figure. A figure reference is denoted by a pointing hand followed by a figure number in the DESCRIPTION column (☞ Figure 10)

7. Keys are used to show two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C", "D", or "E" and the corresponding quantity column to find the required parts. Two periods in the QTY column (..) indicate that the part is not used for that assembly.
8. Indented descriptions under the DESCRIPTION column are used to indicate assemblies and

subparts of assemblies. In the example on the previous page, *BEARING CAP* (Item 2) is a subpart of the major assembly *CASE*.

9. Quantities shown are for one assembly. The quantities of the subpart *BEARING CAP* are indicated as two and two. This means two per *CASE* assembly.
10. Serial number breaks identify the most current parts information and are shown as follows:
 - **S/N D001H2628**
Indicates last serial number affected.
 - S/N D001H2629** →
Indicates the first serial number affected.
 - S/N D001H1553** ↔ **S/N D001H3291**
Indicates a range of serial numbers affected.

ECN numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information and are identified as follows:

- **S/N Pending Per ECN 63243**
Indicates a pending serial number for last unit affected.
- S/N Pending Per ECN 63243** →
Indicates a pending serial number for first unit affected.

Date breaks are used to indicate when a change occurred but a subsequent serial number break was not recorded. This is an arbitrary date usually based on the ECN release and are identified as follows:


- **D/B 3/00**
Indicates that a change occurred sometime within that month for the item affected.
- D/B 3/00** →
Indicates that a change occurred sometime within that month for the item affected.
- D/B 3/00** ↔ **D/B 4/00**
Indicates a range of production dates of the item affected.

Contact your local dealer for Hyster lift trucks for serial number information for items with a ECN or a date break.

ORDERING PARTS:


When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.

For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.

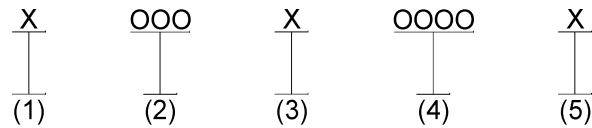IDENTIFICATION OF TRUCK SERIAL NUMBERS

- (1) and (2) The first letter and three numbers indicate the truck unit code.
- (3) The second letter indicates the plant of manufacture.
- (4) The four or five digit number indicates the production sequence number of the truck.
- (5) The final letter indicates the year of manufacture starting with "A" in 1957, 1980, and 2003.
The letters "I", "O", and "Q" will not be used.

For pending serial numbers contact your local dealer for Hyster lift trucks.

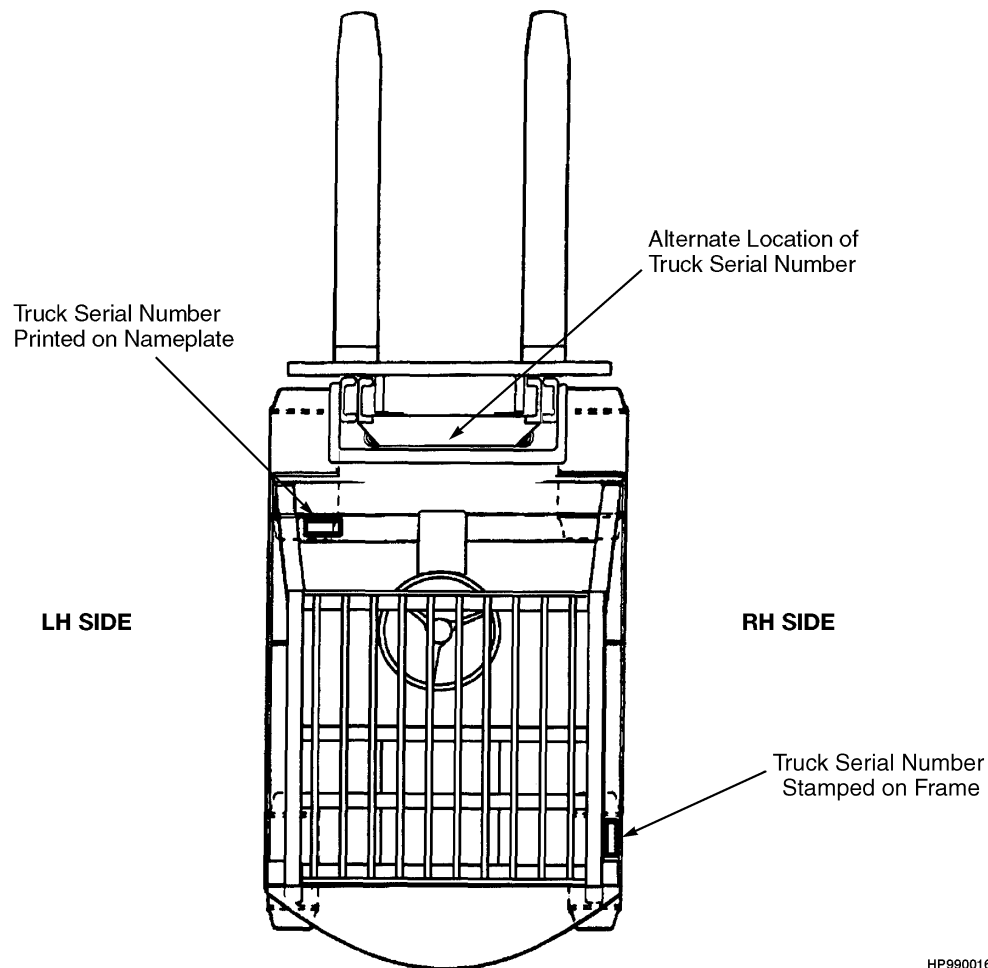

HP990016

Parts referred to in this book as right or left hand parts are in accordance with the illustration above.