

PARTS MANUAL

**FORTIS®
H30-35FT, H40FTS
(F001)**

CUSTOMER EDITION

HYSTER

SECTIONS

1	FRAME
2	ENGINE ASSEMBLY
3	FUEL SYSTEM
4	ELECTRICAL SYSTEM
5	TRANSMISSION
6	DRIVE AXLE
7	STEERING SYSTEM
8	BRAKE SYSTEM
9	HYDRAULIC SYSTEM
10	MAST-TWO STAGE LIMITED FREE-LIFT
11	MAST-TWO STAGE FULL FREE-LIFT
12	MAST-THREE STAGE FULL FREE-LIFT
13	OPTIONS
14	FIELD CONVERSION KITS
15	NUMERICAL INDEX

This Parts Manual is divided into 15 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
ADD ON OPTIONS	
ADD ON TELEMETRY KITS	14-13
AIR INTAKE SYSTEM	
AIR FILTER ASSEMBLY - LPG, GASOLINE, AND DIESEL	3-70
MAZDA 2.0L, GASOLINE - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	
.....	3-4
MAZDA 2.0L, GASOLINE - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	3-24
MAZDA 2.0L, LPG - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	3-8
MAZDA 2.0L, LPG - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	3-32
PRE-CLEANER AND DUCT	3-71
YANMAR DIESEL (→ 12/2007)	3-66
YANMAR DIESEL (1/2008 →)	3-68
ALTERNATOR AND MOUNTING	
YANMAR DIESEL	4-79
ARMREST ASSEMBLY	
MINI-LEVER MODULES - SEMI-SUSPENSION SEAT WITH HIP RESTRAINTS (S/N F001V03522H →)	
.....	1-50
MINI-LEVER MODULES - FULL SUSPENSION SEAT (S/N F001V03522H →)	1-52
ASSEMBLED ENGINE	
MAZDA 2.0L, GASOLINE AND LPG - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	
.....	2-56
AUDIBLE ALARM KITS	14-4
AUXILIARY SECTION, ONE AND TWO	
MANUAL CONTROL VALVE - THREE AND FOUR FUNCTION (4/2014 →)	9-48
AUXILIARY SECTIONS, ONE AND TWO	
MANUAL CONTROL VALVE - THREE AND FOUR FUNCTION (→ S/N F001V02621E)	9-44
MANUAL CONTROL VALVE - THREE AND FOUR FUNCTION (S/N F001V02564E ↔ 4/2014)	9-46
AUXILIARY TUBE EXTENSION KIT	
AUXILIARY TUBE EXTENSIONS	
TWO STAGE FULL FREE-LIFT AND THREE STAGE FULL FREE-LIFT (→ 4/2011)	13-30
TWO STAGE FULL FREE-LIFT AND THREE STAGE FULL FREE-LIFT (4/2011 →)	13-32
TWO-STAGE LIMITED FREE-LIFT	13-28
B	
BACK-UP ALARM	13-6
BRAKE ASSEMBLY	8-16
BRAKE LINKAGE	
DUAL PEDAL (→ S/N F001V03571H)	8-8
DUAL PEDAL (S/N F001V03572H →)	8-12
SINGLE PEDAL (→ S/N F001V03571H)	8-2
SINGLE PEDAL (S/N F001V03572H →)	8-6
C	
CAMSHAFT AND DRIVE GEAR	
YANMAR 2.6L DIESEL	2-104
CAMSHAFT AND VALVES	
MAZDA 2.0L, GASOLINE AND LPG - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	2-46

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
MAZDA 2.0L, GASOLINE AND LPG - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	2-60
CARBURETOR	
MAZDA 2.0L, LPG - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	2-48
MAZDA 2.0L, LPG - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	3-18
CARRIAGE	
THREE STAGE FULL FREE-LIFT (→ 4/2011)	12-24
THREE STAGE FULL FREE-LIFT (4/2011 →)	12-26
TWO STAGE FULL FREE-LIFT (→ 4/2011)	11-24
TWO STAGE FULL FREE-LIFT (4/2011 →)	11-26
TWO STAGE LIMITED FREE-LIFT	10-16
CHARGE PUMP	
→ S/N F001V04713L	5-66
CHARGE PUMP ASSEMBLY	
S/N F001V04714L →	5-68
CONTROL VALVE	
TRANSMISSION (→ 9/2007)	5-62
CONTROL VALVE ASSEMBLY	
9/2007 →	5-64
ELECTRONIC CONTROL - THREE AND FOUR FUNCTION (→ S/N F001V02519E)	9-52
MANUAL CONTROL - THREE AND FOUR FUNCTION (→ 4/2014)	9-34
MANUAL CONTROL - THREE AND FOUR FUNCTION (4/2014 →)	9-36
CONTROL VALVE LOCKOUT GROUP	
MANUAL CONTROL VALVE	9-30
CONVERSION KIT	
COOLING SYSTEM	
GASOLINE - MAZDA 2.0L (→ S/N F001V02162D)	2-8
GASOLINE (MAZDA 2.0L) (S/N F001V02163D ↔ S/N F001V02239E)	2-14
LPG - MAZDA 2.0L (→ S/N F001V02162D)	2-10
LPG (MAZDA 2.0L) (S/N F001V02163D ↔ S/N F001V02238E)	2-12
MAZDA 2.0L, GASOLINE AND LPG - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	2-16
YANMAR 2.6L - DIESEL (S/N F001V02163D →)	2-86
YANMAR 2.6L DIESEL (→ S/N F001V02163D)	2-84
COUNTERWEIGHT	
→ 4/2007	1-3
4/2007 →	1-4
COUNTERWEIGHT EXHAUST	
MAZDA 2.0L GASOLINE AND LPG - WITH CATALYTIC CONVERTER (→ S/N F001V02238E)	2-18
WITH PURIFIER - YANMAR 2.6L DIESEL	2-88
COWL ELECTRICAL	
ELECTRO-HYDRAULICS	4-36
MANUAL HYDRAULIC - WITH OPERATOR PRESENCE SYSTEM	4-38
COWL MOUNTING	1-65
CRANKSHAFT AND PISTONS	
MAZDA 2.0L, GASOLINE AND LPG - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	2-34
MAZDA 2.0L, GASOLINE AND LPG - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	2-62

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
YANMAR 2.6L DIESEL	2-106
CYLINDER BLOCK	
MAZDA 2.0L, GASOLINE AND LPG - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	2-30
MAZDA 2.0L, GASOLINE AND LPG - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	2-64
YANMAR 2.6L DIESEL	2-108
CYLINDER HEAD	
MAZDA 2.0L, GASOLINE AND LPG - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	2-32
YANMAR 2.6L DIESEL	2-100
CYLINDER HEAD AND COVER	
MAZDA 2.0L, GASOLINE AND LPG - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239V →)	2-58
D	
DELAY VALVE	
MAZDA 2.0L, LPG - 2005 AND 2006 EMISSION COMPLIANT ENGINES (S/N F001V02035D ↔ S/N F001V02238E)	2-54
MAZDA 2.0L, LPG - 2005 AND 2006 EMISSION COMPLIANT ENGINES (S/N F001V02035D ↔ S/N F001V02238E)	3-22
DIRECTIONAL CONTROL KITS	14-2
DISTRIBUTOR	
MAZDA 2.0L - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	4-78
DRIVE AXLE	
SHEET 1 OF 3	6-4
SHEET 2 OF 3	6-6
SHEET 3 OF 3	6-8
DRIVE AXLE AND ATTACHING PARTS	6-2
DRIVE TIRES AND WHEELS	
PNEUMATIC - TRELLEBORG	6-12
PNEUMATIC RADIAL	6-10
PNEUMATIC SOLID - MONARCH	6-11
DUAL MIRRORS	
WITH CAB	13-9
E	
E-HYDRAULIC CONTROL CONVERSION KITS	
ELECTRICAL SYSTEM	
RH CHASSIS	4-4
RH CHASSIS - WITH SEAT BELT SEQUENCE MODULE	4-8
ELECTRONIC CONTROL LEVERS	
MINI-LEVER MODULE (FOUR FUNCTION) - DATE CODE 0725 THRU 0743	4-56
MINI-LEVER MODULE (FOUR FUNCTION) - DATE CODE 0744	4-62
MINI-LEVER MODULES - DATE CODE 0724	4-52
MINI-LEVER MODULES (THREE FUNCTION) - DATE CODE 0725 THRU 0743	4-54
MINI-LEVER MODULES (THREE FUNCTION) - DATE CODE 0744	4-58
ELECTRONIC LEVER LABELS	
AUXILIARY DUAL FUNCTION	1-84

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
AUXILIARY SINGLE FUNCTION	1-82
ELECTRONIC PRESSURE REGULATOR ASSEMBLY	
MAZDA 2.0L AND 2.2L LPG (2/2008 ↔ 2/2012)	3-46
MAZDA 2.0L AND 2.2L LPG (2/2013 →)	3-48
MAZDA 2.0L, LPG - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E ↔ 2/2008)	3-44
ELECTRONIC PRESSURE REGULATOR KIT	
MAZDA 2.0L, LPG - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	3-50
ELECTRONIC THROTTLE LINKAGE	
YANMAR DIESEL (→ S/N F001V03643H)	3-84
YANMAR DIESEL (S/N F001V04644H →)	3-86
EMISSION CONTROL SYSTEM	
MAZDA 2.0L, GASOLINE - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	2-74
MAZDA 2.0L, LPG - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	2-76
EMISSIONS LINES	
MAZDA 2.0L, GASOLINE - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	2-52
MAZDA 2.0L, GASOLINE - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	3-20
ENGINE CONTROL MODULE	
MAZDA 2.0L, GASOLINE - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	4-44
MAZDA 2.0L, LPG - 2007-2010 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	4-45
ENGINE COOLING	
MAZDA 2.0L, GASOLINE AND LPG - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	2-36
MAZDA 2.0L, GASOLINE AND LPG - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	2-72
ENGINE ELECTRICAL COMPONENTS	
MAZDA 2.0L AND 2.2L, GASOLINE AND LPG - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	4-14
MAZDA 2.0L, GASOLINE AND LPG - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	4-18
ENGINE ELECTRICAL SYSTEM	
MAZDA 2.0L, GASOLINE - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	4-24
MAZDA 2.0L, GASOLINE AND LPG - 2007-2010 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	4-28
MAZDA 2.0L, LPG - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	4-20
YANMAR DIESEL	4-48
ENGINE FUEL SYSTEM	
MAZDA 2.0L, GASOLINE AND LPG - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	2-82
ENGINE FUEL SYSTEM AND EMISSIONS CONTROL	
MAZDA 2.0L, LPG - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	2-42
MAZDA 2.0L, LPG - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	3-16
ENGINE FUEL SYSTEM AND INTAKE MANIFOLD	
MAZDA 2.0L, GASOLINE - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	2-40
MAZDA 2.0L, GASOLINE - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	3-14

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
ENGINE MOUNTING	2-4
ENGINE SAFETY ELECTRICAL	
MAZDA 2.0L	4-32
EXHAUST MANIFOLD	
MAZDA 2.0L, GASOLINE AND LPG - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	2-70
EXHAUST WITH CATALYTIC CONVERTER	
COUNTERWEIGHT AND OVERHEAD - MAZDA 2.0L, GASOLINE AND LPG, 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	2-22
F	
FAN ASSEMBLY	2-6
FENDER EXTENSIONS AND MUD GUARDS	1-68
FIRE EXTINGUISHER	13-10
FLOORPLATES AND COVERS	
→ S/N F001V02859F EXC. 02851	1-54
S/N F001V02860F ↔ S/N F001V03334G INC. 02851	1-58
S/N F001V03335G →	1-62
FLYWHEEL AND HOUSING	
MAZDA 2.0L (→ S/N F001V02037D)	2-24
MAZDA 2.0L (S/N F001V02038D →)	2-26
YANMAR 2.6L DIESEL	2-94
FORK ASSEMBLY KITS	14-13
FORK POSITIONER ASSEMBLY	13-26
FORKS	1-72
OPTIONAL	1-74
FORWARD CLUTCH	
INPUT - SINGLE SPEED (→ S/N F001V02229E)	5-50
FORWARD CLUTCH (INPUT)	
SINGLE SPEED (→ S/N F001V02230E)	5-52
SINGLE SPEED (S/N T141M001501 →) (S/N T148M001501 →)	5-54
FREE-LIFT	
THREE STAGE FULL FREE-LIFT - 8520000 SERIES	12-18
THREE STAGE FULL FREE-LIFT - 8800000 SERIES	12-20
TWO STAGE FULL FREE-LIFT - 8520000 SERIES	11-14
TWO STAGE FULL FREE-LIFT - 8800000 SERIES	11-18
FREE-LIFT CYLINDER	
THREE STAGE FULL FREE-LIFT	12-22
TWO STAGE FULL FREE-LIFT	11-22
FUEL FILTER	
YANMAR DIESEL	3-74
FUEL INJECTION	
YANMAR DIESEL	3-76
FUEL PUMP AND SENDER	
MAZDA 2.0L, GASOLINE - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	3-28
FUEL SUPPLY SYSTEM	
MAZDA 2.0L, GASOLINE - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	3-26
MAZDA 2.0L, LPG - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	3-34

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
FUEL SYSTEM	
MAZDA 2.0L, GASOLINE - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	3-30
MAZDA 2.0L, GASOLINE AND LPG - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	3-6
MAZDA 2.0L, LPG - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	3-10
MAZDA 2.0L, LPG - 2007-2010 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	3-36
YANMAR DIESEL	3-72
FUEL SYSTEM HOSES AND ATTACHING PARTS	
MAZDA 2.0L AND 2.2L LPG - 2007-2010 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	3-38
FUEL SYSTEM SENSORS	
MAZDA 2.0L, LPG - 2007-2010 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	4-47
FUEL, SYSTEM SENSORS	
MAZDA 2.0L, GASOLINE - 2007-2010 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	4-46
FULL SUSPENSION SEAT	
MANUAL AND ELECTRO-HYDRAULIC — SWIVEL AND NON SWIVEL - SHEET 1 OF 4 (S/N F001V03522H →)	1-40
RECLINER AND DAMPER KITS - SHEET 3 OF 4 (S/N F001V03522H →)	1-44
SERVICE KITS FOR NON SWIVEL AND SWIVEL - SHEET 2 OF 4 (S/N F001V03522H →)	1-42
WITH AND WITHOUT ELECTRONIC CONTROLS (S/N F001V01401 ↔ S/N F001V01501)	1-30
WITH AND WITHOUT ELECTRONIC CONTROLS (S/N F001V01501 ↔ S/N F001V01792D)	1-32
WITH LIMITED BACK TILT (S/N F001V01793D ↔ S/N F001V03521H)	1-34
FULL SUSPENSION SEAT ATTACHING PARTS	
NOT INCLUDED WITH SEAT - SHEET 4 OF 4 WITH MANUAL HYDRAULICS (S/N F001V03522H →)	1-46
NOT INCLUDED WITH SEAT - SHEET 4 OF 4 WITH ELECTRO-HYDRAULICS (S/N F001V03522H →)	1-48
FULL SUSPENSION SWIVEL SEAT	
WITH AND WITHOUT ELECTRONIC CONTROLS (→ S/N F001V01807D)	1-36
WITH LIMITED BACK TILT (S/N F001V01808D ↔ S/N F001V03521H)	1-38
G	
GEAR HOUSING	
YANMAR 2.6L DIESEL	2-96
GEAR PUMP ASSEMBLY	
CHAIN DRIVE OPTION	9-12
GEAR DRIVE OPTION	9-10
H	
HAND LEVERS	
FOUR FUNCTION - WITHOUT DETENTED LEVERS	9-24
FOUR FUNCTION - WITH DETENTED LEVERS	9-26
THREE FUNCTION - WITHOUT DETENTED LEVERS	9-20
THREE FUNCTION - WITH DETENTED LEVERS	9-22
HEADER HOSE	
THREE STAGE FULL FREE-LIFT - 8520000 SERIES (S/N B555V06632G →)	12-32
THREE STAGE FULL FREE-LIFT - 8800000 SERIES	12-36
THREE STAGE FULL FREE-LIFT - 8520000 SERIES (→ S/N B555V06631G)	12-28
TWO STAGE FULL FREE- LIFT (10/2012 →)	11-40

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
HEADER HOSE CONVERSION KITS	
HEADER HOSES	
TWO STAGE FULL FREE- LIFT (9/2009 ↔ 4/2011)	11-32
TWO STAGE FULL FREE- LIFT (3/2011 ↔ 10/2012)	11-36
TWO STAGE FULL FREE-LIFT (→ 9/2008)	11-28
TWO STAGE LIMITED FREE-LIFT	10-18
HOOD	
→ S/N F001V03576H	1-8
S/N F001V03577H ↔ S/N F001V03688H	1-10
S/N F001V03689H →	1-12
HYDRAULIC CONTROL VALVE	
ELECTRO HYDRAULIC POPPET VALVE - HOIST AND LOWER	9-62
ELECTRONIC CONTROL - THREE AND FOUR FUNCTION (S/N F001V02519E ↔ 7/2009)	9-56
ELECTRONIC CONTROL - THREE AND FOUR FUNCTION (7/2009 →)	9-58
ELECTRONIC VALVE AUXILIARY ONE SECTION - THREE AND FOUR FUNCTION	9-66
ELECTRONIC VALVE AUXILIARY TWO SECTION - FOUR FUNCTION	9-68
ELECTRONIC VALVE OUTLET SECTION - THREE AND FOUR FUNCTION (→ 7/2009)	9-70
ELECTRONIC VALVE OUTLET SECTION (7/2009 →)	9-72
ELECTRONIC VALVE TILT SECTION - THREE AND FOUR FUNCTION	9-64
HYDRAULIC CONTROLS	
HYDRAULIC FILTER	
→ S/N F001V03498G	9-13
S/N F001V03499G →	9-14
HYDRAULIC SUPPLY AND RETURN	
WITH ALUMINUM TRANSMISSION - WITH GEAR DRIVE	9-6
WITH ALUMINUM TRANSMISSION - WITH CHAIN DRIVE	9-8
WITH IRON TRANSMISSION	9-4
I	
IMPACT SENSOR	4-10
INNER MAST	
THREE STAGE FULL FREE-LIFT	12-8
TWO STAGE FULL FREE-LIFT	11-6
TWO STAGE LIMITED FREE-LIFT	10-6
INSTRUMENT CLUSTER	4-51
INTAKE AND EXHAUST MANIFOLD	
YANMAR 2.6L DIESEL	2-92
INTAKE AND EXHAUST MANIFOLDS	
MAZDA 2.0L, GASOLINE AND LPG - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	2-28
INTAKE MANIFOLD	
MAZDA 2.0L, GASOLINE - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	2-78
MAZDA 2.0L, LPG - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	2-80
INTEGRAL SIDE-SHIFT	
FORK POSITIONER - TWO STAGE LIMITED FREE-LIFT	13-22
FORK POSITIONER - THREE STAGE FULL FREE-LIFT	13-24
INTEGRAL SIDE-SHIFT CARRIAGE	
TWO AND THREE STAGE FULL FREE-LIFT	13-14
TWO STAGE LIMITED FREE-LIFT	13-12

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
INTEGRAL SIDE-SHIFT CYLINDER	13-17
INTEGRAL SIDE-SHIFT HYDRAULIC HOSES	
TWO AND THREE STAGE FULL FREE-LIFT (→ 4/2011)	13-19
TWO AND THREE STAGE FULL FREE-LIFT (4/2011 →)	13-20
TWO STAGE LIMITED FREE-LIFT	13-18
INTERMEDIATE MAST	
THREE STAGE FULL FREE-LIFT	12-6
L	
LABELS	
EXTERIOR	1-76
HYDRAULIC CONTROL LABELS - CONTROL LEVER	1-86
INTERIOR	1-78
LIGHT OPTIONS	14-4
LOAD BACKREST EXTENSION	1-70
LOAD WEIGH ELECTRICAL	4-76
LPG TANK BRACKET	
SWING OUT (→ S/N F001V02748E)	3-52
SWING OUT (S/N F001V02749E →)	3-54
SWING OUT, DROP DOWN (S/N F001V02749E →)	3-62
SWING OUT/DROP DOWN (→ S/N F001V02748E)	3-58
LUBRICATION SYSTEM	
YANMAR 2.6L DIESEL	2-112
M	
MAIN LIFT	
THREE STAGE FULL FREE-LIFT	12-10
TWO STAGE FULL FREE-LIFT	11-8
TWO STAGE LIMITED FREE-LIFT	10-8
MAIN LIFT CYLINDER	
LEFT HAND - TWO STAGE LIMITED FREE-LIFT	10-14
LEFT HAND - TWO STAGE FULL FREE-LIFT	11-12
RIGHT HAND - TWO STAGE LIMITED FREE-LIFT	10-12
RIGHT HAND - TWO STAGE FULL FREE-LIFT	11-10
THREE STAGE FULL FREE-LIFT - RIGHT HAND	12-14
THREE STAGE FULL FREE-LIFT - LEFT HAND	12-16
MANUAL VALVE ANTI STALL GROUP	9-32
MAST ELECTRICAL	
TILT SENSOR	4-74
MAST INSTALLATION	9-74
MASTER CYLINDER	8-15
MINI LEVER MODULE LABELS	
HYDRAULIC CONTROL FUNCTIONS	1-80
MINI-LEVER CONTROLS	
WITH ARMREST - THREE FUNCTION (S/N F001V03522H →)	4-64
WITH ARMREST - FOUR FUNCTION (S/N F001V03522H →)	4-66
MIRRORS	13-8
MISCELLANEOUS KITS	14-5

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
MIXER AND THROTTLE BODY ASSEMBLY	
MAZDA 2.0L AND 2.2L LPG - 2007 EMISSION COMPLIANT ENGINES (2/2008 →)	3-42
MAZDA 2.0L, LPG - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E ↔ 2/2008)	3-40
MONOTROL PEDAL ASSEMBLY	
→ S/N F001V04303K	3-98
N	
NON SUSPENSION SEAT	
WITHOUT ELECTRONIC CONTROLS (S/N F001V01401 ↔ S/N F001V01501)	1-14
WITHOUT ELECTRONIC CONTROLS (S/N F001V01501 ↔ S/N F001V03521H)	1-16
WITHOUT ELECTRONIC CONTROLS (S/N F001V03522H →)	1-18
WITHOUT ELECTRONIC CONTROLS - OPTIONAL	1-20
O	
OIL PAN	
YANMAR 2.6L DIESEL	2-98
OIL PUMP AND FILTER	
MAZDA 2.0L, GASOLINE AND LPG - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	2-50
MAZDA 2.0L, GASOLINE AND LPG - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	2-68
OUTER MAST	
THREE STAGE FULL FREE-LIFT (→ S/N B555V13829L)	12-2
THREE STAGE FULL FREE-LIFT (S/N B555V13830L →)	12-4
TWO STAGE FULL FREE-LIFT (→ S/N B559V02695L)	11-2
TWO STAGE FULL FREE-LIFT (S/N B559V02696L →)	11-4
TWO STAGE LIMITED FREE-LIFT (→ S/N B551V03957L)	10-2
TWO STAGE LIMITED FREE-LIFT (S/N B551V03958L →)	10-4
OUTLET SECTION	
MANUAL CONTROL VALVE - THREE AND FOUR FUNCTION	9-50
OVERHEAD EXHAUST	
MAZDA 2.0L GASOLINE AND LPG - WITH CATALYTIC CONVERTER (→ S/N F001V02238E)	2-20
WITHOUT PURIFIER - YANMAR 2.6L DIESEL	2-90
OVERHEAD GUARD	1-6
P	
PARK BRAKE	
→ S/N F001V03571H	8-18
S/N F001V03572H →	8-20
POWER DISTRIBUTION MODULE	
→ S/N F001V02055D	4-40
S/N F001V02056D →	4-42
R	
REMOTE KEY SWITCH	4-12
RETURN TO SET TILT KITS	14-2
REVERSE CLUTCH	
COUNTER - SINGLE SPEED (→ S/N F001V02229E)	5-56
REVERSE CLUTCH (COUNTER)	
SINGLE SPEED (→ S/N F001V02230E)	5-58

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
SINGLE SPEED (S/N T141M001501 →) (S/N T148M001501 →)	5-60
S	
SEAT BELT SWITCH ADAPTER	4-68
SEAT CONVERSION KITS	14-5
SEMI SUSPENSION SEAT	
WITH AND WITHOUT ELECTRONIC CONTROLS (S/N F001V01501 ↔ S/N F001V03040F)	1-24
SEMI-SUSPENSION SEAT	
WITH AND WITHOUT ELECTRONIC CONTROLS (S/N F001V01401 ↔ S/N F001V01501)	1-22
WITH AND WITHOUT ELECTRONIC CONTROLS (S/N F001V03040F ↔ S/N F001V03521H)	1-26
WITH AND WITHOUT ELECTRONIC CONTROLS (S/N F001V03522H →)	1-28
STATOR SUPPORT HOUSING	5-48
STEER TIRES AND WHEELS	7-16
STEERING AXLE	7-12
STEERING COLUMN AND ATTACHING PARTS	
DIESEL	7-5
GASOLINE AND LPG	7-4
STEERING COLUMN ASSEMBLY	7-6
ISOLATED, DIESEL	7-8
STEERING CONTROL UNIT	7-10
STEERING CYLINDER	7-14
STEERING SYSTEM	7-2
STROBE LIGHT	
→ S/N F001V02545E	13-2
LED (S/N F001V02546E →)	13-4
T	
THROTTLE BODY AND ATTACHING PARTS	
MAZDA 2.0L, GASOLINE - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	3-31
THROTTLE CABLE	
MECHANICAL THROTTLE - DIESEL (→ 10/2013)	3-80
MECHANICAL THROTTLE - YANMAR DIESEL (10/2013 →)	3-82
THROTTLE CABLE LINKAGE	
YANMAR DIESEL	3-78
THROTTLE LINKAGE	
GASOLINE	3-88
LPG	3-91
THROTTLE PEDAL AND ATTACHING PARTS	
MONOTROL PEDAL (LPG) (→ S/N F001V04303K)	3-96
THROTTLE PEDAL ASSEMBLY AND ATTACHING PARTS	
MONOTROL (S/N F001V04304K →)	3-100
STANDARD PEDAL	3-94
TILT CYLINDERS	
LEFT HAND	9-78
RIGHT HAND	9-76
TILT/HOIST AND AUXILIARY HOSES	9-16
TIMING GEAR AND OIL PAN	
MAZDA 2.0L, GASOLINE AND LPG - 2005 AND 2006 EMISSION COMPLIANT ENGINES (→ S/N F001V02238E)	2-44

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
TIMING GEAR COVER AND OIL PAN	
MAZDA 2.0L, GASOLINE AND LPG - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	2-66
TORQUE CONVERTER	5-7
TORQUE CONVERTER HOUSING AND ATTACHING PARTS	
SINGLE SPEED (S/N T141M001501 →)	5-40
SINGLE SPEED - ALUMINUM CHAIN DRIVE (2/2011 →)	5-44
TRANSMISSION	
SINGLE SPEED - SHEET 1 OF 2 (→ S/N F001V01948D EXC. 1930-1936, 1938-1942, 1944-1946)	5-18
SINGLE SPEED - SHEET 2 OF 2 (→ S/N F001V01948D EXC. 1930-1936, 1938-1942, 1944-1946)	5-22
SINGLE SPEED - SHEET 1 OF	
2 (S/N F001V01949D ↔ S/N F001V02229E INC. 1930-1936, 1938-1942, 1944-1946)	5-24
SINGLE SPEED - SHEET 2 OF	
2 (S/N F001V01949D ↔ S/N F001V02229E INC. 1930-1936, 1938-1942, 1944-1946)	5-28
SINGLE SPEED - SHEET 1 OF 2 (S/N T133M0001501 → (DRY BRAKE)) (S/N F001V02230E →)	5-30
SINGLE SPEED - SHEET 2 OF 2 (S/N T133M0001501 → (DRY BRAKE)) (S/N F001V02230E →)	5-32
TRANSMISSION COOLING	
MAZDA 2.0L (→ S/N F001V03310F)	5-8
MAZDA 2.0L (S/N F001V03311F →)	5-10
YANMAR DIESEL (→ S/N F001V03310F)	5-12
YANMAR DIESEL (S/N F001V03311F →)	5-14
YANMAR DIESEL (2/2011 →)	5-16
TRANSMISSION ELECTRICAL SYSTEM	4-72
TRANSMISSION HOUSING AND ASSEMBLY	
SINGLE SPEED (S/N T141M001501 →)	5-36
SINGLE SPEED - ALUMINUM CHAIN DRIVE (2/2011 →)	5-42
TRANSMISSION MOUNT	
→ 9/2009 (T117M, T133M)	5-2
S/N T141M001501 →	5-4
SINGLE SPEED - ALUMINUM CHAIN DRIVE (2/2011 →)	5-6
V	
VALVE ASSEMBLY, LIFT AND LOWER	
ELECTRONIC CONTROL VALVE - THREE AND FOUR FUNCTION (→ S/N F001V02519E)	9-54
ELECTRONIC VALVE INLET SECTION - THREE AND FOUR FUNCTION	9-60
VALVE ASSEMBLY, LIFT AND TILT	
MANUAL CONTROL VALVE - THREE AND FOUR FUNCTION (→ S/N F001V02621E)	9-38
MANUAL CONTROL VALVE - THREE AND FOUR FUNCTION (S/N F001V02622E ↔ 4/2014)	9-40
MANUAL CONTROL VALVE - THREE AND FOUR FUNCTION (4/2014 →)	9-42
W	
WATER PUMP	
YANMAR 2.6L DIESEL	2-110
WEATHER PROTECTION	1-88
WEATHER PROTECTION KITS	14-5
WIDE TIRE CONVERSION	14-2
WIRE HARNESS	
ALTERNATOR	4-234
BACK-UP ALARM	13-11

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
COWL WITH FORWARD/REVERSE - MANUAL WITH OPERATOR PRESENCE (→ S/N F001V03571H)	4-224
COWL WITH FORWARD/REVERSE LEVER (→ S/N F001V03571H)	4-216
COWL WITH FORWARD/REVERSE LEVER - WITHOUT RETURN TO SET TILT (S/N F001V03572H →)	4-220
COWL WITH FORWARD/REVERSE LEVER - WITH HYDRAULIC PUMP SOLENOID (S/N F001V03572H →)	4-228
COWL WITH MONOTROL PEDAL (→ S/N F001V03572H)	4-200
COWL WITH MONOTROL PEDAL - WITH RETURN TO SET TILT (S/N F001V03572H →)	4-204
COWL WITH MONOTROL PEDAL - WITH HYDRAULIC PUMP SOLENOID (→ S/N F001V03571H)	4-208
COWL WITH MONOTROL PEDAL - WITH HYDRAULIC PUMP SOLENOID (S/N F001V03572H →)	4-212
ELECTRONIC CONTROL VALVE - 3 FUNCTION	4-236
ELECTRONIC CONTROL VALVE - 4 FUNCTION	4-238
GASOLINE ENGINE - MAZDA 2.0L (→ S/N F001V02037D)	4-162
GASOLINE ENGINE - MAZDA 2.0L (S/N F001V02038D ↔ S/N F001V02238E)	4-166
LIGHTS (→ S/N F001V02042D)	4-246
LIGHTS (S/N F001V02043D →)	4-248
LIGHTS (6/2007 →)	4-250
LPG ENGINE - MAZDA 2.0L (→ S/N F001V02037D)	4-176
LPG ENGINE - MAZDA 2.0L (S/N F001V02038D ↔ S/N F001V02238E)	4-178
RH CHASSIS - MAZDA 2.0L (→ 2/2006)	4-80
RH CHASSIS - MAZDA LPG 2.0L (→ S/N F001V02037D)	4-84
RH CHASSIS - MAZDA 2.0L (S/N F001V02038D ↔ S/N F001V02238E)	4-90
RH CHASSIS - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E ↔ S/N F001V03139F)	4-96
RH CHASSIS - MAZDA, WITH ANTI-STALL (S/N F001V03140F →)	4-102
RH CHASSIS - MAZDA (S/N F001V03622H →)	4-108
RH CHASSIS - MAZDA-WITHOUT SEAT BELT SEQUENCE MODULE (1/2013 →)	4-114
RH CHASSIS - MAZDA-WITH SEAT BELT SEQUENCE MODULE	4-120
RH CHASSIS - YANMAR DIESEL (→ 2/2006)	4-126
RH CHASSIS - YANMAR DIESEL (→ S/N F001V02036D)	4-130
RH CHASSIS - YANMAR DIESEL (S/N F001V02037D →)	4-136
RH CHASSIS - YANMAR DIESEL (S/N F001V03622H →)	4-142
RH CHASSIS - YANMAR-WITHOUT SEAT BELT SEQUENCE MODULE (1/2013 →)	4-148
RH CHASSIS - YANMAR-WITH SEAT BELT SEQUENCE MODULE	4-154
SEALED ALTERNATOR - MAZDA 2.0L (S/N F001V02239E →)	4-232
SEAT JUMPER (S/N F001V03522H →)	4-160
TRANSMISSION - SINGLE SPEED (→ S/N F001V02037D)	4-240
TRANSMISSION - SINGLE SPEED (S/N F001V02038D ↔ 9/2009)	4-242
TRANSMISSION - SINGLE SPEED (10/2009 →)	4-244
YANMAR DIESEL (→ S/N F001V02037D)	4-192
YANMAR DIESEL (S/N F001V02038D →)	4-196
WIRE HARNESS (ENGINE)	
MAZDA 2.0L AND 2.2L LPG - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239V →)	4-180
MAZDA 2.0L AND 2.2L LPG - 2010 SERIES	4-186
MAZDA 2.0L, GASOLINE - 2007 EMISSION COMPLIANT ENGINES (S/N F001V02239E →)	4-170
WORK, REAR DRIVE, AND BRAKE/TAIL LIGHTS	4-70

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPA	US Environmental Protection Agency	UL Type GS	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the next page.

HYSTER UNIT CODE D001 NORTH AMERICA 06/2001

TABLE OF CONTENTS

DESCRIPTION	PAGE
AIR INTAKE AND FILTER DIESEL (⇒ D/B 11/98)	3-22
AIR INTAKE AND FILTER DIESEL (D/B 11/96 ⇒)	
AIR INTAKE AND FILTER GASOLINE AND LPG	
ALTERNATOR GASOLINE, LPG, AND DIESEL	
ALTERNATOR TYPES GS, LPS, AND DS	
AUXILIARY FUNCTION TUBE TWO AND THREE STAGE FULL F	

SECTION 13 NUMERICAL INDEX

PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.
142	3-4	19	10-13	25		11-27	29	12-31	12		
12445	3-32	19	10-17	6		11-31	25	16719	3-36	5	
	3-34	1	10-27	11		11-32	37	16751	3-16	27	
			11	11		9-7	9	16849	3-34	21	
			12	6	16485	8-4	29		3-38	20	
			13	13		8-4	45	16863	3-28	17	
			14	13		8-8	34	16865	3-6	18	
			17	6		9-7	9		4-27	41	
			18	17		9-11	9	16882	9-7	30	
			19	10		9-11	17		9-11	27	
			23	46		10-9	21		10-10	36	
			27	46		10-9	28		10-13	32	
			28	14		10-13	16		11-7	24	
			30	14		11-7	19		11-9	17	

SECTIONS

- 1
- 2
- 3
- 4
- 5 BRAKE/ACC
- 6
- 7 MAST-TWO STAG
- 8 MAST-THREE ST
- 9 MAST-TWO ST
- 10
- 11

TRANSMISSION HOUSING ⇒ S/N D001H-2628

KEY:
A: Diesel
B: Gasoline and LPG

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
1	202547	Transmission	1	1
2	2023329	Transmission	1	1
3	2021670	Case	2	2
4	2023418	Bearing Cap	4	4
5	296429	Washer	4	4
6	293947	Bolt	1	1
7	2021390	Cover	2	2
8	1371656	Colter Pin	4	4
9	2021915	O-Ring	1	1
10	2021329	Plug	4	4
11	2021675	Housing	22	22
12	2021336	Pin	39	39
13	287860	Lockwasher	1	1
14	292682	Hydraulic Pump	1	1
15	2021345	⇒ Figure 5-3	1	1
16	214364	Gasket	1	1
17	296418	Bolt	8	8
18	2021388	Washer	1	1
19	2021389	Temperature Switch	1	1
20	2021383	Breather	9	9
21	292515	Dipstick	9	9
22	136692	Bolt	2	2
23	292527	Nut	3	3
24	292531	Bolt	3	2
25	292583	Capscrew	4	4
26	293637	Lockwasher	4	4
	296420	Bolt	4	4
	296420	Washer	1	1
	996403	Transmission Kit (Includes Item 7)	1	1
	996405	Transmission Kit (Includes Item 14)	1	1

This Parts Manual is divided into 11 major sections which are listed above. Quick be made by placing the right thumb on the tab of the desired section, bending the pages to the corresponding tab.

©Copy Right Date HYSTER COMPANY See Service Manual for service procedures. 5-15

HP990004

HOW TO FIND THE DESIRED PART NUMBER

WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the Sections Page. Choose the general area of reference most likely to include the part.
2. Turn to the section you chose. Use the Section Table of Contents to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Table of Contents (Page i).
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS KNOWN:

5. Use the Numerical Index (Page 15-1) to find the part number. Turn to the page listed and locate the part as indicated by the item number.

GENERAL:

The assembly breakdowns include part numbers, descriptions, quantities required, keys and footnotes to help in selecting correct parts.

6. Parts Supersession Information. Part numbers that have this history will be displayed in the parts list in the order that they were superseded (from oldest to newest). The superseded part numbers will be shown with a line through them.

Five periods in the PART NO. column (.) indicate that the part is either *Not Serviced Separately* or there is a reference to another figure. A figure reference is denoted by a pointing hand followed by a figure number in the DESCRIPTION column (☞ Figure 10)

7. Keys are used to show two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C", "D", or "E" and the corresponding quantity column to find the required parts. Two periods in the QTY column (..) indicate that the part is not used for that assembly.
8. Indented descriptions under the DESCRIPTION column are used to indicate assemblies and

subparts of assemblies. In the example on the previous page, *BEARING CAP* (Item 2) is a subpart of the major assembly *CASE*.

9. Quantities shown are for one assembly. The quantities of the subpart *BEARING CAP* are indicated as two and two. This means two per *CASE* assembly.
10. Serial number breaks identify the most current parts information and are shown as follows:
 - **S/N D001H2628**
Indicates last serial number affected.
 - S/N D001H2629** →
Indicates the first serial number affected.
 - S/N D001H1553** ↔ **S/N D001H3291**
Indicates a range of serial numbers affected.

ECN numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information and are identified as follows:

→ **S/N Pending Per ECN 63243**

Indicates a pending serial number for last unit affected.

S/N Pending Per ECN 63243 →

Indicates a pending serial number for first unit affected.

Date breaks are used to indicate when a change occurred but a subsequent serial number break was not recorded. This is an arbitrary date usually based on the ECN release and are identified as follows:

→ **D/B 3/00**

Indicates that a change occurred sometime within that month for the item affected.

D/B 3/00 →

Indicates that a change occurred sometime within that month for the item affected.

D/B 3/00 ↔ **D/B 4/00**

Indicates a range of production dates of the item affected.

Contact your local dealer for Hyster lift trucks for serial number information for items with a ECN or a date break.

ORDERING PARTS:

When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.

For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.