

PARTS MANUAL

**H30-35FT, H40FTS
(G001)**

CUSTOMER EDITION

HYSTER

SECTIONS

1	FRAME
2	ENGINE ASSEMBLY - DIESEL
3	ENGINE ASSEMBLY-PSI
4	FUEL SYSTEM - DIESEL
5	FUEL SYSTEM-LPG
6	ELECTRICAL SYSTEM
7	TRANSMISSION
8	DRIVE AXLE
9	STEERING SYSTEM
10	BRAKE SYSTEM
11	HYDRAULIC SYSTEM
12	MAST-TWO STAGE LIMITED FREE-LIFT
13	MAST-TWO STAGE FULL FREE-LIFT
14	MAST-THREE STAGE FULL FREE-LIFT
15	OPTIONS
16	FIELD CONVERSION KITS
17	NUMERICAL INDEX

This Parts Manual is divided into 17 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
ACCUMULATOR	
MAST LOAD DAMPENING	15-10
ADD ON OPTIONS	
ADD ON TELEMETRY KITS	16-8
AIR INTAKE SYSTEM	
AIR FILTER ASSEMBLY - YANMAR DIESEL	4-4
AIR FILTER ASSEMBLY	5-6
PRE-CLEANER AND DUCT	4-6
PRE-CLEANER AND DUCT	5-4
PSI	5-2
YANMAR DIESEL	4-2
ALTERNATOR AND MOUNTING	
YANMAR DIESEL	6-7
ARMREST ASSEMBLY	
MINI-LEVER MODULES - SEMI-SUSPENSION SEAT WITH HIP RESTRAINTS	1-24
MINI-LEVER MODULES - FULL SUSPENSION SEAT	1-26
AUDIBLE ALARM KITS	16-3
AUXILIARY TUBE EXTENSION KIT	
AUXILIARY TUBE EXTENSIONS	
TWO AND THREE STAGE FULL FREE-LIFT	15-26
TWO STAGE LIMITED FREE-LIFT	15-24
B	
BACK-UP ALARM	15-6
BATTERY DISCONNECT	
2.0L LPS - PSI	6-14
BRAKE ASSEMBLY	10-8
BRAKE LINKAGE	
DUAL PEDAL	10-4
SINGLE PEDAL	10-2
C	
CAMSHAFT AND DRIVE GEAR	
YANMAR DIESEL	2-22
CAMSHAFT AND VALVES	
PSI ENGINE	3-52
CARRIAGE	
THREE STAGE FULL FREE-LIFT	14-22
TWO STAGE FULL FREE-LIFT	13-18
TWO STAGE LIMITED FREE-LIFT	12-16
CHARGE PUMP ASSEMBLY	7-18
CONTROL VALVE ASSEMBLY	
ELECTRO-HYDRAULIC - THREE AND FOUR FUNCTION	11-28
MANUAL HYDRAULIC - THREE AND FOUR FUNCTION	11-20
CONTROL VALVE LOCKOUT GROUP	
MANUAL CONTROL VALVE	11-18

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
CONVERSION KIT	
COOLING SYSTEM	
2.0L PSI ENGINE	3-4
YANMAR DIESEL	2-2
COUNTER/REVERSE CLUTCH	
SINGLE SPEED TRANSMISSION	7-16
COUNTERWEIGHT	1-2
COUNTERWEIGHT EXHAUST	
YANMAR DIESEL	2-6
COWL ELECTRICAL	
ELECTRO-HYDRAULIC	6-12
MANUAL HYDRAULIC - WITH OPERATOR PRESENCE SYSTEM	6-10
COWL MOUNTING	1-32
CRANKSHAFT AND PISTONS	
YANMAR DIESEL	2-24
CYLINDER BLOCK	
PSI ENGINE	3-46
YANMAR DIESEL	2-26
CYLINDER HEAD	
PSI ENGINE	3-44
YANMAR DIESEL	2-18
D	
DIPSTICK	
PSI ENGINE	3-31
DIRECTIONAL CONTROL KITS	16-2
DRIVE AXLE	
SHEET 1 OF 3	8-4
SHEET 2 OF 3	8-6
SHEET 3 OF 3	8-8
DRIVE AXLE AND ATTACHING PARTS	8-2
DRIVE TIRES AND WHEELS	8-10
TWO-PIECE WHEEL	8-11
E	
ECM MOUNT	
PSI ENGINE	3-30
E-HYDRAULIC CONTROL CONVERSION KITS	16-2
ELECTRICAL SYSTEM	
RH CHASSIS	6-2
ELECTRONIC LEVER LABELS	
AUXILIARY DUAL FUNCTION	1-46
AUXILIARY SINGLE FUNCTION	1-44
ELECTRONIC THROTTLE LINKAGE	
YANMAR DIESEL	4-16
ENGINE ELECTRICAL SYSTEM	
2.0L LPG - PSI	6-8
PSI ENGINE	3-20
YANMAR DIESEL	6-4

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
ENGINE MOUNTING	
PSI ENGINE	3-10
YANMAR DIESEL	2-10
ENGINE VALVE COVER	
PSI ENGINE	3-42
EXHAUST ADAPTER	
PSI ENGINE	3-32
EXHAUST MANIFOLD	
PSI ENGINE	3-40
EXHAUST SYSTEM	
COUNTERWEIGHT EXHAUST WITH CATALYTIC CONVERTER - PSI ENGINE	3-8
OVERHEAD EXHAUST WITH CATALYTIC CONVERTER - PSI ENGINE	3-6
F	
FAN ASSEMBLY	2-11
FENDER EXTENSIONS AND MUD GUARDS	1-30
FIRE EXTINGUISHER	15-9
FLEXPLATE INTERFACE	
PSI 2.0L	3-14
FLOORPLATES AND COVERS	1-28
FLYWHEEL AND HOUSING	
YANMAR DIESEL	2-8
FORK ASSEMBLY KITS	16-8
FORK POSITIONER ASSEMBLY	15-22
FORKS	1-36
FREE-LIFT	
THREE STAGE FULL FREE-LIFT	14-12
TWO STAGE FULL FREE-LIFT	13-8
FREE-LIFT CYLINDER	
THREE STAGE FULL FREE-LIFT	14-18
TWO STAGE FULL FREE-LIFT	13-16
FRONT COVER AND OIL PAN	
PSI ENGINE	3-48
FRONT END AUXILIARY DRIVE	
PSI 2.0L	3-12
FUEL FILTER	
YANMAR DIESEL	4-12
FUEL INJECTION	
YANMAR DIESEL	4-10
FUEL REGULATING SYSTEM	
PSI ENGINE	3-28
FUEL SYSTEM	
PSI LPG - WITHOUT LOW FUEL SENSOR	5-13
PSI LPG - WITH LOW FUEL SENSOR	5-14
YANMAR DIESEL	4-8
G	
GEAR HOUSING	
YANMAR DIESEL	2-14

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
GEAR PUMP ASSEMBLY	
CHAIN DRIVE OPTION	11-6
H	
HAND LEVERS	
FOUR FUNCTION - WITHOUT DETENTED LEVERS	11-14
FOUR FUNCTION - WITH DETENTED LEVERS	11-16
THREE FUNCTION - WITHOUT DETENTED LEVERS	11-10
THREE FUNCTION - WITH DETENTED LEVERS	11-12
HEADER HOSE	
THREE STAGE FULL FREE-LIFT	14-20
TWO STAGE FULL FREE- LIFT	13-20
HEADER HOSE CONVERSION KITS	
HEADER HOSES	
TWO STAGE LIMITED FREE-LIFT	12-14
HOOD	1-6
HYDRAULIC CONTROLS	
HYDRAULIC FILTER	11-4
HYDRAULIC SUPPLY AND RETURN	11-2
I	
IGNITION COIL	
PSI ENGINE	3-16
IMPACT SENSOR	6-16
INNER MAST	
THREE STAGE FULL FREE-LIFT	14-6
TWO STAGE FULL FREE-LIFT	13-4
TWO STAGE LIMITED FREE-LIFT	12-4
INPUT/FORWARD CLUTCH	
SINGLE SPEED TRANSMISSION	7-14
INSTRUMENT CLUSTER	6-18
INTAKE AND EXHAUST MANIFOLD	
YANMAR DIESEL	2-12
INTAKE MANIFOLD	
PSI ENGINE	3-38
INTEGRAL SIDE-SHIFT	
FORK POSITIONER - THREE STAGE FULL FREE-LIFT	15-20
INTEGRAL SIDE-SHIFT CARRIAGE	
TWO AND THREE STAGE FULL FREE-LIFT	15-14
TWO STAGE LIMITED FREE-LIFT	15-12
INTEGRAL SIDE-SHIFT CYLINDER	15-16
INTEGRAL SIDE-SHIFT HYDRAULIC HOSES	
TWO AND THREE STAGE FULL FREE-LIFT	15-18
TWO AND THREE STAGE FULL FREE-LIFT	15-19
TWO STAGE LIMITED FREE-LIFT	15-17
INTERMEDIATE MAST	
THREE STAGE FULL FREE-LIFT	14-4

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
L	
LABELS	
EXTERIOR	1-38
HYDRAULIC CONTROL LABELS - CONTROL LEVER	1-48
INTERIOR	1-40
LIGHT OPTIONS	16-3
LIGHTS	
WORK, REAR DRIVE, AND BRAKE/TAIL	6-34
LOAD BACKREST EXTENSION	1-34
LOAD WEIGH ELECTRICAL	6-24
LOCK-OFF VALVE	
PSI ENGINE	3-26
LPG TANK BRACKET	
SWING OUT	5-8
SWING OUT, DROP DOWN	5-10
LUBRICATION SYSTEM	
YANMAR DIESEL	2-30
M	
MAIN LIFT	
THREE STAGE FULL FREE-LIFT	14-8
TWO STAGE FULL FREE-LIFT	13-6
TWO STAGE LIMITED FREE-LIFT	12-6
MAIN LIFT CYLINDER	
LEFT HAND - TWO STAGE LIMITED FREE-LIFT	12-12
LEFT HAND - TWO STAGE FULL FREE-LIFT	13-14
RIGHT HAND - TWO STAGE LIMITED FREE-LIFT	12-10
RIGHT HAND - TWO STAGE FULL FREE-LIFT	13-12
THREE STAGE FULL FREE-LIFT - RIGHT HAND	14-14
THREE STAGE FULL FREE-LIFT - LEFT HAND	14-16
MANUAL VALVE ANTI STALL GROUP	11-27
MAST ELECTRICAL	
TILT SENSOR	6-26
MAST INSTALLATION	11-42
MASTER CYLINDER	10-6
MINI LEVER MODULE LABELS	
HYDRAULIC CONTROL FUNCTIONS	1-42
MINI-LEVER CONTROLS	
WITH ARMREST - THREE FUNCTION	6-20
WITH ARMREST - FOUR FUNCTION	6-22
MIRRORS	15-4
MISCELLANEOUS KITS	16-4
MIXER/EPR AND PCV AIR HOSES	
PSI ENGINE	3-22
O	
OIL PAN	
YANMAR DIESEL	2-16

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
OIL PUMP AND ATTACHING PARTS	
PSI ENGINE	3-56
OUTER MAST	
THREE STAGE FULL FREE-LIFT	14-2
TWO STAGE FULL FREE-LIFT	13-2
TWO STAGE LIMITED FREE-LIFT	12-2
OVERHEAD EXHAUST	
YANMAR DIESEL	2-4
OVERHEAD GUARD	1-4
P	
PARK BRAKE	10-10
PISTON AND CRANKSHAFT	
PSI ENGINE	3-50
POWER DISTRIBUTION MODULE	6-28
R	
REMOTE KEY SWITCH	6-30
REMOTE OIL FILTER AND ADAPTER	
PSI ENGINE	3-58
S	
SEAT	
NON SUSPENSION - WITH MANUAL HYDRAULIC CONTROLS	1-8
SEMI SUSPENSION - WITH MANUAL HYDRAULIC CONTROLS	1-10
SEMI SUSPENSION - WITH ELECTRO-HYDRAULIC CONTROLS	1-12
SEAT (FULL SUSPENSION ATTACHING PARTS)	
NOT INCLUDED WITH SEAT - SHEET 4 OF 4 WITH MANUAL HYDRAULICS	1-20
NOT INCLUDED WITH SEAT - SHEET 4 OF 4 WITH ELECTRO-HYDRAULICS	1-22
SEAT (FULL SUSPENSION)	
MANUAL AND ELECTRO-HYDRAULIC — SWIVEL AND NON SWIVEL - SHEET 1 OF 4	1-14
RECLINER AND DAMPER KITS - SHEET 3 OF 4	1-18
SERVICE KITS FOR NON SWIVEL AND SWIVEL - SHEET 2 OF 4	1-16
SEAT BELT SWITCH ADAPTER	6-31
STARTER	
PSI ENGINE	3-18
STATOR SUPPORT HOUSING	7-12
STEER TIRES AND WHEELS	
PNEUMATIC RADIAL - TRELLEBORG	9-15
PNEUMATIC SOLID - MONARCH	9-16
STEERING AXLE	9-12
STEERING COLUMN AND ATTACHING PARTS	
DIESEL - ISOLATED	9-5
LPG - NON-ISOLATED	9-4
STEERING COLUMN ASSEMBLY	
DIESEL - ISOLATED	9-8
LPG - NON-ISOLATED	9-6
STEERING CONTROL UNIT	9-10
STEERING CYLINDER	9-14
STEERING SYSTEM	9-2

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
STROBE LIGHT LED	15-2
T	
TENSIONER AND TIMING BELT PSI ENGINE	3-54
THERMOSTAT AND HOUSING PSI ENGINE	3-35
THERMOSTAT COVER PSI ENGINE	3-34
THROTTLE BODY PSI ENGINE	3-24
THROTTLE CABLE MECHANICAL THROTTLE - YANMAR DIESEL	4-14
THROTTLE PEDAL ASSEMBLY AND ATTACHING PARTS MONOTROL PEDAL	4-20
MONOTROL PEDAL	5-18
STANDARD PEDAL	4-18
STANDARD PEDAL	5-16
TILT CYLINDERS LEFT HAND	11-46
RIGHT HAND	11-44
TILT/HOIST AND AUXILIARY HOSES	11-8
TORQUE CONVERTER	7-6
TORQUE CONVERTER HOUSING AND ATTACHING PARTS SINGLE SPEED - ALUMINUM CHAIN DRIVE	7-10
TRANSMISSION COOLING PSI LPG	7-4
YANMAR DIESEL	7-2
TRANSMISSION ELECTRICAL SINGLE SPEED	6-32
TRANSMISSION HOUSING AND ASSEMBLY SINGLE SPEED - ALUMINUM CHAIN DRIVE	7-8
V	
VALVE ASSEMBLY, AUXILIARY SECTIONS MANUAL HYDRAULIC - THREE AND FOUR FUNCTION	11-24
VALVE ASSEMBLY, OUTLET SECTION MANUAL HYDRAULIC - THREE AND FOUR FUNCTION	11-26
VALVE ASSEMBLY, AUXILIARY ONE SECTION ELECTRO-HYDRAULIC - THREE AND FOUR FUNCTION	11-36
VALVE ASSEMBLY, AUXILIARY TWO SECTION ELECTRO-HYDRAULIC - FOUR FUNCTION	11-38
VALVE ASSEMBLY, HOIST AND LOWER ELECTRO HYDRAULIC POPPET VALVE - THREE AND FOUR FUNCTION	11-32
VALVE ASSEMBLY, INLET SECTION ELECTRO-HYDRAULIC - THREE AND FOUR FUNCTION	11-30
VALVE ASSEMBLY, LIFT AND TILT MANUAL HYDRAULIC - THREE AND FOUR FUNCTION	11-22

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
VALVE ASSEMBLY, OUTLET SECTION	
ELECTRO-HYDRAULIC - THREE AND FOUR FUNCTION	11-40
VALVE ASSEMBLY, TILT SECTION	
ELECTRO-HYDRAULIC - THREE AND FOUR FUNCTION	11-34
W	
WATER BYPASS OUTLET	
PSI ENGINE	3-36
WATER OUTLET	
PSI ENGINE	3-33
WATER PUMP	
PSI ENGINE	3-59
YANMAR DIESEL	2-28
WEATHER PROTECTION KITS	16-4
WIDE TIRE CONVERSION	16-2
WIRE HARNESS	
ALTERNATOR - DIESEL	6-36
BACK-UP ALARM	15-8
COWL WITH FORWARD/REVERSE LEVER - WITHOUT RETURN TO SET TILT	6-42
COWL WITH FORWARD/REVERSE LEVER - WITH HYDRAULIC PUMP SOLENOID	6-46
COWL WITH MONOTROL PEDAL - WITH RETURN TO SET TILT	6-38
COWL WITH MONOTROL PEDAL - WITH HYDRAULIC PUMP SOLENOID	6-50
ELECTRONIC CONTROL VALVE - THREE FUNCTION	6-54
ELECTRONIC CONTROL VALVE - FOUR FUNCTION	6-56
ENGINE - PSI 2.0L LPG	6-58
ENGINE - YANMAR 2.6L DIESEL	6-64
LIGHTS	6-68
RH CHASSIS - YANMAR 2.6L DIESEL	6-70
RH CHASSIS - PSI	6-82
RH CHASSIS WITH SEAT BELT SEQUENCE MODULE - YANMAR 2.6L DIESEL	6-76
RH CHASSIS WITH SEAT BELT SEQUENCE MODULE - PSI	6-88
TRANSMISSION - SINGLE SPEED	6-94

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPA	US Environmental Protection Agency	UL Type GS	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the next page.

HYSTER UNIT CODE D001 NORTH AMERICA 06/2001

TABLE OF CONTENTS

DESCRIPTION	PAGE
AIR INTAKE AND FILTER DIESEL (⇒ D/B 11/98)	3-22
AIR INTAKE AND FILTER DIESEL (D/B 11/96 ⇒)	
AIR INTAKE AND FILTER GASOLINE AND LPG	
ALTERNATOR GASOLINE, LPG, AND DIESEL	
ALTERNATOR TYPES GS, LPS, AND DS	
AUXILIARY FUNCTION TUBE TWO AND THREE STAGE FULL F	

SECTION 13 NUMERICAL INDEX

PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.
142	3-4	19	10-13	25		11-27	29	12-31	12		
12445	3-32	19	10-17	6		11-31	25	16719	3-36	5	
	3-34	1	10-27	11		11-32	37	16751	3-16	27	
			11-11	6	16485	8-4	29	16849	3-34	21	
			12-21	11		8-4	45		3-38	20	
			14	13		8-8	34	16863	3-28	17	
			12	6		9-7	9	16865	3-6	18	
			3	17		9-7	19		4-27	41	
			9	10		9-11	9	16882	9-7	30	
			23	46		9-11	17		9-11	27	
			27	46		10-9	21		10-10	36	
			26	14		10-9	28		10-13	32	
			28	14		10-13	16		11-7	24	
			50	14		11-7	19		11-9	17	

SECTIONS

- 1
- 2
- 3
- 4
- 5 BRAKE/ACC
- 6
- 7 MAST-TWO STAG
- 8 MAST-THREE ST
- 9 MAST-TWO ST
- 10
- 11

TRANSMISSION HOUSING ⇒ S/N D001H-2628

KEY:
A: Diesel
B: Gasoline and LPG

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
1	202547	Transmission	1	1
2	2023329	Transmission	1	1
3	2021670	Case	2	2
4	2023418	Bearing Cap	4	4
5	296429	Washer	4	4
6	293947	Bolt	1	1
7	2021390	Cover	2	2
8	1371656	Colter Pin	4	4
9	2021915	O-Ring	1	1
10	2021329	Plug	4	4
11	2021675	Housing	22	22
12	2021336	Pin	39	39
13	287860	Lockwasher	1	1
14	292682	Hydraulic Pump ⇒ Figure 5-3	1	1
15	2021345	Gasket	1	1
16	214364	Bolt	8	8
17	296418	Washer	1	1
18	2021388	Temperature Switch	1	1
19	2021389	Breather	9	9
20	2021383	Dipstick	9	9
21	292515	Bolt	2	2
22	136692	Nut	3	3
23	292527	Bolt	3	2
24	292531	Capscrew	4	4
25	292583	Lockwasher	4	4
26	293637	Bolt	4	4
	296420	Washer	1	1
	996403	Transmission Kit (Includes Item 7)	1	1
	996405	Transmission Kit (Includes Item 14)	1	1

This Parts Manual is divided into 11 major sections which are listed above. Quick be made by placing the right thumb on the tab of the desired section, bending the pages to the corresponding tab.

©Copy Right Date HYSTER COMPANY See Service Manual for service procedures. 5-15

HP990004

HOW TO FIND THE DESIRED PART NUMBER

WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the Sections Page. Choose the general area of reference most likely to include the part.
2. Turn to the section you chose. Use the Section Table of Contents to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Table of Contents (Page i).
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS KNOWN:

5. Use the Numerical Index (Page 17-1) to find the part number. Turn to the page listed and locate the part as indicated by the item number.

GENERAL:

The assembly breakdowns include part numbers, descriptions, quantities required, keys and footnotes to help in selecting correct parts.

6. Parts Supersession Information. Part numbers that have this history will be displayed in the parts list in the order that they were superseded (from oldest to newest). The superseded part numbers will be shown with a line through them.

Five periods in the PART NO. column (.) indicate that the part is either *Not Serviced Separately* or there is a reference to another figure. A figure reference is denoted by a pointing hand followed by a figure number in the DESCRIPTION column (☞ Figure 10)

7. Keys are used to show two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C", "D", or "E" and the corresponding quantity column to find the required parts. Two periods in the QTY column (..) indicate that the part is not used for that assembly.
8. Indented descriptions under the DESCRIPTION column are used to indicate assemblies and

subparts of assemblies. In the example on the previous page, *BEARING CAP* (Item 2) is a subpart of the major assembly *CASE*.

9. Quantities shown are for one assembly. The quantities of the subpart *BEARING CAP* are indicated as two and two. This means two per *CASE* assembly.
10. Serial number breaks identify the most current parts information and are shown as follows:
 - **S/N D001H2628**
Indicates last serial number affected.
 - S/N D001H2629** →
Indicates the first serial number affected.
 - S/N D001H1553** ↔ **S/N D001H3291**
Indicates a range of serial numbers affected.

ECN numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information and are identified as follows:

→ **S/N Pending Per ECN 63243**

Indicates a pending serial number for last unit affected.

S/N Pending Per ECN 63243 →

Indicates a pending serial number for first unit affected.

Date breaks are used to indicate when a change occurred but a subsequent serial number break was not recorded. This is an arbitrary date usually based on the ECN release and are identified as follows:

→ **D/B 3/00**

Indicates that a change occurred sometime within that month for the item affected.

D/B 3/00 →

Indicates that a change occurred sometime within that month for the item affected.

D/B 3/00 ↔ **D/B 4/00**

Indicates a range of production dates of the item affected.

 
Contact your local dealer for Hyster lift trucks for serial number information for items with a ECN or a date break.

ORDERING PARTS:

When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.


For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.

IDENTIFICATION OF TRUCK SERIAL NUMBERS

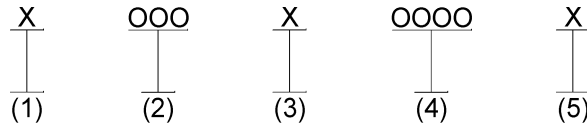


- (1) and (2) The first letter and three numbers indicate the truck unit code.
- (3) The second letter indicates the plant of manufacture.
- (4) The four or five digit number indicates the production sequence number of the truck.
- (5) The final letter indicates the year of manufacture starting with "A" in 1957, 1980, and 2003. The letters "I", "O", and "Q" will not be used.

 For pending serial numbers contact your local dealer for Hyster lift trucks.

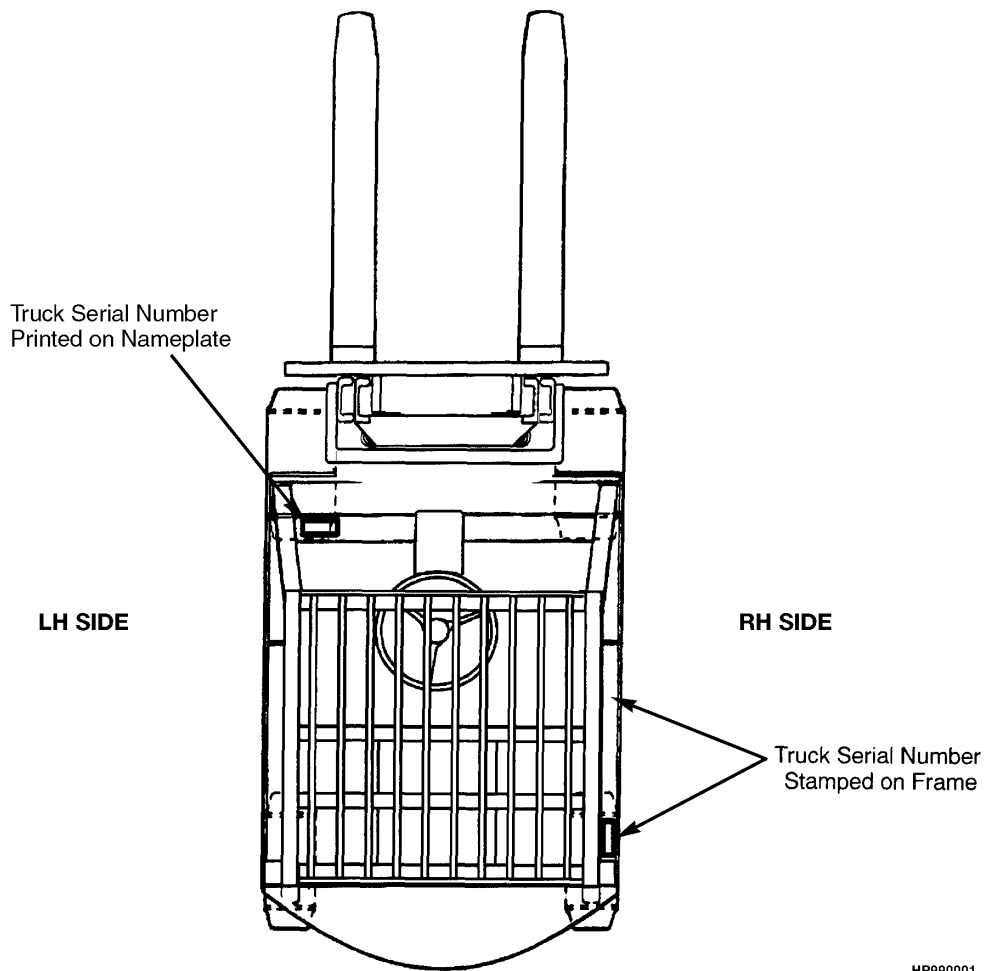

 Parts referred to in this book as right or left hand parts are in accordance with the illustration above.

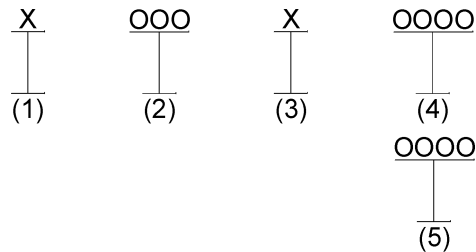IDENTIFICATION OF MAST SERIAL NUMBERS

- (1) and (2) The first letter and number indicates the mast unit code.
- (3) The second letter indicates the plant of manufacture.
- (4) The four or five digit number indicates the production sequence number of the mast.
- (5) Carriage travel in millimeters stamped just below the serial number.

Mast Group identification consists of mast unit code (1) and (2) plus carriage travel (5).

 
For pending production sequence numbers contact your local dealer for Hyster lift trucks.

LIFT EQUIPMENT IDENTIFICATION

1. Fork part number, capacity rating, plant code letter, and date of manufacture are stamped approximately six inches below the top of most forks.
2. The carriage group number is stamped on the right hand side of the top crossmember (pin type) or on the back of the right hand end of the bottom crossmember (hook type). A date code has two letters in line with or below the carriage group number.
3. The mast identification number has a unit code, a letter indicating the plant of manufacture, and a serial number. Underneath the production sequence number is a four digit number that indicates the carriage travel in millimeters.
4. Tilt and lift cylinder group numbers are stamped on the cylinder shell.


Always refer to the group, serial, or part number when ordering service parts.

Modification of masts and carriages by SPED (Special Products Engineering Department) are identified by a model prefix code beginning with the letter "S". contact your dealer for Hyster lift trucks for information on these assemblies.

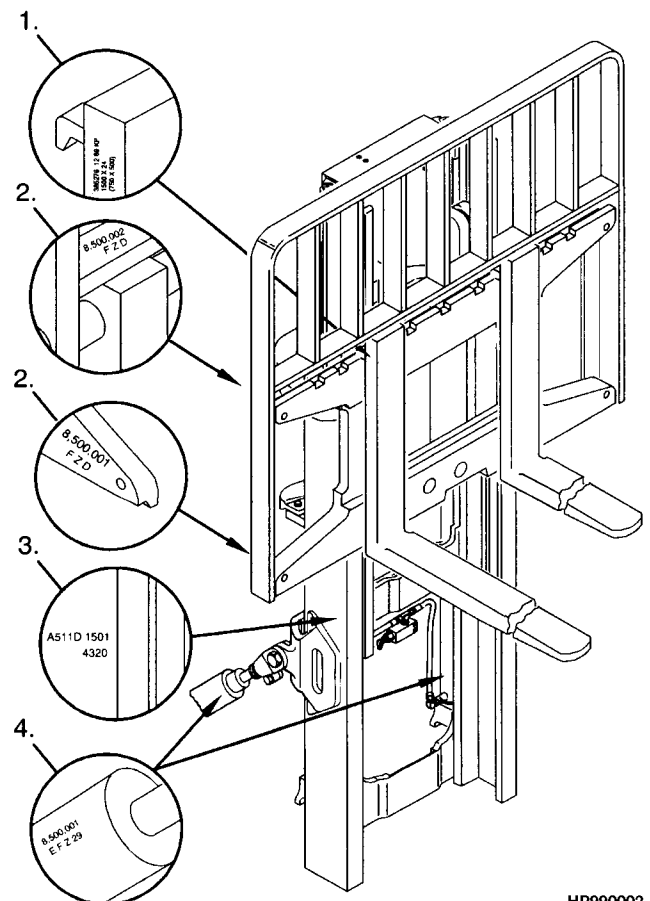

HP990002

 IDENTIFICATION OF ATTACHMENT AND SIDE-SHIFT CARRIAGE SERIAL NUMBERS

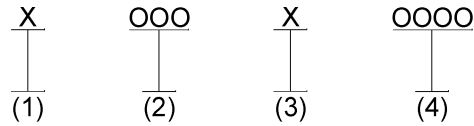


(1) and (2) The first letter and three numbers indicate the attachment unit code.

(3) The second letter indicates the plant of manufacture.

(4) The four or five digit number indicates the production sequence number.

 For pending production sequence numbers contact your local dealer for Hyster lift trucks.

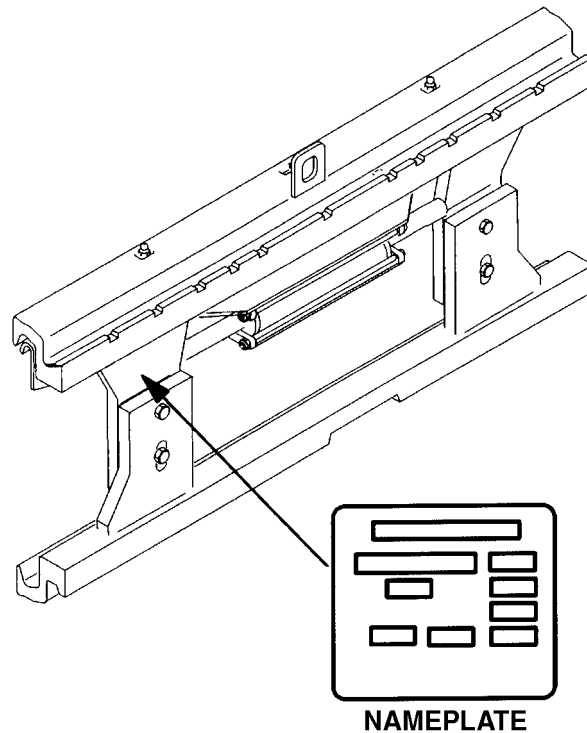

HP990003

Side-shift carriages and attachments have nameplates. Use the serial number found on the nameplate to identify the attachment.

Always refer to the group, serial, or part number when ordering service parts.

Modifications of attachments and side-shift carriages by SPED (Special Products Engineering Department) are identified by a model prefix code beginning with the letter "S". Contact your dealer for Hyster lift trucks for information on these assemblies.

PUBLICATIONS

Every new lift truck is provided with an OPERATING MANUAL. This manual has information that the operator must know for inspection and operation of the lift truck.

SERVICE MAINTENANCE MANUALS, which provide service and overhaul procedures, and PARTS

MANUALS with complete replacement part identification, are available at a nominal fee from your Hyster dealer to assist users in effectively maintaining Hyster lift trucks in a safe, useful condition. See the list below for information on ordering specific publications for this model lift truck.

PUBLICATION	HYSTER PART NUMBER
Operating Manual.....	4120207
Service Manual (Complete).....	4120322
Parts Manual.....	4120314