

PARTS MANUAL

**FORTIS®
S80FT-120FT, S80-100FTBCS,
S120FTS, S120FTPRS
(G004)**

CUSTOMER EDITION

HYSTER

SECTIONS

1	FRAME
2	ENGINES
3	FUEL SYSTEM
4	ELECTRICAL SYSTEM
5	TRANSMISSION
6	DRIVE AXLE
7	STEERING SYSTEM
8	BRAKE SYSTEM
9	HYDRAULIC SYSTEM
10	MAST-TWO STAGE LIMITED FREE-LIFT
11	MAST-TWO STAGE FULL FREE-LIFT
12	MAST-THREE STAGE FULL FREE-LIFT
13	OPTIONS
14	FIELD CONVERSION KITS
15	NUMERICAL INDEX

This Parts Manual is divided into 15 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
ACCUMULATOR	13-18
ADD ON TELEMETRY KITS	14-11
ADD-ON OPTION KITS	14-2
AIR CLEANER	
GM 4.3L GASOLINE AND LPG - GFI OPTION (→ S/N G004V03075E)	3-2
GM 4.3L GASOLINE AND LPG - GFI OPTION (S/N G004V03076E ↔ S/N G004V05833J)	3-4
GM 4.3L GASOLINE AND LPG - PSI OPTION (S/N G004V05834J →)	3-6
AIR FILTER	3-9
ALTERNATOR AND MOUNTING	
GM 4.3L LPG - PSI OPTION (S/N G004V05834J →)	4-63
ARMREST ASSEMBLY	
MINI-LEVER MODULES - SEMI-SUSPENSION SEAT WITH HIP RESTRAINTS (S/N G004V04680H → EXC. 04683)	1-46
MINI-LEVER MODULES - FULL SUSPENSION SEAT (S/N G004V04680H → EXC. 04683)	1-48
AUDIBLE ALARM KITS	14-3
AUXILIARY HOSES	9-70
AUXILIARY TUBE EXTENSION KIT	14-9
AUXILIARY TUBE EXTENSIONS	
THREE STAGE FULL FREE-LIFT - WITHOUT QUICK DISCONNECT FITTINGS (S/N B588V02595G →) (S/N B589V03132G →)	12-46
THREE STAGE FULL FREE-LIFT - MANUAL HYDRAULICS WITH QUICK DISCONNECT FITTINGS (S/N B588V02595G →) (S/N B589V03132G →)	12-48
THREE STAGE FULL FREE-LIFT - E-HYDRAULICS WITH QUICK DISCONNECT FITTINGS (S/N B588V02595G →) (S/N B589V03132G →)	12-50
THREE STAGE FULL FREE-LIFT (→ S/N B588V02594G) (→ S/N B589V03131G)	12-42
TWO STAGE FULL FREE- LIFT - WITHOUT QUICK DISCONNECT FITTINGS (S/N B590V01652G →) (S/N B591V01652G →)	11-34
TWO STAGE FULL FREE- LIFT - MANUAL HYDRAULICS WITH QUICK DISCONNECT FITTINGS (S/N B590V01652G →) (S/N B591V01652G →)	11-36
TWO STAGE FULL FREE- LIFT - E-HYDRAULICS WITH QUICK DISCONNECT FITTINGS (S/N B590V01652G →) (S/N B591V01652G →)	11-38
TWO STAGE FULL FREE-LIFT - THREE FUNCTION (→ S/N B590V01651G) (→ S/N B591V01651G)	11-32
TWO STAGE LIMITED FREE LIFT - WITHOUT QUICK DISCONNECT FITTINGS (S/N B586V01930G →) (S/N B587V02097G →)	10-26
TWO STAGE LIMITED FREE LIFT - MANUAL HYDRAULICS WITH QUICK DISCONNECT FITTINGS (S/N B586V01930G →) (S/N B587V02097G →)	10-28
TWO STAGE LIMITED FREE LIFT - E-HYDRAULICS WITH QUICK DISCONNECT FITTINGS (S/N B586V01930G →) (S/N B587V02097G →)	10-30
TWO STAGE LIMITED FREE-LIFT (→ S/N B586V01929G) (→ S/N B587V02096G)	10-22
TWO STAGE LIMITED FREE-LIFT - INTEGRAL SIDE-SHIFT CARRIAGE (→ S/N B586V01929G) (→ S/N B587V02096G)	10-24
B	
BACK-UP ALARM	
COUNTERWEIGHT MOUNTED (→ 5/2009)	13-10
OVERHEAD GUARD MOUNTED (5/2009 →)	13-12

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
BATTERY CABLES	
GM 4.3L GASOLINE AND LPG - GFI OPTION	4-74
GM 4.3L GASOLINE AND LPG - PSI OPTION	4-76
BOLT-ON FENDERS	13-2
BRAKE AND INCHING PEDAL CONVERSION	14-2
BRAKE ASSEMBLY	
LONG WHEEL BASE - DRY BRAKE	8-40
SHORT WHEEL BASE - DRY BRAKE	8-38
BRAKE COOLING SYSTEM	
SINGLE AND DUAL PEDAL - WET BRAKE (→ S/N G004V01514D)	8-2
SINGLE AND DUAL PEDAL - WET BRAKE (S/N G004V01515D →)	8-4
BRAKE LINKAGE	
DUAL PEDAL - DRY BRAKE (→ 3/2011)	8-16
DUAL PEDAL - DRY BRAKE (3/2011 →)	8-20
DUAL PEDAL - WET BRAKE (→ 3/2011)	8-30
DUAL PEDAL - WET BRAKE (3/2011 →)	8-34
SINGLE PEDAL - DRY BRAKE (→ 3/2011)	8-8
SINGLE PEDAL - DRY BRAKE (3/2011 →)	8-12
SINGLE PEDAL - WET BRAKE (→ 3/2011)	8-24
SINGLE PEDAL - WET BRAKE (3/2011 →)	8-28
BRAKE MASTER CYLINDER ASSEMBLY	8-43
C	
CAMSHAFT AND OIL PAN	
GM 3.4L GASOLINE AND LPG - PSI OPTION (S/N G004V05834J →)	2-80
GM 4.3L, GASOLINE AND LPG - GFI OPTION	2-76
CARRIAGE	
THREE STAGE FULL FREE-LIFT	12-38
TWO STAGE FULL FREE-LIFT - S80-120FT	11-30
TWO STAGE LIMITED FREE-LIFT	10-20
CARRIER ASSEMBLY	
DRY BRAKE	6-24
COIL ASSEMBLY	
GM 4.3L, GASOLINE AND LPG - GFI OPTION	2-86
COUNTERWEIGHT	1-18
COWL MOUNT	1-15
CRANKSHAFT PULLEY	
GM 4.3L LPG AND GASOLINE - PSI OPTION (S/N G004V05834J →)	2-61
CYLINDER BLOCK	
GM 4.3L, GASOLINE AND LPG	2-62
CYLINDER HEAD	
GM 4.3L, GASOLINE AND LPG	2-66
D	
DIFFERENTIAL	
DRY BRAKE	6-18
WET BRAKE	6-20
DISTRIBUTER AND COIL	
GM 4.3L LPG AND GASOLINE - PSI OPTION (S/N G004V05834J →)	2-87

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
DISTRIBUTOR ASSEMBLY	4-68
DRIVE AXLE	
DRY BRAKE - PAGE 1 OF 2	6-2
DRY BRAKE - PAGE 2 OF 2	6-6
DRIVE AXLE AND ATTACHING PARTS	
WET BRAKE (→ S/N G004V01514D)	6-10
WET BRAKE (S/N G004V01515D →)	6-12
DRIVE AXLE HOUSING AND HUB	
WET BRAKE	6-14
DRIVE TIRE AND WHEEL	6-28
DUAL MIRRORS	
WITHOUT CAB	13-7
E	
E-HYDRAULIC CONTROL CONVERSION KITS	
ELECTRICAL MOUNTING PLATE	
GM 4.3L LPG - PSI OPTION (S/N G004V05834J →)	2-40
ELECTRICAL MOUNTING PLATE AND LIFTING EYE	
GM 4.3L GASOLINE - PSI OPTION	2-42
ELECTRICAL SYSTEM	
COWL, ELECTRONIC HYDRAULIC - WITH OPERATOR PRESENCE SYSTEM	4-24
COWL, MANUAL HYDRAULIC - WITH OPERATOR PRESENCE SYSTEM	4-26
COWL, WITHOUT OPERATOR PRESENCE SYSTEM	4-22
ENGINE, GM 4.3L, GS AND LPS	4-18
LOAD WEIGH	4-32
MAST	4-30
RIGHT HAND CHASSIS	4-4
TRANSMISSION	4-28
ELECTRONIC CONTROL LEVERS	
MINI-LEVER MODULE (FOUR AND FIVE FUNCTION) - DATE CODE 0725 THROUGH 0743	4-44
MINI-LEVER MODULE (FOUR AND FIVE FUNCTION) - DATE CODE 0744	4-52
MINI-LEVER MODULES - DATE CODE 0724	4-40
MINI-LEVER MODULES (THREE FUNCTION) - DATE CODE 0725 THROUGH 0743	4-42
MINI-LEVER MODULES (THREE FUNCTION) - DATE CODE 0744	4-48
ELECTRONIC CONTROL VALVE	
AUXILIARY ONE SECTION - THREE, FOUR AND FIVE FUNCTION (→ S/N G004V04328G)	9-52
AUXILIARY ONE SECTION - THREE, FOUR AND FIVE FUNCTION (S/N G004V04329G →)	9-54
AUXILIARY TWO SECTION - FOUR AND FIVE FUNCTION (→ S/N G004V04328G)	9-56
AUXILIARY TWO SECTION - FOUR AND FIVE FUNCTION (S/N G004V04329G →)	9-58
LIFT AND LOWER - THREE, FOUR, AND FIVE FUNCTION	9-46
OUTLET SECTION - THREE, FOUR AND FIVE FUNCTION (→ S/N G004V04328G)	9-60
OUTLET SECTION - THREE, FOUR AND FIVE FUNCTION (S/N G004V04329G →)	9-62
TILT SECTION - THREE, FOUR, AND FIVE FUNCTION	9-50
ELECTRONIC CONTROL VALVE ASSEMBLY	
FOUR AND FIVE FUNCTION (→ S/N G004V04328G)	9-42
FOUR AND FIVE FUNCTION (S/N G004V04329G →)	9-44
THREE FUNCTION (→ S/N G004V04328G)	9-38
THREE FUNCTION (S/N G004V04329G →)	9-40

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
ELECTRONIC HYDRAULIC POPPET VALVES	
THREE, FOUR AND FIVE FUNCTION - LIFT AND LOWER	9-48
ELECTRONIC MINI LEVER LABELS	
AUXILIARY DUAL FUNCTION	1-58
AUXILIARY SINGLE FUNCTION	1-56
ENGINE ASSEMBLY (GFI OPTION)	
GM 4.3L, GASOLINE AND LPG - SHEET 1 OF 3	2-44
GM 4.3L, GASOLINE AND LPG - SHEET 2 OF 3	2-48
GM 4.3L, GASOLINE AND LPG - SHEET 3 OF 3	2-52
ENGINE CONTROL MODULE AND SENSORS	
GM 4.3L LPG - PSI OPTION (S/N G004V05834J →)	4-12
GM 4.3L GASOLINE - PSI OPTION	4-14
ENGINE COOLING SYSTEM	
WITH BASIC TRANSMISSION AND DRY BRAKES (→ 11/2006)	2-12
WITH BASIC TRANSMISSION AND DRY BRAKES (11/2006 →)	2-16
WITH EXTERNAL OIL COOLER AND ELECTRONIC TRANSMISSION (11/2006 →)	2-24
WITH EXTERNAL OIL COOLER AND WITH ELECTRONIC TRANSMISSION - OR WITH WET BRAKES (→ 11/2006)	2-20
ENGINE ELECTRICAL SYSTEM	
GM 4.3L GASOLINE AND LPG - PSI OPTION	4-10
GM 4.3L, GASOLINE AND LPG - GFI OPTION	4-8
ENGINE MOUNT	
GM 4.3L, GASOLINE AND LPG	2-38
EXHAUST MANIFOLDS	
GM 4.3L LPG AND GASOLINE - PSI OPTION (S/N G004V05834J →)	2-58
EXHAUST SYSTEM	
GM 3.4L GASOLINE AND LPG - WITH CATALYTIC CONVERTER (PSI OPTION) (S/N G004V05834J →)	2-8
GM 4.3L, GASOLINE AND LPG - WITH CATALYTIC CONVERTER (GFI OPTION)	2-4
EXHAUST WRAPS	
GM 4.3L, GASOLINE AND LPG	2-10
F	
FAN ASSEMBLY	
GM 4.3L, GASOLINE AND LPG - PSI OPTION (S/N G004V05834J →)	2-54
FAN MOUNT ASSEMBLY	
GM 4.3L LPG AND GASOLINE - PSI OPTION (S/N G004V05834J →)	2-30
GM 4.3L, GASOLINE AND LPG - GFI OPTION	2-28
FIRE EXTINGUISHER	13-9
FLOORPLATES AND COVERS	
→ S/N G004V03201F EXC. 03150, 03157, 03175-03176, 03180-03184, 03189	1-8
S/N G004V03202F → INC. 03150, 03157, 03175-03176, 03180-03184, 03189	1-12
FLYWHEEL AND HOUSING	
GM 4.3L, GASOLINE AND LPG (→ S/N G004V02834E (ONE SPEED WITH WET BRAKE)) (→ S/N G004V02844E INC. 02874-02877, 02879-02880, 02882-02883, 02891, 02894-02896, 02898, 02901-02902 (ONE SPEED WITH DRY BRAKE)) (→ S/N G004V02842E (TWO SPEED WITH DRY BRAKE)) (→ S/N G004V02844E (TWO SPEED WITH WET BRAKE))	2-32

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
GM 4.3L, GASOLINE AND LPG (S/N G004V02835E → (ONE SPEED WITH WET BRAKES)) (S/N G004V02845E → EXC. 02874-02877, 02879-02880, 02882-02883, 02891, 00289 (ONE SPEED WITH DRY BRAKE)) (S/N G004V02847E → (TWO SPEED WITH WET BRAKE)) (S/N G004V02843E → (TWO SPEED WITH DRY BRAKE))	2-34
FORK	
POLISHED WITH FULL BOTTOM TAPER HOOK TYPE	1-52
STANDARD TAPER HOOK TYPE - CLASS III	1-50
STANDARD TAPER HOOK TYPE - CLASS IV	1-51
FORWARD CLUTCH	
SINGLE SPEED TRANSMISSION (→ S/N G004V02079E)	5-36
SINGLE SPEED TRANSMISSION (S/N G004V02080E →)	5-38
FORWARD CLUTCH, HIGH	
DUAL SPEED TRANSMISSION (→ S/N G004V02223E)	5-40
DUAL SPEED TRANSMISSION (S/N G004V02224E →)	5-42
DUAL SPEED TRANSMISSION - T150, T151	5-88
FORWARD CLUTCH, LOW	
DUAL SPEED TRANSMISSION (→ S/N G004V02223E)	5-44
DUAL SPEED TRANSMISSION (S/N G004V02224E →)	5-46
DUAL SPEED TRANSMISSION - T150, T151	5-86
FREE-LIFT	
THREE STAGE FULL FREE-LIFT (→ 5/2008)	12-19
THREE STAGE FULL FREE-LIFT (5/2008 →)	12-22
FREE-LIFT CYLINDER	
THREE STAGE FULL FREE LIFT (5/2008 →)	12-30
THREE STAGE FULL FREE-LIFT (→ 5/2008)	12-26
TWO STAGE FULL FREE-LIFT - S80-120FT (→ 6/2009)	11-18
TWO STAGE FULL FREE-LIFT - S80-120FT (6/2009 →)	11-22
FUEL SENDING UNIT	
GM 4.3L GASOLINE - PSI OPTION	3-14
FUEL SUPPLY SYSTEM	
GM 4.3L, LPG - GFI OPTION (→ S/N G004V05833J)	3-20
GM 4.3L, LPG - PSI OPTION (S/N G004V05834J →)	3-24
FUEL SYSTEM	
GM 4.3L GASOLINE - PSI OPTION	3-12
GM 4.3L, GASOLINE - GFI OPTION	3-10
FULL SUSPENSION SEAT	
MANUAL AND ELECTRO-HYDRAULIC — SWIVEL AND NON SWIVEL - SHEET 1 OF 3 (S/N G004V04680H → EXC. 04683)	1-38
SHEET 2 OF 3 (S/N G004V04680H → EXC. 04683)	1-42
WITH AND WITHOUT ELECTRONIC CONTROLS - WITH LIMITED BACK TILT (→ S/N G004V04679H INC. 04683)	1-34
FULL SUSPENSION SWIVEL SEAT	
WITH AND WITHOUT ELECTRONIC CONTROLS (S/N G004V04680H → EXC. 04683)	1-36
FUSE BOX	
GM 4.3L LPG - PSI OPTION (→ S/N G004V05833J)	4-38
G	
GEAR PUMP	
→ 12/2009	9-10

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
1/2010 →	9-12
GM LPG REGULATOR DRAIN KIT	13-16
H	
HAND LEVERS	
FOUR FUNCTION - WITH DETENTED LEVERS	9-18
FOUR FUNCTION - WITHOUT DETENTED LEVERS	9-20
THREE FUNCTION - WITH DETENTED LEVERS	9-14
THREE FUNCTION - WITHOUT DETENTED LEVERS	9-16
HEADER HOSE	
THREE STAGE FULL FREE-LIFT	12-34
TWO STAGE FULL FREE-LIFT - S80-120FT	11-26
TWO STAGE LIMITED FREE-LIFT	10-14
HEADER HOSE CONVERSION KITS	
HOIST HOSE AND ATTACHING PARTS	9-73
HOOD ASSEMBLY	
→ S/N G004V04643H	1-2
S/N G004V04644H →	1-4
HYDRAULIC FILTER	9-6
HYDRAULIC OIL COOLER	9-8
HYDRAULIC SUPPLY AND RETURN	9-2
I	
IMPACT SENSOR	4-72
INNER MAST	
THREE STAGE FULL FREE-LIFT	12-6
TWO STAGE LIMITED FREE-LIFT	10-4
INNER MAST AND FREE-LIFT	
TWO STAGE FULL FREE-LIFT - S80-120FT (→ 6/2009)	11-6
TWO STAGE FULL FREE-LIFT - S80-120FT (6/2009 →)	11-10
INSTRUMENT CLUSTER	4-69
INTAKE AIR FUEL MODULE	
GM 4.3L GASOLINE - PSI OPTION	2-74
INTEGRAL SIDE-SHIFT	
THREE STAGE FULL FREE-LIFT - S80FT (WITH ORFS FITTINGS)	13-38
TWO AND THREE STAGE FULL FREE-LIFT - S100-120FT (WITH ORFS FITTING)	13-44
TWO STAGE FULL FREE-LIFT - S80FT (WITH 37 DEGREE FITTINGS) (→ S/N B590V01747J)	13-30
TWO STAGE FULL FREE-LIFT - S80FT (WITH ORFS FITTINGS) (S/N B590V01748J →)	13-32
INTEGRAL SIDE-SHIFT ASSEMBLY	
TWO STAGE LIMITED FREE LIFT CLASS III - ORFS FITTINGS	13-20
TWO STAGE LIMITED FREE LIFT CLASS IV - ORFS FITTINGS	13-22
INTEGRAL SIDE-SHIFT CARRIAGE	
THREE STAGE FULL FREE-LIFT - 1067 MM (42 IN.) CLASS III	13-40
THREE STAGE FULL FREE-LIFT - 1219 MM (48 IN.) CLASS III	13-42
THREE STAGE FULL FREE-LIFT - 1219 MM (48 IN.) CLASS IV	13-48
TWO STAGE FULL FREE-LIFT - 1067 MM (42 IN.) CLASS III	13-34
TWO STAGE FULL FREE-LIFT - 1219 MM (48 IN.) CLASS III	13-36
TWO STAGE FULL FREE-LIFT - 1219 MM (48 IN.) CLASS IV	13-46
TWO STAGE LIMITED FREE-LIFT - 1067 MM (42 IN.) CLASS III	13-24

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
TWO STAGE LIMITED FREE-LIFT - 1219 MM (48 IN.) CLASS III	13-26
TWO STAGE LIMITED FREE-LIFT - 1219 MM (48 IN.) CLASS IV	13-28
INTERMEDIATE MAST	
THREE STAGE FULL FREE-LIFT	12-8
L	
LABELS	
EXTERIOR	1-62
HYDRAULIC CONTROL LABELS - CONTROL LEVER	1-66
INTERIOR	1-60
LIGHT KITS	14-3
LOAD BACKREST EXTENSION	1-54
LPG CONVERTER	
GM 4.3L LPG - PSI OPTION (S/N G004V05834J →)	3-38
LPG LOCK OFF	
GM 4.3L - PSI OPTION (S/N G004V05834J →)	3-37
LPG REGULATOR	
GM 4.3L - GFI OPTION (→ S/N G004V05833J)	3-34
LPG REGULATOR AND MIXER	
GM 4.3L - PSI OPTION (S/N G004V05834J →)	3-36
LPG TANK BRACKET	
SWING OUT (→ S/N G004V03216F (NON BCS)) (→ S/N G004V03117E (BCS))	3-40
SWING OUT (S/N G004V03217F → (NON BCS)) (S/N G004V03118E → (BCS))	3-42
SWING OUT/ DROP DOWN (→ S/N G004V03038E (NON BCS)) (→ S/N G004V03035E (BCS))	3-46
SWING OUT/DROP DOWN (S/N G004V03039E → (NON BCS)) (S/N G004V03036E → (BCS))	3-50
M	
MAIN LIFT	
THREE STAGE FULL FREE-LIFT	12-12
TWO STAGE LIMITED FREE-LIFT	10-6
MAIN LIFT CYLINDER	
THREE STAGE FULL FREE-LIFT	12-16
TWO STAGE FULL FREE-LIFT - S80-120FT	11-14
TWO STAGE LIMITED FREE-LIFT - S80FT	10-10
TWO STAGE LIMITED FREE-LIFT - S100-120FT	10-12
MANUAL CONTROL VALVE	
AUXILIARY ONE AND TWO SECTION - THREE AND FOUR FUNCTION (→ S/N G004V02934E (THREE FUNCTION)) (→ S/N G004V02942E (FOUR FUNCTION))	9-32
AUXILIARY ONE AND TWO SECTION - THREE AND FOUR FUNCTION (S/N G004V02935E → (THREE FUNCTION)) (S/N G004V02943E → (FOUR FUNCTION))(FOUR FUNCTION))	9-34
LIFT AND TILT - THREE AND FOUR FUNCTION (→ S/N G004V02934E (THREE FUNCTION)) (→ S/N G004V02942E (FOUR FUNCTION))	9-26
LIFT AND TILT - THREE AND FOUR FUNCTION (S/N G004V02935E → (THREE FUNCTION)) (S/N G004V02943E → (FOUR FUNCTION))	9-28
LIFT AND TILT - THREE AND FOUR FUNCTION (S/N G004V04302G →)	9-30
OUTLET SECTION - THREE, FOUR, AND FIVE FUNCTION	9-36

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
MANUAL CONTROL VALVE ASSEMBLY	
THREE AND FOUR FUNCTION	9-22
MANUAL CONTROL VALVE LOCKOUT GROUP	9-24
MANUAL HYDRAULIC CONTROL CONVERSION KITS	14-4
MINI LEVER MODULE LABELS	
HYDRAULIC CONTROL FUNCTIONS	1-64
MINI-LEVER CONTROLS	
WITH ARMREST - THREE FUNCTION (S/N G004V04680H → EXC. 04683)	4-56
WITH ARMREST - FOUR FUNCTION (S/N G004V04680H → EXC. 04683)	4-58
WITH ARMREST - FIVE FUNCTION (S/N G004V04680H → EXC. 04683)	4-60
MIRROR	
REAR MOUNTED	13-8
MISCELLANEOUS	14-11
MONOTROL PEDAL ASSEMBLY	
→ S/N G004V06779K	3-56
N	
NON SUSPENSION SEAT	
WITHOUT ELECTRONIC CONTROLS (S/N G004V04680H → EXC. 04683)	1-24
WITHOUT ELECTRONIC CONTROLS - OPTIONAL	1-26
NON-SUSPENSION SEAT	
→ S/N G004V04679H INC. 04683	1-22
O	
OIL PUMP	
GM 4.3L, GASOLINE AND LPG	2-84
OUTER MAST	
THREE STAGE FULL FREE-LIFT	12-2
TWO STAGE LIMITED FREE-LIFT	10-2
OUTER MAST AND MAIN LIFT	
TWO STAGE FULL FREE-LIFT - S80-120FT	11-2
OVERHEAD GUARD	1-20
P	
PARKING BRAKE ASSEMBLY	
→ S/N G004V06212J	8-46
S/N G004V06213K →	8-48
POWER DISTRIBUTION MODULE	
→ S/N G004V01735D	4-34
GFI OPTION (S/N G004V01736D ↔ S/N G004V05833J)	4-36
PRE-CLEANER AND MOUNT	3-8
PRESSURE REGULATOR	13-14
PULLEY AND TENSIONER	
GM 4.3L LPG AND GASOLINE - PSI OPTION (S/N G004V05834J →)	2-56
R	
REMOTE KEY SWITCH	4-62

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
REPAIR KITS	
REPLACEMENT KITS	
REVERSE CLUTCH	
DUAL SPEED TRANSMISSION (→ S/N G004V02223E)	5-52
DUAL SPEED TRANSMISSION (S/N G004V02224E →)	5-54
DUAL SPEED TRANSMISSION - T150, T151	5-90
SINGLE SPEED TRANSMISSION (→ S/N G004V02079E)	5-48
SINGLE SPEED TRANSMISSION (S/N G004V02080E →)	5-50
S	
SEALED ALTERNATOR AND MOUNTING	
GM 4.3L	4-64
SEAT ATTACHING PARTS	
NOT INCLUDED WITH SEAT - SHEET 3 OF 3 (S/N G004V04680H → EXC. 04683)	1-44
SEAT CONVERSION KITS	14-2
SEMI-SUSPENSION SEAT	
WITH AND WITHOUT ELECTRONIC CONTROLS (→ S/N G004V03625F)	1-28
WITH AND WITHOUT ELECTRONIC CONTROLS (S/N G004V03626F ↔ S/N G004V04679H)	1-30
WITH AND WITHOUT ELECTRONIC CONTROLS (S/N G004V04680H → EXC. 04683)	1-32
SPARK PLUGS AND WIRES	
GM 4.3L GASOLINE AND LPG - PSI OPTION (S/N G004V05834J →)	4-16
STARTER	
GM 4.3L	4-66
STEER AXLE	7-8
STEER CYLINDER	7-14
STEER TIRES AND WHEELS	7-16
STEERING COLUMN AND ATTACHING PARTS	7-2
STEERING COLUMN ASSEMBLY	7-4
STEERING CONTROL UNIT	7-6
STEERING LINES	7-12
STROBE LIGHT	
→ S/N G004V02783E EXC. 02746, 02754-02758	13-4
LED (S/N G004V02784E → INC. 02746, 02754-02758)	13-6
T	
THERMOSTAT AND WATER OUTLET HOUSING	
GM 4.3L GASOLINE - PSI OPTION	2-60
GM 4.3L LPG - PSI OPTION (S/N G004V05834J →)	2-59
THROTTLE BODY	
GM 4.3L LPG - PSI OPTION (S/N G004V05834J →)	3-32
GM 4.3L GASOLINE - PSI OPTION	3-18
THROTTLE BODY ASSEMBLY	
GM 4.3L LPG - GFI OPTION (S/N G004V04608H ↔ S/N G004V05833J INC. 04572)	3-30
GM 4.3L, LPG - GFI OPTION (→ S/N G004V04607H EXC. 04572)	3-28
THROTTLE BODY ASSEMBLY AND FUEL RAIL	
GM 4.3L, GASOLINE - GFI OPTION	3-16
THROTTLE PEDAL AND ATTACHING PARTS	
MONOTROL PEDAL (→ S/N G004V06779K)	3-54

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
THROTTLE PEDAL ASSEMBLY AND ATTACHING PARTS	
MONOTROL (S/N G004V06780K →)	3-60
STANDARD PEDAL	3-58
TILT CYLINDER	9-66
TILT CYLINDER INSTALLATION	9-64
TILT HOSES	9-68
TORQUE CONVERTER	
GM 4.3L, GASOLINE AND LPG	5-3
TRANSMISSION	
DUAL SPEED (T150, T151) - TWO PIECE HOUSING	5-78
DUAL SPEED (T150, T151) - SECTION 1 OF 2	5-80
DUAL SPEED (T150, T151) - SECTION 2 OF 2	5-82
DUAL SPEED, THREE PIECE HOUSING - SHEET 1 OF 2 (→ S/N G004V02228E (WET BRAKE)) (→ S/N G004V02223E DRY BRAKE)	5-56
DUAL SPEED, THREE PIECE HOUSING - SHEET 2 OF 2 (→ S/N G004V00228E (WET BRAKE)) (→ S/N G004V02223E DRY BRAKE)	5-60
DUAL SPEED, THREE PIECE HOUSING, SHEET 1 OF 2 (S/N G004V02224E ↔ S/N G004V02842E DRY BRAKE) (S/N G004V02229E ↔ S/N G004V02846E WET BRAKE)	5-62
DUAL SPEED, THREE PIECE HOUSING, SHEET 2 OF 2 (S/N G004V02224E ↔ S/N G004V02842E DRY BRAKE) (S/N G004V02229E ↔ S/N G004V02846E WET BRAKE)	5-65
DUAL SPEED, TWO PIECE HOUSING - SHEET 1 OF 2 (S/N G004V02843E → (DRY BRAKE)) (S/N G004V02847E → (WET BRAKE))	5-68
DUAL SPEED, TWO PIECE HOUSING - SHEET 2 OF 2 (S/N G004V02843E → (DRY BRAKE)) (S/N G004V02847E → (WET BRAKE))	5-72
SINGLE SPEED, THREE PIECE HOUSING - SHEET 1 OF 2 (→ S/N G004V02079E EXC. 1698)	5-18
SINGLE SPEED, THREE PIECE HOUSING - SHEET 2 OF 2 (→ S/N G004V02079E EXC. 1698)	5-22
SINGLE SPEED, THREE PIECE HOUSING - SHEET 1 OF 2 (S/N G004V02080E ↔ 9/2007 INC. 1698)	5-24
SINGLE SPEED, THREE PIECE HOUSING - SHEET 2 OF 2 (S/N G004V02080E ↔ 9/2007 INC. 1698)	5-28
SINGLE SPEED, TWO PIECE HOUSING - SHEET 1 OF 2 (9/2007 →)	5-30
SINGLE SPEED, TWO PIECE HOUSING - SHEET 2 OF 2 (9/2007 →)	5-34
TRANSMISSION CONTROL VALVE ASSEMBLY	
→ 9/2007	5-74
9/2007 →	5-76
TRANSMISSION COOLING	
AIR OIL COOLER	5-14
GM 4.3L, GASOLINE AND LPG, WITH INTERNAL OIL COOLER - BASIC POWERSHIFT TRANSMISSION (→ S/N G004V04081F)	5-6
GM 4.3L, LPG, WITH INTERNAL OIL COOLER - BASIC POWERSHIFT TRANSMISSION (S/N G004V04082F →)	5-8
SQUARE WAVE RADIATOR WITH ELECTRONIC TRANSMISSION	5-16
WITH EXTERNAL OIL COOLER AND ELECTRONIC TRANSMISSION (→ S/N G004V04081F)	5-10
WITH EXTERNAL OIL COOLER AND ELECTRONIC TRANSMISSION (S/N G004V04082F →)	5-12
TRANSMISSION MOUNT	5-4

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
V	
VALVE COVER AND INLET MANIFOLD	
GM 4.3L GASOLINE AND LPG - PSI OPTION (S/N G004V05834J →)	2-72
GM 4.3L, GASOLINE AND LPG - GFI OPTION	2-68
VENT LINE GROUP	9-72
W	
WATER BYPASS	
GM 4.3L GASOLINE - PSI OPTION	2-88
WET BRAKES	6-26
WIRE HARNESS	
COWL WITH FORWARD/REVERSE LEVER - MANUAL, WITH OPERATOR PRESENCE	4-146
COWL WITH FORWARD/REVERSE LEVER - WITHOUT RETURN TO SET TILT	4-150
COWL WITH MONOTROL PEDAL - WITH RETURN TO SET TILT	4-154
COWL WITH MONOTROL PEDAL - WITH HYDRAULIC PUMP SOLENOID	4-162
ELECTRONIC CONTROL VALVE - THREE FUNCTION	4-178
ELECTRONIC CONTROL VALVE - FOUR FUNCTION	4-180
ELECTRONIC CONTROL VALVE - FIVE FUNCTION	4-182
ENGINE - GM 4.3L, GASOLINE (→ S/N G004V03165E)	4-120
ENGINE - GM 4.3L, GASOLINE (S/N G004V03166E ↔ S/N G004V04601H EXC. 04572)	4-122
ENGINE - GM 4.3L, LPG (→ S/N G004V02853E)	4-130
ENGINE - GM 4.3L, LPG (S/N G004V02854E ↔ S/N G004V04601H EXC. 04572)	4-132
JOYSTICK	4-184
LEFT HAND CHASSIS - GM 4.3L, GASOLINE (→ S/N G004V04601H EXC. 04572)	4-110
LEFT HAND CHASSIS - GM 4.3L GASOLINE (SERIES 2010) (S/N G004V04608H → INC. 04572)	4-112
LEFT HAND CHASSIS - GM 4.3L, LPG (→ S/N G004V04607H EXC. 04572)	4-114
LEFT HAND CHASSIS - GM 4.3L LPG (2010 SERIES)(WITH PREMIUM LOW FUEL SENSOR) (S/N G004V04608H → INC. 04572)	4-116
LEFT HAND CHASSIS - GM 4.3L LPG (2010 SERIES)(WITHOUT PREMIUM LOW FUEL SENSOR) (S/N G004V04608H → INC. 04572)	4-118
LIGHTS (→ S/N G004V01639D)	4-190
LIGHTS (S/N G004V01640D ↔ 6/2007)	4-192
LIGHTS (6/2007 →)	4-194
LOW FUEL SENSOR	4-196
RIGHT HAND CHASSIS - GM 4.3L (→ 8/2006)	4-78
RIGHT HAND CHASSIS - GM 4.3L (8/2006 ↔ S/N G004V02853E (LPG)) (8/2006 ↔ S/N G004V03165E (GASOLINE))	4-84
RIGHT HAND CHASSIS - GM 4.3L (S/N G004V02854E ↔ S/N G004V04328G (LPG)) (S/N G004V03166E ↔ S/N G004V04328G (GASOLINE))	4-90
RIGHT HAND CHASSIS - GM 4.3L (S/N G004V04329G ↔ 9/2010)	4-96
RIGHT HAND CHASSIS - GM 4.3L (9/2010 →)	4-102
SEALED ALTERNATOR - GM 4.3L	4-144
SEAT JUMPER (→ 9/2010)	4-108
TRANSMISSION - SINGLE SPEED	4-186
TRANSMISSION - DUAL SPEED	4-188
WIRE HARNESS (ENGINE)	
GM 4.3L GASOLINE (2010 SERIES) (S/N G004V04608H → INC. 04572)	4-126
GM 4.3L LPG (GFI OPTION) (S/N G004V04608H ↔ S/N G004V05833J INC. 04572)	4-136
GM 4.3L, LPG - PSI OPTION (S/N G004V05834J →)	4-140

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
WIRE HARNESS-COWL	
ELECTRO-HYDRAULICS WITH FORWARD/REVERSE - WITH HYDRAULIC PUMP	
SOLENOID (1/2012 →)	4-174
ELECTRO-HYDRAULICS WITH MONOTROL PEDAL - WITH HYDRAULIC PUMP SOLENOID	4-170
MANUAL HYDRAULICS WITH FORWARD/REVERSE - WITH HYDRAULIC PUMP	
SOLENOID (1/2012 →)	4-158
MANUAL HYDRAULICS WITH MONOTROL PEDAL - WITH HYDRAULIC PUMP SOLENOID (1/2012 →)	
.....	4-166
WORK, REAR DRIVE, AND BRAKE/TAIL LIGHTS	4-70

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPA	US Environmental Protection Agency	UL Type GS	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the next page.

HYSTER UNIT CODE D001 NORTH AMERICA 06/2001

TABLE OF CONTENTS

DESCRIPTION	PAGE
AIR INTAKE AND FILTER DIESEL (⇒ D/B 11/98)	3-22
AIR INTAKE AND FILTER DIESEL (D/B 11/96 ⇒)	
AIR INTAKE AND FILTER GASOLINE AND LPG	
ALTERNATOR GASOLINE, LPG, AND DIESEL	
ALTERNATOR TYPES GS, LPS, AND DS	
AUXILIARY FUNCTION TUBE TWO AND THREE STAGE FULL F	

SECTION 13 NUMERICAL INDEX

PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.
142	3-4	19	10-13	25		11-27	29	12-31	12		
12445	3-32	19	10-17	6		11-31	25	16719	3-36	5	
	3-34	1	10-27	11		11-32	37	16751	3-16	27	
			11	11		8-4	29	16849	3-34	21	
			11	6	16485	8-4	45		3-38	20	
			12	13		8-4	45	16863	3-28	17	
			14	6		8-8	34	16865	3-6	18	
			12	6		9-7	9		4-27	41	
			3	17		9-7	19	16882	9-7	30	
			9	10		9-11	9		9-11	27	
			23	46		9-11	17		10-10	36	
			27	46		10-9	21		10-13	32	
			26	14		10-9	28		11-7	24	
			28	14		10-13	16		11-9	17	
			50	14		11-7	19				

SECTIONS

- 1
- 2
- 3
- 4
- 5 BRAKE/ACC
- 6
- 7 MAST-TWO STAG
- 8 MAST-THREE ST
- 9 MAST-TWO ST
- 10
- 11

TRANSMISSION HOUSING ⇒ S/N D001H-2628

KEY:
A: Diesel
B: Gasoline and LPG

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
1	202547	Transmission	1	1
2	2023329	Transmission	1	1
3	2021670	Case	2	2
4	2023418	Bearing Cap	4	4
5	296429	Washer	4	4
6	293947	Bolt	1	1
7	2021390	Cover	2	2
8	1371656	Colter Pin	4	4
9	2021915	O-Ring	1	1
10	2021329	Plug	4	4
11	2021675	Housing	22	22
12	2021336	Pin	39	39
13	287860	Lockwasher	1	1
14	292682	Hydraulic Pump	1	1
15	2021345	⇒ Figure 5-3	1	1
16	214364	Gasket	1	1
17	296418	Bolt	8	8
18	2021388	Washer	1	1
19	2021389	Temperature Switch	1	1
20	2021383	Breather	9	9
21	292515	Dipstick	9	9
22	136692	Bolt	2	2
23	292527	Nut	3	3
24	292531	Bolt	3	2
25	292583	Capscrew	4	4
26	293637	Lockwasher	4	4
	296420	Washer	1	1
	996403	Transmission Kit (Includes Item 7)	1	1
	996405	Transmission Kit (Includes Item 14)	1	1

This Parts Manual is divided into 11 major sections which are listed above. Quick be made by placing the right thumb on the tab of the desired section, bending the pages to the corresponding tab.

©Copy Right Date HYSTER COMPANY See Service Manual for service procedures. 5-15

HP990004

HOW TO FIND THE DESIRED PART NUMBER

WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the Sections Page. Choose the general area of reference most likely to include the part.
2. Turn to the section you chose. Use the Section Table of Contents to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Table of Contents (Page i).
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS KNOWN:

5. Use the Numerical Index (Page 15-1) to find the part number. Turn to the page listed and locate the part as indicated by the item number.

GENERAL:

The assembly breakdowns include part numbers, descriptions, quantities required, keys and footnotes to help in selecting correct parts.

6. Parts Supersession Information. Part numbers that have this history will be displayed in the parts list in the order that they were superseded (from oldest to newest). The superseded part numbers will be shown with a line through them.

Five periods in the PART NO. column (.) indicate that the part is either *Not Serviced Separately* or there is a reference to another figure. A figure reference is denoted by a pointing hand followed by a figure number in the DESCRIPTION column (☞ Figure 10)

7. Keys are used to show two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C", "D", or "E" and the corresponding quantity column to find the required parts. Two periods in the QTY column (..) indicate that the part is not used for that assembly.
8. Indented descriptions under the DESCRIPTION column are used to indicate assemblies and

subparts of assemblies. In the example on the previous page, *BEARING CAP* (Item 2) is a subpart of the major assembly *CASE*.

9. Quantities shown are for one assembly. The quantities of the subpart *BEARING CAP* are indicated as two and two. This means two per *CASE* assembly.
10. Serial number breaks identify the most current parts information and are shown as follows:
 - **S/N D001H2628**
Indicates last serial number affected.
 - S/N D001H2629** →
Indicates the first serial number affected.
 - S/N D001H1553** ↔ **S/N D001H3291**
Indicates a range of serial numbers affected.

ECN numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information and are identified as follows:

→ **S/N Pending Per ECN 63243**

Indicates a pending serial number for last unit affected.

S/N Pending Per ECN 63243 →

Indicates a pending serial number for first unit affected.

Date breaks are used to indicate when a change occurred but a subsequent serial number break was not recorded. This is an arbitrary date usually based on the ECN release and are identified as follows:

→ **D/B 3/00**

Indicates that a change occurred sometime within that month for the item affected.

D/B 3/00 →

Indicates that a change occurred sometime within that month for the item affected.

D/B 3/00 ↔ **D/B 4/00**

Indicates a range of production dates of the item affected.

Contact your local dealer for Hyster lift trucks for serial number information for items with a ECN or a date break.

ORDERING PARTS:

When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.

For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.