

PARTS MANUAL

**H1050HD-16CH, H1150HD-16CH
(G117)**

CUSTOMER EDITION

HYSTER

SECTIONS

1	FRAME
2	ENGINE ASSEMBLY
3	FUEL SYSTEM
4	ELECTRICAL SYSTEM
5	TRANSMISSION
6	DRIVE AXLE
7	STEERING SYSTEM
8	BRAKE SYSTEM
9	HYDRAULIC SYSTEM
10	MAST WITH CONTAINER HANDLER
11	ATTACHMENTS
12	OPTIONS
13	FIELD CONVERSION KITS
14	NUMERICAL INDEX

This Parts Manual is divided into 14 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
ACCESSORY DRIVE PULLEY	
TIER III ENGINE	2-32
TIER IV INTERIM ENGINE	2-33
AIR CLEANER PLUMBING	
TIER III ENGINE	2-34
AIR COMPRESSOR AND HOSES	
TIER III ENGINE	1-104
TIER IV INTERIM ENGINE	1-105
AIR CONDITIONER	
CLIMATE CONTROL CAB	1-80
AIR CONDITIONER AND CONTROL PANEL ASSEMBLIES	1-66
AIR CONDITIONER ASSEMBLY	
→ 12/2012	1-68
12/2012 →	1-70
AIR CONDITIONER SYSTEM	
CLIMATE CONTROL CAB	1-78
AIR CONDITIONER SYSTEM ASSEMBLY	
CLOSED CAB WITH AIRCO	1-64
AIR DUCT	
LOUVER, CLIMATE CONTROL CAB	12-20
AIR DUCT ASSEMBLY	
AIR CONDITIONING	1-76
HEATER	1-58
AIR HORN	1-48
AIR INTAKE CONNECTION	
TIER IV INTERIM ENGINE	2-35
AIR INTAKE HOSE	
TIER IV INTERIM ENGINE	2-36
AIR INTAKE SYSTEM	
TIER III ENGINE	3-2
TIER IV INTERIM ENGINE	3-4
AIR TRANSFER CONNECTION	
TIER III ENGINE	2-37
TIER IV INTERIM ENGINE	2-38
AIRFLOW SCREEN	
CABIN TOWER	1-110
ALTERNATOR	
TIER III AND TIER IV INTERIM ENGINE (10/2013 → (TIER III ENGINE))	4-22
TIER III ENGINE (→ 10/2013)	4-19
ALTERNATOR MOUNTING	
TIER III ENGINE	4-20
TIER IV INTERIM ENGINE	4-23
ARMREST ASSEMBLY	1-46
AUTOMATIC GREASING PUMP	9-44
AUTOMATIC GREASING SYSTEM	
PAGE 1 OF 3	9-50
PAGE 2 OF 3	9-52
PAGE 3 OF 3	9-54

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
AXLE HOUSING → S/N G117E01504K INC. 01506-01508	6-2
B	
BATTERY COVER	1-8
BELT TENSIONER TIER IV INTERIM ENGINE	2-39
BLOCK ASSEMBLY AND HOSES, TWIN 12-PORT WITH METERING UNIT NUMBERS 3, 8, AND 10 - STEER AXLE LUBRICATION	9-48
BLOCK ASSEMBLY AND HOSES, TWIN 7-PORT WITH METERING UNIT NUMBERS 4 AND 8 - MAST MOUNTING LUBRICATION	9-46
BRAKE ACCUMULATOR AND MOUNTING HARDWARE	8-2
BRAKE ASSEMBLY SERVICE BRAKES (→ S/N G117E01504K INC. 01506-01508)	6-10
BRAKE MANIFOLD AND ATTACHING BRAKE HOSES	8-4
BRAKE PEDAL AND LINKAGE	8-16
BRAKE PEDAL ASSEMBLY	8-14
BRAKE VALVE AND ATTACHING BRAKE HOSES	8-3
BREATHER PLUMBING TIER III ENGINE	2-40
TIER IV INTERIM ENGINE	2-41
BUMPERS	11-14
C	
CAB HEATER HOSES - TIER III ENGINE	1-100
HEATER HOSES - TIER IV INTERIM ENGINE	1-102
PAGE 1 OF 2	1-50
PAGE 2 OF 2	1-52
SUNSHADE - TOP	12-5
SUNSHADE - REAR	12-6
CAB DOOR LEFT HAND	1-84
RIGHT HAND	1-86
CAB LIGHTING (ENGINE COMPARTMENT)	12-8
CAB LIGHTING (STROBE)	12-9
CAB MAIN DOOR WINDOW RIGHT AND LEFT HAND	1-88
CAB MOUNTING	1-82
CAB RECIRCULATING FAN	12-2
CAB SUNSHADE REAR	1-94
TOP	1-92
CAB WINDOWS INSTALLATION	1-90
CHARGE AIR COOLER GROUP TIER III ENGINE	2-4
TIER IV INTERIM ENGINE	2-6
CLIMATE CONTROL SYSTEM	1-74

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
COMPRESSOR ASSEMBLY	
TIER IV INTERIM ENGINE	1-106
COMPRESSOR MOUNTING	
TIER III ENGINE	2-42
TIER IV INTERIM ENGINE	2-44
CONDENSER	1-72
CONDENSER SYSTEM	1-112
CONSOLE	1-54
CONTROL PANEL ASSEMBLY	
HEATER	4-104
HEATER AND AIR CONDITIONER (→ 12/2012)	4-105
HEATER AND AIR CONDITIONER (12/2012 →)	4-106
CONTROL VALVE ASSEMBLY	
AUXILIARY	9-14
CAP AND SUPPORT KIT	9-20
LIFT	9-16
LIFT AND TILT	9-18
COOLANT HEATER STARTING AID	
TIER III ENGINE	2-45
COOLER AND ATTACHING BRAKE HOSES	8-10
COOLER ASSEMBLY	
TIER III ENGINE	2-16
TIER IV INTERIM ENGINE	2-18
COOLING	
TIER III ENGINE	2-12
TIER IV INTERIM ENGINE	2-14
CORROSION RESISTOR	
TIER III ENGINE	2-46
COUNTERWEIGHT	1-12
CYLINDER	
POWER PILE SLOPE	11-13
D	
DASH AND AIR DUCT ASSEMBLY	
CAB	1-55
DC-DC CONVERTER AND ATTACHING PARTS	4-30
DIESEL PARTICULATE FILTER	
AFTERTREATMENT MODULE DEVICE - TIER IV INTERIM ENGINE	2-132
DIFFERENTIAL AND CARRIER	
S/N G117E01505K → EXC. 01506-01508	6-16
DIFFERENTIAL CARRIER	
→ S/N G117E01504K INC. 01506-01508	6-4
DOOR CONVERSION KIT	
DRIVE AXLE AND ATTACHING BRAKE HOSES	8-12
DRIVE AXLE MOUNTING	
S/N G117E01505K → EXC. 01506-01508	6-18
DRIVE SHAFT	
→ S/N G117E01504K INC. 01506-01508	5-44
S/N G117E01505K → EXC. 01506-01508	5-45

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
DRIVE WHEELS AND TIRES	
18.00 X 25	6-26
18.00 X 33	6-28
18.00 X 33 - FOR TRUCKS WITH KESSLER DRIVE AXLE ONLY	6-30
E	
ELECTRICAL ACCESSORIES	
TIER III ENGINE	4-18
ELECTRICAL SYSTEM	4-4
EMPTY SEAT ENGINE SHUTDOWN	12-16
ENGINE BLOCK HEATER 240V	12-24
ENGINE CONTROL MODULE AND SENSORS	
TIER IV INTERIM ENGINE	4-16
ENGINE CONTROL SYSTEM	
TIER III ENGINE	4-12
ENGINE COOLANT PLUMBING	
TIER IV INTERIM ENGINE	2-131
ENGINE COVERS	1-10
ENGINE MOUNTING	
TIER III ENGINE	2-20
TIER IV INTERIM ENGINE	2-22
ENGINE OIL FILL	
CYLINDER BLOCK - TIER IV INTERIM ENGINE	2-77
FRONT GEAR COVER - TIER IV INTERIM ENGINE	2-76
TIER III ENGINE	2-74
ENGINE SUPPORT	
TIER IV INTERIM ENGINE	2-24
EXHAUST MANIFOLD	
TIER III ENGINE	2-48
TIER IV INTERIM ENGINE	2-49
EXHAUST OUTLET CONNECTION	
TIER III ENGINE	2-52
EXHAUST PLUMBING	
AIR RECIRCULATION - TIER IV INTERIM ENGINE	2-53
WATER RECIRCULATION - TIER IV INTERIM ENGINE	2-54
EXHAUST RECIRCULATION	
TIER IV INTERIM ENGINE	2-50
EXHAUST SYSTEM	
TIER III ENGINE	2-26
TIER IV INTERIM ENGINE	2-28
F	
FAN DRIVE AND MOUNTING	
TIER IV INTERIM ENGINE	2-57
FAN DRIVE AND SPACER	
TIER III ENGINE	2-56
FLOORPLATES, STEPS, AND RAILS	
PAGE 1 OF 2	1-4
PAGE 2 OF 2	1-6

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
FLOW AMPLIFIER AND ATTACHING HYDRAULIC HOSES	9-32
FLYWHEEL	
TIER III ENGINE	2-59
TIER IV INTERIM ENGINE	2-60
FLYWHEEL HOUSING	
TIER III ENGINE	2-62
TIER IV INTERIM ENGINE	2-64
FRONT DRIVE TRAIN	
TIER III ENGINE	2-66
FRONT ENGINE SUPPORT	
TIER III ENGINE	2-67
FRONT GEAR COVER	
TIER III ENGINE	2-68
TIER IV INTERIM ENGINE	2-70
FUEL DRAIN PLUMBING	
TIER IV INTERIM ENGINE	3-22
FUEL FILTER	
TIER III ENGINE	3-20
FUEL FILTER PLUMBING	
TIER III ENGINE	3-18
TIER IV INTERIM ENGINE	3-27
FUEL FILTERS	
TIER IV INTERIM ENGINE	3-26
FUEL INJECTOR	
TIER III ENGINE	3-16
FUEL PUMP	
TIER IV INTERIM ENGINE	3-32
FUEL PUMP COUPLING	
TIER III ENGINE	3-12
FUEL PUMP DRIVE	
TIER III ENGINE	3-10
FUEL PUMP MOUNTING	
TIER IV INTERIM ENGINE	3-28
FUEL PUMP PLUMBING	
TIER III ENGINE	3-14
FUEL SYSTEM	
TIER III ENGINE	3-6
TIER IV INTERIM ENGINE	3-8
FUEL TRANSFER PUMP	
TIER IV INTERIM ENGINE	3-24
FUSE PANEL AND RELAYS	
SIDE CONSOLE HARNESS (CAB)	4-48
G	
GANTRY CARRIAGE	
WITH MECHANICAL PILE SLOPE	11-6
WITH POWER PILE SLOPE	11-10
GEAR HOUSING	
TIER III ENGINE	2-71

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
TIER IV INTERIM ENGINE	2-72
H	
HANGER ASSEMBLY	11-8
HEADER HOSES	11-2
HEATED TOP WINDOW	
CLIMATE CONTROL CAB	12-28
HEATER AND AIR DUCT	1-56
HEATER AND CONTROL PANEL ASSEMBLIES	1-60
HEATER ASSEMBLY	1-62
HIGH PRESSURE HYDRAULIC FILTER AND ATTACHING BRAKE HOSES	8-7
HUB AND SHAFT	
→ S/N G117E01504K INC. 01506-01508	6-8
HUB ASSEMBLY	
S/N G117E01505K → EXC. 01506-01508	6-14
HYDRAULIC CONTROLS	
JOYSTICK	9-38
HYDRAULIC FILTER AND ATTACHING BRAKE HOSES	8-8
HYDRAULIC GEAR PUMP	
FIXED DISPLACEMENT	9-12
HYDRAULIC PUMP AND ATTACHING BRAKE HOSES	8-9
HYDRAULIC PUMPS	9-4
HYDRAULIC TANK	9-2
HYDRAULIC TANK AND ATTACHING BRAKE HOSES	8-11
HYDRAULIC TANK AND ATTACHING HYDRAULIC HOSES	9-30
I	
INDICATOR DISPLAY AND CONTROLS	4-102
INSULATION MATS AND AIR DUCT	
CLIMATE CONTROL CAB	12-18
INTAKE CONNECTOR	
AIR COMPRESSOR - TIER III ENGINE	2-78
INTAKE MANIFOLD	
TIER III ENGINE	2-80
TIER IV INTERIM ENGINE	2-82
J	
JOYSTICK ASSEMBLY	9-10
L	
LABELS	1-14
LIFT ACCUMULATOR AND ATTACHING PARTS	9-21
LIFT CYLINDER	
12650 MM (498.0 IN.) LIFT HEIGHT	10-8
7010 MM (275.9 IN.), AND 9754 MM (384.0 IN.) LIFT HEIGHT	10-6
LIFT/TILT MANIFOLD AND ATTACHING HYDRAULIC HOSES	9-26
LIFTING BRACKET	
TIER III ENGINE	2-83
LIFTING BRACKETS	
TIER IV INTERIM ENGINE	2-84

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
LIGHT BAR AND MOUNT	
TWISTLOCK MODULE	4-26
TWISTLOCK MODULE - ALTERNATE CONFIGURATION	4-28
LIGHT SWITCHES	4-95
LIGHTING (FENDER AND TAIL)	12-12
LIGHTS	
WORK - HALOGEN	12-29
WORK - HID	12-30
LOUVER - HEAVY DUTY AIRCO	13-2
M	
MAIN HYDRAULIC CONTROL VALVE AND ATTACHING HYDRAULIC HOSES	9-34
MAIN MANIFOLD AND ATTACHING BRAKE HOSES	8-6
MAIN MANIFOLD AND ATTACHING HYDRAULIC HOSES	9-28
MAIN MANIFOLD ASSEMBLY	
PAGE 1 OF 2	9-40
PAGE 2 OF 2	9-42
MANIFOLD	
LIFT AND TILT	9-6
MAP LIGHT	12-3
MAST ASSEMBLY	
WITH GANTRY CARRIAGE	10-2
MAST INSTALLATION	10-10
MIRRORS	
FRONT FENDER	1-47
MUFFLER	2-30
N	
NOISE PANEL	
TIER III ENGINE	2-85
O	
OIL COOLER	
TIER IV INTERIM ENGINE	2-87
OIL COOLER WATER PLUMBING	
TIER III ENGINE	2-86
OIL FILLER	
TIER III ENGINE	2-89
OIL FILTER	
TIER III ENGINE	2-90
OIL FILTER AND COOLER HEAD	
TIER III ENGINE	2-92
OIL FILTER ELEMENT	
TIER IV INTERIM ENGINE	2-91
OIL LEVEL GAUGE	
TIER III ENGINE	2-94
TIER IV INTERIM ENGINE	2-95
OIL PAN	
TIER III ENGINE	2-96
TIER IV INTERIM ENGINE	2-98

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
OIL PUMP AND ATTACHING PARTS	
TIER III ENGINE	2-100
OVERHEAD GUARD	
WIRE MESH	12-14
P	
PARK BRAKE ASSEMBLY	
→ S/N G117E01504K INC. 01506-01508	6-12
S/N G117E01505K → EXC. 01506-01508	6-22
PARK BRAKE KIT	13-2
PARK BRAKE RETAINER	
S/N G117E01505K → EXC. 01506-01508	6-24
PIVOT ARM ASSEMBLY	1-114
PROXIMITY SWITCH	4-98
R	
RADIATOR PLUMBING	
TIER III ENGINE	2-101
TIER III ENGINE WITH AIRCO (10/2013 →)	2-102
RADIATOR SCREEN	
TIER III ENGINE	2-8
TIER IV INTERIM ENGINE	2-10
RADIO CONSOLE AND ATTACHING PARTS	1-108
S	
SEAT ASSEMBLY	
AIR SUSPENSION	1-32
CLIMATE CONTROL CAB	1-44
DELUXE SUSPENSION - CLOSED CAB ONLY	1-40
MECHANICAL AND AIR SUSPENSION	1-29
MECHANICAL SUSPENSION	1-36
SUSPENSION - WITH FABRIC COVER (→ 3/2010)	1-18
SUSPENSION - WITH FABRIC COVER (3/2010 →)	1-22
SUSPENSION - WITH VINYL COVER	1-26
SECOND 12V SOCKET OPTION	
CLIMATE CONTROL CAB	12-22
SERVICE BRAKE ASSEMBLY	
S/N G117E01505K → EXC. 01506-01508	6-20
SOLENOID VALVE	9-8
SPEED LIMITING	
GANTRY CARRIAGE	4-96
START AID	12-25
STARTER	
TIER IV INTERIM ENGINE	4-25
STARTER MOTOR	
TIER III ENGINE	4-24
STEER AXLE AND ATTACHING PARTS	
→ S/N G117E01605L	7-2
S/N G117E01606L →	7-4

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
STEER AXLE ASSEMBLY	
→ S/N G117E01605L	7-6
PAGE 1 OF 2 (S/N G117E01606L →)	7-28
PAGE 2 OF 2 (S/N G117E01606L →)	7-30
STEER CYLINDER	
→ S/N G117E01605L	7-8
S/N G117E01606L →	7-9
STEER TIRES AND WHEELS	
18.00 X 25	7-10
18.00 X 33	7-12
18.00 X 33 - FOR TRUCKS WITH KESSLER DRIVE AXLE ONLY	7-14
STEER VALVE AND ATTACHING HYDRAULIC HOSES	9-36
STEERING COLUMN	7-22
STEERING COLUMN AND ATTACHING PARTS	7-18
STEERING COLUMN ASSEMBLY	7-20
STEERING CONTROL UNIT	7-24
STEERING CONTROL VALVE	7-26
STEERING HOSES	7-16
STORAGE BOX	12-26
SUSPENSION KIT ASSEMBLY	1-42
T	
TELEMETRY KITS	13-2
THERMOSTAT	
TIER III ENGINE	2-106
TIER IV INTERIM ENGINE	2-107
THERMOSTAT HOUSING	
TIER III ENGINE	2-104
THREE-POINT SEAT BELT	12-27
THROTTLE AND INCHING SENSORS	3-29
THROTTLE PEDAL AND ATTACHING PARTS	3-30
TILT CYLINDER ASSEMBLY	9-24
TILT CYLINDERS AND ATTACHING PARTS	9-22
TILT HYDRAULICS	9-37
TRAINING SEAT	12-4
TRANSMISSION	
CASE AND REAR COVER	5-10
CONTROL VALVE	5-42
FIRST SPEED CLUTCH SHAFT	5-30
FIRST SPEED GEARS	5-21
FIRST SPEED SHAFT AND IDLER GEAR	5-34
FORWARD CLUTCH SHAFT	5-22
FORWARD, REVERSE AND SECOND, - AND THIRD OR FOURTH CLUTCH SHAFTS	5-20
FOURTH SPEED CLUTCH SHAFT	5-32
INPUT DRIVE GEARS	5-14
OUTPUT SHAFT	5-36
PUMP DRIVE	5-16
REGULATOR VALVE AND HYDRAULIC PUMP	5-38
REMOTE FILTER AND ADAPTER	5-40

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
REVERSE AND SECOND CLUTCH SHAFT	5-28
THIRD SPEED CLUTCH SHAFT	5-24
THIRD SPEED GEARS	5-26
TORQUE CONVERTER AND DRIVE PLATE	5-18
TORQUE CONVERTER HOUSING	5-6
TURBINE SHAFT, STATOR SUPPORT, OIL BAFFLE	5-12
TRANSMISSION CONTROLLER AND SHIFT LEVER	4-8
OPTIONAL CONFIGURATION WITH ECO-ELO/HIP AND DPF REGEN SWITCH - TIER IV INTERIM ENGINE	4-10
TRANSMISSION LINES AND ATTACHING PARTS	5-2
TRANSMISSION MOUNTING	5-4
TURBOCHARGER	
TIER III ENGINE	2-108
TIER III ENGINE WITH AIRCO (10/2013 →)	2-110
TIER III ENGINE WITH AIRCO (10/2013 →)	2-118
TIER IV INTERIM ENGINE	2-112
TURBOCHARGER PLUMBING	
TIER III ENGINE	2-114
TIER III ENGINE WITH AIRCO (10/2013 →)	2-116
TURBOCHARGER WATER PLUMBING	
TIER IV INTERIM ENGINE	2-120
V	
VALVE COVER	
TIER III ENGINE	2-122
TIER IV INTERIM ENGINE	2-124
VIBRATION DAMPER	
TIER III ENGINE	2-126
W	
WATER COOLED TURBOCHARGER	13-2
WATER PUMP	
TIER III ENGINE	2-128
WATER PUMP AND CONNECTIONS	
TIER IV INTERIM ENGINE	2-130
WINDOW WIPER SYSTEM	
REAR AND ROOF WIPER KITS - AND FRONT WIPER OPTIONS	1-98
WASHER BOTTLE KIT	1-96
WIRE HARNESS	
ARMREST	4-32
BACK-UP ALARM	4-35
CAB LIGHTS	4-36
CAB SIDE CONSOLE - PAGE 1 OF 4	4-38
CAB SIDE CONSOLE - PAGE 2 OF 4	4-42
CAB SIDE CONSOLE - PAGE 3 OF 4	4-44
CAB SIDE CONSOLE - PAGE 4 OF 4	4-46
CAB UNDERFLOOR	4-52
CHASSIS (→ S/N G117E01631M)	4-54
CHASSIS (S/N G117E01632M →)	4-60

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
CLOSED CAB	4-65
COOLANT LEVEL SWITCH - TIER IV INTERIM ENGINE	4-68
COOLANT LEVEL SWITCH - TIER III ENGINE	4-69
ENGINE ECM ADAPTER - TIER III ENGINE	4-70
ENGINE ECM ADAPTER - TIER IV INTERIM ENGINE	4-72
ETR CONTROL MODULE - TIER IV INTERIM ENGINE	4-90
FRONT LIGHTS	4-92
MANIFOLD	4-74
MAST	4-87
POWERTRAIN - FULL FLOW	4-76
PROXIMITY SWITCH - GANTRY	4-99
PROXIMITY SWITCH - LIFT AND TILT	4-100
REAR	4-80
REAR WIPER EXTENSION	4-82
STEER COLUMN	4-84
TWIN FRONT FENDER WORK LIGHTS	4-94
WIF SENSOR	4-107
WINDOW WASH PUMPS	4-86
WIRING ACCESSORIES	
ELECTRONIC CONTROL MODULE - TIER III ENGINES	4-14

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPA	US Environmental Protection Agency	UL Type GS	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the next page.

HYSTER UNIT CODE D001 NORTH AMERICA 06/2001

TABLE OF CONTENTS

DESCRIPTION	PAGE
AIR INTAKE AND FILTER DIESEL (→ D/B 11/98)	3-22
AIR INTAKE AND FILTER DIESEL (D/B 11/96 →)	
AIR INTAKE AND FILTER GASOLINE AND LPG	
ALTERNATOR GASOLINE, LPG, AND DIESEL	
ALTERNATOR TYPES GS, LPS, AND DS	
AUXILIARY FUNCTION TUBE TWO AND THREE STAGE FULL F	

SECTION 13 NUMERICAL INDEX

PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.
142	3-4	19	10-13	25		11-27	29	12-31	12		
12445	3-32	19	10-17	6		11-31	25	16719	3-36		5
	3-34	1	10-27	11		11-32	37	16751	3-16		27
			11	11		8-4	29	16849	3-34		21
			11	6	16485	8-4	45	16863	3-36		20
			12	13		8-8	34	16865	3-28		17
			12	6		9-7	9	16882	3-6		18
			3	17		9-7	19		4-27		41
			9	10		9-11	9		9-7		30
			9	10		9-11	17		10-10		36
			23	46		10-9	21		10-13		32
			27	46		10-9	28		11-7		24
			26	14		10-13	16		11-9		17
			28	14		11-7	19				
			50	14							

SECTIONS

- 1
- 2
- 3
- 4
- 5 BRAKE/ACC
- 6
- 7 MAST-TWO STAG
- 8 MAST-THREE ST
- 9 MAST-TWO ST
- 10
- 11

TRANSMISSION HOUSING S/N D001H-2628

KEY:
A: Diesel
B: Gasoline and LPG

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
		Transmission	1	1
	2022547	Transmission	1	1
	2023329	Case	2	2
1	2021670	Bearing Cap	4	4
2	2023418	Washer	1	1
3	296429	Bolt	2	2
4	293947	Cover	2	2
5	2021390	Colter Pin	4	4
6	1371656	O-Ring	1	1
7	2021329	Plug	4	4
8	2021915	Housing	22	22
9	2021675	Pin	39	39
10	2021336	Bolt	1	1
11	287860	Lockwasher	1	1
12	292682	Hydraulic Pump	1	1
13		Figure 5-3	8	8
14	2021345	Gasket	1	1
15	214364	Bolt	1	1
16	296418	Washer	1	1
17	2021388	Temperature Switch	1	1
18	2021389	Breather	9	9
19	2021383	Dipstick	9	9
20	292515	Bolt	2	2
21	136692	Nut	3	3
22	292527	Bolt	3	2
23	292531	Capscrew	4	4
24	292583	Lockwasher	4	4
25	293637	Bolt	1	1
26	296420	Washer	1	1
	996403	Transmission Kit (Includes Item 7)	1	1
	996405	Transmission Kit (Includes Item 14)	1	1

This Parts Manual is divided into 11 major sections which are listed above. Quick be made by placing the right thumb on the tab of the desired section, bending the pages to the corresponding tab.

© Copy Right Date HYSTER COMPANY See Service Manual for service procedures. 5-15

HOW TO FIND THE DESIRED PART NUMBER

WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the Sections Page. Choose the general area of reference most likely to include the part.
2. Turn to the section you chose. Use the Section Table of Contents to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Table of Contents (Page i).
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS KNOWN:

5. Use the Numerical Index (Page 14-1) to find the part number. Turn to the page listed and locate the part as indicated by the item number.

GENERAL:

The assembly breakdowns include part numbers, descriptions, quantities required, keys and footnotes to help in selecting correct parts.

6. Parts Supersession Information. Part numbers that have this history will be displayed in the parts list in the order that they were superseded (from oldest to newest). The superseded part numbers will be shown with a line through them.

Five periods in the PART NO. column (.) indicate that the part is either *Not Serviced Separately* or there is a reference to another figure. A figure reference is denoted by a pointing hand followed by a figure number in the DESCRIPTION column (☞ Figure 10)

7. Keys are used to show two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C", "D", or "E" and the corresponding quantity column to find the required parts. Two periods in the QTY column (..) indicate that the part is not used for that assembly.
8. Indented descriptions under the DESCRIPTION column are used to indicate assemblies and

subparts of assemblies. In the example on the previous page, *BEARING CAP* (Item 2) is a subpart of the major assembly *CASE*.

9. Quantities shown are for one assembly. The quantities of the subpart *BEARING CAP* are indicated as two and two. This means two per *CASE* assembly.
10. Serial number breaks identify the most current parts information and are shown as follows:
 - **S/N D001H2628**
Indicates last serial number affected.
 - S/N D001H2629** →
Indicates the first serial number affected.
 - S/N D001H1553** ↔ **S/N D001H3291**
Indicates a range of serial numbers affected.

ECN numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information and are identified as follows:

- **S/N Pending Per ECN 63243**
Indicates a pending serial number for last unit affected.
- S/N Pending Per ECN 63243** →
Indicates a pending serial number for first unit affected.

Date breaks are used to indicate when a change occurred but a subsequent serial number break was not recorded. This is an arbitrary date usually based on the ECN release and are identified as follows:


- **D/B 3/00**
Indicates that a change occurred sometime within that month for the item affected.
- D/B 3/00** →
Indicates that a change occurred sometime within that month for the item affected.
- D/B 3/00** ↔ **D/B 4/00**
Indicates a range of production dates of the item affected.

Contact your local dealer for Hyster lift trucks for serial number information for items with a ECN or a date break.

ORDERING PARTS:


When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.

For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.

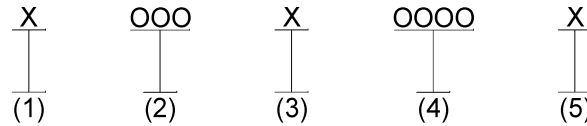IDENTIFICATION OF TRUCK SERIAL NUMBERS

- (1) and (2) The first letter and three numbers indicate the truck unit code.
- (3) The second letter indicates the plant of manufacture.
- (4) The four or five digit number indicates the production sequence number of the truck.
- (5) The final letter indicates the year of manufacture starting with "A" in 1957, 1980, and 2003. The letters "I", "O", and "Q" will not be used.

For pending serial numbers contact your local dealer for Hyster lift trucks.

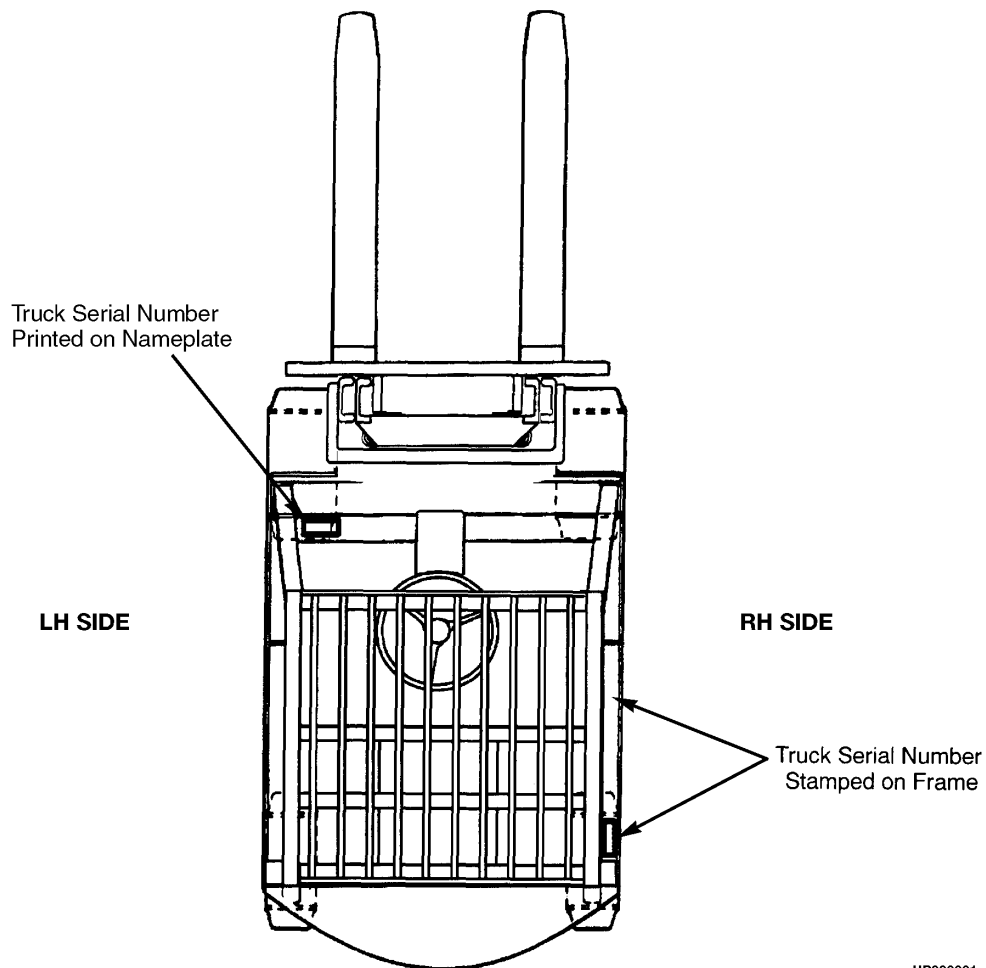

HP990001

Parts referred to in this book as right or left hand parts are in accordance with the illustration above.