

PARTS MANUAL

**H170HD, H190HD, H210HD,
H230HD, H250HD, H280HD
(H007)**

CUSTOMER EDITION

HYSTER

SECTIONS

1	FRAME
2	ENGINE ASSEMBLY - DIESEL
3	ENGINE ASSEMBLY - LPG
4	FUEL SYSTEM
5	ELECTRICAL SYSTEM
6	TRANSMISSION
7	DRIVE AXLE
8	STEERING SYSTEM
9	BRAKE SYSTEM
10	HYDRAULIC SYSTEM
11	MAST-TWO STAGE LIMITED FREE-LIFT
12	MAST-THREE STAGE FULL FREE-LIFT
13	ATTACHMENTS
14	OPTIONS
15	FIELD CONVERSION KITS
16	NUMERICAL INDEX

This Parts Manual is divided into 16 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
ACCESSORY DRIVE BELT AND TENSIONER	3-6
ACCESSORY HOLE COVER	3-7
ACCUMULATOR CHARGE VALVE	9-38
AIR CLEANER ASSEMBLY	4-14
AIR COMPRESSOR	2-8
AIR COMPRESSOR COOLANT PLUMBING	2-11
AIR COMPRESSOR INLET CONNECTION	3-10
AIR COMPRESSOR MOUNTING	2-10
AIR CONDITIONER	
CLIMATE CONTROL CAB - MCC	1-162
AIR CONDITIONER ASSEMBLY	
WITH TWO-FAN CONDENSER SYSTEM - MCC (S/N H007E02194F →)	1-102
AIR CONDITIONER SYSTEM	
CLIMATE CONTROL CAB - MCC	1-160
WITH TWO-FAN CONDENSER SYSTEM - MCC (S/N H007E02194F →)	1-100
AIR CONDITIONER SYSTEM ASSEMBLY	
WITH TWO-FAN CONDENSER SYSTEM - MCC (S/N H007E02194F →)	1-94
AIR CONDITIONING COMPRESSOR AND ATTACHING PARTS	
DIESEL ENGINE - MCC	1-74
LPG ENGINE - MCC	1-76
AIR DRYER ASSEMBLY	9-32
AIR DRYER SYSTEM	
DIESEL ENGINE - DRY BRAKE	9-28
LPG ENGINE - DRY BRAKE	9-30
AIR DUCT	
LOUVER, CLIMATE CONTROL CAB	1-154
AIR DUCT ASSEMBLY	
AIR CONDITIONING - WITH TWO-FAN CONDENSER SYSTEM, MCC (S/N H007E02194F →)	1-104
HEATER - WITH TWO-FAN CONDENSER SYSTEM, MCC (S/N H007E02194F →)	1-88
AIR HEATER	2-14
AIR INTAKE CONNECTION	2-12
AIR INTAKE HOSE	
→ S/N H007E02176F	2-16
AIR INTAKE MANIFOLD	2-17
AIR INTAKE SYSTEM	
DIESEL - DRY BRAKE	4-10
DIESEL - WET BRAKE	4-12
LPG	4-8
AIR TRANSFER CONNECTION	2-18
ALARM	14-5
ALTERNATOR AND MOUNTING	
CUMMINS DIESEL (→ S/N H007E02176F)	5-34
CUMMINS DIESEL (S/N H007E02177F →)	5-36
CUMMINS LPG	5-37
ALTERNATOR SUPPORT AND WATER INLET	
→ S/N H007E02176F	2-19
S/N H007E02177F →	2-20
ARMREST ASSEMBLY	1-149

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
AUXILIARY PUMP DRIVE	6-14
B	
BATTERY DISCONNECT	5-12
BELT TENSIONER	2-21
BRAKE ACCUMULATOR	9-36
BRAKE AND INCHING PEDAL LINKAGE	9-40
BRAKE ASSEMBLY	
DRY BRAKE	9-18
WET BRAKE - 425 SERIES DRIVE AXLE	9-14
WET BRAKE - 475 SERIES DRIVE AXLE	9-16
BRAKE VALVE	
DRY BRAKE	9-26
WET BRAKE	9-24
C	
CAB AND TILT CYLINDER MOUNTING	1-58
CAB ASSEMBLY	
CLIMATE CONTROL CAB	1-164
CAB ATTACHING PARTS	1-16
CAB DOOR	
LEFT HAND (→ S/N H007E02424G (CLOSED CAB WITH HEATER))	
(→ S/N H007E02425G (CLOSED CAB WITH AIR CONDITIONING AND INSULATION))	
(→ S/N H007E02426G (CLOSED CAB WITH INSULATION))	1-30
LEFT HAND (S/N H007E02425G → (CLOSED CAB WITH HEATER))	
(S/N H007E02426G → (CLOSED CAB WITH AIR CONDITIONING AND INSULATION))	
(S/N H007E02427G → (CLOSED CAB WITH INSULATION))	1-34
RIGHT HAND (→ S/N H007E02424G (CLOSED CAB WITH HEATER))	
(→ S/N H007E02426G (CLOSED CAB WITH INSULATION))	
(→ S/N H007E02425G (CLOSED CAB WITH AIR CONDITIONING AND INSULATION))	1-22
RIGHT HAND (S/N H007E02425G → (CLOSED CAB WITH HEATER))	
(S/N H007E02427G → (CLOSED CAB WITH INSULATION))	
(S/N H007E02426G → (CLOSED CAB WITH AIR CONDITIONING AND INSULATION))	1-26
CAB DOOR ATTACHING PARTS	1-20
CAB ELECTRONIC CONTROLS AND PANELS	1-56
CAB FLOORMATS	1-37
CAB RECIRCULATING FAN	1-52
CAB SOUND REDUCTION	1-167
CAB SUNSHADES	1-48
CAB TILT PUMP ASSEMBLY	
ELECTRIC	1-65
CAB WINDOWS INSTALLATION	1-40
CAM FOLLOWER COVER	3-13
CAMSHAFT	2-22
CHARGE PUMP AND FILTER ASSEMBLY	6-16
CLIMATE CONTROL SYSTEM	
MCC	1-158
COMPRESSOR ASSEMBLY	
MCC (S/N H007E02194F →)	1-78

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
CONDENSER	
TWO-FAN SYSTEM - MCC (S/N H007E02194F →)	1-98
CONDENSER AND ATTACHING PARTS	
THREE-FAN SYSTEM - AURORA	1-70
CONDENSER ASSEMBLY	
THREE-FAN SYSTEM - AURORA	1-72
CONDENSER SYSTEM	
TWO-FAN SYSTEM - MCC (S/N H007E02194F →)	1-96
CONNECTING RODS AND PISTONS	
→ S/N H007E02176F	2-24
S/N H007E02177F →	2-26
CONTROL PANEL	
AIR CONDITIONER	5-22
HEATER	5-24
CONTROL PANEL ASSEMBLY	
WITH TWO-FAN CONDENSER SYSTEM - MCC (S/N H007E02194F →)	1-106
COOLANT HEATER STARTING AID	2-28
COOLING SYSTEM	2-4
COUNTERWEIGHT AND OPTIONAL LIFTING EYES	1-12
CRANKCASE BREATHER	2-29
CRANKSHAFT AND BEARINGS	
→ S/N H007E02176F	2-30
S/N H007E02177F →	2-32
CRANKSHAFT AND MAIN BEARINGS	3-18
CYLINDER BLOCK	
→ S/N H007E02176F	2-34
S/N H007E02177F →	2-36
CYLINDER HEAD	2-38
D	
DASH AND AIR DUCT ASSEMBLY	1-18
DC-DC CONVERTER AND ATTACHING PARTS	5-15
DELUXE SUSPENSION SEAT	1-114
DIFFERENTIAL AND CARRIER	
DRY BRAKE	7-4
WET BRAKE - 425 AND 475 SERIES	7-8
DIRECTIONAL CONTROL VALVE	13-2
DIRECTIONAL MARKER	14-2
DRAIN VALVE	
DRY BRAKE	9-22
DRIVE AXLE HOUSING AND ATTACHING PARTS	7-2
DRIVE GEAR	6-22
DRIVE PLATE	6-24
DRIVE TIRES AND WHEELS	
BRIDGESTONE	7-21
MICHELIN	7-22
TRELLEBORG - SOLID TIRE	7-20
TRELLEBORG	7-23
DRY BRAKE SYSTEM	9-10

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
E	
ELECTRIC HORN	5-109
ELECTRIC PUMP	1-68
ELECTRICAL SYSTEM	
DIESEL ENGINE	5-4
LPG ENGINE	5-8
ELECTRONIC LEVER ASSEMBLY	10-30
WITH CLAMP ATTACHMENT	10-32
END CAP PARTS	
LIFT SECTION	10-24
ENGINE BLOCK HEATER	2-84
ENGINE CONTROL MODULE	2-40
ENGINE CONTROL SYSTEM	
CUMMINS DIESEL (→ S/N H007E02176F)	5-26
CUMMINS DIESEL (S/N H007E02177F →)	5-28
CUMMINS LPG	5-30
ENGINE COOLANT VENT	2-42
ENGINE FUEL PRESSURE SENDER	15-2
ENGINE IGNITION SYSTEM	
CUMMINS LPG	5-40
ENGINE MOUNT	2-43
ENGINE OIL COOLER	2-44
ETR MODULE WIRING	2-45
EXHAUST GAS SENSOR PLUMBING	3-30
EXHAUST MANIFOLD	2-46
EXHAUST OUTLET CONNECTION	3-32
EXHAUST SYSTEM	2-6
EXTERIOR MIRRORS	1-19
F	
FAN DRIVE	3-33
FAN DRIVE AND MOUNTING	2-48
FLOORPLATES	1-4
FLYWHEEL	3-34
FLYWHEEL AND MOUNTING	2-50
FLYWHEEL HOUSING	
→ S/N H007E02176F	2-51
S/N H007E02177F → → S/N 73037048 (ENGINE)	2-52
S/N H007E02177F → S/N 73037049 → (ENGINE)	2-54
FORK POSITIONING CYLINDER	13-4
FORKS	
IDENTIFY BY PART NUMBER	13-40
FORWARD AND REVERSE LEVER TO MONOTROL KIT	15-2
FORWARD CLUTCH	
→ S/N H007E02447H	6-26
S/N H007E02448H →	6-28
FREE-LIFT CYLINDER	
THREE STAGE FULL FREE-LIFT	12-9
FRONT FENDER LIGHTS	14-3

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
FRONT GEAR COVER	2-56
FRONT GEAR COVER AND HOUSING	3-38
FRONT GEAR TRAIN ACCESSORY DRIVE	3-40
FUEL CONTROL MODULE	
CUMMINS LPG	4-24
FUEL FILTER	
CUMMINS DIESEL	4-34
CUMMINS LPG	4-27
FUEL FILTER PLUMBING	
CUMMINS DIESEL	4-33
FUEL INJECTION PUMP	
CUMMINS DIESEL	4-30
FUEL INJECTOR	
CUMMINS DIESEL	4-32
FUEL INJECTOR PLUMBING	
CUMMINS DIESEL	4-28
FUEL INLET FITTING	
CUMMINS DIESEL	4-35
FUEL RAIL SYSTEM	
CUMMINS DIESEL (→ S/N H007E02176F)	4-36
CUMMINS DIESEL (S/N H007E02177F →)	4-38
FUEL SYSTEM	
DIESEL	4-6
LPG	4-2
FUEL SYSTEM ACCESSORIES	
CUMMINS LPG	4-20
G	
GEAR CLUTCH INSTALLATION	6-30
H	
HAND PUMP	1-66
HANDHOLD AND UNDERFLOOR COVER	
OPEN CAB	1-38
HEADER HOSE	
THREE STAGE FULL FREE-LIFT	12-14
TWO STAGE LIMITED FREE-LIFT (→ S/N H007E02492H)	11-16
TWO STAGE LIMITED FREE-LIFT (S/N H007E02493H →)	11-20
HEATED TOP WINDOW	
CLIMATE CONTROL CAB	14-11
HEATER AND AIR CONDITIONER ASSEMBLY	
WITH THREE-FAN CONDENSER SYSTEM - AURORA	1-84
HEATER AND AIR CONDITIONER MOUNTING	
WITH THREE-FAN CONDENSER SYSTEM - AURORA	1-80
HEATER AND AIR DUCT	
WITH TWO-FAN CONDENSER SYSTEM - MCC	1-86
HEATER ASSEMBLY	
WITH THREE-FAN CONDENSER SYSTEM - AURORA	1-82
WITH TWO-FAN CONDENSER SYSTEM - MCC (S/N H007E02194F →)	1-90

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
HEATER HOSES	
DIESEL ENGINE	1-108
LPG ENGINE	1-110
HEATER SYSTEM	
WITH TWO-FAN CONDENSER SYSTEM - MCC (S/N H007E02194F →)	1-92
HEATING AND AIR CONDITIONING SYSTEM FILTER	1-93
HOODS AND COVERS	1-8
HUB AND SHAFT ASSEMBLY	
DRY BRAKE	7-12
WET BRAKE - 425 SERIES	7-14
WET BRAKE - 475 SERIES	7-16
HYDRAULIC CONTROL VALVE AND ATTACHING PARTS	
SHEET 1 OF 2	10-18
SHEET 2 OF 2	10-20
HYDRAULIC CONTROL VALVE ASSEMBLY	10-14
HYDRAULIC CONTROLS	
JOYSTICK	10-29
LEVERS	10-26
HYDRAULIC GEAR PUMP	
DIESEL ENGINE - WET BRAKE	9-35
LPG ENGINE - WET BRAKE	9-34
HYDRAULIC PUMP	10-34
HYDRAULIC SUPPLY AND RETURN	
SHEET 1 OF 3	10-2
SHEET 2 OF 3	10-6
SHEET 3 OF 3	10-8
HYDRAULIC TANK AND ATTACHING PARTS	
→ S/N H007E02295F	10-10
S/N H007E02296F →	10-12
I	
INDICATOR DISPLAY AND CONTROLS	1-54
INNER MAST	
TWO STAGE LIMITED FREE-LIFT	11-4
INSULATION MATS AND AIR DUCT	
CLIMATE CONTROL CAB	1-152
INTAKE MANIFOLD	3-42
J	
JOYSTICK ASSEMBLY	
SUSPENSION HOOKS	5-20
L	
LABELS	
HYDRAULIC CONTROL - JOYSTICK	1-147
HYDRAULIC CONTROL - LEVERS	1-148
MAIN	1-144
LIFT	
TWO STAGE LIMITED FREE-LIFT	11-6
LIFT ACCUMULATOR AND ATTACHING PARTS	10-36

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
LIFT ACCUMULATOR ASSEMBLY	10-37
LIFTING BRACKET	3-44
LIFTING BRACKETS AND MOUNTING	
→ S/N H007E02176F	2-57
S/N H007E02177F →	2-58
LIFTING EYES	14-12
LIGHT SWITCHES	5-14
LIGHTS	
WORK - HALOGEN	14-14
WORK - HID	14-15
LOAD BACKREST	1-166
LOUVER - HEAVY DUTY AIRCO	15-2
LOW CLUTCH	
→ S/N H007E02447H	6-34
S/N H007E02448H →	6-36
LUBRICATING OIL PUMP	2-60
M	
MAIN LIFT CYLINDER	
THREE STAGE FULL FREE-LIFT	12-11
TWO STAGE LIMITED FREE-LIFT	11-10
MAIN WINDOW ASSEMBLY	1-42
MAST ASSEMBLY	
THREE STAGE FULL FREE-LIFT - SHEET 1 OF 3	12-2
THREE STAGE FULL FREE-LIFT - SHEET 2 OF 3	12-4
THREE STAGE FULL FREE-LIFT - SHEET 3 OF 3	12-6
MAST INSTALLATION	
THREE STAGE FULL FREE-LIFT	12-12
TWO STAGE LIMITED FREE-LIFT	11-14
MAST WORKLIGHTS	
TWO AND THREE STAGE MAST	14-8
MONOTROL PEDAL ASSEMBLY	4-16
MONOTROL TO FORWARD AND REVERSE LEVER KIT	15-2
O	
OIL FILLER	2-61
OIL FILTER	2-62
OIL LEVEL GAUGE	2-63
OIL PAN	2-64
OIL PUMP	3-50
OUTER MAST	
TWO STAGE LIMITED FREE-LIFT	11-2
OUTPUT FLANGE	6-38
OUTPUT SHAFT	
→ S/N H007E02447H	6-40
S/N H007E02448H →	6-42
OVERHEAD GUARD	
WIRE MESH	1-14

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
P	
PARK BRAKE	
WET BRAKE	7-18
PARK BRAKE KIT	15-2
PILOT VALVE ASSEMBLY	10-22
PISTON AND CONNECTING ROD	3-52
PIVOT ARM ASSEMBLY	1-142
R	
RADIATOR ASSEMBLY	
AKG	2-88
AKG	3-78
MODINE	2-86
MODINE	3-76
RADIO CONSOLE AND ATTACHING PARTS	1-168
REAR DUCT AND CONSOLE	1-50
REAR GEAR HOUSING	2-66
REAR WORK LIGHTS	14-10
RELAYS AND FUSES	5-16
REMOTE FUEL FILTER	
CUMMINS DIESEL (→ S/N H007E02176F)	4-21
CUMMINS DIESEL (S/N H007E02177F →)	4-22
RETROFIT KITS	15-2
REVERSE AND SECOND CLUTCH	6-44
REVERSE IDLER SHAFT	6-32
ROCKER LEVERS	2-68
S	
SEAT ASSEMBLY	
CLIMATE CONTROL CAB	1-156
WITH FABRIC COVER (→ 3/2010)	1-130
WITH FABRIC COVER (3/2010 →)	1-134
WITH VINYL COVER	1-138
SEAT SUSPENSION ASSEMBLY	
AIR	1-120
MECHANICAL	1-124
SEAT SUSPENSION MOUNTING	1-127
SECOND 12V SOCKET OPTION	
CLIMATE CONTROL CAB	5-108
SIDE-SHIFT CARRIAGE	
DUAL FUNCTION WITH FORK POSITIONER - TWO STAGE LIMITED FREE-LIFT	13-6
FOUR, FIVE, AND SIX FUNCTION - THREE STAGE FULL FREE-LIFT	13-10
INDIVIDUAL FORK POSITIONER (FIVE FUNCTION) - TWO STAGE LIMITED FREE-LIFT	13-14
INDIVIDUAL FORK POSITIONER (FIVE FUNCTION) - THREE STAGE FULL FREE-LIFT	13-18
SIMULTANEOUS FORK POSITIONER (FOUR FUNCTION) - TWO STAGE LIMITED FREE-LIFT	13-22
SIMULTANEOUS FORK POSITIONER (FOUR FUNCTION) - THREE STAGE FULL FREE-LIFT	13-26
THREE FUNCTION - THREE STAGE FULL FREE-LIFT	13-30
WITH HOSE GROUP - TWO STAGE LIMITED FREE-LIFT	13-32

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
SIDE-SHIFT CYLINDER	
TWO STAGE LIMITED FREE-LIFT - DUAL FUNCTION WITH FORK POSITIONER	13-36
TWO STAGE LIMITED FREE-LIFT AND THREE STAGE FULL FREE-LIFT	13-38
SPEED SENSOR KIT	15-2
STANDARD PIN CARRIAGE	
FOUR, FIVE, AND SIX FUNCTION - THREE STAGE FULL FREE-LIFT (→ S/N H007E01502E)	12-18
FOUR, FIVE, AND SIX FUNCTION - THREE STAGE FULL FREE-LIFT (S/N H007E01503E →)	12-20
INDIVIDUAL FORK POSITIONER (FOUR FUNCTION) - TWO STAGE LIMITED FREE-LIFT	11-24
INDIVIDUAL FORK POSITIONER (FOUR FUNCTION)	12-22
SIMULTANEOUS FORK POSITIONER (THREE FUNCTION) - TWO STAGE LIMITED FREE-LIFT	11-28
SIMULTANEOUS FORK POSITIONER (THREE FUNCTION) - THREE STAGE FULL FREE-LIFT	12-24
THREE FUNCTION - THREE STAGE FULL FREE-LIFT	12-16
THREE FUNCTION WITHOUT HOSE GROUP - TWO STAGE LIMITED FREE-LIFT	11-32
WITH HOSE GROUP - TWO STAGE LIMITED FREE-LIFT	11-34
STARTER MOTOR	
CUMMINS DIESEL	5-32
CUMMINS LPG	5-33
STEER AXLE	8-2
STEER COLUMN ASSEMBLY	8-12
STEER CYLINDER	8-6
STEER TIRES AND WHEELS	
BRIDGESTONE	8-9
MICHELIN	8-10
TRELLEBORG - SOLID TIRE	8-8
TRELLEBORG	8-11
STEERING COLUMN	8-14
STEERING HAND PUMP ASSEMBLY	8-16
STROBE LIGHT	14-6
SUSPENSION KIT ASSEMBLY	1-116
T	
TAIL LIGHT ASSEMBLY	14-4
THERMOSTAT	2-70
THERMOSTAT HOUSING	3-57
THIRD CLUTCH	6-46
THROTTLE PEDAL LINKAGE	4-18
TILT CYLINDER	
CAB	1-62
TILT CYLINDER AND ATTACHING PARTS	10-38
TILT CYLINDER ASSEMBLY	10-40
TILT PLATFORM ASSEMBLY	1-64
TORQUE CONVERTER ASSEMBLY	6-8
TORQUE CONVERTER COOLER PLUGS	2-71
TORQUE CONVERTER HOUSING AND ATTACHING PARTS	
→ S/N H007E02447H	6-50
S/N H007E02448H →	6-52
TRAINING SEAT	1-112
TRANSMISSION CASE	6-10
TRANSMISSION CONTROL VALVE	6-18

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
TRANSMISSION MOUNT AND ATTACHING PARTS	
DIESEL ENGINE	6-2
LPG ENGINE	6-4
TURBINE SHAFT AND STATOR SUPPORT	6-48
TURBOCHARGER	2-72
TURBOCHARGER ASSEMBLY	3-64
TURBOCHARGER COMPRESSOR OUTLET CONNECTION	3-60
TURBOCHARGER PLUMBING	
→ S/N H007E02176F	2-73
S/N H007E02177F →	2-74
U	
UNIVERSAL SHAFT	6-6
V	
VALVE COVER	2-76
VALVE TAPPET	3-68
VALVE TAPPETS	2-77
VIBRATION DAMPER	
→ S/N H007E02176F	2-78
S/N H007E02177F →	2-79
W	
WATER INLET CONNECTION	3-72
WATER OUTLET CONNECTION	2-80
WATER PUMP	2-81
WATER PUMP DRIVE	2-82
WET BRAKE SYSTEM	
DIESEL ENGINE	9-6
LPG ENGINE	9-2
WINDOW WIPER SYSTEM	
REAR AND ROOF WIPER KITS - AND FRONT WIPER OPTIONS	1-46
WASHER BOTTLE KIT	1-44
WIRE HARNESS	
AIR DRYER	5-89
ARMREST - OPEN CAB	5-94
ARMREST - CLOSED CAB	5-96
BACK-UP ALARM	5-75
BRAKE TEMPERATURE	5-74
CAB LIGHTS	5-78
CAB SIDE CONSOLE - SHEET 1 OF 3	5-58
CAB SIDE CONSOLE - SHEET 2 OF 3	5-62
CAB SIDE CONSOLE - SHEET 3 OF 3	5-66
CAB TILT	5-92
CAB UNDERFLOOR	5-90
CHASSIS, DIESEL - SHEET 1 OF 2	5-50
CHASSIS, DIESEL - SHEET 2 OF 2	5-54
CHASSIS, LPG - SHEET 1 OF 2	5-42
CHASSIS, LPG - SHEET 2 OF 2	5-46
CLOSED CAB	5-68

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
FRONT END	5-103
FRONT LIGHTS - WITH FRONT FENDER AND MAST WORKLIGHTS	5-80
FRONT LIGHTS	5-82
HYDRAULIC OIL TEMPERATURE	5-102
MAST LIGHT EXTENSION - RIGHT HAND	5-85
MAST LIGHT EXTENSION - LEFT HAND	5-86
MAST WORKLIGHT EXTENSION	5-84
OPEN CAB	5-72
REAR DRIVE LIGHT EXTENSION	5-76
REAR WIPER	5-98
REAR WORK LIGHTS	5-87
SHIFT LEVER	5-106
STEERING COLUMN	5-100
STROBE LIGHT	5-88
TAIL LIGHTS	5-107
TWO STAGE LIMITED FREE-LIFT	5-105
WINDOW WASH PUMPS	5-110

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPA	US Environmental Protection Agency	UL Type GS	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the next page.

HYSTER UNIT CODE D001 NORTH AMERICA 06/2001

TABLE OF CONTENTS

DESCRIPTION	PAGE
AIR INTAKE AND FILTER DIESEL (→ D/B 11/98).....	3-22
AIR INTAKE AND FILTER DIESEL (D/B 11/96 →).....	
AIR INTAKE AND FILTER GASOLINE AND LPG.....	
ALTERNATOR GASOLINE, LPG, AND DIESEL.....	
ALTERNATOR TYPES GS, LPS, AND DS.....	
AUXILIARY FUNCTION TUBE TWO AND THREE STAGE FULL F.....	

SECTION 13 NUMERICAL INDEX

PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.
142	3-4	19	10-13	25	11-27	29	12-31	12	16719	3-36	5
12445	3-32	19	10-17	6	11-31	25	16751	3-16	16849	3-34	21
	3-34	1	0-27	11	8-4	29	16849	3-36	16863	3-28	20
			-11	6	8-4	45	16863	3-28	16865	3-6	18
			-21	11	8-8	34	16865	4-27	16882	9-7	30
			4	13	9-7	9	16882	9-11	10-10	36	
			12	6	9-11	17		10-13	32		
			3	17	10-9	21		11-7	24		
			9	10	10-13	16		11-9	17		
			23	46	11-7	19					
			27	46							
			26	14							
			28	14							
			50	14							

SECTIONS

- 1 FRAME
- 2 ELECTRICAL SYSTEM
- 3
- 4
- 5 BRAKE/ACC
- 6
- 7 MAST-TWO STAGE
- 8 MAST-THREE STAGE
- 9 MAST-TWO STAGE
- 10
- 11

TRANSMISSION HOUSING
S/N D001H-2628

KEY:
A: Diesel
B: Gasoline and LPG

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
		Transmission	1	1
	2022547	Transmission	1	1
	2023329	Case	2	2
1	2021670	Bearing Cap	4	4
2	2023418	Washer	1	1
3	296429	Bolt	2	2
4	293947	Cover	2	2
5	2021390	Colter Pin	4	4
6	1371656	O-Ring	1	1
7	2021329	Plug	4	4
8	2021915	Housing	22	22
9	2021675	Pin	39	39
10	2021336	Bolt	1	1
11	287860	Lockwasher	1	1
12	292682	Hydraulic Pump	1	1
13		Figure 5-3	8	8
14	2021345	Gasket	1	1
15	214364	Bolt	1	1
16	296418	Washer	1	1
17	2021388	Temperature Switch	1	1
18	2021389	Breather	9	9
19	2021383	Dipstick	9	9
20	292515	Bolt	2	2
21	136692	Nut	3	3
22	292527	Bolt	3	2
23	292531	Capscrew	4	4
24	292583	Lockwasher	4	4
25	293637	Bolt	1	1
26	296420	Washer	1	1
	996403	Transmission Kit (Includes Item 7)	1	1
	996405	Transmission Kit (Includes Item 14)	1	1

This Parts Manual is divided into 11 major sections which are listed above. Quick reference can be made by placing the right thumb on the tab of the desired section, bending the pages to the corresponding tab.

© Copy Right Date HYSTER COMPANY See Service Manual for service procedures. 5-15

HOW TO FIND THE DESIRED PART NUMBER

WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the Sections Page. Choose the general area of reference most likely to include the part.
2. Turn to the section you chose. Use the Section Table of Contents to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Table of Contents (Page i).
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS KNOWN:

5. Use the Numerical Index (Page 16-1) to find the part number. Turn to the page listed and locate the part as indicated by the item number.

GENERAL:

The assembly breakdowns include part numbers, descriptions, quantities required, keys and footnotes to help in selecting correct parts.

6. Parts Supersession Information. Part numbers that have this history will be displayed in the parts list in the order that they were superseded (from oldest to newest). The superseded part numbers will be shown with a line through them.

Five periods in the PART NO. column (.) indicate that the part is either *Not Serviced Separately* or there is a reference to another figure. A figure reference is denoted by a pointing hand followed by a figure number in the DESCRIPTION column (☞ Figure 10)

7. Keys are used to show two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C", "D", or "E" and the corresponding quantity column to find the required parts. Two periods in the QTY column (..) indicate that the part is not used for that assembly.
8. Indented descriptions under the DESCRIPTION column are used to indicate assemblies and

subparts of assemblies. In the example on the previous page, *BEARING CAP* (Item 2) is a subpart of the major assembly *CASE*.

9. Quantities shown are for one assembly. The quantities of the subpart *BEARING CAP* are indicated as two and two. This means two per *CASE* assembly.
10. Serial number breaks identify the most current parts information and are shown as follows:
 - **S/N D001H2628**
Indicates last serial number affected.
 - S/N D001H2629** →
Indicates the first serial number affected.
 - S/N D001H1553** ↔ **S/N D001H3291**
Indicates a range of serial numbers affected.

ECN numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information and are identified as follows:

- **S/N Pending Per ECN 63243**
Indicates a pending serial number for last unit affected.
- S/N Pending Per ECN 63243** →
Indicates a pending serial number for first unit affected.

Date breaks are used to indicate when a change occurred but a subsequent serial number break was not recorded. This is an arbitrary date usually based on the ECN release and are identified as follows:


- **D/B 3/00**
Indicates that a change occurred sometime within that month for the item affected.
- D/B 3/00** →
Indicates that a change occurred sometime within that month for the item affected.
- D/B 3/00** ↔ **D/B 4/00**
Indicates a range of production dates of the item affected.

Contact your local dealer for Hyster lift trucks for serial number information for items with a ECN or a date break.

ORDERING PARTS:


When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.

For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.

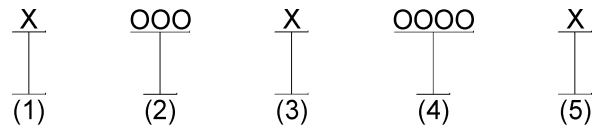IDENTIFICATION OF TRUCK SERIAL NUMBERS

- (1) and (2) The first letter and three numbers indicate the truck unit code.
- (3) The second letter indicates the plant of manufacture.
- (4) The four or five digit number indicates the production sequence number of the truck.
- (5) The final letter indicates the year of manufacture starting with "A" in 1957, 1980, and 2003.
The letters "I", "O", and "Q" will not be used.

For pending serial numbers contact your local dealer for Hyster lift trucks.

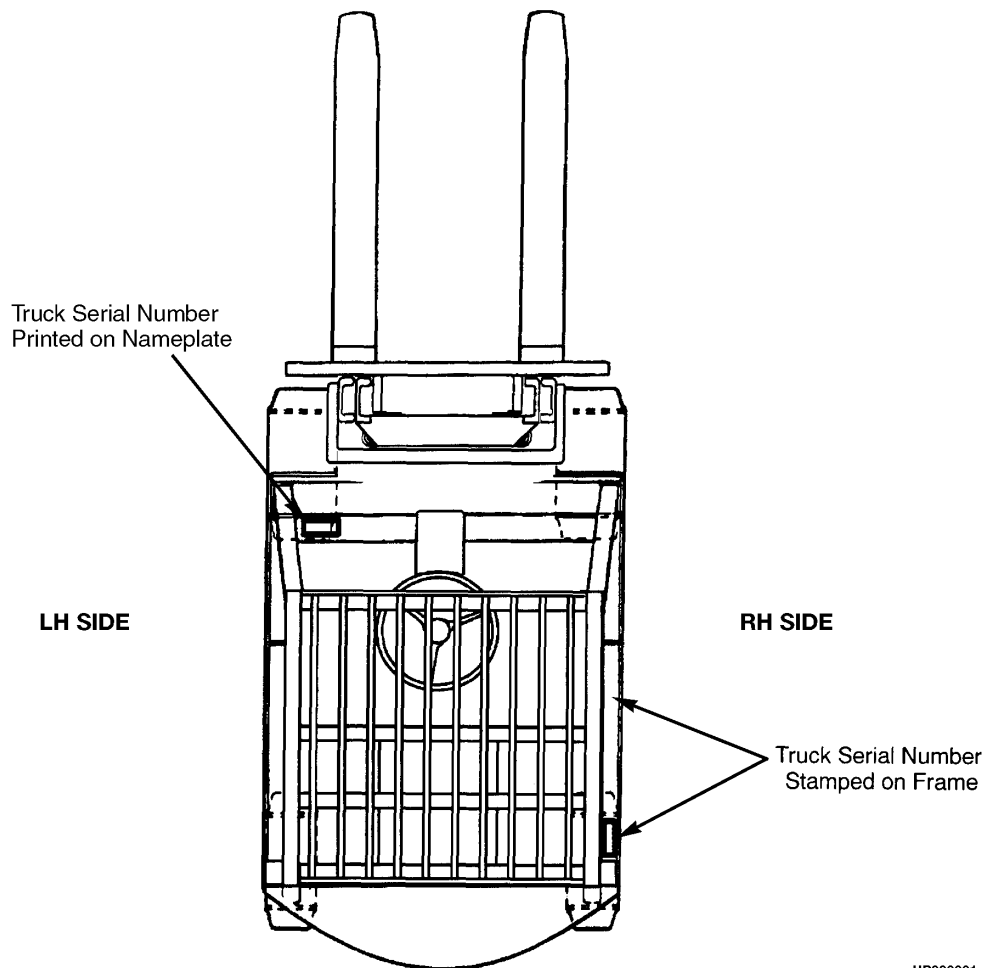

HP990001

Parts referred to in this book as right or left hand parts are in accordance with the illustration above.