

PARTS MANUAL

**H550HD, H650HD, H700HD,
H550HDS, H650HDS, H700HDS
(H008)**

CUSTOMER EDITION

HYSTER

SECTIONS

1	FRAME
2	ENGINE ASSEMBLY
3	FUEL SYSTEM
4	ELECTRICAL SYSTEM
5	TRANSMISSION
6	DRIVE AXLE
7	STEERING SYSTEM
8	BRAKE SYSTEM
9	HYDRAULIC SYSTEM
10	MAST-TWO STAGE LIMITED FREE-LIFT
11	MONO MAST
12	ATTACHMENTS
13	OPTIONS
14	FIELD CONVERSION KITS
15	NUMERICAL INDEX

This Parts Manual is divided into 15 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
ADD ON OPTION KITS	14-2
AIR CONDITIONER	
CLIMATE CONTROL CAB	1-100
AIR CONDITIONER ASSEMBLY	
CLOSED CAB WITH AIRCO	1-86
AIR CONDITIONER HOSES, HEATER HOSES, COMPRESSOR, AND ATTACHING PARTS	
TIER 3 ENGINE (→ S/N H008E01559N)	1-104
TIER 3 ENGINE (S/N H008E01560N →)	1-108
TIER 4(F) ENGINE (→ S/N H008E01559N)	1-112
TIER 4(F) ENGINE (S/N H008E01560N →)	1-116
AIR CONDITIONER SYSTEM	
CLIMATE CONTROL CAB	1-98
CLOSED CAB WITH AIRCO	1-94
AIR CONDITIONER SYSTEM ASSEMBLY	
CLOSED CAB WITH AIRCO	1-84
AIR DUCT	
CLOSED CAB WITH AIRCO OR CLIMATE CONTROL	13-2
AIR DUCT ASSEMBLY	
AIR CONDITIONING - CLOSED CAB WITH AIRCO OR WITH CLIMATE CONTROL	1-92
HEATER - CLOSED CAB WITHOUT AIRCO	1-78
AIR HEATER STARTING AID	
TIER 3 ENGINE	2-25
AIR HORN	13-4
AIR INTAKE CONNECTION	
TIER 3 ENGINE	3-44
TIER 4(F) ENGINE	3-45
AIR INTAKE MANIFOLD	
TIER 3 ENGINE	3-46
TIER 4(F) ENGINE	3-47
AIR INTAKE SYSTEM	
TIER 3 ENGINE	3-40
TIER 4(F) ENGINE	3-42
AIR TRANSFER CONNECTION	
TIER 3 ENGINE	3-48
TIER 4(F) ENGINE	3-49
ALTERNATOR AND MOUNTING	
TIER 3 AND TIER 4(F) ENGINE	4-10
ARMREST ASSEMBLY	
OPEN AND CLOSED CAB	1-59
AUTOMATIC GREASING PUMP	9-68
AUTOMATIC GREASING SYSTEM, H550	
PAGE 1 OF 3	9-50
PAGE 2 OF 3	9-52
PAGE 3 OF 3	9-54
AUTOMATIC GREASING SYSTEM, H650-700	
MAST HEIGHTS 3655 MM AND 4265 MM - PAGE 1 OF 3	9-56
MAST HEIGHTS 3655 MM AND 4265 MM - PAGE 2 OF 3	9-58
MAST HEIGHTS 3655 MM AND 4265 MM - PAGE 3 OF 3	9-60

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
MAST HEIGHTS 6095 MM THROUGH 9755 MM - PAGE 1 OF 3	9-62
MAST HEIGHTS 6095 MM THROUGH 9755 MM - PAGE 2 OF 3	9-64
MAST HEIGHTS 6095 MM THROUGH 9755 MM - PAGE 3 OF 3	9-66
AUXILIARY COOLING PLUMBING	
TIER 4(F) ENGINE	2-26
B	
BACK-UP ALARM	4-11
BATTERIES AND BATTERY CABLES	
TIER 3 AND TIER 4(F) ENGINE	4-12
BELT TENSIONER	
TIER 3 AND TIER 4(F) ENGINE	2-27
BLOCK ASSEMBLY AND HOSES, TWIN 12-PORT	
WITH METERING UNIT NUMBERS 3, 8, AND 10 - STEER AXLE LUBRICATION	9-70
BLOCK ASSEMBLY AND HOSES, TWIN 7-PORT	
WITH METERING UNIT NUMBERS 4 AND 8 - MAST MOUNTING LUBRICATION	9-72
BRAKE ASSEMBLY	
H550HD, H550HDS	6-18
H650-700HD, H650-700HDS	6-20
BRAKE PEDAL AND LINKAGE	8-4
BRAKE PEDAL ASSEMBLY	8-2
BRAKE SYSTEM	
PAGE 1 OF 4	8-10
PAGE 2 OF 4	8-12
PAGE 3 OF 4	8-14
PAGE 4 OF 4	8-16
BRAKE VALVE AND ATTACHING PARTS	8-6
ALTERNATE CONFIGURATION	8-8
C	
CAB AND TILT CYLINDER MOUNTING	1-32
CAB ATTACHING PARTS	
CLOSED - PAGE 1 OF 2	1-70
CLOSED - PAGE 2 OF 2	1-72
OPEN - PAGE 1 OF 2	1-66
OPEN - PAGE 2 OF 2	1-68
OPEN AND CLOSED CAB - PAGE 1 OF 2	1-74
OPEN AND CLOSED CAB - PAGE 2 OF 2	1-76
CAB DOOR	
LEFT HAND - CLOSED CAB	1-56
RIGHT HAND - CLOSED CAB	1-54
CAB HEATER PLUMBING	
TIER 3 AND TIER 4(F) ENGINE	2-28
CAB MAIN DOOR WINDOW	
RIGHT AND LEFT HAND - CLOSED CAB	1-58
CAB RECIRCULATING FAN	
CLOSED CAB	13-6
CAB SUNSHADE	
REAR	13-8

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
TOP	13-7
CAB TILT CYLINDER	1-36
CAB TILT PUMP	
ELECTRIC	1-44
CAB TILT PUMP AND ATTACHING PARTS	1-40
CAB TILT PUMP ASSEMBLY	1-42
CAB WINDOWS INSTALLATION	
CLOSED CAB ONLY	1-50
CAMSHAFT	
TIER 3 AND TIER 4(F) ENGINE	2-34
CARRIAGE	
APRON TYPE, SIDE-SHIFT WITH FORK POSITIONER - SHEET 1 OF 2	12-18
APRON TYPE, SIDE-SHIFT WITH FORK POSITIONER - SHEET 2 OF 2	12-22
APRON TYPE, SIDE-SHIFT WITHOUT FORK POSITIONER	12-10
APRON TYPE, SIDE-SHIFT WITHOUT FORK POSITIONER - MONO MAST	12-14
DUAL FUNCTION SIDE-SHIFT FORK POSITIONER	12-8
STANDARD PIN TYPE	12-6
CARRIAGE HYDRAULICS	
DUAL FUNCTION SIDE-SHIFT FORK POSITIONER	12-42
STANDARD PIN TYPE	12-38
CLIMATE CONTROL SYSTEM	1-96
CLUTCH ASSEMBLY	
K1	5-20
K2	5-22
K3	5-24
K4	5-26
KR	5-28
KV	5-30
COIL RAM AND ATTACHING PARTS	
HOOK TYPE FORKS	12-5
PIN TYPE FORKS	12-4
COMPRESSOR ASSEMBLY	1-102
CONDENSER	
CLOSED CAB WITH AIRCO OR WITH CLIMATE CONTROL	1-90
CONDENSER SYSTEM	
CLOSED CAB WITH AIRCO OR WITH CLIMATE CONTROL	1-88
CONNECTING RODS AND PISTONS	
TIER 3 ENGINE	2-30
TIER 4(F) ENGINE	2-32
CONTROL PANEL ASSEMBLY	
HEATER	4-14
HEATER AND AIR CONDITIONER	4-15
CONTROL VALVE	
PAGE 1 OF 2	5-17
PAGE 2 OF 2	5-18
CONTROLLER	
SEAT BELT SEQUENCER	4-16
CONVERSION KITS	14-2
CONVERTER	5-4

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
COOLANT HEATER STARTING AID	
TIER 3 ENGINE	2-35
COOLANT PLUMBING	
TIER 4(F) ENGINE	2-36
COOLER ASSEMBLY	2-20
COOLING SYSTEM	
TIER 3 ENGINE - PAGE 1 OF 2	2-17
TIER 3 ENGINE - PAGE 2 OF 2	2-18
TIER 4(F) ENGINE - PAGE 1 OF 2	2-12
TIER 4(F) ENGINE - PAGE 2 OF 2	2-14
COUNTERWEIGHT	1-26
CRANKCASE BREATHER	
TIER 3 ENGINE	2-37
TIER 4(F) ENGINE	2-38
CRANKCASE BREATHER PLUMBING	
TIER 4(F) ENGINE	2-40
CRANKSHAFT AND BEARINGS	
TIER 3 ENGINE	2-42
CYLINDER BLOCK	
TIER 3 ENGINE	2-44
TIER 4(F) ENGINE	2-46
CYLINDER HEAD	
TIER 3 AND TIER 4(F) ENGINE	2-48
D	
DASH ASSEMBLY	
CLOSED CAB	1-53
DC-DC CONVERTER AND ATTACHING PARTS	13-10
DEF SUPPLY MODULE	3-11
DEF SYSTEM	
H550-700HD	3-8
H550-700HDS	3-4
DIFFERENTIAL AND CARRIER	
H550HD, H550HDS	6-6
H650-700HD, H650-700HDS	6-8
DIPSTICK AND TUBE	
TIER 3 AND TIER 4(F) ENGINE	2-50
DIRECTIONAL CONTROL VALVE ASSEMBLY	
FOUR-SECTION - DUAL FUNCTION SIDE-SHIFT FORK POSITIONER CARRIAGES	12-37
THREE-SECTION - APRON AND DUAL FUNCTION SIDE-SHIFT FORK POSITIONER CARRIAGES	12-36
TWO-SECTION - STANDARD PIN-TYPE CARRIAGES	12-35
DRIVE AXLE ASSEMBLY	
H550HD, H550HDS	6-4
H650-700HD, H650-700HDS	6-5
DRIVE AXLE HOUSING ASSEMBLY	
H550HD, H550HDS	6-11
H650-700HD, H650-700HDS	6-12

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
DRIVE TIRES AND WHEELS	
14 X 24	6-2
16 X 25	6-3
DRIVE TRAIN	5-5
DUST COVER	1-19
E	
ELECTRIC HORN	13-11
ELECTRICAL SYSTEM	
TIER 3 ENGINE	4-4
TIER 4(F) ENGINE	4-6
EMPTY SEAT ENGINE SHUTDOWN	13-12
ENGINE BLOCK HEATER	
120 VOLT	13-13
240 VOLT	13-14
ENGINE CONNECTION	5-6
ENGINE CONTROL MODULE AND SENSORS	
TIER 3 ENGINE	4-18
TIER 4(F) ENGINE	4-20
ENGINE COOLANT VENT	
TIER 3 ENGINE	2-51
TIER 4(F) ENGINE	2-52
ENGINE MOUNTING	
TIER 3 ENGINE	2-23
TIER 4(F) ENGINE	2-24
ETR CONTROL MODULE WIRE HARNESS	
TIER 4(F) ENGINE	4-23
ETR MODULE WIRING	
TIER 3 ENGINE	4-22
EXHAUST MANIFOLD	
TIER 3 ENGINE	2-53
TIER 4(F) ENGINE	2-54
EXHAUST OUTLET CONNECTION	
TIER 3 ENGINE	2-55
EXHAUST PIPE	
DRT - TIER 4(F) ENGINE	2-8
EXHAUST RECIRCULATION	
TIER 4(F) ENGINE	2-56
EXHAUST RECIRCULATION WATER PLUMBING	
TIER 4(F) ENGINE	2-58
EXHAUST SYSTEM	
TIER 3 ENGINE	2-4
TIER 4(F) ENGINE	2-6
F	
FAN DRIVE AND MOUNTING	
TIER 3 ENGINE	2-60
TIER 4(F) ENGINE	2-59

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
FLOOR MATS	
OPEN AND CLOSED CAB	1-52
FLOORPLATES AND COVERS	
H550-650HD	1-4
H550HDS	1-12
H650-700HDS	1-16
H700HD	1-8
FLUID INDICATOR AND ATTACHING PARTS	5-34
FLYWHEEL AND MOUNTING	
TIER 3 AND TIER 4(F) ENGINE	2-61
FLYWHEEL HOUSING	
TIER 3 AND TIER 4(F) ENGINE	2-62
FORK GUIDE ASSEMBLY	12-25
FORK POSITIONER CYLINDER ASSEMBLY	12-34
FORKS	
DUAL FUNCTION SIDE-SHIFT FORK POSITIONER	12-2
PIN TYPE WITH BOTTOM HOOKS	12-3
FRONT GEAR COVER	
TIER 3 AND TIER 4(F) ENGINE	2-64
FUEL DRAIN PLUMBING	
TIER 4(F) ENGINE	3-34
FUEL FILTER	
TIER 4(F) ENGINE	3-27
FUEL FILTER AND WIRE HARNESS	
TIER 3 ENGINE	3-26
FUEL FILTER PLUMBING	
TIER 3 ENGINE	3-29
TIER 4(F) ENGINE	3-30
FUEL FILTER WITH WATER SEPARATOR	
TIER 4(F) ENGINE	3-28
FUEL INJECTOR PLUMBING	
TIER 3 ENGINE	3-50
TIER 4(F) ENGINE	3-52
FUEL INLET FITTING	
TIER 3 ENGINE	3-31
TIER 4(F) ENGINE	3-32
FUEL LINES	
TIER 3 ENGINE	3-12
TIER 4(F) ENGINE (→ S/N H008E01544N)	3-14
TIER 4(F) ENGINE (S/N H008E01545N →)	3-16
FUEL PLUMBING	
TIER 3 ENGINE	3-33
FUEL PUMP	
TIER 3 ENGINE	3-36
FUEL PUMP AND ATTACHING PARTS	
TIER 4(F) ENGINE	3-38
FUEL TANK	3-2
FULL FLOW OIL FILTER	
TIER 4(F) ENGINE	2-65

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
G	
GEAR DRIVEN PUMP DRIVE	
TIER 3 AND TIER 4(F) ENGINE	2-66
GEAR PUMP ASSEMBLY	9-44
H	
HAND PUMP	1-38
HEADER HOSES AND ATTACHING PARTS	10-22
HEATED TOP WINDOW	
CLOSED CAB ONLY	13-15
HEATER AND AIR DUCT	
CLOSED CAB WITHOUT AIRCO	1-77
HEATER AND CONTROL PANEL ASSEMBLIES	1-141
HEATER ASSEMBLY	
CLOSED CAB WITHOUT AIRCO	1-82
HEATER SYSTEM	
CLOSED CAB WITHOUT AIRCO	1-80
HOODS AND COVERS	
H550HDS	1-20
H650-700HDS	1-22
H700HD	1-24
HUB AND SHAFT ASSEMBLY	
H550HD, H550HDS	6-14
H650-700HD, H650-700HDS	6-16
HYDRAULIC CONTROL VALVE	
HIC, BRAKE/ACCUMULATOR BLOCK ASSEMBLY	9-26
HIC, MID-INLET BLOCK ASSEMBLY	9-24
LIFT SECTION ASSEMBLY, LH	9-22
LIFT SECTION ASSEMBLY, RH	9-20
TILT SECTION ASSEMBLY	9-18
HYDRAULIC CONTROL VALVE AND ATTACHING PARTS	
PAGE 1 OF 3 (→ S/N H008E01544N)	9-4
PAGE 1 OF 3 (S/N H008E01545N →)	9-6
PAGE 2 OF 3 (→ S/N H008E01544N)	9-8
PAGE 2 OF 3 (S/N H008E01545N →)	9-10
PAGE 3 OF 3 (→ S/N H008E01544N)	9-12
PAGE 3 OF 3 (S/N H008E01545N →)	9-14
HYDRAULIC CONTROL VALVE ASSEMBLY	9-16
AUXILIARY SECTION ASSEMBLY	9-28
HYDRAULIC CONTROLS	
JOYSTICK - FORK LIFT TRUCK	9-74
HYDRAULIC HOSES	
PAGE 1 OF 2 (→ S/N H008E01544N)	9-34
PAGE 1 OF 2 (S/N H008E01545N →)	9-36
PAGE 2 OF 2	9-38
HYDRAULIC LEVERS	
FOUR-LEVER CONTROL PANEL - WITH CLAMPING	9-80
FOUR-LEVER CONTROL PANEL - WITHOUT CLAMPING	9-81
THREE-LEVER CONTROL PANEL	9-79

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
TWO-LEVER CONTROL PANEL	9-78
HYDRAULIC PUMPS AND HOSES	
PAGE 1 OF 2	9-40
PAGE 2 OF 2	9-42
HYDRAULIC TANK	
H550-700HD	9-30
H550HDS	9-32
I	
INDICATOR DISPLAY AND CONTROLS	4-24
INSULATION MATS AND AIR DUCT	
CLOSED CAB WITH AIRCO OR CLIMATE CONTROL	13-16
J	
JOYSTICK ASSEMBLY	
FORK LIFT TRUCK	9-76
L	
LABELS	
HYDRAULIC CONTROLS	1-120
MAIN - PAGE 1 OF 2	1-122
MAIN - PAGE 2 OF 2	1-124
LIFT ACCUMULATOR AND ATTACHING PARTS	13-18
LIFT CYLINDER AND ATTACHING PARTS	11-6
LIFT CYLINDER ASSEMBLY	11-8
LIFTING BRACKETS AND MOUNTING	
TIER 3 ENGINE	2-67
TIER 4(F) ENGINE	2-68
LIFTING EYES	
2745 MM, 3050 MM, AND 3655 MM MAST LIFT HEIGHTS	13-19
4265 MM AND GREATER MAST LIFT HEIGHTS	13-20
LIGHTS	
CAB WORK - HALOGEN	4-118
CAB WORK - HID	4-120
DIRECTIONAL AND MARKER	4-122
DIRECTIONAL AND MARKER - LED	4-123
FRONT DRIVE	4-124
MAST WORK	4-126
REAR LED	4-128
STROBE ASSEMBLY - WITH CONDENSER	4-129
STROBE ASSEMBLY - WITHOUT CONDENSER	4-130
LUBRICATING OIL PUMP	
TIER 3 ENGINE	2-69
M	
MAIN LIFT CYLINDER	
H550	10-16
H650-700	10-18
MAP READING LIGHT	
CLOSED CAB	13-21

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
MAST	
INNER MAST - H550	10-8
INNER MAST - H650-700	10-12
OUTER MAST AND MAIN LIFT - H550-700	10-4
MAST ASSEMBLY	11-4
MAST INSTALLATION	10-2
MIRRORS	13-22
MONOTROL PEDAL ASSEMBLY	3-22
MUDFLAPS	
FRONT	13-23
REAR	13-24
MUFFLER/CATALYTIC CONVERTER ASSEMBLY	
DOC - TIER 4(F) ENGINE	2-9
SCR - TIER 4(F) ENGINE	2-10
O	
OIL COOLER	
TIER 3 ENGINE	2-70
TIER 4(F) ENGINE	2-71
OIL DIPSTICK	5-15
OIL FILTER	
TIER 3 ENGINE	2-72
OIL FILTER HOSES	
TIER 4(F) ENGINE	2-22
OIL LEVEL GAUGE	
TIER 3 ENGINE	2-73
TIER 4(F) ENGINE	2-74
OIL PAN	
TIER 3 AND TIER 4(F) ENGINE	2-75
OIL PUMP AND MOUNTING	2-76
OUTPUT	5-16
P	
PARK BRAKE ASSEMBLY	
ALL MODELS	6-22
PEDAL LINKAGE	
FORWARD/REVERSE LEVER	3-18
MONOTROL	3-20
PIVOT ARM ASSEMBLY	
OPEN AND CLOSED CAB	1-62
PLUG, COOLANT HEATER STARTING AID	
TIER 3 AND TIER 4(F) ENGINE	2-77
POWER SUPPLY POWER BOARD	
TIER 3 ENGINE	4-134
TIER 4(F) ENGINE	4-136
POWER TAKE-OFF	5-10
PRESSURE FILTER	5-12
PRESSURE OIL PUMP	5-11
PRESSURE REGULATOR	5-13

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
R	
RADIO CONSOLE AND ATTACHING PARTS	
CLOSED CAB ONLY	1-64
RADIO CONSOLE, SPEAKERS, AND ANTENNA	
CLOSED CAB ONLY - ONLY WITH DC-DC CONVERTER	13-26
RAIN TOP	
OPEN CAB	13-28
REAR GEAR HOUSING	
TIER 3 AND TIER 4(F) ENGINE	2-78
REAR GEAR TRAIN MOUNTING	
TIER 3 AND TIER 4(F) ENGINE	2-79
REAR LOCKING CONSOLE	
CLOSED CAB	13-29
RELAYS AND FUSES	4-46
ALTERNATE PART	4-64
ROCKER LEVERS	
TIER 3 ENGINE	2-80
TIER 4(F) ENGINE	2-82
S	
SEAT ASSEMBLY	
SUSPENSION	1-138
SEAT ASSEMBLY, AIR SUSPENSION	1-128
DELUXE	1-130
WITH THREE POINT SEAT BELT	1-132
SEAT ASSEMBLY, MECHANICAL SUSPENSION	1-126
SECOND 12V SOCKET OPTION	
ONLY WITH DC-DC CONVERTER	13-30
SEPARATOR	
H550HD	1-30
H550HDS	1-28
SIDE-SHIFT AND FORK POSITIONER CYLINDER	
LONG CYLINDER - H550	12-30
LONG CYLINDER - H650-700	12-32
SHORT CYLINDER - H550	12-26
SHORT CYLINDER - H650-700	12-28
START AID	13-31
STARTER MOTOR AND MOUNTING	
TIER 3 AND TIER 4(F) ENGINE	2-84
STEER AXLE	
HUB ASSEMBLY	7-8
SPINDLE ASSEMBLY	7-10
STEER AXLE AND ATTACHING PARTS	7-4
STEER COLUMN ASSEMBLY	7-18
ALTERNATE CONFIGURATION	7-20
STEER CYLINDER	7-6
STEER HOSES	7-16
STEER TIRES AND WHEELS	
14 X 24	7-2

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
16 X 25	7-3
STEER VALVE AND ATTACHING PARTS	
→ S/N H008E01544N	7-12
S/N H008E01545N →	7-14
STEERING COLUMN	7-22
STEERING CONTROL UNIT ASSEMBLY	7-24
STUD GROUNDING	
TIER 4(F) ENGINE	2-85
SUSPENSION KIT ASSEMBLY	1-136
SWITCHES	4-26
T	
TELEMETRY KITS	14-2
THERMOSTAT	
TIER 3 AND TIER 4(F) ENGINE	2-86
THROTTLE AND INCHING SENSORS	3-24
TILT	9-46
TILT CYLINDER	
6 AND 15 DEG FWD/10 DEG BACK	9-48
6 DEG FWD/6 DEG BACK	9-49
TILT INDICATOR	13-32
TILT PLATFORM ASSEMBLY	1-34
TRAINING SEAT	
CLOSED CAB	13-33
TRANSMISSION CONTROL	4-8
TRANSMISSION HOUSING	
PAGE 1 OF 2	5-7
PAGE 2 OF 2	5-9
TRANSMISSION MOUNTING AND HOSES	5-2
TRANSMISSION SENSORS	5-14
TURBOCHARGER	
TIER 3 ENGINE	2-87
TIER 4(F) ENGINE	2-88
TURBOCHARGER PLUMBING	
TIER 3 ENGINE	2-90
TIER 4(F) ENGINE	2-92
U	
UNIVERSAL SHAFT	5-32
V	
VALVE COVER	
TIER 3 ENGINE	2-93
TIER 4(F) ENGINE	2-94
VALVE TAPPETS	
TIER 3 ENGINE	2-96
VIBRATION DAMPER	
TIER 3 ENGINE	2-97
TIER 4(F) ENGINE	2-98

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
W	
WATER INLET CONNECTION	
TIER 3 ENGINE	2-99
TIER 4(F) ENGINE	2-100
WATER OUTLET CONNECTION	
TIER 3 AND TIER 4(F) ENGINE	2-101
WATER PUMP AND DRIVE BELT	
TIER 3 AND TIER 4(F) ENGINE	2-102
WINDOW KITS	14-2
WINDOW WIPER SYSTEM	
REAR AND ROOF WIPER KITS - AND FRONT WIPER OPTIONS	1-48
WASHER BOTTLE KIT - CLOSED CAB ONLY	1-46
WIRE HARNESS	
ARMREST	4-28
CAB LIGHTS	4-32
CAB SIDE CONSOLE - PAGE 1 OF 3	4-34
CAB SIDE CONSOLE - PAGE 2 OF 3	4-38
CAB SIDE CONSOLE - PAGE 3 OF 3	4-42
CAB SIDE CONSOLE - PAGE 1 OF 4, ALTERNATE PART	4-50
CAB SIDE CONSOLE - PAGE 2 OF 4, ALTERNATE PART	4-54
CAB SIDE CONSOLE - PAGE 3 OF 4, ALTERNATE PART	4-58
CAB SIDE CONSOLE - PAGE 4 OF 4, ALTERNATE PART	4-62
CAB TILT (→ PENDING PER ECN 68727-03)	4-67
CAB TILT (PENDING PER ECN 68727-03 →)	4-68
CAB UNDERFLOOR	4-70
CARRIAGE, DFSSFP	4-74
CARRIAGE, STD/SS	4-73
CHASSIS - PAGE 1 OF 2	4-76
CHASSIS - PAGE 2 OF 2	4-80
CLOSED CAB	4-83
CLOSED CAB - ALTERNATE CONFIGURATION	4-86
DEF SYSTEM - TIER 4(F) ENGINE	4-90
ECM ADAPTER - TIER 3 ENGINE	4-93
ECO/ELO-HIP	4-92
ENGINE AFTERTREATMENT SYSTEM/ECM - TIER 4(F) ENGINE	4-94
FRONT DRIVE LIGHTS	4-97
HYDRAULICS	4-98
MAST	4-102
MAST WORK LIGHTS - MAIN	4-104
MAST WORK LIGHTS - LH	4-105
MAST WORK LIGHTS - RH	4-106
OPEN CAB	4-107
POWERTRAIN	4-108
PRESSURE SWITCH BASE	4-110
PUMP BASE TRUCK	4-111
REAR	4-112
REAR WIPER EXTENSION	4-132
SIDE AND INDICATOR LIGHTS	4-113
STEER COLUMN	4-114

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
TAIL LIGHT	4-115
WASH PUMPS - CLOSED CAB	4-131
WIRE HARNESS AND SWITCH ASSEMBLY	
MONOTROL PEDAL	4-116
WIRE MESH ROOF PROTECTION	13-34

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPA	US Environmental Protection Agency	UL Type GS	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the next page.

HYSTER UNIT CODE D001 NORTH AMERICA 06/2001

TABLE OF CONTENTS

DESCRIPTION	PAGE
AIR INTAKE AND FILTER DIESEL (→ D/B 11/98).....	3-22
AIR INTAKE AND FILTER DIESEL (D/B 11/96 →).....	
AIR INTAKE AND FILTER GASOLINE AND LPG.....	
ALTERNATOR GASOLINE, LPG, AND DIESEL.....	
ALTERNATOR TYPES GS, LPS, AND DS.....	
AUXILIARY FUNCTION TUBE TWO AND THREE STAGE FULL F.....	

SECTION 13 NUMERICAL INDEX

PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.
142	3-4	19	10-13	25		11-27	29	12-31	12	12-31	12
12445	3-32	19	10-17	6		11-31	25	16719	3-36	5	
	3-34	1	10-27	11		11-32	37	16751	3-16	27	
			11	11		8-4	29	16849	3-34	21	
			11	6	16485	8-4	45	16863	3-36	20	
			12	13		8-8	34	16865	3-28	17	
			12	6		9-7	9	16882	3-6	18	
			3	17		9-7	19		4-27	41	
			9	10		9-11	9		9-7	30	
			9	10		9-11	17		10-10	36	
			23	46		10-9	21		10-13	32	
			27	46		10-9	28		11-7	24	
			26	14		10-13	16		11-9	17	
			28	14		11-7	19				
			30	14							

SECTIONS

- 1
- 2
- 3
- 4
- 5 BRAKE/ACC
- 6
- 7 MAST-TWO STAG
- 8 MAST-THREE STAG
- 9 MAST-TWO STAG
- 10
- 11

TRANSMISSION HOUSING
S/N D001H-2628

KEY:
A: Diesel
B: Gasoline and LPG

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
		Transmission	1	1
	2022547	Transmission	1	1
	2023329	Case	2	2
1	2021670	Bearing Cap	4	4
2	2023418	Washer	1	1
3	296429	Bolt	2	2
4	293947	Cover	2	2
5	2021390	Colter Pin	4	4
6	1371656	O-Ring	1	1
7	2021329	Plug	4	4
8	2021915	Housing	22	22
9	2021675	Pin	39	39
10	2021336	Bolt	1	1
11	287860	Lockwasher	1	1
12	292682	Hydraulic Pump	1	1
13		Figure 5-3	8	8
14	2021345	Gasket	1	1
15	214364	Bolt	1	1
16	296418	Washer	1	1
17	2021388	Temperature Switch	1	1
18	2021389	Breather	9	9
19	2021383	Dipstick	9	9
20	292515	Bolt	2	2
21	136692	Nut	3	3
22	292527	Bolt	3	2
23	292531	Capscrew	4	4
24	292583	Lockwasher	4	4
25	293637	Bolt	4	4
26	296420	Washer	1	1
	996403	Transmission Kit (Includes Item 7)	1	1
	996405	Transmission Kit (Includes Item 14)	1	1

This Parts Manual is divided into 11 major sections which are listed above. Quick be made by placing the right thumb on the tab of the desired section, bending the pages to the corresponding tab.

© Copy Right Date HYSTER COMPANY See Service Manual for service procedures. 5-15