

# **PARTS MANUAL**

---

**H1050HD-16CH, H1150HD-16CH  
(H117)**

**CUSTOMER EDITION**

---

***HYSTER***



**SECTIONS**

<b>1</b>	<b>FRAME</b>
<b>2</b>	<b>ENGINE ASSEMBLY</b>
<b>3</b>	<b>FUEL SYSTEM</b>
<b>4</b>	<b>ELECTRICAL SYSTEM</b>
<b>5</b>	<b>TRANSMISSION</b>
<b>6</b>	<b>DRIVE AXLE</b>
<b>7</b>	<b>STEERING SYSTEM</b>
<b>8</b>	<b>BRAKE SYSTEM</b>
<b>9</b>	<b>HYDRAULIC SYSTEM</b>
<b>10</b>	<b>MAST WITH CONTAINER HANDLER</b>
<b>11</b>	<b>ATTACHMENTS</b>
<b>12</b>	<b>OPTIONS</b>
<b>13</b>	<b>FIELD CONVERSION KITS</b>
<b>14</b>	<b>NUMERICAL INDEX</b>

This Parts Manual is divided into 14 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.



**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**

**TABLE OF CONTENTS**

DESCRIPTION	PAGE
<b>A</b>	
ACCESSORY DRIVE PULLEY	
TIER 3 ENGINE .....	2-27
TIER 4(F) ENGINE .....	2-28
AIR CLEANER PLUMBING	
TIER 3 ENGINE .....	2-29
AIR COMPRESSOR AND HOSES	
TIER 3 ENGINE .....	1-38
TIER 4(F) ENGINE (→ S/N H117E01527N) .....	1-39
TIER 4(F) ENGINE (S/N H117E01528N →) .....	1-40
AIR CONDITIONER	
CLIMATE CONTROL CAB .....	1-70
AIR CONDITIONER ASSEMBLY	
CAB WITH AIRCO .....	1-64
AIR CONDITIONER SYSTEM	
CLIMATE CONTROL CAB .....	1-68
AIR CONDITIONER SYSTEM ASSEMBLY	
CAB WITH AIRCO .....	1-56
AIR DUCT	
CLOSED CAB WITH AIRCO OR CLIMATE CONTROL .....	12-2
AIR DUCT ASSEMBLY	
AIR CONDITIONING - CAB WITH AIRCO OR WITH CLIMATE CONTROL .....	1-62
HEATER .....	1-50
AIR HORN .....	1-46
AIR INTAKE CONNECTION	
TIER 3 ENGINE .....	3-5
TIER 4(F) ENGINE .....	3-6
AIR INTAKE HOSE	
TIER 3 AND TIER 4(F) ENGINE .....	3-4
AIR INTAKE MANIFOLD	
TIER 3 ENGINE .....	3-8
AIR INTAKE SYSTEM	
TIER 3 ENGINE .....	3-2
TIER 4(F) ENGINE .....	3-3
AIR TRANSFER CONNECTION	
TIER 3 ENGINE .....	3-7
TIER 4(F) ENGINE .....	2-30
AIRFLOW SCREEN	
CABIN TOWER .....	1-14
ALTERNATOR	
TIER 3 AND TIER 4(F) ENGINE .....	4-111
ALTERNATOR DRIVE PULLEY	
TIER 3 ENGINE .....	4-115
ALTERNATOR MOUNTING	
TIER 3 ENGINE .....	4-112
TIER 4(F) ENGINE .....	4-114
ARMREST ASSEMBLY .....	1-72
AUTOMATIC GREASING PUMP .....	9-56

## TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
AUTOMATIC GREASING SYSTEM	
PAGE 1 OF 3 .....	9-46
PAGE 2 OF 3 .....	9-48
PAGE 3 OF 3 .....	9-50
AUXILIARY COOLING PLUMBING	
TIER 4(F) ENGINE .....	2-31
<b>B</b>	
BATTERY BOX COVER .....	1-10
BELT TENSIONER	
TIER 4(F) ENGINE .....	2-32
BLOCK ASSEMBLY AND HOSES, TWIN 12-PORT	
WITH METERING UNIT NUMBERS 3, 8, AND 10 - STEER AXLE LUBRICATION .....	9-54
BLOCK ASSEMBLY AND HOSES, TWIN 7-PORT	
WITH METERING UNIT NUMBERS 4 AND 8 - MAST MOUNTING LUBRICATION .....	9-52
BRAKE ACCUMULATOR AND MOUNTING HARDWARE .....	8-8
BRAKE MANIFOLD AND ATTACHING BRAKE HOSES .....	8-9
BRAKE PEDAL AND LINKAGE .....	8-6
BRAKE PEDAL ASSEMBLY .....	8-4
BRAKE VALVE AND ATTACHING BRAKE HOSES .....	8-2
BREATHER PLUMBING	
TIER 3 ENGINE .....	2-33
TIER 4(F) ENGINE .....	2-34
BUMPERS .....	11-6
<b>C</b>	
CAB ATTACHING PARTS	
PAGE 1 OF 3 .....	1-86
PAGE 2 OF 3 .....	1-88
PAGE 3 OF 3 .....	1-90
CAB DOOR	
LEFT HAND .....	1-82
RIGHT HAND .....	1-84
CAB FLOORMATS .....	1-76
CAB MAIN DOOR WINDOW	
RIGHT AND LEFT HAND .....	1-91
CAB MOUNTING AND HOSE SUPPORT .....	1-16
CAB RECIRCULATING FAN .....	12-4
CAB SUNSHADE	
REAR .....	12-6
TOP .....	12-5
CAB WINDOWS INSTALLATION .....	1-80
CABIN HEATER PLUMBING	
TIER 4(F) ENGINE .....	2-35
CAM FOLLOWER LEVERS	
TIER 3 ENGINE .....	2-36
CAMSHAFT	
TIER 3 ENGINE .....	2-38
CLIMATE CONTROL SYSTEM .....	1-66

**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
COMPRESSOR ASSEMBLY	
TIER 4(F) ENGINE .....	1-42
COMPRESSOR MOUNTING	
TIER 3 ENGINE .....	2-40
TIER 4(F) ENGINE .....	2-42
CONDENSER	
CAB WITH AIRCO OR WITH CLIMATE CONTROL .....	1-60
CONDENSER SYSTEM	
CAB WITH AIRCO OR WITH CLIMATE CONTROL .....	1-58
CONTROL PANEL ASSEMBLY	
HEATER .....	4-109
HEATER AND AIR CONDITIONER .....	4-110
CONTROL VALVE ASSEMBLY	
AUXILIARY .....	9-32
CAP AND SUPPORT KIT .....	9-38
LIFT .....	9-34
LIFT AND TILT .....	9-36
CONTROLLER	
SEAT BELT SEQUENCER .....	12-8
COOLANT HEATER STARTING AID	
TIER 3 ENGINE .....	2-43
COOLER AND ATTACHING BRAKE HOSES .....	8-14
COOLER ASSEMBLY .....	2-10
COOLING SYSTEM	
TIER 3 ENGINE .....	2-6
TIER 4(F) ENGINE .....	2-8
CORROSION RESISTOR	
TIER 3 ENGINE .....	2-44
COUNTERWEIGHT .....	1-15
CRANKSHAFT	
TIER 3 ENGINE .....	2-46
CRANKSHAFT MAIN BEARINGS	
TIER 3 ENGINE .....	2-47
CYLINDER	
POWER PILE SLOPE .....	11-5
CYLINDER BLOCK	
TIER 3 ENGINE .....	2-48
TIER 4(F) ENGINE .....	2-52
CYLINDER BLOCK PLUMBING	
TIER 3 ENGINE .....	2-50
CYLINDER HEAD	
TIER 3 ENGINE .....	2-54
<b>D</b>	
DASH ASSEMBLY .....	1-78
DC-DC CONVERTER AND ATTACHING PARTS .....	12-9
DEF SUPPLY MODULE .....	3-37
DEF SYSTEM	
TIER 4(F) ENGINE .....	3-34



**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
DIFFERENTIAL AND CARRIER ASSEMBLY .....	6-2
DRIVE AXLE AND ATTACHING BRAKE HOSES .....	8-16
DRIVE SHAFT .....	5-44
DRIVE WHEELS AND TIRES	
18.00 X 25 (→ S/N H117E01529N) .....	6-12
18.00 X 25 (S/N H117E01530N →) .....	6-14
18.00 X 33 .....	6-16
<b>E</b>	
ELECTRICAL SYSTEM	
TIER 3 ENGINE - PAGE 1 OF 2 (→ PENDING PER ECN 68671-27) .....	4-4
TIER 3 ENGINE - PAGE 1 OF 2 (PENDING PER ECN 68671-27 →) .....	4-6
TIER 3 ENGINE - PAGE 2 OF 2 .....	4-8
TIER 4(F) ENGINE - PAGE 1 OF 2 (→ PENDING PER ECN 68671-27) .....	4-12
TIER 4(F) ENGINE - PAGE 1 OF 2 (PENDING PER ECN 68671-27 →) .....	4-14
TIER 4(F) ENGINE - PAGE 2 OF 2 .....	4-16
EMPTY SEAT ENGINE SHUTDOWN .....	12-10
ENGINE BLOCK HEATER 240V .....	12-11
ENGINE CONTROL MODULE	
TIER 4(F) ENGINE .....	4-116
ENGINE CONTROL SYSTEM	
TIER 3 ENGINE .....	4-122
ENGINE COOLANT PLUMBING	
TIER 4(F) ENGINE .....	2-56
ENGINE COVERS .....	1-12
ENGINE MOUNTING AND CHARGE AIR COOLER TUBES	
TIER 3 ENGINE .....	2-24
TIER 4(F) ENGINE .....	2-26
ENGINE OIL FILL	
TIER 3 ENGINE .....	2-58
TIER 4(F) ENGINE .....	2-60
ENGINE SUPPORT	
TIER 4(F) ENGINE .....	2-61
ETR CONTROL MODULE WIRE HARNESS	
TIER 4(F) ENGINE .....	4-118
EXHAUST MANIFOLD	
TIER 3 ENGINE .....	2-62
TIER 4(F) ENGINE .....	2-63
EXHAUST OUTLET CONNECTION	
TIER 3 ENGINE .....	2-64
EXHAUST PIPE	
DRT - TIER 4(F) ENGINE .....	2-20
EXHAUST RECIRCULATION	
TIER 4(F) ENGINE .....	2-65
EXHAUST RECIRCULATION AIR PLUMBING	
TIER 4(F) ENGINE .....	2-67
EXHAUST RECIRCULATION WATER PLUMBING	
TIER 4(F) ENGINE .....	2-66

**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
EXHAUST SYSTEM	
TIER 3 ENGINE .....	2-16
TIER 4(F) ENGINE .....	2-18
EXPANSION TANK AND HOSES	
TIER 3 ENGINE .....	2-12
TIER 4(F) ENGINE .....	2-14
<b>F</b>	
FAN DRIVE AND MOUNTING	
TIER 4(F) ENGINE .....	2-68
FAN DRIVE AND SPACER	
TIER 3 ENGINE .....	2-69
FLOORPLATES, STEPS, AND RAILS	
PAGE 1 OF 2 .....	1-4
PAGE 2 OF 2 .....	1-6
FLOW AMPLIFIER AND ATTACHING HYDRAULIC HOSES .....	9-14
FLYWHEEL	
TIER 3 ENGINE .....	2-73
TIER 4(F) ENGINE .....	2-74
FLYWHEEL HOUSING	
TIER 3 ENGINE .....	2-70
TIER 4(F) ENGINE .....	2-72
FRONT DRIVE TRAIN	
TIER 3 ENGINE .....	2-75
FRONT ENGINE SUPPORT	
TIER 3 ENGINE .....	2-76
FRONT GEAR COVER	
TIER 3 ENGINE .....	2-78
TIER 4(F) ENGINE .....	2-80
FRONT GEAR TRAIN ACCESSORY MOUNTING	
TIER 4(F) ENGINE .....	2-81
FUEL DRAIN PLUMBING	
TIER 4(F) ENGINE .....	3-18
FUEL FILTER	
TIER 3 ENGINE .....	3-20
TIER 4(F) ENGINE .....	3-22
FUEL FILTER PLUMBING	
TIER 3 ENGINE .....	3-24
TIER 4(F) ENGINE .....	3-26
FUEL PUMP ASSEMBLY	
TIER 3 ENGINE .....	3-10
FUEL PUMP COUPLING	
TIER 3 ENGINE .....	3-13
FUEL PUMP DRIVE	
TIER 3 ENGINE .....	3-14
FUEL PUMP INTAKE FITTING	
TIER 3 AND TIER 4(F) ENGINE .....	3-15
FUEL PUMP PLUMBING	
TIER 3 ENGINE .....	3-16

## TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
FUEL SUPPLY PLUMBING	
TIER 4(F) ENGINE .....	3-30
FUEL SYSTEM	
TIER 3 ENGINE .....	3-32
TIER 4(F) ENGINE .....	3-33
FUEL TANK .....	3-31
FUEL TRANSFER PUMP	
TIER 4(F) ENGINE .....	3-28
<b>G</b>	
GEAR HOUSING	
TIER 3 ENGINE .....	2-82
TIER 4(F) ENGINE .....	2-83
<b>H</b>	
HEADER HOSES .....	11-2
HEAT SHIELD	
TIER 4(F) ENGINE .....	2-84
HEATED TOP WINDOW .....	12-12
HEATER AND AIR DUCT .....	1-48
HEATER AND CONTROL PANEL ASSEMBLIES .....	1-52
HEATER ASSEMBLY .....	1-54
HEATER HOSES	
TIER 3 ENGINE .....	1-43
TIER 4(F) ENGINE .....	1-44
HIGH PRESSURE HYDRAULIC FILTER AND ATTACHING BRAKE HOSES .....	8-12
HUB ASSEMBLY .....	6-4
HYDRAULIC CONTROLS	
JOYSTICK .....	9-28
HYDRAULIC GEAR PUMP	
FIXED DISPLACEMENT .....	9-10
HYDRAULIC PUMP AND ATTACHING BRAKE HOSES .....	8-13
HYDRAULIC PUMPS .....	9-6
HYDRAULIC TANK .....	9-4
HYDRAULIC TANK AND ATTACHING BRAKE HOSES .....	8-15
HYDRAULIC TANK AND ATTACHING HYDRAULIC HOSES .....	9-2
<b>I</b>	
IDLER GEAR	
TIER 3 ENGINE .....	2-86
INDICATOR DISPLAY AND CONTROLS .....	4-22
INSULATION MATS AND AIR DUCT	
CLIMATE CONTROL CAB .....	12-14
INTAKE CONNECTOR	
AIR COMPRESSOR - TIER 3 ENGINE .....	2-88
INTAKE MANIFOLD	
TIER 4(F) ENGINE .....	2-89
<b>J</b>	
JOYSTICK ASSEMBLY .....	9-30

**TABLE OF CONTENTS (continued)**

DESCRIPTION	PAGE
<b>L</b>	
LABELS	
PAGE 1 OF 3 .....	1-96
PAGE 2 OF 3 .....	1-98
PAGE 3 OF 3 .....	1-100
LIFT ACCUMULATOR AND ATTACHING PARTS .....	9-43
LIFT CYLINDER	
12650 MM (498.0 IN.) LIFT HEIGHT .....	10-8
7010 MM (275.9 IN.), AND 9754 MM (384.0 IN.) LIFT HEIGHT .....	10-6
LIFT/TILT MANIFOLD AND ATTACHING HYDRAULIC HOSES .....	9-8
LIFTING BRACKET	
TIER 3 ENGINE .....	2-90
LIFTING BRACKETS	
TIER 4(F) ENGINE .....	2-91
LIGHT BAR AND MOUNT	
TWISTLOCK MODULE .....	1-92
TWISTLOCK MODULE - ALTERNATE CONFIGURATION .....	1-94
LIGHT SWITCHES .....	4-96
LIGHTS	
CAB WORK - HALOGEN .....	4-102
CAB WORK - HID .....	4-104
ENGINE COMPARTMENT .....	4-97
FENDER AND TAIL .....	4-100
STROBE ASSEMBLY - WITH CONDENSER .....	4-98
STROBE ASSEMBLY - WITHOUT CONDENSER .....	4-99
<b>M</b>	
MAIN HYDRAULIC CONTROL VALVE AND ATTACHING HYDRAULIC HOSES .....	9-40
MAIN MANIFOLD AND ATTACHING BRAKE HOSES .....	8-11
MAIN MANIFOLD AND ATTACHING HYDRAULIC HOSES .....	9-12
MAIN MANIFOLD ASSEMBLY	
PAGE 1 OF 2 .....	9-16
PAGE 2 OF 2 .....	9-18
MANIFOLD	
LIFT AND TILT .....	9-44
MAP READING LIGHT .....	12-16
MAST ASSEMBLY	
WITH GANTRY CARRIAGE .....	10-2
MAST INSTALLATION .....	10-10
MIRRORS	
FRONT FENDER .....	1-45
MUFFLER/CATALYTIC CONVERTER ASSEMBLY	
DOC - TIER 4(F) ENGINE .....	2-22
SCR - TIER 4(F) ENGINE .....	2-21
<b>O</b>	
OIL COOLER	
TIER 4(F) ENGINE .....	2-93

**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
OIL COOLER AND FILTER HEAD ADAPTER	
TIER 3 ENGINE .....	2-102
OIL COOLER WATER PLUMBING	
TIER 3 ENGINE .....	2-92
OIL FILLER	
TIER 3 ENGINE .....	2-97
TIER 4(F) ENGINE .....	2-98
OIL FILTER	
TIER 3 ENGINE .....	2-99
TIER 4(F) ENGINE .....	2-100
OIL LEVEL GAUGE	
TIER 3 ENGINE .....	2-95
TIER 4(F) ENGINE .....	2-96
OIL PAN	
TIER 3 ENGINE .....	2-104
TIER 4(F) ENGINE .....	2-106
OIL PUMP AND ATTACHING PARTS	
TIER 3 ENGINE .....	2-108
<b>P</b>	
PARK BRAKE ASSEMBLY .....	6-10
PARK BRAKE RETAINER .....	6-8
PEDAL LINKAGE	
FORWARD/REVERSE LEVER .....	3-40
PIVOT ARM ASSEMBLY .....	1-74
PLUG, COOLANT HEATER STARTING AID	
TIER 4(F) ENGINE .....	2-109
PROXIMITY SWITCH .....	4-108
<b>R</b>	
RADIATOR PLUMBING	
TIER 3 ENGINE .....	2-110
RADIO CONSOLE AND ATTACHING PARTS .....	12-18
REAR LOCKING CONSOLE .....	12-20
RELAYS AND FUSES .....	4-42
REMOTE OIL FILTER, HOSES, AND ATTACHING PARTS	
TIER 4(F) ENGINE .....	2-23
<b>S</b>	
SEAT ASSEMBLY	
SUSPENSION .....	1-30
SEAT ASSEMBLY, AIR SUSPENSION .....	1-20
DELUXE .....	1-22
WITH THREE POINT SEAT BELT .....	1-24
SEAT ASSEMBLY, MECHANICAL SUSPENSION .....	1-18
SECOND 12V SOCKET OPTION	
ONLY WITH DC-DC CONVERTER .....	12-21
SERVICE BRAKE ASSEMBLY .....	6-6
SPEED LIMITING	
GANTRY CARRIAGE .....	4-106

**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
START AID .....	12-22
STARTER	
TIER 4(F) ENGINE .....	4-119
STARTER MOTOR AND MOUNTING	
TIER 3 ENGINE .....	4-120
STEER AXLE AND ATTACHING PARTS .....	7-2
STEER AXLE ASSEMBLY	
PAGE 1 OF 2 .....	7-22
PAGE 2 OF 2 .....	7-24
STEER COLUMN ASSEMBLY .....	7-12
ALTERNATE CONFIGURATION .....	7-14
STEER CYLINDER .....	7-4
STEER TIRES AND WHEELS	
18.00 X 25 (→ S/N H117E01529N) .....	7-18
18.00 X 25 (S/N H117E01530N →) .....	7-20
18.00 X 33 .....	7-21
STEER VALVE AND ATTACHING HYDRAULIC HOSES .....	9-20
STEERING COLUMN .....	7-16
STEERING CONTROL UNIT .....	7-8
STEERING CONTROL VALVE .....	7-10
STEERING HOSES .....	7-6
SUSPENSION KIT ASSEMBLY .....	1-28
<b>T</b>	
TELEMETRY KITS .....	13-2
THERMOSTAT	
TIER 3 ENGINE .....	2-112
TIER 4(F) ENGINE .....	2-113
THERMOSTAT HOUSING	
TIER 3 ENGINE .....	2-114
THROTTLE AND INCHING SENSORS .....	3-38
TILT CYLINDER ASSEMBLY .....	9-24
TILT CYLINDERS AND ATTACHING PARTS .....	9-22
TILT HYDRAULICS .....	9-26
TRAINING SEAT .....	12-23
TRANSMISSION	
CASE AND REAR COVER .....	5-10
CONTROL VALVE .....	5-42
FIRST SPEED CLUTCH SHAFT .....	5-30
FIRST SPEED GEARS .....	5-21
FIRST SPEED SHAFT AND IDLER GEAR .....	5-34
FORWARD CLUTCH SHAFT .....	5-22
FORWARD, REVERSE AND SECOND, - AND THIRD OR FOURTH CLUTCH SHAFTS .....	5-20
FOURTH SPEED CLUTCH SHAFT .....	5-32
INPUT DRIVE GEARS .....	5-14
OUTPUT SHAFT .....	5-36
PUMP DRIVE .....	5-16
REGULATOR VALVE AND HYDRAULIC PUMP .....	5-38
REMOTE FILTER AND ADAPTER .....	5-40

**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
REVERSE AND SECOND CLUTCH SHAFT .....	5-28
THIRD SPEED CLUTCH SHAFT .....	5-24
THIRD SPEED GEARS .....	5-26
TORQUE CONVERTER AND DRIVE PLATE .....	5-18
TORQUE CONVERTER HOUSING .....	5-6
TURBINE SHAFT, STATOR SUPPORT, OIL BAFFLE .....	5-12
TRANSMISSION CONTROL .....	4-20
TRANSMISSION LINES AND ATTACHING PARTS .....	5-2
TRANSMISSION MOUNTING .....	5-4
TURBOCHARGER	
TIER 3 ENGINE .....	2-116
TIER 4(F) ENGINE .....	2-118
TURBOCHARGER PLUMBING	
TIER 3 ENGINE .....	2-120
TURBOCHARGER WATER PLUMBING	
TIER 4(F) ENGINE .....	2-122
<b>V</b>	
VALVE COVER	
TIER 3 ENGINE .....	2-124
TIER 4(F) ENGINE .....	2-126
VIBRATION DAMPER	
TIER 3 ENGINE .....	2-128
TIER 4(F) ENGINE .....	2-129
<b>W</b>	
WATER PUMP	
TIER 3 ENGINE .....	2-130
WATER PUMP AND CONNECTIONS	
TIER 4(F) ENGINE .....	2-132
WINDOW WIPER SYSTEM	
REAR AND ROOF WIPER KITS - AND FRONT WIPER OPTIONS .....	1-36
WASHER BOTTLE KIT .....	1-34
WIRE HARNESS	
ARMREST .....	4-24
BACK-UP ALARM .....	4-27
CAB LIGHTS .....	4-28
CAB SIDE CONSOLE - PAGE 1 OF 3 .....	4-30
CAB SIDE CONSOLE - PAGE 2 OF 3 .....	4-34
CAB SIDE CONSOLE - PAGE 3 OF 3 .....	4-38
CAB UNDERFLOOR .....	4-46
CHASSIS - PAGE 1 OF 2 (→ S/N H117E01503M) .....	4-50
CHASSIS - PAGE 1 OF 2 (S/N H117E01505M →) .....	4-54
CHASSIS - PAGE 2 OF 2 .....	4-58
CLOSED CAB .....	4-61
COOLANT LEVEL SWITCH - TIER 4(F) ENGINE .....	4-64
COOLANT LEVEL SWITCH - TIER 3 ENGINE .....	4-65
ECO/ELO-HIP .....	4-69
ENGINE AFTERTREATMENT SYSTEM/ECM - TIER 4(F) ENGINE .....	4-66

**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
ENGINE ECM ADAPTER - TIER 3 ENGINE .....	4-70
FRONT LIGHTS .....	4-72
MANIFOLD .....	4-74
MAST .....	4-76
PDM .....	4-78
POWERTRAIN - FULL FLOW .....	4-82
PRESSURE SWITCH BASE .....	4-86
PROXIMITY SWITCH - GANTRY .....	4-87
PROXIMITY SWITCH - LIFT AND TILT .....	4-88
PUMP BASE TRUCK .....	4-89
REAR .....	4-90
REAR WIPER EXTENSION .....	4-91
STEER COLUMN .....	4-92
TWIN FRONT FENDER WORK LIGHTS .....	4-93
WIF SENSOR .....	4-94
WINDOW WASH PUMPS .....	4-95
WIRE MESH ROOF PROTECTION .....	12-24
WIRING ACCESSORIES	
ELECTRONIC CONTROL MODULE - TIER 3 ENGINE .....	4-124



**ABBREVIATIONS QUICK REFERENCE SHEET**

Listed below are abbreviations used in parts manuals to denote the following expressions:

<b>TERM</b>	<b>DEFINITION</b>	<b>TERM</b>	<b>DEFINITION</b>
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPA	US Environmental Protection Agency	UL Type GS	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

### HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the next page.

**HYSTER** UNIT CODE D001 NORTH AMERICA 06/2001

**TABLE OF CONTENTS**

DESCRIPTION	PAGE
AIR INTAKE AND FILTER DIESEL (→ D/B 11/98).....	3-22
AIR INTAKE AND FILTER DIESEL (D/B 11/96 →).....	
AIR INTAKE AND FILTER GASOLINE AND LPG.....	
ALTERNATOR GASOLINE, LPG, AND DIESEL.....	
ALTERNATOR TYPES GS, LPS, AND DS.....	
AUXILIARY FUNCTION TUBE TWO AND THREE STAGE FULL F.....	

**SECTION 13 NUMERICAL INDEX**

PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.
142	3-4	19	10-13	25	11-27	29	12-31	12	16719	3-36	5
12445	3-32	19	10-17	6	11-31	25	16751	3-16	16849	3-34	21
	3-34	1	10-27	11	11-32	37	16849	3-36	16849	3-36	20
			11-11	6	8-4	45	16863	3-28	16865	3-6	18
			12-21	11	8-8	34	16865	4-27	16882	9-7	30
			14	13	9-7	9	16882	9-11	10-10	36	
			12	6	9-11	17		10-13	32		
			3	17	10-9	21		11-7	24		
			9	10	10-13	16		11-9	17		
			23	46	11-7	19					
			27	46							
			26	14							
			28	14							
			50	14							

**SECTIONS**

- 1
- 2
- 3
- 4
- 5 BRAKE/ACC
- 6
- 7 MAST-TWO STAG
- 8 MAST-THREE STAG
- 9 MAST-TWO STAG
- 10
- 11

**TRANSMISSION HOUSING**  
S/N D001H-2628

**KEY:**  
A: Diesel  
B: Gasoline and LPG

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
		Transmission	1	1
	2022547	Transmission	1	1
	2023329	Case	2	2
1	2021670	Bearing Cap	4	4
2	2023418	Washer	1	1
3	296429	Bolt	2	2
4	293947	Cover	2	2
5	2021390	Colter Pin	4	4
6	1371656	O-Ring	1	1
7	2021329	Plug	4	4
8	2021915	Housing	22	22
9	2021675	Pin	39	39
10	2021336	Bolt	1	1
11	287860	Lockwasher	1	1
12	292682	Hydraulic Pump	1	1
13		Figure 5-3	8	8
14	2021345	Gasket	1	1
15	214364	Bolt	1	1
16	296418	Washer	1	1
17	2021388	Temperature Switch	1	1
18	2021389	Breather	9	9
19	2021383	Dipstick	9	9
20	292515	Bolt	2	2
21	136692	Nut	3	3
22	292527	Bolt	3	2
23	292531	Capscrew	4	4
24	292583	Lockwasher	4	4
25	293637	Bolt	1	1
26	296420	Washer	1	1
	996403	Transmission Kit (Includes Item 7)	1	1
	996405	Transmission Kit (Includes Item 14)	1	1

This Parts Manual is divided into 11 major sections which are listed above. Quick be made by placing the right thumb on the tab of the desired section, bending the pages to the corresponding tab.

©Copy Right Date HYSTER COMPANY See Service Manual for service procedures. 5-15

## HOW TO FIND THE DESIRED PART NUMBER

### WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the Sections Page. Choose the general area of reference most likely to include the part.
2. Turn to the section you chose. Use the Section Table of Contents to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

### WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Table of Contents (Page i).
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

### WHEN THE PART NUMBER IS KNOWN:

5. Use the Numerical Index (Page 14-1) to find the part number. Turn to the page listed and locate the part as indicated by the item number.

### GENERAL:

The assembly breakdowns include part numbers, descriptions, quantities required, keys and footnotes to help in selecting correct parts.

6. Parts Supersession Information. Part numbers that have this history will be displayed in the parts list in the order that they were superseded (from oldest to newest). The superseded part numbers will be shown with a line through them.

Five periods in the PART NO. column (. . . . .) indicate that the part is either *Not Serviced Separately* or there is a reference to another figure. A figure reference is denoted by a pointing hand followed by a figure number in the DESCRIPTION column (☞ Figure 10)

7. Keys are used to show two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C", "D", or "E" and the corresponding quantity column to find the required parts. Two periods in the QTY column (..) indicate that the part is not used for that assembly.
8. Indented descriptions under the DESCRIPTION column are used to indicate assemblies and

subparts of assemblies. In the example on the previous page, *BEARING CAP* (Item 2) is a subpart of the major assembly *CASE*.

9. Quantities shown are for one assembly. The quantities of the subpart *BEARING CAP* are indicated as two and two. This means two per *CASE* assembly.
10. Serial number breaks identify the most current parts information and are shown as follows:
  - **S/N D001H2628**  
Indicates last serial number affected.
  - S/N D001H2629** →  
Indicates the first serial number affected.
  - S/N D001H1553** ↔ **S/N D001H3291**  
Indicates a range of serial numbers affected.

ECN numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information and are identified as follows:

- **S/N Pending Per ECN 63243**  
Indicates a pending serial number for last unit affected.
- S/N Pending Per ECN 63243** →  
Indicates a pending serial number for first unit affected.

Date breaks are used to indicate when a change occurred but a subsequent serial number break was not recorded. This is an arbitrary date usually based on the ECN release and are identified as follows:


- **D/B 3/00**  
Indicates that a change occurred sometime within that month for the item affected.
- D/B 3/00** →  
Indicates that a change occurred sometime within that month for the item affected.
- D/B 3/00** ↔ **D/B 4/00**  
Indicates a range of production dates of the item affected.

Contact your local dealer for Hyster lift trucks for serial number information for items with a ECN or a date break.

### ORDERING PARTS:


When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.

For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.

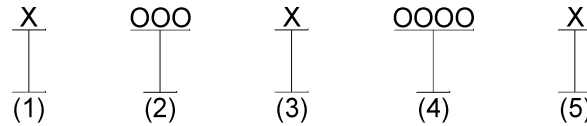**IDENTIFICATION OF TRUCK SERIAL NUMBERS**

- (1) and (2) The first letter and three numbers indicate the truck unit code.
- (3) The second letter indicates the plant of manufacture.
- (4) The four or five digit number indicates the production sequence number of the truck.
- (5) The final letter indicates the year of manufacture starting with "A" in 1957, 1980, and 2003.  
The letters "I", "O", and "Q" will not be used.

For pending serial numbers contact your local dealer for Hyster lift trucks.

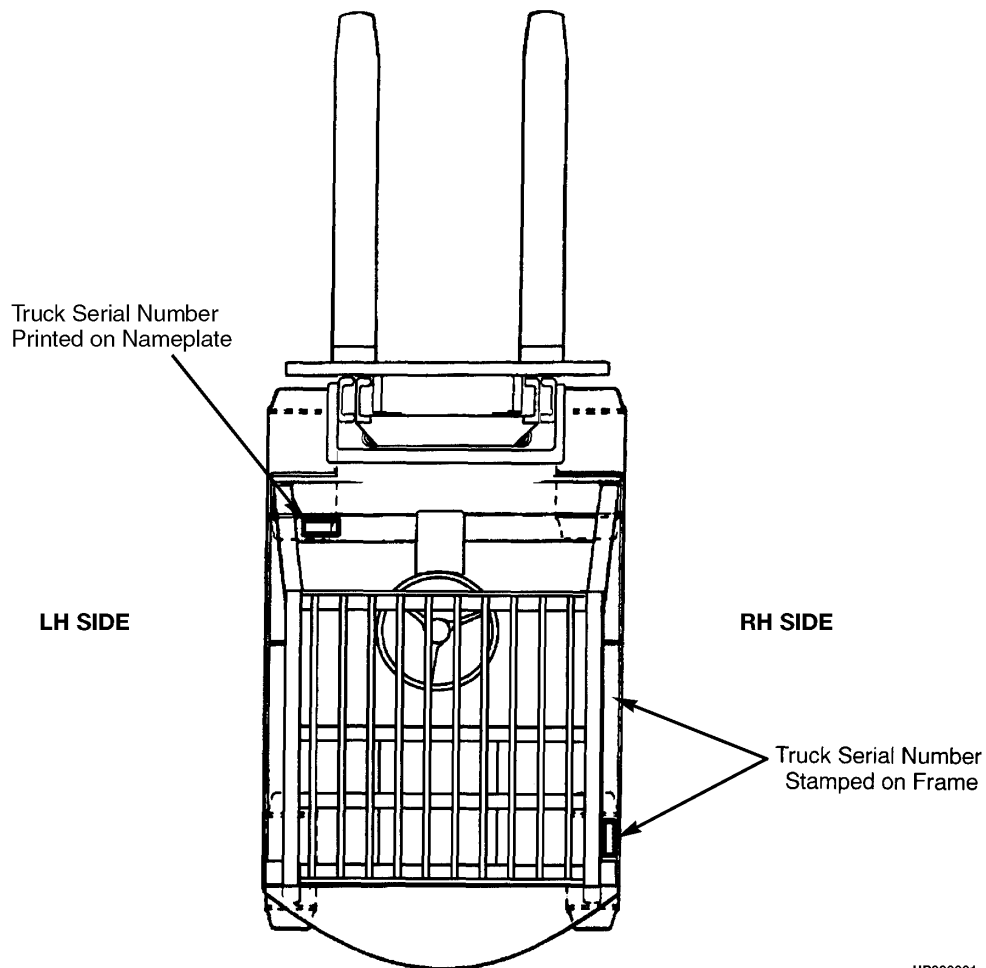

HP990001

Parts referred to in this book as right or left hand parts are in accordance with the illustration above.