

PARTS MANUAL

**H300HD2, H330HD2, H360HD2,
H360HD2-EC
(J019)**

CUSTOMER EDITION

HYSTER

SECTIONS

1	FRAME
2	ENGINES
3	FUEL SYSTEM
4	ELECTRICAL SYSTEM
5	TRANSMISSION
6	DRIVE AXLE
7	STEERING SYSTEM
8	BRAKE SYSTEM
9	HYDRAULIC SYSTEM
10	MAST-TWO STAGE LIMITED FREE-LIFT
11	MAST-THREE STAGE FULL FREE-LIFT
12	ATTACHMENTS
13	OPTIONS
14	FIELD CONVERSION KITS
15	NUMERICAL INDEX

This Parts Manual is divided into 15 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
AIR CLEANER ASSEMBLY	3-6
AIR COMPRESSOR MOUNTING	
TIER III ENGINE	2-17
AIR CONDITIONER	
CLIMATE CONTROL CAB	1-102
AIR CONDITIONER ASSEMBLY	
CLOSED CAB WITH AIRCO (→ 12/2012)	1-92
CLOSED CAB WITH AIRCO (12/2012 →)	1-94
AIR CONDITIONER FILTER AND COVER ASSEMBLY	
CLOSED CAB	1-87
AIR CONDITIONER SYSTEM	
CLIMATE CONTROL CAB	1-100
CLOSED CAB WITH AIRCO	1-88
AIR CONDITIONER SYSTEM ASSEMBLY	
WITH TWO-FAN CONDENSER SYSTEM - MCC	1-124
AIR CONDITIONING HOSES AND COMPRESSOR	
TIER III ENGINE	1-50
TIER IV INTERIM ENGINE	1-52
TIER IV INTERIM ENGINE - ALTERNATE CONFIGURATION	1-54
AIR DUCT	
CLOSED CAB WITH AIRCO OR CLIMATE CONTROL	13-18
AIR DUCT ASSEMBLY	
AIR CONDITIONING - CLOSED CAB WITH AIRCO	1-90
HEATER - CLOSED CAB WITHOUT AIRCO	1-82
AIR HEATER STARTING AID	
TIER III ENGINE	2-18
AIR INTAKE CONNECTION	
TIER III ENGINE	3-20
TIER IV INTERIM ENGINE	3-22
AIR INTAKE MANIFOLD	
TIER III ENGINE	3-24
TIER IV INTERIM ENGINE	3-25
AIR INTAKE SYSTEM	
TIER III ENGINE	3-2
TIER IV INTERIM ENGINE	3-4
AIR TRANSFER CONNECTION	
TIER III AND TIER IV INTERIM ENGINES	2-19
ALTERNATOR AND MOUNTING	
TIER III ENGINE	4-170
TIER IV INTERIM ENGINE	4-175
ARMREST ASSEMBLY	1-42
AXLE HOUSING AND ATTACHING PARTS	6-2
B	
BACK-UP ALARM	13-4
BATTERY CABLES	
TIER III ENGINE	4-8
TIER IV INTERIM ENGINE	4-9

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
BELT TENSIONER	
TIER III AND TIER IV INTERIM ENGINES	2-20
BRAKE ACCUMULATOR AND ATTACHING PARTS	8-12
BRAKE ASSEMBLY	6-12
BRAKE MANIFOLD AND ATTACHING BRAKE HOSES	8-16
BRAKE PEDAL AND LINKAGE	8-2
BRAKE PEDAL ASSEMBLY	8-4
BRAKE VALVE AND ATTACHING PARTS	8-6
ALTERNATE CONFIGURATION	8-8
C	
CAB	
CLOSED - PAGE 1 OF 2	1-60
CLOSED - PAGE 2 OF 2	1-62
OPEN - PAGE 1 OF 2	1-56
OPEN - PAGE 2 OF 2	1-58
CAB AND TILT CYLINDER MOUNTING	1-104
CAB ATTACHING PARTS	
OPEN AND CLOSED CAB	1-64
CAB DOOR	
LEFT HAND - CLOSED CAB	1-70
RIGHT HAND - CLOSED CAB	1-68
CAB HEATER PLUMBING	
TIER III ENGINE	2-21
TIER IV INTERIM ENGINE	2-22
CAB MAIN DOOR WINDOW	
RIGHT AND LEFT HAND	1-74
CAB RECIRCULATING FAN	
CLOSED CAB	13-23
CAB SUNSHADE - REAR	
CLOSED CAB WITH AIRCO - OPTIONAL FOR CLOSED CAB WITHOUT AIRCO	13-26
CAB SUNSHADE - TOP	
CLOSED CAB WITH AIRCO - OPTIONAL FOR CLOSED CAB WITHOUT AIRCO	13-24
CAB TILT CYLINDER	1-108
CAB TILT PUMP	
ELECTRIC	1-112
CAB TILT PUMP ASSEMBLY	1-110
CAB WINDOWS INSTALLATION	
CLOSED CAB	1-72
CARRIAGE	
THREE STAGE-ISS - WITHOUT FORK POSITIONER	12-48
THREE STAGE-ISS - WITH INDIVIDUAL FORK POSITIONER	12-52
THREE STAGE-ISS - WITH SIMULTANEOUS FORK POSITIONER	12-56
THREE STAGE-STANDARD	12-62
TWO STAGE- DUAL FUNCTION - WITH FORK POSITIONER	12-32
TWO STAGE- ISS - WITHOUT FORK POSITIONER, 3-FUNCTION	12-16
TWO STAGE- ISS - WITHOUT FORK POSITIONER, 4, 5, 6-FUNCTION	12-18
TWO STAGE- ISS - WITH INDIVIDUAL FORK POSITIONER, 4, 5, 6-FUNCTION	12-20
TWO STAGE- ISS - WITH SIMULTANEOUS FORK POSITIONER, 4, 5, 6-FUNCTION	12-24

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
TWO STAGE-STANDARD - WITHOUT FORK POSITIONER, 3-FUNCTION	12-4
TWO STAGE-STANDARD - WITHOUT FORK POSITIONER, 4, 5, 6-FUNCTION	12-6
TWO STAGE-STANDARD - WITH INDIVIDUAL FORK POSITIONER, 4, 5, 6-FUNCTION	12-8
TWO STAGE-STANDARD - WITH SIMULTANEOUS FORK POSITIONER, 4, 5, 6-FUNCTION	12-10
CARRIAGE ASSEMBLY	
TWO STAGE- ISS (→ S/N J019E02119M)	12-28
TWO STAGE- ISS (S/N J019E02120M →)	12-30
TWO STAGE-STANDARD (→ S/N J019E02119M)	12-12
TWO STAGE-STANDARD (S/N J019E02120M →)	12-14
CATALYTIC CONVERTER	
TIER IV INTERIM ENGINE	2-23
CLIMATE CONTROL SYSTEM	1-130
COMPRESSOR AIR INLET	
TIER IV INTERIM ENGINE	2-24
COMPRESSOR ASSEMBLY	1-96
CONDENSER	
CLOSED CAB WITH AIRCO	1-98
CONDENSER SYSTEM	
TWO-FAN SYSTEM - MCC	1-126
CONTROL PANEL ASSEMBLY	
HEATER	4-167
HEATER AND AIR CONDITIONER (→ 12/2012)	4-168
HEATER AND AIR CONDITIONER (12/2012 →)	4-169
CONTROL VALVE	
PAGE 1 OF 4	5-30
PAGE 2 OF 4	5-31
PAGE 3 OF 4	5-32
PAGE 4 OF 4	5-34
CONVERTER	5-6
COOLANT HEATER STARTING AID	
TIER III AND TIER IV INTERIM ENGINE	2-25
COOLER AND ATTACHING BRAKE HOSES	8-9
COOLING	
TIER III ENGINE	2-4
TIER IV INTERIM ENGINE	2-6
COUNTERWEIGHT WITH LIFTING EYES	1-8
COUNTERWEIGHT WITHOUT LIFTING EYES	1-10
CRANKCASE BREATHER	
TIER III ENGINE	2-26
TIER IV INTERIM ENGINE	2-28
CRANKCASE BREATHER PLUMBING	
TIER IV INTERIM ENGINE	2-30
D	
DASH ASSEMBLY	
CLOSED CAB	1-80
DC-DC CONVERTER AND ATTACHING PARTS	13-9
DIFFERENTIAL AND CARRIER	6-4

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
DIPSTICK AND TUBE	
TIER IV INTERIM ENGINE	2-31
DIRECTIONAL CONTROL VALVE ASSEMBLY	
FOUR-SECTION	12-37
THREE-SECTION	12-36
TWO-SECTION	12-35
DRAIN PLUG	
FUEL PUMP - TIER IV INTERIM ENGINE	3-27
DRIVE AXLE AND ATTACHING BRAKE HOSES	8-13
DRIVE TIRES AND WHEELS	
MICHELIN XZM	6-14
TRELLEBORG - SOLID TIRE	6-16
TRELLEBORG T-900	6-15
TRELLEBORG TR900	6-17
DRIVE TRAIN	5-7
E	
ELECTRIC HORN	4-166
ELECTRICAL SYSTEM	
TIER III ENGINE	4-4
TIER IV INTERIM ENGINE	4-6
EMPTY CONTAINER HANDLER	
BEARING BLOCKS AND SHIMS - CARRIAGE	13-30
EMPTY SEAT ENGINE SHUTDOWN	13-6
EMPTY SEAT ENGINE SHUTDOWN OVERRIDE	14-2
ENGINE ATTACHING PARTS	
TIER IV INTERIM ENGINE	2-14
ENGINE BLOCK HEATER	
120 VOLT	13-28
240 VOLT	13-29
ENGINE CONNECTION	5-10
ENGINE CONTROL MODULE	
TIER III ENGINE	4-172
TIER IV INTERIM ENGINE	4-182
ENGINE COOLANT VENT	
TIER III ENGINE	2-32
TIER IV INTERIM ENGINE	2-33
ENGINE HEATER ASSEMBLY	
120 VOLT - QSB 6.7, TIER III ENGINE	13-31
240 VOLT - QSB 6.7, TIER III ENGINE	13-32
ENGINE MOUNT	
TIER III ENGINE	2-15
ENGINE MOUNTS	
TIER IV INTERIM ENGINE	2-16
ENGINE OIL COOLER	
TIER III AND TIER IV INTERIM ENGINES	2-34
ETR CONTROL MODULE WIRE HARNESS	
TIER IV INTERIM ENGINE	4-184

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
ETR MODULE WIRING	
TIER III ENGINE	4-174
EXHAUST MANIFOLD	
TIER III ENGINE	2-35
EXHAUST OUTLET CONNECTION	
TIER III ENGINE	2-36
EXHAUST OUTLET ELBOW	
TIER IV INTERIM ENGINE	2-37
EXHAUST RECIRCULATION	
TIER IV INTERIM ENGINE	2-38
EXHAUST RECIRCULATION AIR PLUMBING	
TIER IV INTERIM ENGINE	2-39
EXHAUST RECIRCULATION WATER PLUMBING	
TIER IV INTERIM ENGINE	2-40
EXHAUST SYSTEM	
TIER III ENGINE	2-8
TIER IV INTERIM ENGINE	2-9
EXTERIOR MIRRORS	13-5
F	
FAN DRIVE	
TIER IV INTERIM ENGINE	2-41
FAN DRIVE AND MOUNTING	
TIER III ENGINE	2-42
FAN SPACER	
TIER III ENGINE	2-43
FIRST SPEED CLUTCH ASSEMBLY	5-18
FLOORMATS	
OPEN AND CLOSED CAB	1-66
FLOORPLATES	1-4
FLOW DIVIDER MANIFOLD	12-66
FLYWHEEL AND MOUNTING	
TIER III AND TIER IV INTERIM ENGINE	2-44
FLYWHEEL HOUSING	
TIER III AND TIER IV INTERIM ENGINE	2-46
FORK POSITIONING CYLINDER	12-38
FORKS	12-2
FORWARD AND REVERSE LEVER TO MONOTROL KIT	14-2
FORWARD CLUTCH ASSEMBLY	5-24
FREE-LIFT CYLINDER	11-12
FRONT GEAR COVER	
TIER III ENGINE	2-48
TIER IV INTERIM ENGINE	2-49
FUEL DRAIN PLUMBING	
TIER IV INTERIM ENGINE	3-26
FUEL FILTER	
TIER III ENGINE	3-28
TIER IV INTERIM ENGINE (→ S/N J019E02031L)	3-30
TIER IV INTERIM ENGINE (S/N J019E02032L →)	3-32

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
FUEL FILTER MOUNTING	
TIER IV INTERIM ENGINE	3-34
FUEL FILTER PLUMBING	
TIER III ENGINE	3-35
TIER IV INTERIM ENGINE	3-36
FUEL FILTER WITH WATER SEPARATOR	
TIER IV INTERIM ENGINE	3-33
FUEL INJECTION PUMP	
TIER III ENGINE	3-38
FUEL INJECTOR PLUMBING	
TIER III ENGINE	3-40
TIER IV INTERIM ENGINE	3-42
FUEL INJECTORS	3-50
FUEL INLET FITTING	
TIER III ENGINE	3-44
TIER IV INTERIM ENGINE	3-45
FUEL LINES	
TIER III ENGINE	3-16
TIER IV INTERIM ENGINE	3-18
FUEL PLUMBING	
TIER III ENGINE	3-46
FUEL PUMP	
TIER IV INTERIM ENGINE	3-48
FUEL SUPPLY PLUMBING	
TIER IV INTERIM ENGINE	3-49
FUEL TANK	3-14
G	
GEAR DRIVEN PUMP DRIVE	
TIER IV INTERIM ENGINE	2-50
H	
HAND PUMP	1-114
HEADER HOSE	
THREE STAGE FULL FREE-LIFT	12-46
TWO STAGE - LIMITED FREE-LIFT	12-42
HEATED TOP WINDOW	
CLOSED CAB	13-14
HEATER AND AIR DUCT	
CLOSED CAB WITHOUT AIRCO	1-81
HEATER ASSEMBLY	
CLOSED CAB WITHOUT AIRCO	1-84
HEATER HOSES	
TIER III ENGINE	1-46
TIER IV INTERIM ENGINE	1-48
HEATER SYSTEM	
CLOSED CAB WITHOUT AIRCO	1-86
HOODS AND COVERS	1-6
HUB AND SHAFT ASSEMBLY	6-8

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
HYDRAULIC CONTROL VALVE	
AUXILIARY SECTION (S/N J019E01887L →)	9-70
AUXILIARY SECTION ASSEMBLY (→ S/N J019E01886L)	9-36
HIC MID-INLET BLOCK ASSEMBLY (→ S/N J019E01886L)	9-26
HIC, BRAKE/ACCUMULATOR (S/N J019E01887L →)	9-71
HIC, BRAKE/ACCUMULATOR BLOCK ASSEMBLY (→ S/N J019E01886L)	9-28
HIC, MID-INLET (S/N J019E01887L →)	9-74
LIFT SECTION ASSEMBLY, LH (→ S/N J019E01886L)	9-32
LIFT SECTION ASSEMBLY, RH (→ S/N J019E01886L)	9-30
LIFT SECTION, LH (S/N J019E01887L →)	9-66
LIFT SECTION, RH (S/N J019E01887L →)	9-68
TILT SECTION (S/N J019E01887L →)	9-72
TILT SECTION ASSEMBLY (→ S/N J019E01886L)	9-34
HYDRAULIC CONTROL VALVE AND ATTACHING BRAKE HOSES	8-15
HYDRAULIC CONTROL VALVE AND ATTACHING PARTS	
PAGE 1 OF 2	9-20
PAGE 2 OF 2	9-22
HYDRAULIC CONTROL VALVE ASSEMBLY	
→ S/N J019E01886L	9-24
S/N J019E01887L →	9-64
HYDRAULIC CONTROLS	
JOYSTICK - FORK LIFT TRUCK	9-50
JOYSTICK - CONTAINER HANDLER	9-52
HYDRAULIC FILTER AND GEAR PUMP AND ATTACHING BRAKE HOSES	8-10
HYDRAULIC LEVERS	
FOUR-LEVER CONTROL PANEL - WITH CLAMPING	9-42
FOUR-LEVER CONTROL PANEL - WITHOUT CLAMPING	9-43
THREE-LEVER CONTROL PANEL	9-40
TWO-LEVER CONTROL PANEL	9-38
HYDRAULIC PUMP AND ATTACHING PARTS	
90CC, QSB 6.7 - PAGE 1 OF 2	9-56
90CC, QSB 6.7 - PAGE 2 OF 2	9-58
HYDRAULIC PUMPS AND ATTACHING PARTS	
120CC, QSB 6.7 - PAGE 1 OF 2	9-60
120CC, QSB 6.7 - PAGE 2 OF 2	9-62
HYDRAULIC SUPPLY AND RETURN	
CONTAINER HANDLER	9-14
FOUR FUNCTION CONTROL VALVE - WITHOUT LIFT ACCUMULATOR	9-2
FOUR FUNCTION CONTROL VALVE - WITH LIFT ACCUMULATOR	9-4
FOUR, FIVE, AND SIX FUNCTION - TWO STAGE	9-6
FOUR, FIVE, AND SIX FUNCTION - THREE STAGE	9-10
THREE FUNCTION, DUAL-FUNCTION SIDE-SHIFT FORK POSITIONER - TWO STAGE	9-8
THREE FUNCTION, DUAL-FUNCTION SIDE-SHIFT FORK POSITIONER - THREE STAGE	9-12
HYDRAULIC TANK AND ATTACHING BRAKE HOSES	8-11
HYDRAULIC TANK AND ATTACHING PARTS	9-54
I	
INDICATOR DISPLAY AND CONTROLS	4-12

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
INNER MAST	
→ S/N J019E02119M	10-8
S/N J019E02120M →	10-10
A617	10-30
INSULATION MATS AND AIR DUCT	
CLOSED CAB WITH AIRCO OR CLIMATE CONTROL	13-16
J	
JOYSTICK ASSEMBLY	
CONTAINER HANDLER	9-48
FORKLIFT TRUCK	9-46
L	
LABELS	
HYDRAULIC CONTROLS	1-116
MAIN - PAGE 1 OF 3	1-118
MAIN - PAGE 2 OF 3	1-120
MAIN - PAGE 3 OF 3	1-122
LIFT	
→ S/N J019E02119M	10-12
S/N J019E02120M →	10-16
A617	10-32
LIFT CYLINDER	
EMPTY CONTAINER HANDLER (→ S/N J019E02119M)	10-20
EMPTY CONTAINER HANDLER (S/N J019E02120M →)	10-22
NON-EMPTY CONTAINER HANDLER (→ S/N J019E02119M)	10-24
NON-EMPTY CONTAINER HANDLER (S/N J019E02120M →)	10-26
LIFT CYLINDER ASSEMBLY	
A617	10-36
LIFTING BRACKETS AND MOUNTING	
TIER III ENGINE	2-52
LIFTING EYES	
TIER IV INTERIM ENGINE	2-54
LIGHT BAR AND MOUNT	
TWISTLOCK MODULE - CONTAINER HANDLER	4-176
TWISTLOCK MODULE - ALTERNATE CONFIGURATION	4-178
LIGHTS	
DIRECTIONAL AND MARKER	4-185
FRONT FENDER	4-186
MAST WORK	4-188
REAR WORK	4-187
STROBE, WITH CONDENSER	4-190
STROBE, WITHOUT CONDENSER	4-191
TAIL	4-192
WORK - HALOGEN	4-193
WORK - HID	4-194
LOAD BACKREST	1-12
LOCKOUT LEVER	4-180

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
M	
MAIN LIFT CYLINDER	11-11
MAP READING LIGHT	
CLOSED CAB	13-7
MAST ASSEMBLY	
PAGE 1 OF 3	11-4
PAGE 2 OF 3	11-6
PAGE 3 OF 3	11-8
MAST INSTALLATION	10-2
MONOTROL PEDAL ASSEMBLY	3-10
MONOTROL TO FORWARD AND REVERSE LEVER KIT	14-2
O	
OIL DIPSTICK	5-17
OIL FILTER	
TIER III AND TIER IV INTERIM ENGINE	2-55
OIL LEVEL GAUGE	
TIER III ENGINE	2-56
OIL PAN	
TIER III ENGINE	2-58
TIER IV INTERIM ENGINE (→ S/N J019E02031L)	2-60
TIER IV INTERIM ENGINE (S/N J019E02032L →)	2-62
OIL PUMP	
TIER IV INTERIM ENGINE	2-64
OIL PUMP AND MOUNTING	
TIER III ENGINE	2-63
OUTER MAST	
→ S/N J019E02119M	10-4
S/N J019E02120M →	10-6
A617	10-28
OUTPUT FLANGE	5-28
P	
PARK BRAKE	6-10
PARK BRAKE KIT	14-2
PIVOT ARM ASSEMBLY	1-44
PLUG, COOLANT HEATER STARTING AID	
TIER IV INTERIM ENGINE	2-65
POWER TAKE-OFF	5-9
PRESSURE FILTER	5-15
PRESSURE OIL PUMP	5-8
PRESSURE REGULATOR	5-35
R	
RADIATOR ASSEMBLY	
TIER III ENGINE	2-10
TIER IV INTERIM ENGINE	2-12
RADIO CONSOLE AND ATTACHING PARTS	
CLOSED CAB ONLY	1-128

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
RAIN TOP	
OPEN CAB	13-20
REAR GEAR HOUSING	
TIER III ENGINE	2-66
TIER IV INTERIM ENGINE	2-67
REAR GEAR TRAIN MOUNTING	
TIER IV INTERIM ENGINE	2-68
REAR LOCKING CONSOLE	
CLOSED CAB	13-21
RELAYS AND FUSES	
TIER III ENGINE (→ S/N J019E01886L)	4-40
TIER III ENGINE (S/N J019E01887L →)	4-52
TIER IV INTERIM ENGINE (→ S/N J019E01886L)	4-72
TIER IV INTERIM ENGINE (S/N J019E01887L →)	4-84
REMOTE FUEL FILTER	
TIER III ENGINE	3-29
REVERSE CLUTCH ASSEMBLY	5-26
S	
SEAT ASSEMBLY	
AIR SUSPENSION	1-28
DELUXE HEATED	1-40
DELUXE SUSPENSION	1-36
MECHANICAL AND AIR SUSPENSION	1-25
MECHANICAL SUSPENSION	1-32
SUSPENSION - WITH FABRIC COVER (→ 3/2010)	1-14
SUSPENSION - WITH FABRIC COVER (3/2010 →)	1-18
SUSPENSION - WITH VINYL COVER	1-22
SECOND 12V SOCKET OPTION	13-10
SECOND SPEED CLUTCH ASSEMBLY	5-20
SIDE-SHIFT CYLINDER	
DUAL FUNCTION WITH FORK POSITIONER	12-40
THREE STAGE FULL FREE-LIFT	12-60
TWO STAGE LIMITED FREE-LIFT	12-68
STARTER MOTOR AND MOUNTING	
TIER III AND TIER IV INTERIM ENGINE	2-69
STEER AXLE	7-2
STEER COLUMN ASSEMBLY	7-10
ALTERNATE CONFIGURATION	7-12
STEER CYLINDER	
→ PENDING PER ECN 68580-79	7-6
PENDING PER ECN 68580-79 →	7-8
STEER TIRES AND WHEELS	
MICHELIN XZM	7-18
TRELLEBORG - SOLID TIRE	7-20
TRELLEBORG T-900	7-19
TRELLEBORG TR900	7-21
STEERING COLUMN	7-14
STEERING CONTROL UNIT ASSEMBLY	7-22

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
STEERING HOSES	7-16
STUD GROUNDING	
TIER IV INTERIM ENGINE	2-70
SUSPENSION KIT ASSEMBLY	1-38
T	
TELEMETRY KITS	14-2
THERMOSTAT	
TIER III ENGINE	2-71
TIER IV INTERIM ENGINE	2-72
THIRD SPEED CLUTCH ASSEMBLY	5-22
THREE-POINT SEAT BELT	13-22
THROTTLE AND INCHING SENSORS	3-12
THROTTLE PEDAL LINKAGE	3-8
TILT CYLINDER ASSEMBLY	9-18
TILT CYLINDER ATTACHING PARTS	9-16
TILT PLATFORM ASSEMBLY	1-106
TORQUE CONVERTER COOLER PLUGS	
TIER III ENGINE	2-73
TRAINING SEAT	
CLOSED CAB	13-8
TRANSMISSION CONTROL	4-10
TRANSMISSION HOUSING	
PAGE 1 OF 2	5-12
PAGE 2 OF 2	5-14
TRANSMISSION MOUNTING AND HOSES	
→ S/N J019E02161M	5-2
S/N J019E02161M →	5-4
TRANSMISSION SENSORS	5-16
TURBOCHARGER	
TIER III ENGINE	2-74
TIER IV INTERIM ENGINE	2-75
TURBOCHARGER PLUMBING	
TIER III ENGINE	2-76
TIER IV INTERIM ENGINE	2-78
U	
UNIVERSAL SHAFT	5-29
V	
VALVE COVER	
TIER III ENGINE	2-81
TIER IV INTERIM ENGINE	2-82
V-BELT	
TIER IV INTERIM ENGINE	2-80
VIBRATION DAMPER	
TIER III ENGINE	2-84

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
W	
WATER INLET	
TIER III ENGINE	2-85
WATER INTAKE CONNECTION	
TIER IV INTERIM ENGINE	2-86
WATER OUTLET CONNECTION	
TIER III ENGINE	2-87
TIER IV INTERIM ENGINE	2-88
WATER PUMP	
TIER III ENGINE	2-89
TIER IV INTERIM ENGINE	2-90
WATER PUMP DRIVE	
TIER III ENGINE	2-91
WATER PUMP DRIVE BELT	
TIER IV INTERIM ENGINE	2-92
WINDOW WIPER SYSTEM	
REAR AND ROOF WIPER KITS - AND FRONT WIPER OPTIONS	1-78
WASHER BOTTLE KIT	1-76
WIRE HARNESS	
ARMREST	4-14
BACK-UP ALARM	4-17
BRAKE TEMPERATURE	4-18
CAB LIGHTS	4-20
CAB REAR LIGHTS	4-22
CAB SIDE CONSOLE, TIER III ENGINE - PAGE 1 OF 5 (→ S/N J019E01886L)	4-24
CAB SIDE CONSOLE, TIER III ENGINE - PAGE 2 OF 5 (→ S/N J019E01886L)	4-26
CAB SIDE CONSOLE, TIER III ENGINE - PAGE 3 OF 5 (→ S/N J019E01886L)	4-30
CAB SIDE CONSOLE, TIER III ENGINE - PAGE 4 OF 5 (→ S/N J019E01886L)	4-34
CAB SIDE CONSOLE, TIER III ENGINE - PAGE 5 OF 5 (→ S/N J019E01886L)	4-36
CAB SIDE CONSOLE, TIER III ENGINE - PAGE 1 OF 2 (S/N J019E01887L →)	4-44
CAB SIDE CONSOLE, TIER III ENGINE - PAGE 2 OF 2 (S/N J019E01887L →)	4-48
CAB SIDE CONSOLE, TIER IV INTERIM ENGINE - PAGE 1 OF 5 (→ S/N J019E01886L)	4-56
CAB SIDE CONSOLE, TIER IV INTERIM ENGINE - PAGE 2 OF 5 (→ S/N J019E01886L)	4-58
CAB SIDE CONSOLE, TIER IV INTERIM ENGINE - PAGE 3 OF 5 (→ S/N J019E01886L)	4-62
CAB SIDE CONSOLE, TIER IV INTERIM ENGINE - PAGE 4 OF 5 (→ S/N J019E01886L)	4-66
CAB SIDE CONSOLE, TIER IV INTERIM ENGINE - PAGE 5 OF 5 (→ S/N J019E01886L)	4-68
CAB SIDE CONSOLE, TIER IV INTERIM ENGINE - PAGE 1 OF 2 (S/N J019E01887L →)	4-76
CAB SIDE CONSOLE, TIER IV INTERIM ENGINE - PAGE 2 OF 2 (S/N J019E01887L →)	4-80
CAB TILT	4-88
CAB UNDERFLOOR	4-89
CLOSED CAB	4-144
CLOSED CAB - ALTERNATE CONFIGURATION	4-148
FRONT END	4-151
FRONT LIGHTS	4-153
MAST LIGHT EXTENSION - 5310MM LIFT HEIGHT AND HIGHER	4-154
MAST WORK LIGHT	4-155
OPEN CAB	4-156
REAR WIPER EXTENSION - CLOSED CAB	4-157
SIDE AND INDICATOR LIGHTS	4-158

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
STEER COLUMN	4-159
TAIL LIGHTS	4-160
TWO STAGE LIMITED FREE-LIFT	4-161
WASH PUMPS - CLOSED CAB	4-162
WIRE HARNESS (CHASSIS)	
TIER III ENGINE - PAGE 1 OF 3 (→ S/N J019E01886L)	4-92
TIER III ENGINE - PAGE 2 OF 3 (→ S/N J019E01886L)	4-96
TIER III ENGINE - PAGE 3 OF 3 (→ S/N J019E01886L)	4-100
TIER III ENGINE - PAGE 1 OF 3 (S/N J019E01887L →)	4-104
TIER III ENGINE - PAGE 2 OF 3 (S/N J019E01887L →)	4-108
TIER III ENGINE - PAGE 3 OF 3 (S/N J019E01887L →)	4-112
TIER IV INTERIM ENGINE - PAGE 1 OF 4 (→ S/N J019E01886L)	4-116
TIER IV INTERIM ENGINE - PAGE 2 OF 4 (→ S/N J019E01886L)	4-120
TIER IV INTERIM ENGINE - PAGE 3 OF 4 (→ S/N J019E01886L)	4-124
TIER IV INTERIM ENGINE - PAGE 4 OF 4 (→ S/N J019E01886L)	4-128
TIER IV INTERIM ENGINE - PAGE 1 OF 3 (S/N J019E01887L →)	4-132
TIER IV INTERIM ENGINE - PAGE 2 OF 3 (S/N J019E01887L →)	4-136
TIER IV INTERIM ENGINE - PAGE 3 OF 3 (S/N J019E01887L →)	4-140
WIRE HARNESS AND SWITCH ASSEMBLY	
MONOTROL PEDAL	4-164
WIRE MESH ROOF PROTECTION	13-12

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPA	US Environmental Protection Agency	UL Type GS	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the next page.

HYSTER UNIT CODE D001 NORTH AMERICA 06/2001

TABLE OF CONTENTS

DESCRIPTION	PAGE
AIR INTAKE AND FILTER DIESEL (→ D/B 11/98)	3-22
AIR INTAKE AND FILTER DIESEL (D/B 11/96 →)	
AIR INTAKE AND FILTER GASOLINE AND LPG	
ALTERNATOR GASOLINE, LPG, AND DIESEL	
ALTERNATOR TYPES GS, LPS, AND DS	
AUXILIARY FUNCTION TUBE TWO AND THREE STAGE FULL P	

SECTION 13 NUMERICAL INDEX

PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.
142	3-4	19	10-13	25	11-27	29	12-31	12	16719	3-36	5
12445	3-32	19	10-17	6	11-31	25	16751	3-16	16849	3-34	21
	3-34	1	10-27	11	11-32	37	16849	3-36	16849	3-36	20
			11-11	6	8-4	29	16863	3-28	16863	3-28	17
			11-11	11	8-4	45	16865	3-6	16865	3-6	18
			12	6	9-7	9	16882	4-27	16882	4-27	41
			12	6	9-7	19		9-7		9-7	30
			3	17	9-11	9		9-11		9-11	27
			9	10	9-11	17		10-10		10-10	36
			23	46	10-9	21		10-13		10-13	32
			27	46	10-9	28		11-7		11-7	24
			26	14	10-13	16		11-9		11-9	17
			28	14	11-7	19					
			50	14							

SECTIONS

- 1
- 2
- 3
- 4
- 5 BRAKE/ACC
- 6
- 7 MAST-TWO STAG
- 8 MAST-THREE ST
- 9 MAST-TWO ST
- 10
- 11

TRANSMISSION HOUSING S/N D001H-2628

KEY:
A: Diesel
B: Gasoline and LPG

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
		Transmission	1	1
		Case	1	1
1	2021670	Bearing Cap	2	2
2	2023418	Washer	4	4
3	296429	Bolt	4	4
4	29394F	Cover	1	1
5	2021390	Coller Pin	2	2
6	1371656	O-Ring	4	4
7	2021329	Plug	1	1
8	2021915	Housing	4	4
9	2021675	Pin	22	22
10	2021336	Bolt	39	39
11	287860	Lockwasher	1	1
12	292682	Hydraulic Pump	1	1
13		Figure 5-3	8	8
14	2021345	Gasket	1	1
15	214364	Bolt	1	1
16	296418	Washer	1	1
17	2021388	Temperature Switch	1	1
18	2021389	Breather	9	9
19	2021383	Dipstick	9	9
20	292515	Bolt	2	2
21	136692	Nut	3	3
22	292527	Bolt	3	2
23	292531	Capscrew	4	4
24	292583	Lockwasher	4	4
25	293637	Bolt	1	1
26	296420	Washer	1	1
	996403	Transmission Kit (Includes Item 7)	1	1
	996405	Transmission Kit (Includes Item 14)	1	1

This Parts Manual is divided into 11 major sections which are listed above. Quick be made by placing the right thumb on the tab of the desired section, bending the pages to the corresponding tab.

© Copy Right Date HYSTER COMPANY See Service Manual for service procedures. 5-15

HP990004