

PARTS MANUAL

**H135FT, H155FT
(K006)**

CUSTOMER EDITION

HYSTER

SECTIONS

1	FRAME
2	ENGINE ASSEMBLY - DIESEL
3	ENGINE ASSEMBLY - GM
4	FUEL SYSTEM - DIESEL
5	FUEL SYSTEM - GAS/LPG
6	ELECTRICAL SYSTEM
7	TRANSMISSION
8	DRIVE AXLE
9	STEERING SYSTEM
10	BRAKE SYSTEM
11	HYDRAULIC SYSTEM
12	MAST-TWO STAGE LIMITED FREE-LIFT
13	MAST-THREE STAGE FULL FREE-LIFT
14	OPTIONS
15	FIELD CONVERSION KITS
16	NUMERICAL INDEX

This Parts Manual is divided into 16 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
ACCUMULATOR	14-12
ADD ON TELEMETRY KITS	15-8
ADD-ON OPTION KITS	15-3
AIR CLEANER FLANGE AND THROTTLE VALVE	2-84
AIR CLEANER INLET PIPE	2-85
AIR FILTER	
GM 3.4L GASOLINE AND LPG	5-8
AIR INTAKE	
GM 4.3L GASOLINE AND LPG	5-6
KUBOTA DIESEL	4-2
ALTERNATOR	
GM 4.3L GASOLINE AND LPG	3-18
ALTERNATOR AND PULLEY	
KUBOTA DIESEL - 3.6L, 3.8L	2-56
KUBOTA DIESEL - SEALED ALTERNATOR	2-58
ALTERNATOR ELECTRICAL	
KUBOTA DIESEL - STANDARD ALTERNATOR	6-20
KUBOTA DIESEL - SEALED ALTERNATOR	6-22
ARMREST SLIDER ASSEMBLY	1-66
ATTACHMENT CARRIAGE	
VALVE AND HOSES	14-30
WITH FORK POSITIONER AND BACKREST	14-26
ATTACHMENT MOUNTING KITS	15-2
AUXILIARY FUNCTION HOSES	12-28
AUXILIARY ONE AND TWO SECTIONS	
MANUAL HYDRAULIC CONTROL VALVE - THREE AND FOUR FUNCTION	11-40
AUXILIARY ONE SECTION	
ELECTRONIC CONTROL VALVE - THREE AND FOUR FUNCTION	11-54
AUXILIARY TUBE EXTENSION KITS	15-5
AUXILIARY TUBE EXTENSIONS	
THREE STAGE FULL FREE-LIFT - WITHOUT QUICK DISCONNECT FITTINGS	13-34
THREE STAGE FULL FREE-LIFT - MANUAL HYDRAULICS WITH QUICK DISCONNECT FITTINGS	13-36
THREE STAGE FULL FREE-LIFT - E-HYDRAULICS WITH QUICK DISCONNECT FITTINGS	13-38
THREE STAGE FULL FREE LIFT WITH SIDE SHIFT FORK POSITIONER CARRIAGE - MANUAL HYDRAULICS WITH QUICK DISCONNECT FITTINGS	13-40
TWO STAGE LIMITED FREE-LIFT - WITHOUT QUICK DISCONNECT FITTINGS	12-22
TWO STAGE LIMITED FREE-LIFT - MANUAL HYDRAULICS WITH QUICK DISCONNECT FITTINGS	12-24
TWO STAGE LIMITED FREE-LIFT - E-HYDRAULICS WITH QUICK DISCONNECT FITTINGS	12-26
AUXILIARY TWO SECTION	
ELECTRONIC CONTROL VALVE - FOUR FUNCTION	11-56
B	
BACKREST	
WITH FORK POSITIONER	14-36
BACK-UP ALARM	14-8

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
BATTERY AND CONTROL CABLE DISCONNECT SWITCH	
KUBOTA DIESEL	6-34
BATTERY CABLES	
GM 4.3L GASOLINE AND LPG	6-30
KUBOTA DIESEL	6-32
BRAKE AND INCHING PEDAL CONVERSION	15-2
BRAKE COOLING SYSTEM	
SINGLE AND DUAL PEDAL	10-10
BRAKE LINKAGE	
DUAL PEDAL - WET BRAKE	10-6
SINGLE PEDAL - WET BRAKE	10-2
BRAKE MASTER CYLINDER ASSEMBLY	
→ 4/2014	10-13
4/2014 →	10-14
BREATHER AND SEPARATOR PIPES	
KUBOTA DIESEL	2-83
C	
CAB	
AIR CONDITIONING SYSTEM - SHEET 1 OF 2	1-50
AIR CONDITIONING SYSTEM - SHEET 2 OF 2	1-52
ASSEMBLY - WITHOUT AIR CONDITIONING	1-22
ASSEMBLY - WITH AIR CONDITIONING	1-23
ATTACHING PARTS	1-20
HEATER - WITH AIR CONDITIONING	1-40
HEATER - WITHOUT AIR CONDITIONING	1-44
HEATER AND HOSES - GM 4.3L GASOLINE AND LPG	1-32
HEATER AND HOSES - KUBOTA DIESEL	1-36
HEATER CONTROL - WITH AIR CONDITIONING	1-46
HEATER CONTROL - WITHOUT AIR CONDITIONING	1-47
LEFT HAND DOOR ASSEMBLY	1-28
MAIN ASSEMBLY	1-24
RIGHT HAND DOOR ASSEMBLY	1-26
WINDOW WIPER SYSTEM	1-30
CAMSHAFT AND IDLE GEAR SHAFT	
KUBOTA DIESEL - 3.6L	2-40
KUBOTA DIESEL - 3.8L	2-41
CAMSHAFT AND OIL PAN	
GM 4.3L GASOLINE AND LPG	3-32
CARRIAGE	
THREE STAGE FULL FREE-LIFT - HOOK TYPE	13-26
THREE STAGE FULL FREE-LIFT - PIN TYPE	13-28
TWO STAGE LIMITED FREE-LIFT - HOOK TYPE	12-16
TWO STAGE LIMITED FREE-LIFT - PIN TYPE	12-18
CARRIER ASSEMBLY	14-34
CHARGE PUMP	7-34
CONDENSER ASSEMBLY	1-48
CONTROL VALVE	
THREE SPEED TRANSMISSION	7-30

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
TWO SPEED TRANSMISSION	7-32
CONTROL VALVE LOCKOUT GROUP	
MANUAL CONTROL VALVE	11-30
COOLANT HOSES	
GM 4.3L LPG WITH CAB	5-24
COOLING SYSTEM	
GM 4.3L GASOLINE AND LPG	3-2
KUBOTA DIESEL	2-4
COUNTERWEIGHTS AND REAR FENDERS	1-10
COVER BEARING CASE	
KUBOTA DIESEL - 3.6L, 3.8L	2-22
COWL ELECTRICAL	
ELECTRO-HYDRAULIC	6-6
MANUAL HYDRAULIC	6-4
COWL MOUNT	1-4
CYLINDER BLOCK	
GM 4.3L GASOLINE AND LPG	3-30
KUBOTA DIESEL	2-18
CYLINDER HEAD	
GM 4.3L GASOLINE AND LPG	3-28
KUBOTA DIESEL - 3.6L	2-23
KUBOTA DIESEL - 3.8L	2-24
CYLINDER HEAD COVER	
KUBOTA DIESEL - 3.6L	2-34
KUBOTA DIESEL - 3.8L	2-36
D	
DIESEL PARTICULATE FILTER	
ASSEMBLY - KUBOTA 3.8L DIESEL	2-12
MUFFLER ASSEMBLY - KUBOTA 3.8L DIESEL	2-14
DIFFERENTIAL	8-6
DIPSTICK	
KUBOTA DIESEL - 3.6L, 3.8L	2-20
DIPSTICK AND BREATHER	11-20
DISPLAY	
DIESEL PARTICULATE FILTER	6-35
DISTRIBUTOR AND COIL	
GM 4.3L GASOLINE AND LPG	3-23
DISTRIBUTOR ASSEMBLY	
GM 4.3L GASOLINE AND LPG	6-14
DRIVE AXLE AND ATTACHING PARTS	
WET BRAKE	8-2
DRIVE AXLE HOUSING AND HUB	8-4
DRIVE TIRE AND WHEEL	8-10
DUAL MIRRORS	
WITH CAB	14-10
WITH OVERHEAD GUARD	14-11

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
E	
EGR COOLER	
KUBOTA DIESEL - 3.8L	2-78
EGR VALVE	
KUBOTA DIESEL - 3.8L	2-77
E-HYDRAULIC CONTROL CONVERSION KITS	15-4
ELECTRICAL SYSTEM	
RIGHT HAND CHASSIS	6-28
ELECTRO HYDRAULIC POPPET VALVE	
ELECTRONIC CONTROL VALVE - THREE AND FOUR FUNCTION	11-52
ENGINE CONTROL MODULE AND SENSORS	
GM 4.3L GASOLINE	6-24
GM 4.3L LPG	6-26
ENGINE ELECTRICAL SYSTEM	
GM 4.3L GASOLINE AND LPG	6-8
KUBOTA 3.6L DIESEL	6-16
KUBOTA 3.8L DIESEL	6-18
ENGINE MOUNTING	
GM 4.3L, GASOLINE AND LPG	3-8
ENGINE MOUNTING AND TORQUE CONVERTER	
KUBOTA DIESEL	2-16
E-THROTTLE LINKAGE	
KUBOTA 3.6L DIESEL	4-14
EXHAUST MANIFOLD	
KUBOTA DIESEL - 3.6L	2-69
KUBOTA DIESEL - 3.8L	2-70
EXHAUST MANIFOLDS	
GM 4.3L GASOLINE AND LPG	3-20
EXHAUST SYSTEM	
GM 4.3L GASOLINE AND LPG	3-6
KUBOTA 3.6L DIESEL	2-8
KUBOTA 3.8L DIESEL	2-10
F	
FAN DRIVE AND ALTERNATOR MOUNTING	
GM 4.3L GASOLINE AND LPG	3-14
FAN MOUNT ASSEMBLY	
GM 4.3L GASOLINE AND LPG	3-16
FAN PULLY	
KUBOTA DIESEL - 3.6L, 3.8L	2-66
FIRE EXTINGUISHER	
WITH CAB	14-4
WITH OVERHEAD GUARD	14-6
FLOORPLATES, STEPS AND COVERS	1-12
FLYWHEEL AND HOUSING	
GM 4.3L GASOLINE AND LPG	3-12
KUBOTA DIESEL - 3.6L, 3.8L	2-42
FORK POSITIONER ASSEMBLY	14-32

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
FORKS	
PIN TYPE	1-82
STANDARD TAPER - CLASS IV	1-80
FORWARD CLUTCH HIGH AND OUTPUT SHAFT	
THREE SPEED TRANSMISSION - FWD2	7-16
FORWARD CLUTCH LOW	
TWO SPEED TRANSMISSION	7-24
FORWARD CLUTCH LOW AND SECOND SHAFT	
THREE SPEED TRANSMISSION - FWD1, RANGE2	7-14
FREE-LIFT	
THREE STAGE FULL FREE-LIFT (→ 3/2013)	13-20
THREE STAGE FULL FREE-LIFT (4/2013 →)	13-22
FREE-LIFT CYLINDER	
THREE STAGE FULL FREE-LIFT	13-24
FUEL CAP	
DIESEL	4-16
FUEL FILTER	
KUBOTA DIESEL - 3.6L	2-44
FUEL PUMP	
KUBOTA DIESEL - 3.6L	2-43
FUEL RAIL	
KUBOTA DIESEL - 3.8L	2-54
FUEL SENDING UNIT	
GM 4.3L GASOLINE	5-9
FUEL SYSTEM	
GM 4.3L GASOLINE	5-2
GM 4.3L LPG	5-4
KUBOTA 3.6L DIESEL	4-4
KUBOTA 3.8L DIESEL	4-6
FULL SUSPENSION SEAT	
MANUAL AND ELECTRO-HYDRAULICS - SWIVEL AND NON SWIVEL - SHEET 1 OF 4	1-60
RECLINER AND DAMPER KITS - SHEET 2 OF 4	1-62
SERVICE KITS FOR NON SWIVEL AND SWIVEL - SHEET 3 OF 4	1-58
FUSE BOX	
GM 4.3L LPG	6-37
G	
GEAR CASE	
KUBOTA DIESEL - 3.6L	2-38
KUBOTA DIESEL - 3.8L	2-39
GEAR PUMP	11-16
GEAR PUMP ASSEMBLY	
KUBOTA 3.6L DIESEL	11-14
KUBOTA 3.8L DIESEL AND GM 4.3L GAS/LPG	11-12
GM LPG REGULATOR DRAIN KIT	14-14
GOVERNOR	
KUBOTA DIESEL - 3.6L	2-48
GOVERNOR ACTUATOR AND PLUG	
KUBOTA DIESEL - 3.6L	2-50

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
H	
HAND LEVERS	
FOUR FUNCTION - WITH DETENTED LEVERS	11-26
FOUR FUNCTION - WITHOUT DETENTED LEVERS	11-28
THREE FUNCTION - WITH DETENTED LEVERS	11-22
THREE FUNCTION - WITHOUT DETENTED LEVERS	11-24
HANG-ON SIDE-SHIFT CARRIAGE AND HOSES	
WITH BACKREST AND FORK POSITIONER	14-24
WITHOUT BACKREST AND FORK POSITIONER	14-20
HEADER HOSE CONVERSION KITS	
HEADER HOSES	
THREE STAGE FULL FREE-LIFT	13-30
TWO STAGE LIMITED FREE-LIFT	12-20
HOIST HOSE AND ATTACHING PARTS	11-60
HOOD ASSEMBLY	
→ S/N K006V01887L	1-6
S/N K006V01888L →	1-8
HYDRAULIC CONTROL CONVERSIONS	
HYDRAULIC CONTROL VALVE AND STEERING UNIT ASSEMBLY	
ELECTRO-HYDRAULIC - THREE FUNCTION	11-44
ELECTRO-HYDRAULIC - FOUR FUNCTION	11-46
MANUAL CONTROL VALVE - THREE FUNCTION	11-32
MANUAL CONTROL VALVE - FOUR FUNCTION	11-34
HYDRAULIC FILTER	11-10
HYDRAULIC HOSES	
STEERING	11-18
HYDRAULIC SUPPLY AND RETURN	
ELECTRO-HYDRAULICS	11-6
MANUAL HYDRAULICS	11-2
I	
INJECTION PIPE	
KUBOTA DIESEL - 3.8L	2-52
INJECTION PUMP	
KUBOTA DIESEL - 3.6L	2-46
INJECTION PUMP HOUSING	
KUBOTA DIESEL - 3.6L	2-45
INJECTOR HARNESS	
KUBOTA DIESEL - 3.8L	2-79
INLET AND EXHAUST VALVES	
KUBOTA DIESEL - 3.8L	2-28
INLET MANIFOLD	
KUBOTA DIESEL - 3.6L	2-67
KUBOTA DIESEL - 3.8L	2-68
INNER MAST	
THREE STAGE FULL FREE-LIFT	13-6
TWO STAGE LIMITED FREE-LIFT	12-4
INSTRUMENT CLUSTER	6-38

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
INTAKE AIR FUEL MODULE	
GM 4.3L GASOLINE	3-24
INTERIOR PANELS AND COVERS	
WITH CAB	1-18
WITH OVERHEAD GUARD	1-16
INTERMEDIATE MAST	
THREE STAGE FULL FREE-LIFT	13-4
L	
LABELS	
EXTERIOR	1-72
HYDRAULIC CONTROL LABELS - CONTROL LEVER	1-76
INTERIOR	1-74
MINI LEVER MODULES - SINGLE FUNCTION	1-78
LIFT AND LOWER SECTION	
ELECTRONIC CONTROL VALVE - THREE AND FOUR FUNCTION	11-48
LIFTING EYE	14-16
LIFTING EYE BRACKETS	
GM 4.3L GASOLINE AND LPG	3-10
LIGHT CONVERSION KITS	15-7
LIGHTS	
BRAKE, TAIL, BACKUP, SIDE, TURN SIGNALS, WORK, STROBE - WITH CAB	6-40
BRAKE, TAIL, BACKUP, SIDE, TURN SIGNALS, WORK, STROBE - WITH OVERHEAD GUARD	6-42
LOAD BACKREST EXTENSION	1-79
LOAD WEIGH ELECTRICAL	6-44
LPG CONVERTER	
GM 4.3L LPG	5-16
LPG REGULATOR AND MIXER	
GM 4.3L	5-14
M	
MAIN LIFT	
THREE STAGE FULL FREE-LIFT (→ 3/2013)	13-8
THREE STAGE FULL FREE-LIFT (4/2013 →)	13-12
TWO STAGE LIMITED FREE-LIFT (→ 3/2013)	12-6
TWO STAGE LIMITED FREE-LIFT (4/2013 →)	12-10
MAIN LIFT CYLINDER	
TWO STAGE LIMITED FREE-LIFT	12-14
MAIN LIFT CYLINDERS	
THREE STAGE FULL FREE-LIFT	13-16
MAST ELECTRICAL	6-46
MID-INLET SECTION	
MANUAL HYDRAULIC CONTROL VALVE - THREE AND FOUR FUNCTION	11-36
MINI-LEVER CONTROLS	
WITH ARMREST - THREE FUNCTION	6-48
WITH ARMREST - FOUR FUNCTION	6-50
MISCELLANEOUS CONVERSION KITS	15-4

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
N	
NON SUSPENSION SEAT WITHOUT ELECTRONIC CONTROLS	1-56
NOZZLE HOLDER AND GLOW PLUG KUBOTA DIESEL - 3.6L	2-61
O	
OIL COOLER KUBOTA DIESEL - 3.6L	2-75
KUBOTA DIESEL - 3.8L	2-76
OIL PAN KUBOTA DIESEL - 3.6L, 3.8L	2-21
OIL PUMP GM 4.3L GASOLINE AND LPG	3-36
OIL SEPARATOR KUBOTA DIESEL	2-82
OPERATOR COMPARTMENT PLATFORM	1-2
OUTER MAST THREE STAGE FULL FREE-LIFT	13-2
TWO STAGE LIMITED FREE-LIFT	12-2
OUTLET SECTION ELECTRONIC CONTROL VALVE - THREE AND FOUR FUNCTION WITH ANTI-STALL SOLENOID	11-58
MANUAL HYDRAULIC CONTROL VALVE - THREE AND FOUR FUNCTION	11-42
OUTPUT SHAFT TWO SPEED TRANSMISSION	7-26
OVERHEAD GUARD	1-14
P	
PARK BRAKE ASSEMBLY	10-16
PISTON AND CRANKSHAFT KUBOTA DIESEL - 3.6L	2-30
KUBOTA DIESEL - 3.8L	2-32
POWER DISTRIBUTION MODULE	6-52
PUMP DRIVE	7-36
R	
RADIATOR ASSEMBLY GM 4.3L GASOLINE AND LPG	3-4
KUBOTA DIESEL	2-6
RAIN TOP	14-18
REMOTE KEY SWITCH	6-54
REPLACEMENT KITS	15-8
REVERSE CLUTCH TWO SPEED TRANSMISSION	7-28
REVERSE CLUTCH AND FIRST SHAFT THREE SPEED TRANSMISSION - REV1, RANGE 1	7-18
ROCKER ARM ASSEMBLY WITH INLET AND EXHAUST VALVES - KUBOTA DIESEL 3.6L	2-26
ROCKER ARM SHAFT KUBOTA DIESEL - 3.8L	2-29

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
S	
SEAT ATTACHING PARTS	
NOT INCLUDED WITH SEAT - SHEET 4 OF 4	1-64
SEAT BELT SWITCH ADAPTER	
4/2014 →	6-55
SEAT CONVERSION KITS	15-3
SEAT PAN AND COVERS	1-68
SENSORS	
3.8L KUBOTA DIESEL	2-81
SIDE-SHIFT ASSEMBLY	
WITHOUT FORK POSITIONER	14-22
SIDE-SHIFT CYLINDER	
WITH AND WITHOUT FORK POSITIONER	14-28
SINGLE AND DUAL LPG TANK BRACKETS	5-22
SOUND ABATEMENT	1-70
SPARK PLUGS AND WIRES	
GM 4.3L GASOLINE AND LPG	6-10
STARTER	
GM 4.3L GASOLINE AND LPG	6-12
KUBOTA DIESEL - 3.6L, 3.8L	2-60
STEER AXLE	9-8
STEER CYLINDER	9-11
STEER TIRE AND WHEEL	9-14
STEERING COLUMN ASSEMBLY	
DIESEL	9-4
GASOLINE AND LPG	9-6
STEERING CONTROL UNIT	9-12
STEERING WHEEL AND COLUMN	
DIESEL	9-2
GASOLINE AND LPG	9-3
STROBE LIGHT	
LED	14-2
SUPPLY PUMP	
KUBOTA DIESEL - 3.8L	2-51
T	
THERMOSTAT AND WATER OUTLET HOUSING	
GM 4.3L LPG	3-21
GM 4.3L GASOLINE	3-22
THROTTLE BODY	
GM 4.3L GASOLINE	5-11
GM 4.3L LPG	5-12
THROTTLE CABLE ASSEMBLY	
3.6L KUBOTA DIESEL	4-12
THROTTLE PEDAL ASSEMBLY AND ATTACHING PARTS	
MONOTROL PEDAL	4-8
MONOTROL PEDAL	5-18
STANDARD PEDAL	4-10
STANDARD PEDAL	5-20

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
TILT CYLINDER AND MAST INSTALLATION	11-62
TILT CYLINDERS	11-64
TILT HYDRAULICS	11-66
TILT SECTION	
ELECTRONIC CONTROL VALVE - THREE AND FOUR FUNCTION	11-50
MANUAL HYDRAULIC CONTROL VALVE - THREE AND FOUR FUNCTION	11-38
TORQUE CONVERTER	
GM 4.3L GASOLINE AND LPG	7-6
KUBOTA DIESEL	7-8
TRANSMISSION ASSEMBLY	
THREE SPEED - SHEET 1 OF 2	7-10
THREE SPEED - SHEET 2 OF 2	7-12
TWO SPEED - SHEET 1 OF 2	7-20
TWO SPEED - SHEET 2 OF 2	7-22
TRANSMISSION COOLING	7-2
TRANSMISSION ELECTRICAL SYSTEM	
THREE SPEED TRANSMISSION	6-56
TWO SPEED TRANSMISSION	6-58
TRANSMISSION MOUNT	7-4
TURBOCHARGER	
KUBOTA DIESEL - 3.6L	2-71
KUBOTA DIESEL - 3.8L	2-72
TURBOCHARGER OIL PLUMBING	
KUBOTA DIESEL - 3.6L	2-73
KUBOTA DIESEL - 3.8L	2-74
V	
VALVE COVER AND INTAKE MANIFOLD	
GM 4.3L GASOLINE AND LPG	3-26
VENT LINES	
→ 4/2014	11-68
4/2014 →	11-69
W	
WATER BYPASS	
GM 4.3L GASOLINE	3-38
WATER PUMP	
KUBOTA DIESEL - 3.6L	2-64
KUBOTA DIESEL - 3.8L	2-65
WATER PUMP FLANGE AND THERMOSTAT	
KUBOTA DIESEL - 3.6L	2-62
KUBOTA DIESEL - 3.8L	2-63
WET BRAKE ASSEMBLY	8-8
WIRE HARNESS	
COWL - MANUAL HYDRAULICS WITH MONOTROL PEDAL	6-60
COWL - MANUAL HYDRAULICS WITH FORWARD/REVERSE	6-64
COWL - ELECTRO-HYDRAULICS WITH MONOTROL PEDAL	6-68
COWL - ELECTRO-HYDRAULICS WITH FORWARD/REVERSE	6-72
DPF DISPLAY	6-75

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
ELECTRONIC CONTROL VALVE - THREE FUNCTION	6-76
ELECTRONIC CONTROL VALVE - FOUR FUNCTION	6-78
ENGINE - KUBOTA DIESEL 3.6L (→ 5/2013)	6-84
ENGINE - KUBOTA DIESEL 3.6L (5/2013 →)	6-86
ENGINE - KUBOTA DIESEL 3.8L	6-90
IMPACT SENSOR	6-100
LEFT HAND CHASSIS - GM 4.3L GASOLINE	6-98
LIGHTS WITH OVERHEAD GUARD	6-102
REAR	6-104
RH CHASSIS - GM 4.3L GASOLINE/LPG AND KUBOTA 3.8L DIESEL (→ 4/2014)	6-108
RH CHASSIS - GM 4.3L GASOLINE/LPG AND KUBOTA 3.8L DIESEL (4/2014 →)	6-114
RH CHASSIS - GM 4.3L AND KUBOTA 3.8L WITH SEAT BELT SEQUENCE MODULE	6-120
RH CHASSIS - KUBOTA 3.6L DIESEL (→ 5/2013)	6-126
RH CHASSIS - KUBOTA 3.6L DIESEL (5/2013 →)	6-132
RH CHASSIS - KUBOTA 3.6L DIESEL WITH SEAT BELT SEQUENCE MODULE	6-138
SEALED ALTERNATOR - KUBOTA DIESEL	6-95
TRANSMISSION-THREE SPEED (→ S/N K006V03055N)	6-152
TRANSMISSION-THREE SPEED (S/N K006V03056N →)	6-156
TRANSMISSION-THREE SPEED - WITH E-THROTTLE (S/N K006V03056N →)	6-160
TRANSMISSION-TWO SPEED - GM 4.3L LPG AND KUBOTA 3.8L DIESEL (→ 4/2015)	6-144
TRANSMISSION-TWO SPEED - KUBOTA 3.6L DIESEL (→ 9/2015)	6-148
TRANSMISSION-TWO SPEED WITH TISS SENSOR - GM 4.3L LPG AND KUBOTA DIESEL (4/2015 →)	6-146
TRANSMISSION-TWO SPEED WITH TISS SENSOR - KUBOTA 3.6L DIESEL (9/2015 →)	6-150
WIRE HARNESS (AIR CONDITIONING)	6-106
WIRE HARNESS (ENGINE)	
GM 4.3L, LPG - PSI OPTION	6-80
WIRE HARNESS BRACKET	
KUBOTA DIESEL - 3.8L	2-80

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPA	US Environmental Protection Agency	UL Type GS	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the next page.

HYSTER UNIT CODE D001 NORTH AMERICA 06/2001

TABLE OF CONTENTS

DESCRIPTION	PAGE
AIR INTAKE AND FILTER DIESEL (→ D/B 11/98).....	3-22
AIR INTAKE AND FILTER DIESEL (D/B 11/96 →).....	
AIR INTAKE AND FILTER GASOLINE AND LPG.....	
ALTERNATOR GASOLINE, LPG, AND DIESEL.....	
ALTERNATOR TYPES GS, LPS, AND DS.....	
AUXILIARY FUNCTION TUBE TWO AND THREE STAGE FULL F.....	

SECTION 13 NUMERICAL INDEX

PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.
142	3-4	19	10-13	25	11-27	29	12-31	12	16719	3-36	5
12445	3-32	19	10-17	6	11-31	25	16751	3-16	16849	3-34	21
	3-34	1	10-27	11	11-32	37	16849	3-38	16849	3-38	20
			11-11	6	8-4	29	16863	3-28	16863	3-28	17
			14	13	8-4	45	16865	3-6	16865	3-6	18
			12	6	9-7	9	16882	4-27	16882	4-27	41
			3	17	9-7	19		9-7		9-7	30
			9	10	9-11	9		9-11		9-11	27
			23	46	9-11	17		10-10		10-10	36
			27	46	10-9	21		10-13		10-13	32
			26	14	10-9	28		11-7		11-7	24
			28	14	10-13	16		11-9		11-9	17
			50	14	11-7	19					

SECTIONS

- 1 FRAME
- 2 ELECTRICAL SYSTEM
- 3
- 4
- 5 BRAKE/ACC
- 6
- 7 MAST-TWO STAG
- 8 MAST-THREE STAG
- 9 MAST-TWO STAG
- 10
- 11

TRANSMISSION HOUSING
S/N D001H-2628

KEY:
A: Diesel
B: Gasoline and LPG

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
		Transmission	1	1
	2022547	Transmission	1	1
	2023329	Case	2	2
1	2021670	Bearing Cap	4	4
2	2023418	Washer	1	1
3	296429	Bolt	2	2
4	293947	Cover	2	2
5	2021390	Colter Pin	4	4
6	1371656	O-Ring	1	1
7	2021329	Plug	4	4
8	2021915	Housing	22	22
9	2021675	Pin	39	39
10	2021336	Bolt	1	1
11	287860	Lockwasher	1	1
12	292682	Hydraulic Pump	1	1
13		Figure 5-3	8	8
14	2021345	Gasket	1	1
15	214364	Bolt	1	1
16	296418	Washer	1	1
17	2021388	Temperature Switch	1	1
18	2021389	Breather	9	9
19	2021383	Dipstick	9	9
20	292515	Bolt	2	2
21	136692	Nut	3	3
22	292527	Bolt	3	2
23	292531	Capscrew	4	4
24	292583	Lockwasher	4	4
25	293637	Bolt	4	4
26	296420	Washer	1	1
	996403	Transmission Kit (Includes Item 7)	1	1
	996405	Transmission Kit (Includes Item 14)	1	1

This Parts Manual is divided into 11 major sections which are listed above. Quick be made by placing the right thumb on the tab of the desired section, bending the pages to the corresponding tab.

© Copy Right Date HYSTER COMPANY See Service Manual for service procedures. 5-15

HOW TO FIND THE DESIRED PART NUMBER

WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the Sections Page. Choose the general area of reference most likely to include the part.
2. Turn to the section you chose. Use the Section Table of Contents to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Table of Contents (Page i).
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

WHEN THE PART NUMBER IS KNOWN:

5. Use the Numerical Index (Page 16-1) to find the part number. Turn to the page listed and locate the part as indicated by the item number.

GENERAL:

The assembly breakdowns include part numbers, descriptions, quantities required, keys and footnotes to help in selecting correct parts.

6. Parts Supersession Information. Part numbers that have this history will be displayed in the parts list in the order that they were superseded (from oldest to newest). The superseded part numbers will be shown with a line through them.

Five periods in the PART NO. column (.) indicate that the part is either *Not Serviced Separately* or there is a reference to another figure. A figure reference is denoted by a pointing hand followed by a figure number in the DESCRIPTION column (☞ Figure 10)

7. Keys are used to show two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C", "D", or "E" and the corresponding quantity column to find the required parts. Two periods in the QTY column (..) indicate that the part is not used for that assembly.
8. Indented descriptions under the DESCRIPTION column are used to indicate assemblies and

subparts of assemblies. In the example on the previous page, *BEARING CAP* (Item 2) is a subpart of the major assembly *CASE*.

9. Quantities shown are for one assembly. The quantities of the subpart *BEARING CAP* are indicated as two and two. This means two per *CASE* assembly.
10. Serial number breaks identify the most current parts information and are shown as follows:
 - **S/N D001H2628**
Indicates last serial number affected.
 - S/N D001H2629** →
Indicates the first serial number affected.
 - S/N D001H1553** ↔ **S/N D001H3291**
Indicates a range of serial numbers affected.

ECN numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information and are identified as follows:

- **S/N Pending Per ECN 63243**
Indicates a pending serial number for last unit affected.
- S/N Pending Per ECN 63243** →
Indicates a pending serial number for first unit affected.

Date breaks are used to indicate when a change occurred but a subsequent serial number break was not recorded. This is an arbitrary date usually based on the ECN release and are identified as follows:


- **D/B 3/00**
Indicates that a change occurred sometime within that month for the item affected.
- D/B 3/00** →
Indicates that a change occurred sometime within that month for the item affected.
- D/B 3/00** ↔ **D/B 4/00**
Indicates a range of production dates of the item affected.

Contact your local dealer for Hyster lift trucks for serial number information for items with a ECN or a date break.

ORDERING PARTS:


When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.

For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.

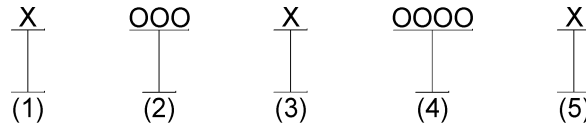IDENTIFICATION OF TRUCK SERIAL NUMBERS

- (1) and (2) The first letter and three numbers indicate the truck unit code.
- (3) The second letter indicates the plant of manufacture.
- (4) The four or five digit number indicates the production sequence number of the truck.
- (5) The final letter indicates the year of manufacture starting with "A" in 1957, 1980, and 2003.
The letters "I", "O", and "Q" will not be used.

For pending serial numbers contact your local dealer for Hyster lift trucks.

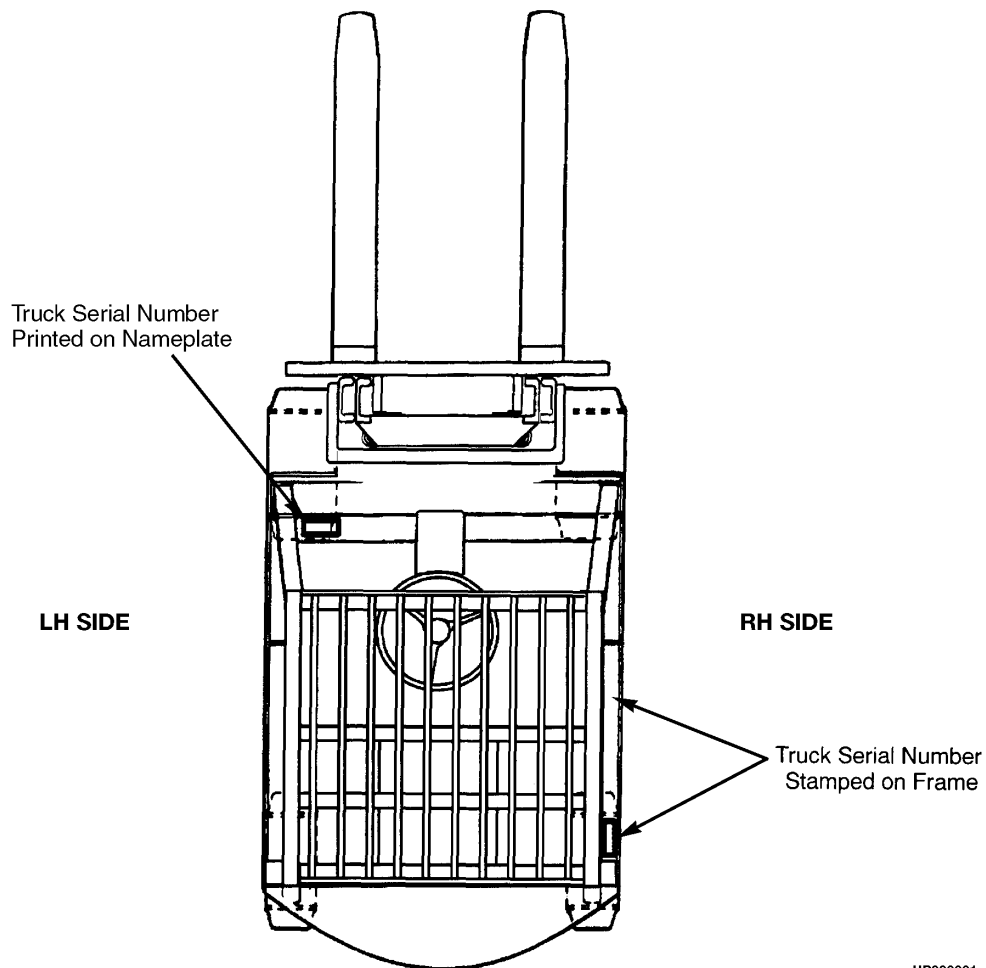

HP990001

Parts referred to in this book as right or left hand parts are in accordance with the illustration above.