

PARTS MANUAL

**H190HD2, H210HD2, H230HD2,
H230HDS2, H250HD2, H280HD2
(K007)**

CUSTOMER EDITION

HYSTER

SECTIONS

1	FRAME
2	ENGINES
3	FUEL SYSTEM
4	ELECTRICAL SYSTEM
5	TRANSMISSION
6	DRIVE AXLE
7	STEERING SYSTEM
8	BRAKE SYSTEM
9	HYDRAULIC SYSTEM
10	MAST-TWO STAGE LIMITED FREE-LIFT
11	MAST-THREE STAGE FULL FREE-LIFT
12	ATTACHMENTS
13	OPTIONS
14	FIELD CONVERSION KITS
15	NUMERICAL INDEX

This Parts Manual is divided into 15 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.

**Thanks very much for your reading,
Want to get more information,
Please click here, Then get the complete
manual**

JustClickHere 

NOTE:

**If there is no response to click on the link above,
please download the PDF document first, and then
click on it.**

**Have any questions please write to me:
admin@servicemanualperfect.com**

TABLE OF CONTENTS

DESCRIPTION	PAGE
A	
AIR CLEANER	
TIER IV INTERIM ENGINE	3-23
AIR CLEANER ASSEMBLY	3-9
AIR COMPRESSOR MOUNTING	
TIER III ENGINE	2-14
AIR CONDITIONER	
CLIMATE CONTROL CAB	1-106
AIR CONDITIONER ASSEMBLY	
CLOSED CAB WITH AIRCO (→ 12/2012)	1-96
CLOSED CAB WITH AIRCO (12/2012 →)	1-98
AIR CONDITIONER FILTER AND COVER ASSEMBLY	
CLOSED CAB	1-91
AIR CONDITIONER SYSTEM	
CLIMATE CONTROL CAB	1-104
CLOSED CAB WITH AIRCO	1-92
AIR CONDITIONER SYSTEM ASSEMBLY	
WITH TWO-FAN CONDENSER SYSTEM - MCC	1-130
AIR CONDITIONING HOSES AND COMPRESSOR	
TIER III ENGINE	1-54
TIER IV INTERIM ENGINE	1-56
TIER IV INTERIM ENGINE - ALTERNATE CONFIGURATION	1-58
AIR DUCT	
CLOSED CAB WITH AIRCO OR CLIMATE CONTROL	13-18
AIR DUCT ASSEMBLY	
AIR CONDITIONING - CLOSED CAB WITH AIRCO	1-94
HEATER - CLOSED CAB WITHOUT AIRCO	1-86
AIR HEATER STARTING AID	
TIER III ENGINE	2-15
TIER IV INTERIM ENGINE	2-16
AIR INTAKE CONNECTION	
TIER III ENGINE	3-10
TIER IV INTERIM ENGINE	3-51
AIR INTAKE MANIFOLD	
TIER III ENGINE	3-11
TIER IV INTERIM ENGINE	3-42
AIR INTAKE SYSTEM	
PAGE 1 OF 2 - TIER IV INTERIM ENGINE	3-6
PAGE 2 OF 2 - TIER IV INTERIM ENGINE	3-8
TIER III ENGINE	3-4
AIR TRANSFER CONNECTION	
TIER III ENGINE	2-17
TIER IV INTERIM ENGINE	3-48
ALTERNATOR AND MOUNTING	
TIER III ENGINE	4-168
TIER IV INTERIM ENGINE	4-175
ARMREST ASSEMBLY	1-46
AUXILIARY PUMP MOUNTING	
TIER IV INTERIM ENGINE	2-18

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
B	
BACK-UP ALARM	13-4
BATTERY CABLES	
TIER III ENGINE	4-8
TIER IV INTERIM ENGINE	4-9
BELT TENSIONER	
TIER III AND TIER IV INTERIM ENGINES	2-19
BRAKE ACCUMULATOR AND ATTACHING PARTS	8-13
BRAKE ASSEMBLY	
425 SERIES DRIVE AXLE	6-14
475 SERIES DRIVE AXLE	6-16
BRAKE MANIFOLD AND ATTACHING BRAKE HOSES	8-16
BRAKE PEDAL AND LINKAGE	8-2
BRAKE PEDAL ASSEMBLY	8-4
BRAKE VALVE AND ATTACHING PARTS	8-6
ALTERNATE CONFIGURATION	8-8
BREATHER	
TIER III ENGINE	2-20
TIER IV INTERIM ENGINE	2-22
BREATHER MOUNTING	
TIER IV INTERIM ENGINE	2-25
BREATHER PLUMBING	
TIER IV INTERIM ENGINE	2-24
C	
CAB	
CLOSED - PAGE 1 OF 2	1-64
CLOSED - PAGE 2 OF 2	1-66
OPEN - PAGE 1 OF 2	1-60
OPEN - PAGE 2 OF 2	1-62
CAB AND TILT CYLINDER MOUNTING	1-108
CAB ATTACHING PARTS	
OPEN AND CLOSED CAB	1-68
CAB DOOR	
LEFT HAND - CLOSED CAB	1-74
RIGHT HAND - CLOSED CAB	1-72
CAB MAIN DOOR WINDOW	
RIGHT AND LEFT HAND	1-78
CAB RECIRCULATING FAN	
CLOSED CAB	13-23
CAB SUNSHADE - REAR	
CLOSED CAB WITH AIRCO - OPTIONAL FOR CLOSED CAB WITHOUT AIRCO	13-26
CAB SUNSHADE - TOP	
CLOSED CAB WITH AIRCO - OPTIONAL FOR CLOSED CAB WITHOUT AIRCO	13-24
CAB TILT CYLINDER	1-114
CAB TILT PUMP	
ELECTRIC	1-118
CAB TILT PUMP ASSEMBLY	1-116

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
CAB WINDOWS INSTALLATION	
CLOSED CAB	1-76
CAMSHAFT	
TIER III ENGINE	2-26
TIER IV INTERIM ENGINE	2-27
CARRIAGE	
THREE STAGE-ISS - WITHOUT FORK POSITIONER	12-56
THREE STAGE-ISS - INDIVIDUAL FORK POSITIONER	12-60
THREE STAGE-ISS - SIMULTANEOUS FORK POSITIONER	12-64
THREE STAGE-STANDARD	12-70
TWO STAGE- DUAL FUNCTION - WITH FORK POSITIONER (→ S/N K007E01948M)	12-36
TWO STAGE- DUAL FUNCTION - WITH FORK POSITIONER (S/N K007E01949M →)	12-40
TWO STAGE- ISS - WITHOUT FORK POSITIONER, 3-FUNCTION	12-18
TWO STAGE- ISS - WITHOUT FORK POSITIONER, 4, 5, 6-FUNCTION	12-20
TWO STAGE- ISS - WITH INDIVIDUAL FORK POSITIONER, 4, 5, 6-FUNCTION	12-24
TWO STAGE- ISS - WITH SIMULTANEOUS FORK POSITIONER, 4, 5, 6-FUNCTION	12-28
TWO STAGE-STANDARD - WITHOUT FORK POSITIONER, 3-FUNCTION	12-4
TWO STAGE-STANDARD - WITHOUT FORK POSITIONER, 4, 5, 6-FUNCTION	12-6
TWO STAGE-STANDARD - WITH INDIVIDUAL FORK POSITIONER, 4, 5, 6-FUNCTION	12-10
TWO STAGE-STANDARD - WITH SIMULTANEOUS FORK POSITIONER, 4, 5, 6-FUNCTION	12-12
CARRIAGE ASSEMBLY	
TWO STAGE- ISS (→ S/N K007E01948M)	12-32
TWO STAGE- ISS (S/N K007E01949M →)	12-34
TWO STAGE-STANDARD (→ S/N K007E01948M)	12-14
TWO STAGE-STANDARD (S/N K007E01949M →)	12-16
CATALYTIC CONVERTER	
TIER IV INTERIM ENGINE	2-28
CLIMATE CONTROL SYSTEM	1-136
COMPRESSOR ASSEMBLY	1-100
CONDENSER	
CLOSED CAB WITH AIRCO	1-102
CONDENSER SYSTEM	
TWO-FAN SYSTEM - MCC	1-132
CONNECTING RODS AND PISTONS	
TIER III ENGINE	2-30
TIER IV INTERIM ENGINE	2-32
CONTROL PANEL ASSEMBLY	
HEATER	4-165
HEATER AND AIR CONDITIONER (→ 12/2012)	4-166
HEATER AND AIR CONDITIONER (12/2012 →)	4-167
CONTROL VALVE	
PAGE 1 OF 4	5-34
PAGE 2 OF 4	5-35
PAGE 3 OF 4	5-36
PAGE 4 OF 4	5-38
CONVERTER	5-10
COOLANT HEATER STARTING AID	
TIER III ENGINE	2-34
COOLER AND ATTACHING BRAKE HOSES	8-9

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
COOLING	
TIER III ENGINE	2-6
TIER IV INTERIM ENGINE	2-8
COUNTERWEIGHT WITH LIFTING EYES	1-10
COUNTERWEIGHT WITHOUT LIFTING EYES	1-12
CRANKSHAFT AND BEARINGS	
TIER III ENGINE	2-36
TIER IV INTERIM ENGINE	2-38
CYLINDER BLOCK	
TIER III ENGINE	2-40
TIER IV INTERIM ENGINE	2-42
CYLINDER HEAD	
TIER III ENGINE	2-44
TIER IV INTERIM ENGINE	2-46
D	
DASH ASSEMBLY	
CLOSED CAB	1-84
DC-DC CONVERTER AND ATTACHING PARTS	13-9
DIFFERENTIAL AND CARRIER	6-4
DIRECTIONAL CONTROL VALVE ASSEMBLY	
FOUR-SECTION	12-45
THREE-SECTION	12-44
TWO-SECTION	12-43
DRAIN PLUG	
FUEL PUMP - TIER IV INTERIM ENGINE	3-22
DRIVE AXLE AND ATTACHING BRAKE HOSES	8-14
DRIVE AXLE HOUSING AND ATTACHING PARTS	6-2
DRIVE TIRES AND WHEELS	
MICHELIN XZM	6-18
TRELLEBORG - SOLID TIRE	6-20
TRELLEBORG T-900	6-19
TRELLEBORG TR900	6-21
DRIVE TRAIN	5-11
E	
ELECTRIC HORN	4-164
ELECTRICAL SYSTEM	
TIER III ENGINE	4-4
TIER IV INTERIM ENGINE	4-6
EMPTY SEAT ENGINE SHUTDOWN	13-6
EMPTY SEAT ENGINE SHUTDOWN OVERRIDE	14-2
ENGINE ATTACHING PARTS	
TIER IV INTERIM ENGINE	2-12
ENGINE BLOCK HEATER	
120 VOLT	13-28
240 VOLT	13-29
ENGINE CONNECTION	5-14

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
ENGINE CONTROL MODULE	
TIER III ENGINE	4-170
TIER IV INTERIM ENGINE	4-172
ENGINE COOLANT VENT	
TIER III ENGINE	2-48
TIER IV INTERIM ENGINE	2-49
ENGINE HEATER ASSEMBLY	
120 VOLT - QSB 6.7, TIER III ENGINE	13-30
120 VOLT - QSB 4.5, TIER IV INTERIM ENGINE	13-32
240 VOLT - QSB 6.7, TIER III ENGINE	13-31
240 VOLT - QSB 4.5, TIER IV INTERIM ENGINE	13-33
ENGINE MOUNT	
TIER III ENGINE	2-13
ENGINE MOUNTS	
TIER IV INTERIM ENGINE	2-50
ETR CONTROL MODULE WIRE HARNESS	
TIER IV INTERIM ENGINE	4-178
ETR MODULE WIRING	
TIER III ENGINE	4-174
EXHAUST MANIFOLD	
TIER III ENGINE	2-51
TIER IV INTERIM ENGINE	2-52
EXHAUST OUTLET CONNECTION	
TIER III AND TIER IV INTERIM ENGINE	2-53
EXHAUST RECIRCULATION	
TIER IV INTERIM ENGINE	2-54
EXHAUST RECIRCULATION AIR PLUMBING	
TIER IV INTERIM ENGINE	2-56
EXHAUST RECIRCULATION WATER INLET	
TIER IV INTERIM ENGINE	2-58
EXHAUST SYSTEM	
TIER III ENGINE	2-10
TIER IV INTERIM ENGINE	2-11
EXTERIOR MIRRORS	13-5
F	
FAN DRIVE	
TIER IV INTERIM ENGINE	2-61
FAN DRIVE AND MOUNTING	
TIER III ENGINE	2-60
FAN SPACER	
TIER III ENGINE	2-62
FIRST SPEED CLUTCH ASSEMBLY	5-22
FLOORMATS	
OPEN AND CLOSED CAB	1-70
FLOORPLATES	1-4
FLOW DIVIDER MANIFOLD	12-74
FLYWHEEL AND MOUNTING	
TIER III AND TIER IV INTERIM ENGINE	2-63

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
FLYWHEEL HOUSING	
TIER III AND TIER IV INTERIM ENGINE	2-64
FORK POSITIONING CYLINDER	12-46
FORKS	12-2
FORWARD AND REVERSE LEVER TO MONOTROL KIT	14-2
FORWARD CLUTCH ASSEMBLY	5-28
FREE-LIFT CYLINDER	11-12
FRONT GEAR COVER	
TIER III ENGINE	2-66
TIER IV INTERIM ENGINE	2-67
FUEL DRAIN PLUMBING	
TIER IV INTERIM ENGINE	3-41
FUEL FILTER	
TIER III ENGINE	3-12
FUEL FILTER AND ATTACHING PARTS	
TIER IV INTERIM ENGINE	3-24
FUEL FILTER MOUNTING	
TIER IV INTERIM ENGINE	3-45
FUEL FILTER PLUMBING	
TIER III ENGINE	3-13
TIER IV INTERIM ENGINE	3-44
FUEL FILTER WITH WATER SEPARATOR	
TIER IV INTERIM ENGINE	3-40
FUEL INJECTION PUMP	
TIER III ENGINE	3-14
FUEL INJECTOR PLUMBING	
TIER III ENGINE	3-36
TIER IV INTERIM ENGINE	3-43
FUEL INJECTORS	
TIER III ENGINE	3-49
TIER IV INTERIM ENGINE	3-50
FUEL INLET FITTING	
TIER III ENGINE	3-16
TIER IV INTERIM ENGINE	3-21
FUEL LINES	
TIER III ENGINE	3-32
TIER IV INTERIM ENGINE	3-34
FUEL PLUMBING	
TIER III ENGINE	3-18
TIER IV INTERIM ENGINE	3-47
FUEL PUMP	
TIER IV INTERIM ENGINE	3-46
FUEL TANK	3-30
H	
HAND HOLE COVER	
TIER III AND TIER IV INTERIM ENGINE	2-68
HAND PUMP	1-120

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
HEADER HOSE	
THREE STAGE FULL FREE-LIFT	12-54
TWO STAGE LIMITED FREE-LIFT	12-50
HEAT SHIELD	
TIER IV INTERIM ENGINE	2-69
HEATED TOP WINDOW	
CLOSED CAB	13-14
HEATER AND AIR DUCT	
CLOSED CAB WITHOUT AIRCO	1-85
HEATER ASSEMBLY	
CLOSED CAB WITHOUT AIRCO	1-88
HEATER HOSES	
TIER III ENGINE	1-50
TIER IV INTERIM ENGINE	1-52
HEATER SYSTEM	
CLOSED CAB WITHOUT AIRCO	1-90
HOODS AND COVERS	1-6
HUB AND SHAFT ASSEMBLY	
425 SERIES	6-8
475 SERIES	6-10
HYDRAULIC CONTROL VALVE	
FOUR FUNCTION - LIFT SECTION ASSEMBLY, RH (→ S/N K007E01669L)	9-44
FOUR FUNCTION - LIFT SECTION, RH (S/N K007E01670L →)	9-92
THREE AND FOUR FUNCTION - HIC MID-INLET BLOCK ASSEMBLY (→ S/N K007E01669L)	9-40
THREE AND FOUR FUNCTION - HIC, BRAKE/ACCUMULATOR BLOCK ASSEMBLY (→ S/N K007E01669L)	9-42
THREE AND FOUR FUNCTION - LIFT SECTION ASSEMBLY, LH (→ S/N K007E01669L)	9-46
THREE AND FOUR FUNCTION - TILT SECTION ASSEMBLY (→ S/N K007E01669L)	9-48
THREE AND FOUR FUNCTION - AUXILIARY SECTION ASSEMBLY (→ S/N K007E01669L)	9-50
THREE AND FOUR FUNCTION - LIFT SECTION, LH (S/N K007E01670L →)	9-90
THREE AND FOUR FUNCTION - AUXILIARY SECTION (S/N K007E01670L →)	9-94
THREE AND FOUR FUNCTION - HIC, BRAKE/ACCUMULATOR (S/N K007E01670L →)	9-95
THREE AND FOUR FUNCTION - TILT SECTION (S/N K007E01670L →)	9-96
THREE AND FOUR FUNCTION - HIC MID-INLET (S/N K007E01670L →)	9-98
HYDRAULIC CONTROL VALVE AND ATTACHING BRAKE HOSES	8-15
HYDRAULIC CONTROL VALVE AND ATTACHING PARTS	
FOUR FUNCTION - PAGE 1 OF 2	9-34
FOUR FUNCTION - PAGE 2 OF 2	9-36
THREE FUNCTION - PAGE 1 OF 2	9-24
THREE FUNCTION - PAGE 2 OF 2 (→ S/N K007E01669L)	9-26
THREE FUNCTION, 105 CC PUMP - PAGE 2 OF 2 (S/N K007E01670L →)	9-30
THREE FUNCTION, 90 CC PUMP - PAGE 2 OF 2 (S/N K007E01670L →)	9-28
HYDRAULIC CONTROL VALVE ASSEMBLY	
FOUR FUNCTION (→ S/N K007E01669L)	9-38
FOUR FUNCTION (S/N K007E01670L →)	9-89
THREE FUNCTION (→ S/N K007E01669L)	9-32
THREE FUNCTION (S/N K007E01670L →)	9-88
HYDRAULIC CONTROLS	
JOYSTICK	9-62

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
HYDRAULIC FILTER AND GEAR PUMP AND ATTACHING BRAKE HOSES	8-10
HYDRAULIC LEVERS	
FOUR-LEVER CONTROL PANEL - WITH CLAMPING	9-56
FOUR-LEVER CONTROL PANEL - WITHOUT CLAMPING	9-57
THREE-LEVER CONTROL PANEL	9-54
TWO-LEVER CONTROL PANEL	9-52
HYDRAULIC PUMP AND ATTACHING PARTS	
90CC, QSB 4.5 - PAGE 1 OF 2 (→ S/N K007E01669L)	9-66
90CC, QSB 4.5 - PAGE 2 OF 2 (→ S/N K007E01669L)	9-68
90CC, QSB 6.7 - PAGE 1 OF 2	9-70
90CC, QSB 6.7 - PAGE 2 OF 2 (→ S/N K007E02272N)	9-72
90CC, QSB 6.7 - PAGE 2 OF 2 (S/N K007E02273N →)	9-74
HYDRAULIC PUMPS AND ATTACHING PARTS	
105CC, QSB 4.5 - PAGE 1 OF 2 (S/N K007E01670L →)	9-84
105CC, QSB 4.5 - PAGE 2 OF 2 (S/N K007E01670L →)	9-86
120CC, QSB 4.5 - PAGE 1 OF 2	9-76
120CC, QSB 4.5 - PAGE 2 OF 2	9-78
120CC, QSB 6.7 - PAGE 1 OF 2	9-80
120CC, QSB 6.7 - PAGE 2 OF 2	9-82
HYDRAULIC SUPPLY AND RETURN	
FOUR FUNCTION CONTROL VALVE - WITHOUT LIFT ACCUMULATOR	9-4
FOUR FUNCTION CONTROL VALVE - WITH LIFT ACCUMULATOR	9-6
FOUR, FIVE, AND SIX FUNCTION - TWO STAGE	9-12
FOUR, FIVE, AND SIX FUNCTION - THREE STAGE	9-16
THREE FUNCTION CONTROL VALVE - WITHOUT LIFT ACCUMULATOR	9-8
THREE FUNCTION CONTROL VALVE - WITH LIFT ACCUMULATOR	9-10
THREE FUNCTION, DUAL-FUNCTION SIDE-SHIFT FORK POSITIONER - TWO STAGE	9-14
THREE FUNCTION, DUAL-FUNCTION SIDE-SHIFT FORK POSITIONER - THREE STAGE	9-18
HYDRAULIC TANK AND ATTACHING BRAKE HOSES	8-12
HYDRAULIC TANK AND ATTACHING PARTS	9-64
I	
INDICATOR DISPLAY AND CONTROLS	4-12
INNER MAST	
→ S/N K007E01948M	10-8
S/N K007E01949M →	10-10
WITH METRIC CYLINDERS	10-26
INSULATION MATS AND AIR DUCT	
CLOSED CAB WITH AIRCO OR CLIMATE CONTROL	13-16
J	
JOYSTICK ASSEMBLY	9-60
L	
LABELS	
HYDRAULIC CONTROLS	1-122
MAIN - PAGE 1 OF 3	1-124
MAIN - PAGE 2 OF 3	1-126
MAIN - PAGE 3 OF 3	1-128

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
LIFT	
→ S/N K007E01948M	10-12
S/N K007E01949M →	10-16
LIFT CYLINDERS	
METRIC	10-32
LIFTING BRACKETS	
TIER III AND IV INTERIM ENGINE	2-70
LIFTING EYES	13-2
LIGHT SWITCHES	4-177
LIGHTS	
DIRECTIONAL AND MARKER	4-179
FRONT FENDER	4-180
MAST WORK	4-182
REAR WORK	4-181
STROBE, WITH CONDENSER	4-184
STROBE, WITHOUT CONDENSER	4-185
TAIL	4-186
WORK - HALOGEN	4-187
WORK - HID	4-188
LOAD BACKREST	1-14
LOCKOUT LEVER	4-176
M	
MAIN LIFT AND CHAINS	
WITH METRIC CYLINDERS	10-28
MAIN LIFT CYLINDER	
→ S/N K007E01948M	10-20
MAP READING LIGHT	
CLOSED CAB	13-7
MAST ASSEMBLY	
PAGE 1 OF 3	11-4
PAGE 2 OF 3	11-6
PAGE 3 OF 3	11-8
MAST INSTALLATION	10-2
MONOTROL PEDAL ASSEMBLY	3-28
MONOTROL TO FORWARD AND REVERSE LEVER KIT	14-2
O	
OIL COOLER	
TIER III ENGINE	2-72
TIER IV INTERIM ENGINE	2-73
OIL DIPSTICK	5-21
OIL FILTER	
TIER III AND TIER IV INTERIM ENGINE	2-74
OIL LEVEL GAUGE	
TIER III ENGINE	2-75
TIER IV INTERIM ENGINE	2-76
OIL PAN	
TIER III ENGINE	2-78

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
TIER IV INTERIM ENGINE	2-80
OIL PUMP AND MOUNTING	
TIER III AND TIER IV INTERIM ENGINE	2-82
OUTER MAST	
→ S/N K007E01948M	10-4
S/N K007E01949M →	10-6
WITH METRIC CYLINDERS	10-24
OUTPUT FLANGE	5-32
P	
PARK BRAKE	6-12
PARK BRAKE KIT	14-2
PIVOT ARM ASSEMBLY	1-48
PLUG, OIL FILLER	
TIER IV INTERIM ENGINE	2-83
PLUGS, CAB HEATER PLUMBING	
TIER III AND TIER IV INTERIM ENGINE	2-84
PLUGS, TORQUE CONVERTER OIL COOLER	
TIER III ENGINE	2-85
TIER IV INTERIM ENGINE	2-86
POWER TAKE-OFF	5-13
PRESSURE FILTER	5-19
PRESSURE OIL PUMP	5-12
PRESSURE REGULATOR	5-39
R	
RADIATOR ASSEMBLY	
TIER III AND TIER IV INTERIM ENGINES	2-4
RADIO CONSOLE AND ATTACHING PARTS	
CLOSED CAB ONLY	1-134
RAIN TOP	
OPEN CAB	13-20
REAR GEAR HOUSING	
TIER III AND TIER IV INTERIM ENGINE	2-87
REAR GEAR TRAIN MOUNTING	
TIER IV INTERIM ENGINE	2-88
REAR LOCKING CONSOLE	
CLOSED CAB	13-21
RELAYS AND FUSES	
TIER III ENGINE (→ S/N K007E01669L)	4-40
TIER III ENGINE (S/N K007E01670L →)	4-52
TIER IV INTERIM ENGINE (→ S/N K007E01669L)	4-72
TIER IV INTERIM ENGINE (S/N K007E01670L →)	4-84
REMOTE FUEL FILTER	
TIER III ENGINE	3-20
REVERSE CLUTCH ASSEMBLY	5-30
ROCKER LEVERS	
TIER III ENGINE	2-90
TIER IV INTERIM ENGINE	2-92

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
S	
SEAT ASSEMBLY	
AIR SUSPENSION	1-30
DELUXE HEATED	1-44
DELUXE SUSPENSION	1-38
MECHANICAL AND AIR SUSPENSION	1-27
MECHANICAL SUSPENSION	1-34
SUSPENSION - WITH FABRIC COVER (→ 3/2010)	1-16
SUSPENSION - WITH FABRIC COVER (3/2010 →)	1-20
SUSPENSION - WITH VINYL COVER	1-24
SECOND 12V SOCKET OPTION	13-10
SECOND SPEED CLUTCH ASSEMBLY	5-24
SIDE-SHIFT CYLINDER	
TWO STAGE LIMITED FREE-LIFT - DUAL FUNCTION WITH FORK POSITIONER	12-48
TWO STAGE LIMITED FREE-LIFT AND THREE STAGE FULL FREE-LIFT	12-68
STARTER MOTOR AND MOUNTING	
TIER III AND TIER IV INTERIM ENGINE	2-94
STEER AXLE	7-2
STEER COLUMN ASSEMBLY	7-10
ALTERNATE CONFIGURATION	7-12
STEER CYLINDER	
→ PENDING PER ECN 68580-79	7-6
PENDING PER ECN 68580-79 →	7-8
STEER TIRES AND WHEELS	
MICHELIN XZM	7-18
TRELLEBORG - SOLID TIRE	7-20
TRELLEBORG T-900	7-19
TRELLEBORG TR900	7-21
STEERING COLUMN	7-14
STEERING CONTROL UNIT ASSEMBLY	7-22
STEERING HOSES	7-16
SUSPENSION KIT ASSEMBLY	1-40
T	
TELEMETRY KITS	14-2
THERMOSTAT	
TIER III ENGINE	2-95
TIER IV INTERIM ENGINE	2-96
THIRD SPEED CLUTCH ASSEMBLY	5-26
THREE-POINT SEAT BELT	13-22
THROTTLE AND INCHING SENSORS	3-38
THROTTLE PEDAL LINKAGE	3-26
TILT CYLINDER ASSEMBLY	9-22
TILT CYLINDER ATTACHING PARTS	9-20
TILT PLATFORM ASSEMBLY	1-112
TRAINING SEAT	
CLOSED CAB	13-8
TRANSMISSION CONTROL	4-10

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
TRANSMISSION HOUSING	
PAGE 1 OF 2	5-16
PAGE 2 OF 2	5-18
TRANSMISSION MOUNTING AND HOSES	
QSB 4.5 (→ S/N K007E01988M)	5-2
QSB 4.5 (S/N K007E01989M →)	5-6
QSB 6.7 (→ S/N K007E01988M)	5-4
QSB 6.7 (S/N K007E01989M →)	5-8
TRANSMISSION SENSORS	5-20
TURBOCHARGER	
TIER III ENGINE	2-97
TIER IV INTERIM ENGINE	2-98
TURBOCHARGER PLUMBING	
TIER III ENGINE	2-100
TIER IV INTERIM ENGINE	2-102
U	
UNIVERSAL SHAFT	5-33
V	
VALVE COVER	
TIER III ENGINE	2-106
TIER IV INTERIM ENGINE	2-107
VALVE TAPPETS	
TIER III ENGINE	2-108
TIER IV INTERIM ENGINE	2-109
VIBRATION DAMPER	
TIER III ENGINE	2-104
TIER IV INTERIM ENGINE	2-105
W	
WATER INLET	
TIER III ENGINE	2-110
WATER INLET CONNECTION	
TIER IV INTERIM ENGINE	2-111
WATER OUTLET CONNECTION	
TIER III ENGINE	2-112
TIER IV INTERIM ENGINE	2-113
WATER PUMP	
TIER III AND TIER IV INTERIM ENGINE	2-114
WATER PUMP DRIVE	
TIER III ENGINE	2-115
WATER PUMP DRIVE BELT	
TIER IV INTERIM ENGINE	2-116
WINDOW WIPER SYSTEM	
REAR AND ROOF WIPER KITS - AND FRONT WIPER OPTIONS	1-82
WASHER BOTTLE KIT	1-80
WIRE HARNESS	
ARMREST	4-14
BACK-UP ALARM	4-17

TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
BRAKE TEMPERATURE	4-18
CAB LIGHTS	4-20
CAB REAR LIGHTS	4-22
CAB SIDE CONSOLE, TIER III ENGINE - PAGE 1 OF 5 (→ S/N K007E01669L)	4-24
CAB SIDE CONSOLE, TIER III ENGINE - PAGE 2 OF 5 (→ S/N K007E01669L)	4-26
CAB SIDE CONSOLE, TIER III ENGINE - PAGE 3 OF 5 (→ S/N K007E01669L)	4-30
CAB SIDE CONSOLE, TIER III ENGINE - PAGE 4 OF 5 (→ S/N K007E01669L)	4-34
CAB SIDE CONSOLE, TIER III ENGINE - PAGE 5 OF 5 (→ S/N K007E01669L)	4-36
CAB SIDE CONSOLE, TIER III ENGINE - PAGE 1 OF 2 (S/N K007E01670L →)	4-44
CAB SIDE CONSOLE, TIER III ENGINE - PAGE 2 OF 2 (S/N K007E01670L →)	4-48
CAB SIDE CONSOLE, TIER IV INTERIM ENGINE - PAGE 1 OF 5 (→ S/N K007E01669L)	4-56
CAB SIDE CONSOLE, TIER IV INTERIM ENGINE - PAGE 2 OF 5 (→ S/N K007E01669L)	4-58
CAB SIDE CONSOLE, TIER IV INTERIM ENGINE - PAGE 3 OF 5 (→ S/N K007E01669L)	4-62
CAB SIDE CONSOLE, TIER IV INTERIM ENGINE - PAGE 4 OF 5 (→ S/N K007E01669L)	4-66
CAB SIDE CONSOLE, TIER IV INTERIM ENGINE - PAGE 5 OF 5 (→ S/N K007E01669L)	4-68
CAB SIDE CONSOLE, TIER IV INTERIM ENGINE - PAGE 1 OF 2 (S/N K007E01670L →)	4-76
CAB SIDE CONSOLE, TIER IV INTERIM ENGINE - PAGE 2 OF 2 (S/N K007E01670L →)	4-80
CAB TILT	4-88
CAB UNDERFLOOR	4-89
CLOSED CAB	4-143
CLOSED CAB - ALTERNATE CONFIGURATION	4-146
FRONT END	4-149
FRONT LIGHTS	4-151
MAST LIGHT EXTENSION - 5310MM LIFT HEIGHT AND HIGHER	4-152
MAST WORK LIGHT	4-153
OPEN CAB	4-154
REAR WIPER EXTENSION - CLOSED CAB	4-155
SIDE AND INDICATOR LIGHTS	4-156
STEER COLUMN	4-157
TAIL LIGHTS	4-158
TWO STAGE LIMITED FREE-LIFT	4-159
WASH PUMPS - CLOSED CAB	4-160
WIRE HARNESS (CHASSIS)	
TIER III ENGINE - PAGE 1 OF 3 (→ S/N K007E01669L)	4-92
TIER III ENGINE - PAGE 2 OF 3 (→ S/N K007E01669L)	4-96
TIER III ENGINE - PAGE 3 OF 3 (→ S/N K007E01669L)	4-100
TIER III ENGINE - PAGE 1 OF 3 (S/N K007E01670L →)	4-104
TIER III ENGINE - PAGE 2 OF 3 (S/N K007E01670L →)	4-108
TIER III ENGINE - PAGE 3 OF 3 (S/N K007E01670L →)	4-112
TIER IV INTERIM ENGINE - PAGE 1 OF 4 (→ S/N K007E01669L)	4-116
TIER IV INTERIM ENGINE - PAGE 2 OF 4 (→ S/N K007E01669L)	4-120
TIER IV INTERIM ENGINE - PAGE 3 OF 4 (→ S/N K007E01669L)	4-124
TIER IV INTERIM ENGINE - PAGE 4 OF 4 (→ S/N K007E01669L)	4-128
TIER IV INTERIM ENGINE - PAGE 1 OF 3 (S/N K007E01670L →)	4-132
TIER IV INTERIM ENGINE - PAGE 2 OF 3 (S/N K007E01670L →)	4-136
TIER IV INTERIM ENGINE - PAGE 3 OF 3 (S/N K007E01670L →)	4-140
WIRE HARNESS AND SWITCH ASSEMBLY	
MONOTROL PEDAL	4-162
WIRE MESH ROOF PROTECTION	13-12

ABBREVIATIONS QUICK REFERENCE SHEET

Listed below are abbreviations used in parts manuals to denote the following expressions:

TERM	DEFINITION	TERM	DEFINITION
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPA	US Environmental Protection Agency	UL Type GS	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the next page.

HYSTER UNIT CODE D001 NORTH AMERICA 06/2001

TABLE OF CONTENTS

DESCRIPTION	PAGE
AIR INTAKE AND FILTER DIESEL (→ D/B 11/98).....	3-22
AIR INTAKE AND FILTER DIESEL (D/B 11/96 →).....	
AIR INTAKE AND FILTER GASOLINE AND LPG.....	
ALTERNATOR GASOLINE, LPG, AND DIESEL.....	
ALTERNATOR TYPES GS, LPS, AND DS.....	
AUXILIARY FUNCTION TUBE TWO AND THREE STAGE FULL P.....	

SECTION 13 NUMERICAL INDEX

PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.	PART NO.	PAGE NO.	ITEM NO.
142	3-4	19	10-13	25	11-27	29	12-31	12	16719	3-36	5
12445	3-32	19	10-17	6	11-31	25	16751	3-16	16849	3-34	21
	3-34	1	10-27	11	11-32	37	16849	3-36	16849	3-36	20
			11-11	6	8-4	45	16863	3-28	16865	3-6	18
			12-21	11	8-8	34	16865	4-27	16882	9-7	30
			14	13	9-7	9	16882	9-11	10-10	36	
			12	6	9-11	17		10-13	11-7	24	
			3	17	10-9	21		11-9	17		
			9	10	10-9	28					
			23	46	10-9	21					
			27	46	10-9	28					
			26	14	10-13	16					
			28	14	11-7	19					
			50	14	11-7	19					

SECTIONS

- 1
- 2
- 3
- 4
- 5 BRAKE/ACC
- 6
- 7 MAST-TWO STAG
- 8 MAST-THREE STAG
- 9 MAST-TWO STAG
- 10
- 11

TRANSMISSION HOUSING
S/N D001H-2628

KEY:
A: Diesel
B: Gasoline and LPG

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
		Transmission	1	1
	2022547	Transmission	1	1
	2023329	Case	2	2
1	2021670	Bearing Cap	4	4
2	2023418	Washer	1	1
3	296429	Bolt	2	2
4	293947	Cover	2	2
5	2021390	Colter Pin	4	4
6	1371656	O-Ring	1	1
7	2021329	Plug	4	4
8	2021915	Housing	22	22
9	2021675	Pin	39	39
10	2021336	Bolt	1	1
11	287860	Lockwasher	1	1
12	292682	Hydraulic Pump	1	1
13		Figure 5-3	8	8
14	2021345	Gasket	1	1
15	214364	Bolt	1	1
16	296418	Washer	1	1
17	2021388	Temperature Switch	1	1
18	2021389	Breather	9	9
19	2021383	Dipstick	9	9
20	292515	Bolt	2	2
21	136692	Nut	3	3
22	292527	Bolt	3	2
23	292531	Capscrew	4	4
24	292583	Lockwasher	4	4
25	293637	Bolt	1	1
26	296420	Washer	1	1
	996403	Transmission Kit (Includes Item 7)	1	1
	996405	Transmission Kit (Includes Item 14)	1	1

This Parts Manual is divided into 11 major sections which are listed above. Quick be made by placing the right thumb on the tab of the desired section, bending the pages to the corresponding tab.

© Copy Right Date HYSTER COMPANY See Service Manual for service procedures. 5-15