

# **PARTS MANUAL**

---

**H135FT, H155FT  
(L006)**

**CUSTOMER EDITION**

---

***HYSTER***



**SECTIONS**

<b>1</b>	<b>FRAME</b>
<b>2</b>	<b>ENGINE ASSEMBLY - DIESEL</b>
<b>3</b>	<b>ENGINE ASSEMBLY - GM</b>
<b>4</b>	<b>FUEL SYSTEM - DIESEL</b>
<b>5</b>	<b>FUEL SYSTEM-LPG</b>
<b>6</b>	<b>ELECTRICAL SYSTEM</b>
<b>7</b>	<b>TRANSMISSION</b>
<b>8</b>	<b>DRIVE AXLE</b>
<b>9</b>	<b>STEERING SYSTEM</b>
<b>10</b>	<b>BRAKE SYSTEM</b>
<b>11</b>	<b>HYDRAULIC SYSTEM</b>
<b>12</b>	<b>MAST-TWO STAGE LIMITED FREE-LIFT</b>
<b>13</b>	<b>MAST-THREE STAGE FULL FREE-LIFT</b>
<b>14</b>	<b>OPTIONS</b>
<b>15</b>	<b>FIELD CONVERSION KITS</b>
<b>16</b>	<b>NUMERICAL INDEX</b>

This Parts Manual is divided into 16 major sections which are listed above. Quick reference to these sections can be made by placing the right thumb on the tab of the desired section, bending the book back and thumbing the pages to the corresponding tab.



**Thanks very much for your reading,  
Want to get more information,  
Please click here, Then get the complete  
manual**

**JustClickHere** 

**NOTE:**

**If there is no response to click on the link above,  
please download the PDF document first, and then  
click on it.**

**Have any questions please write to me:  
[admin@servicemanualperfect.com](mailto:admin@servicemanualperfect.com)**

**TABLE OF CONTENTS**

DESCRIPTION	PAGE
<b>A</b>	
ACCUMULATOR .....	14-12
ADD ON TELEMETRY KITS .....	15-8
ADD-ON OPTION KITS .....	15-3
AIR CLEANER FLANGE AND THROTTLE VALVE	
KUBOTA 3.8L DIESEL T4 .....	2-88
AIR FILTER	
GM 4.3L LPG .....	5-4
AIR INTAKE	
GM 4.3L LPG .....	5-2
KUBOTA DIESEL .....	4-2
ALTERNATOR	
GM 4.3L LPG .....	3-18
ALTERNATOR AND PULLEY	
KUBOTA DIESEL - 3.6L, 3.8L .....	2-58
KUBOTA DIESEL - SEALED ALTERNATOR .....	2-60
ALTERNATOR ELECTRICAL	
KUBOTA 3.8L DIESEL T4 - TYPE S ALTERNATOR .....	6-26
KUBOTA DIESEL - STANDARD ALTERNATOR .....	6-22
KUBOTA DIESEL - SEALED ALTERNATOR .....	6-24
ARMREST SLIDER ASSEMBLY .....	1-66
ATTACHMENT CARRIAGE	
VALVE AND HOSES .....	14-32
WITH FORK POSITIONER AND BACKREST .....	14-28
ATTACHMENT MOUNTING KITS .....	15-2
AUXILIARY FUNCTION HOSES .....	12-24
AUXILIARY ONE AND TWO SECTIONS	
MANUAL HYDRAULIC CONTROL VALVE - THREE AND FOUR FUNCTION .....	11-38
AUXILIARY ONE SECTION	
ELECTRONIC CONTROL VALVE - THREE AND FOUR FUNCTION .....	11-54
AUXILIARY TUBE EXTENSION KITS .....	15-5
AUXILIARY TUBE EXTENSIONS	
THREE STAGE FULL FREE-LIFT - WITHOUT QUICK DISCONNECT FITTINGS .....	13-28
THREE STAGE FULL FREE-LIFT - MANUAL HYDRAULICS WITH QUICK DISCONNECT FITTINGS	
.....	13-30
THREE STAGE FULL FREE-LIFT - E-HYDRAULICS WITH QUICK DISCONNECT FITTINGS .....	13-32
THREE STAGE FULL FREE LIFT WITH SIDE SHIFT FORK POSITIONER CARRIAGE - MANUAL	
HYDRAULICS WITH QUICK DISCONNECT FITTINGS .....	14-24
TWO STAGE LIMITED FREE-LIFT - WITHOUT QUICK DISCONNECT FITTINGS .....	12-18
TWO STAGE LIMITED FREE-LIFT - MANUAL HYDRAULICS WITH QUICK DISCONNECT FITTINGS	
.....	12-20
TWO STAGE LIMITED FREE-LIFT - E-HYDRAULICS WITH QUICK DISCONNECT FITTINGS .....	12-22
AUXILIARY TWO SECTION	
ELECTRONIC CONTROL VALVE - FOUR FUNCTION .....	11-56
<b>B</b>	
BACKREST	
WITH FORK POSITIONER .....	14-38
BACK-UP ALARM .....	14-8

## TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
BATTERY AND CONTROL CABLE DISCONNECT SWITCH	
KUBOTA DIESEL .....	6-39
BATTERY CABLES	
GM 4.3L LPG .....	6-32
KUBOTA DIESEL 3.6L .....	6-34
KUBOTA DIESEL 3.8L .....	6-36
BEARING CASE COVER	
KUBOTA DIESEL - 3.6L, 3.8L .....	2-22
BRAKE AND INCHING PEDAL CONVERSION .....	15-2
BRAKE COOLING SYSTEM	
SINGLE AND DUAL PEDAL .....	10-8
BRAKE LINKAGE	
DUAL PEDAL - WET BRAKE .....	10-4
SINGLE PEDAL - WET BRAKE .....	10-2
BRAKE MASTER CYLINDER ASSEMBLY .....	10-11
BREATHER AND SEPARATOR PIPES	
KUBOTA 3.8L DIESEL T4 .....	2-87
<b>C</b>	
CAB	
AIR CONDITIONING SYSTEM - SHEET 1 OF 2 .....	1-52
AIR CONDITIONING SYSTEM - SHEET 2 OF 2 .....	1-54
ASSEMBLY - WITHOUT AIR CONDITIONING .....	1-22
ASSEMBLY - WITH AIR CONDITIONING .....	1-23
ATTACHING PARTS .....	1-20
HEATER - WITHOUT AIR CONDITIONING .....	1-42
HEATER - WITH AIR CONDITIONING .....	1-44
HEATER AND HOSES - GM 4.3L LPG .....	1-32
HEATER CONTROL - WITH AIR CONDITIONING .....	1-47
HEATER CONTROL - WITHOUT AIR CONDITIONING .....	1-48
LEFT HAND DOOR ASSEMBLY .....	1-28
MAIN ASSEMBLY .....	1-24
RIGHT HAND DOOR ASSEMBLY .....	1-26
WINDOW WIPER SYSTEM .....	1-30
CAMSHAFT AND IDLE GEAR SHAFT	
KUBOTA DIESEL - 3.6L .....	2-42
KUBOTA DIESEL - 3.8L .....	2-43
CAMSHAFT AND OIL PAN	
GM 4.3L LPG .....	3-30
CARRIAGE	
THREE STAGE FULL FREE-LIFT - HOOK TYPE .....	13-20
THREE STAGE FULL FREE-LIFT - PIN TYPE .....	13-22
TWO STAGE LIMITED FREE-LIFT - HOOK TYPE .....	12-12
TWO STAGE LIMITED FREE-LIFT - PIN TYPE .....	12-14
CARRIER ASSEMBLY .....	14-36
CHARGE AIR COOLER GROUP	
KUBOTA DIESEL 3.8L T4F .....	2-12
CHARGE PUMP .....	7-34
CONDENSER ASSEMBLY .....	1-50

**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
CONTROL VALVE	
THREE SPEED TRANSMISSION .....	7-30
TWO SPEED TRANSMISSION .....	7-32
CONTROL VALVE LOCKOUT GROUP	
MANUAL CONTROL VALVE .....	11-28
COOLANT HOSES	
GM 4.3L LPG WITH CAB .....	3-20
COOLING SYSTEM	
GM 4.3L LPG .....	3-2
KUBOTA DIESEL - 3.8L .....	2-8
KUBOTA DIESEL 3.6L .....	2-4
COUNTERWEIGHTS AND REAR FENDERS .....	1-10
COWL ELECTRICAL	
ELECTRO-HYDRAULIC .....	6-6
MANUAL HYDRAULIC .....	6-4
COWL MOUNT .....	1-6
CYLINDER BLOCK	
GM 4.3L LPG .....	3-28
KUBOTA DIESEL 3.6L .....	2-16
KUBOTA DIESEL 3.8L .....	2-18
CYLINDER HEAD	
GM 4.3L LPG .....	3-26
KUBOTA DIESEL - 3.6L .....	2-23
KUBOTA DIESEL - 3.8L .....	2-24
CYLINDER HEAD COVER	
KUBOTA DIESEL - 3.6L .....	2-34
KUBOTA DIESEL - 3.8L .....	2-36
<b>D</b>	
DIESEL EXHAUST FLUID SYSTEM GROUP	
KUBOTA DIESEL 3.8L T4F .....	2-98
DIESEL EXHAUST FLUID TANK ASSEMBLY	
KUBOTA DIESEL 3.8L T4F .....	2-101
DIESEL PARTICULATE FILTER	
ASSEMBLY - KUBOTA 3.8L DIESEL .....	2-94
MUFFLER ASSEMBLY - KUBOTA 3.8L DIESEL .....	2-96
DIFFERENTIAL .....	8-6
DIPSTICK	
KUBOTA DIESEL - 3.6L, 3.8L .....	2-20
DISPLAY	
DIESEL PARTICULATE FILTER .....	6-40
DISTRIBUTOR AND COIL	
GM 4.3L LPG .....	3-23
DISTRIBUTOR ASSEMBLY	
GM 4.3L LPG .....	6-14
DRIVE AXLE AND ATTACHING PARTS	
WET BRAKE .....	8-2
DRIVE AXLE HOUSING AND HUB .....	8-4
DRIVE TIRE AND WHEEL .....	8-10



**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
DUAL MIRRORS	
WITH CAB .....	14-10
WITH OVERHEAD GUARD .....	14-11
<b>E</b>	
EGR COOLER	
KUBOTA DIESEL - 3.8L .....	2-83
EGR VALVE	
KUBOTA DIESEL - 3.8L .....	2-82
E-HYDRAULIC CONTROL CONVERSION KITS .....	15-4
ELECTRICAL SYSTEM	
RIGHT HAND CHASSIS .....	6-30
ELECTRO HYDRAULIC POPPET VALVE	
ELECTRONIC CONTROL VALVE - THREE AND FOUR FUNCTION .....	11-52
ENGINE CONTROL MODULE AND SENSORS	
GM 4.3L LPG .....	6-28
ENGINE ELECTRICAL SYSTEM	
GM 4.3L LPG .....	6-8
KUBOTA 3.6L DIESEL .....	6-16
KUBOTA 3.8L DIESEL .....	6-18
ENGINE MOUNTING	
GM 4.3L LPG .....	3-8
ENGINE MOUNTING AND TORQUE CONVERTER	
KUBOTA DIESEL .....	2-14
E-THROTTLE LINKAGE	
KUBOTA 3.6L DIESEL .....	4-18
EXHAUST MANIFOLD	
KUBOTA DIESEL - 3.6L .....	2-71
KUBOTA DIESEL - 3.8L .....	2-72
EXHAUST MANIFOLDS	
GM 4.3L LPG .....	3-21
EXHAUST SYSTEM	
GM 4.3L LPG .....	3-6
<b>F</b>	
FAN DRIVE AND ALTERNATOR MOUNTING	
GM 4.3L LPG .....	3-14
FAN MOUNT ASSEMBLY	
GM 4.3L LPG .....	3-16
FAN PULLEY	
KUBOTA DIESEL - 3.6L, 3.8L .....	2-68
FIRE EXTINGUISHER	
WITH CAB .....	14-4
WITH OVERHEAD GUARD .....	14-6
FLOORPLATES, STEPS AND COVERS .....	1-12
FLYWHEEL AND HOUSING	
GM 4.3L LPG .....	3-12
KUBOTA DIESEL - 3.6L, 3.8L .....	2-45
FORK POSITIONER ASSEMBLY .....	14-34

**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
<b>FORKS</b>	
PIN TYPE .....	1-84
STANDARD TAPER - CLASS IV .....	1-82
<b>FORKS WITH LATCH</b>	
STANDARD TAPER - OPTIONAL EQUIPMENT .....	1-83
<b>FORWARD CLUTCH HIGH AND OUTPUT SHAFT</b>	
THREE SPEED TRANSMISSION - FWD2 .....	7-16
<b>FORWARD CLUTCH LOW</b>	
TWO SPEED TRANSMISSION .....	7-24
<b>FORWARD CLUTCH LOW AND SECOND SHAFT</b>	
THREE SPEED TRANSMISSION - FWD1, RANGE2 .....	7-14
<b>FREE-LIFT</b>	
THREE STAGE FULL FREE-LIFT .....	13-16
<b>FREE-LIFT CYLINDER</b>	
THREE STAGE FULL FREE-LIFT .....	13-18
<b>FUEL CAP</b>	
DIESEL .....	4-20
<b>FUEL FILTER</b>	
KUBOTA DIESEL - 3.6L .....	2-47
<b>FUEL INJECTION AND GLOW PLUG</b>	
KUBOTA DIESEL - 3.6L .....	2-63
<b>FUEL PIPE</b>	
KUBOTA 3.8L DIESEL T4 .....	2-54
<b>FUEL PUMP</b>	
KUBOTA DIESEL - 3.6L .....	2-46
<b>FUEL RAIL</b>	
KUBOTA DIESEL - 3.8L .....	2-56
<b>FUEL SYSTEM</b>	
GM 4.3L LPG .....	5-6
KUBOTA 3.6L DIESEL .....	4-4
KUBOTA 3.8L DIESEL .....	4-6
KUBOTA 3.8L DIESEL T4F .....	4-8
<b>FULL SUSPENSION SEAT</b>	
MANUAL AND ELECTRO-HYDRAULICS - SWIVEL AND NON SWIVEL - SHEET 1 OF 4 .....	1-58
RECLINER AND DAMPER KITS - SHEET 2 OF 4 .....	1-60
SERVICE KITS FOR NON SWIVEL AND SWIVEL - SHEET 3 OF 4 .....	1-62
<b>FUSE BOX</b>	
GM 4.3L LPG .....	6-41
<b>G</b>	
<b>GEAR CASE</b>	
KUBOTA DIESEL - 3.6L .....	2-38
KUBOTA DIESEL - 3.8L .....	2-40
<b>GEAR PUMP ASSEMBLY</b>	
KUBOTA 3.6L DIESEL .....	11-14
KUBOTA 3.8L DIESEL AND GM 4.3L LPG .....	11-12
<b>GM LPG REGULATOR DRAIN KIT</b> .....	14-14
<b>GOVERNOR</b>	
KUBOTA DIESEL - 3.6L .....	2-50

## TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
GOVERNOR ACTUATOR AND PLUG	
KUBOTA DIESEL - 3.6L .....	2-52
<b>H</b>	
HAND LEVERS	
FOUR FUNCTION - WITH DETENTED LEVERS .....	11-24
FOUR FUNCTION - WITHOUT DETENTED LEVERS .....	11-26
THREE FUNCTION - WITH DETENTED LEVERS .....	11-20
THREE FUNCTION - WITHOUT DETENTED LEVERS .....	11-22
HANG-ON SIDE-SHIFT CARRIAGE AND HOSES	
WITH BACKREST AND FORK POSITIONER .....	14-26
WITHOUT BACKREST AND FORK POSITIONER .....	14-20
HEADER HOSE CONVERSION KITS	
HEADER HOSES	
THREE STAGE FULL FREE-LIFT .....	13-24
TWO STAGE LIMITED FREE-LIFT .....	12-16
HEATER AND HOSES WITH SCR	
KUBOTA DIESEL - WITH CAB - SHEET 1 OF 2 .....	1-36
KUBOTA DIESEL - WITH CAB - SHEET 2 OF 2 .....	1-38
KUBOTA DIESEL - WITH OHG .....	1-40
HEATER AND HOSES WITHOUT SCR	
KUBOTA DIESEL - WITH CAB .....	1-34
HOIST HOSE AND ATTACHING PARTS .....	11-60
HOOD ASSEMBLY .....	1-8
HYDRAULIC CONTROL CONVERSIONS	
HYDRAULIC CONTROL VALVE AND STEERING UNIT ASSEMBLY	
ELECTRO-HYDRAULIC - THREE FUNCTION .....	11-42
ELECTRO-HYDRAULIC - FOUR FUNCTION .....	11-44
MANUAL CONTROL VALVE - THREE FUNCTION .....	11-30
MANUAL CONTROL VALVE - FOUR FUNCTION .....	11-32
HYDRAULIC FILTER .....	11-10
HYDRAULIC HOSES	
STEERING .....	11-18
HYDRAULIC SUPPLY AND RETURN	
ELECTRO-HYDRAULICS .....	11-6
MANUAL HYDRAULICS .....	11-2
<b>I</b>	
INJECTION PIPE	
KUBOTA DIESEL - 3.8L .....	2-55
INJECTION PUMP	
KUBOTA DIESEL - 3.6L .....	2-49
INJECTION PUMP HOUSING	
KUBOTA DIESEL - 3.6L .....	2-48
INJECTOR HARNESS	
KUBOTA DIESEL - 3.8L .....	2-84
INLET AND EXHAUST VALVES	
KUBOTA DIESEL - 3.8L .....	2-28

**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
INLET MANIFOLD	
KUBOTA DIESEL - 3.6L .....	2-69
KUBOTA DIESEL - 3.8L .....	2-70
INNER MAST	
THREE STAGE FULL FREE-LIFT .....	13-6
TWO STAGE LIMITED FREE-LIFT .....	12-4
INSTRUMENT CLUSTER .....	6-42
INTERIOR PANELS AND COVERS	
WITH CAB .....	1-18
WITH OVERHEAD GUARD .....	1-16
INTERMEDIATE MAST	
THREE STAGE FULL FREE-LIFT .....	13-4
<b>L</b>	
LABELS	
EXTERIOR .....	1-74
HYDRAULIC CONTROL LABELS - CONTROL LEVER .....	1-78
INTERIOR .....	1-76
MINI LEVER MODULES - SINGLE FUNCTION .....	1-80
LIFT AND LOWER SECTION	
ELECTRONIC CONTROL VALVE - THREE AND FOUR FUNCTION .....	11-48
LIFTING EYE .....	14-16
LIFTING EYE BRACKETS	
GM 4.3L LPG .....	3-10
LIGHT CONVERSION KITS .....	15-7
LIGHTS	
BRAKE, TAIL, BACKUP, SIDE, TURN SIGNALS, WORK, STROBE - WITH CAB .....	6-44
BRAKE, TAIL, BACKUP, SIDE, TURN SIGNALS, WORK, STROBE - WITH OVERHEAD GUARD .....	6-46
LOAD BACKREST EXTENSION .....	1-81
LOAD WEIGH ELECTRICAL .....	6-48
LPG CONVERTER	
GM 4.3L LPG .....	5-12
LPG REGULATOR AND MIXER	
GM 4.3L .....	5-10
<b>M</b>	
MAIN LIFT	
THREE STAGE FULL FREE-LIFT .....	13-8
TWO STAGE LIMITED FREE-LIFT .....	12-6
MAIN LIFT CYLINDER	
TWO STAGE LIMITED FREE-LIFT .....	12-10
MAIN LIFT CYLINDERS	
THREE STAGE FULL FREE-LIFT .....	13-12
MAST ELECTRICAL .....	6-50
MID INLET SECTION	
ELECTRO-HYDRAULIC CONTROL VALVE - THREE AND FOUR FUNCTION .....	11-46
MID-INLET SECTION	
MANUAL HYDRAULIC CONTROL VALVE - THREE AND FOUR FUNCTION .....	11-34

## TABLE OF CONTENTS (continued)

DESCRIPTION	PAGE
MINI-LEVER CONTROLS	
WITH ARMREST - THREE FUNCTION .....	6-52
WITH ARMREST - FOUR FUNCTION .....	6-54
MISCELLANEOUS CONVERSION KITS .....	15-4
<b>N</b>	
NON SUSPENSION SEAT	
WITHOUT ELECTRONIC CONTROLS .....	1-56
<b>O</b>	
OIL COOLER	
KUBOTA DIESEL - 3.6L .....	2-77
KUBOTA DIESEL - 3.8L .....	2-78
OIL PAN	
KUBOTA DIESEL - 3.6L, 3.8L .....	2-21
OIL PUMP	
GM 4.3L LPG .....	3-34
OIL SEPARATOR	
KUBOTA 3.8L DIESEL T4 .....	2-86
OPERATOR COMPARTMENT PLATFORM .....	1-4
OUTER MAST	
THREE STAGE FULL FREE-LIFT .....	13-2
TWO STAGE LIMITED FREE-LIFT .....	12-2
OUTLET SECTION	
ELECTRONIC CONTROL VALVE - THREE AND FOUR FUNCTION WITH ANTI-STALL SOLENOID ....	11-58
MANUAL HYDRAULIC CONTROL VALVE - THREE AND FOUR FUNCTION .....	11-40
OUTPUT SHAFT	
TWO SPEED TRANSMISSION .....	7-26
OVERHEAD EXHAUST SYSTEM	
KUBOTA 3.6L DIESEL T3 .....	2-90
KUBOTA 3.8L DIESEL T4 - WITH SCR .....	2-92
OVERHEAD GUARD .....	1-14
<b>P</b>	
PARK BRAKE ASSEMBLY .....	10-12
PISTON AND CRANKSHAFT	
KUBOTA DIESEL - 3.6L .....	2-30
KUBOTA DIESEL - 3.8L .....	2-32
POWER DISTRIBUTION MODULE .....	6-56
PUMP DRIVE .....	7-36
<b>R</b>	
RADIATOR ASSEMBLY	
GM 4.3L LPG .....	3-4
KUBOTA 3.6L DIESEL .....	2-6
KUBOTA 3.8L DIESEL T4 .....	2-10
RAIN TOP .....	14-18
REMOTE KEY SWITCH .....	6-58
REMOTE OIL FILTER, HOSES, AND ATTACHING PARTS	
KUBOTA DIESEL 3.8L T4F .....	2-80

**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
REPLACEMENT KITS .....	15-8
REVERSE CLUTCH	
TWO SPEED TRANSMISSION .....	7-28
REVERSE CLUTCH AND FIRST SHAFT	
THREE SPEED TRANSMISSION - REV1, RANGE 1 .....	7-18
ROCKER ARM ASSEMBLY	
WITH INLET AND EXHAUST VALVES - KUBOTA DIESEL 3.6L .....	2-26
ROCKER ARM SHAFT	
KUBOTA DIESEL - 3.8L .....	2-29
<b>S</b>	
SCR MUFFLER AND ATTACHING PARTS	
KUBOTA DIESEL 3.8L T4F .....	2-104
SCR MUFFLER ASSEMBLY	
KUBOTA DIESEL 3.8L T4F .....	2-102
SEAT ATTACHING PARTS	
NOT INCLUDED WITH SEAT - SHEET 4 OF 4 .....	1-64
SEAT BELT SWITCH ADAPTER .....	6-59
SEAT CONVERSION KITS .....	15-3
SEAT PAN AND COVERS	
WITH CAB .....	1-70
WITH OVERHEAD GUARD .....	1-72
SENSORS	
3.8L KUBOTA DIESEL .....	2-85
SIDE-SHIFT ASSEMBLY	
WITHOUT FORK POSITIONER .....	14-22
SIDE-SHIFT CYLINDER	
WITH AND WITHOUT FORK POSITIONER .....	14-30
SINGLE AND DUAL LPG TANK BRACKETS .....	5-18
SOUND ABATEMENT .....	1-68
SPARK PLUGS AND WIRES	
GM 4.3L LPG .....	6-10
STARTER	
GM 4.3L LPG .....	6-12
KUBOTA DIESEL - 3.6L, 3.8L .....	2-62
STEER AXLE .....	9-8
STEER CYLINDER .....	9-11
STEER TIRE AND WHEEL .....	9-14
CONTINENTAL .....	9-15
STEERING COLUMN ASSEMBLY	
DIESEL .....	9-4
LPG .....	9-6
STEERING CONTROL UNIT .....	9-12
STEERING GEAR PUMP .....	11-16
STEERING WHEEL AND COLUMN	
DIESEL .....	9-2
LPG .....	9-3
STROBE LIGHT	
LED .....	14-2

**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
SUPPLY PUMP	
KUBOTA DIESEL - 3.8L .....	2-53
<b>T</b>	
THERMOSTAT AND WATER OUTLET HOUSING	
GM 4.3L LPG .....	3-22
THROTTLE BODY	
GM 4.3L LPG .....	5-8
THROTTLE CABLE ASSEMBLY	
3.6L KUBOTA DIESEL .....	4-16
THROTTLE PEDAL ASSEMBLY AND ATTACHING PARTS	
MONOTROL PEDAL - DIESEL .....	4-12
MONOTROL PEDAL - LPG .....	5-14
STANDARD PEDAL - DIESEL .....	4-14
STANDARD PEDAL - LPG .....	5-16
TILT CYLINDER AND MAST INSTALLATION .....	11-62
TILT CYLINDERS .....	11-64
TILT HYDRAULICS .....	11-66
TILT SECTION	
ELECTRONIC CONTROL VALVE - THREE AND FOUR FUNCTION .....	11-50
MANUAL HYDRAULIC CONTROL VALVE - THREE AND FOUR FUNCTION .....	11-36
TORQUE CONVERTER	
GM 4.3L LPG .....	7-8
KUBOTA DIESEL .....	7-6
TRANSMISSION ASSEMBLY	
THREE SPEED - SHEET 1 OF 2 .....	7-10
THREE SPEED - SHEET 2 OF 2 .....	7-12
TWO SPEED - SHEET 1 OF 2 .....	7-20
TWO SPEED - SHEET 2 OF 2 .....	7-22
TRANSMISSION COOLING .....	7-2
TRANSMISSION ELECTRICAL SYSTEM	
THREE SPEED TRANSMISSION .....	6-60
TWO SPEED TRANSMISSION .....	6-62
TRANSMISSION MOUNT .....	7-4
TURBOCHARGER	
KUBOTA DIESEL - 3.6L .....	2-73
KUBOTA DIESEL - 3.8L .....	2-74
TURBOCHARGER OIL PLUMBING	
KUBOTA DIESEL - 3.6L .....	2-75
KUBOTA DIESEL - 3.8L .....	2-76
<b>V</b>	
VALVE COVER AND INTAKE MANIFOLD	
GM 4.3L LPG .....	3-24
VENT LINES .....	11-68
<b>W</b>	
WATER PUMP	
KUBOTA DIESEL - 3.6L .....	2-66
KUBOTA DIESEL - 3.8L .....	2-67

**TABLE OF CONTENTS (continued)**

<b>DESCRIPTION</b>	<b>PAGE</b>
WATER PUMP FLANGE AND THERMOSTAT	
KUBOTA DIESEL - 3.6L .....	2-64
KUBOTA DIESEL - 3.8L .....	2-65
WET BRAKE ASSEMBLY .....	8-8
WIRE HARNESS	
COWL - MANUAL HYDRAULICS WITH MONOTROL PEDAL .....	6-64
COWL - MANUAL HYDRAULICS WITH FORWARD/REVERSE .....	6-68
COWL - ELECTRO-HYDRAULICS WITH MONOTROL PEDAL .....	6-72
COWL - ELECTRO-HYDRAULICS WITH FORWARD/REVERSE .....	6-76
DPF DISPLAY .....	6-79
ELECTRONIC CONTROL VALVE - THREE FUNCTION .....	6-80
ELECTRONIC CONTROL VALVE - FOUR FUNCTION .....	6-82
ENGINE - KUBOTA DIESEL 3.6L .....	6-88
ENGINE (SHEET 1 OF 2) - KUBOTA DIESEL 3.8L T4F .....	6-92
ENGINE (SHEET 2 OF 2) - KUBOTA DIESEL 3.8L T4F .....	6-98
IMPACT SENSOR .....	6-106
LIGHTS WITH OVERHEAD GUARD .....	6-108
REAR .....	6-110
RH CHASSIS - GM 4.3L LPG AND KUBOTA 3.8L DIESEL .....	6-114
RH CHASSIS - GM 4.3L AND KUBOTA 3.8L WITH SEAT BELT SEQUENCE MODULE .....	6-120
RH CHASSIS - KUBOTA 3.6L DIESEL .....	6-126
RH CHASSIS - KUBOTA 3.6L DIESEL WITH SEAT BELT SEQUENCE MODULE .....	6-132
SEALED ALTERNATOR - SAFETY - KUBOTA DIESEL 3.8L T4F .....	6-104
SEALED ALTERNATOR - STANDARD - KUBOTA DIESEL .....	6-101
TRANSMISSION-THREE SPEED - GM 4.3L LPG AND KUBOTA DIESEL .....	6-142
TRANSMISSION-THREE SPEED - WITH E-THROTTLE .....	6-146
TRANSMISSION-TWO SPEED WITH TISS SENSOR - GM 4.3L LPG AND KUBOTA DIESEL .....	6-138
TRANSMISSION-TWO SPEED WITH TISS SENSOR - KUBOTA 3.6L DIESEL .....	6-140
WIRE HARNESS (AIR CONDITIONING) .....	6-112
WIRE HARNESS (ENGINE)	
GM 4.3L LPG - PSI OPTION .....	6-84



**ABBREVIATIONS QUICK REFERENCE SHEET**

Listed below are abbreviations used in parts manuals to denote the following expressions:

<b>TERM</b>	<b>DEFINITION</b>	<b>TERM</b>	<b>DEFINITION</b>
Amp	Amperes	FRE	Freezer Environment
AR	As Required	in.	inches
BDI	Battery Discharge Indicators	LPG	Liquefied Petroleum Gas
BWI	Brush Wear Indicator	MAP	Manifold Absolute Pressure
CE	Communicator End	mm	millimeters
CRE	Corrosive Environment	MSTS	Microprocessor Spark Timing System
D/B	Date Break	NPT	National Pipe Threads
dbA	Decibel "A" Scale	O/S	Oversize
DE	Drive End	PTO	Power Take Off
ECH	Empty Container Handler	RPM	Revolutions per Minute
ECH-3	Empty Container Handler - 3 High Stacking	S/N	Serial Number
ECH-4	Empty Container Handler - 4 High Stacking	TMM	Truck Management Module
ECH-5	Empty Container Handler - 5 High Stacking	UL Type D	Diesel-Powered Safety Rating
ECH-6	Empty Container Handler - 6 High Stacking	UL Type DS	Diesel-Powered Safety Rating
ECH-7	Empty Container Handler - 7 High Stacking	UL Type E	Battery-Powered Safety Rating
ECM	Electronic Control Module	UL Type EE	Battery-Powered Safety Rating
ECN	Engineering Change Notice	UL Type ES	Battery-Powered Safety Rating
EEPROM	Electrically Erasable Programmable Read Only Memory	UL Type G	Gasoline-Powered Safety Rating
EPA	US Environmental Protection Agency	UL Type GS	Gasoline-Powered Safety Rating
EPROM	Electrically Programmable Read Only Memory	UL Type LP	Gas-Powered Safety Rating
		UL Type LPS	LP Gas-Powered Safety Rating
		U/S	Undersize
		UL	Underwriters Laboratory
		V	Volts

### HOW TO USE THE ILLUSTRATED PARTS MANUAL

This parts manual describes and illustrates assemblies, subassemblies, and detail parts needed for service replacement.

The different constructions are indicated by keys and footnotes. The callouts correspond to descriptions found on the next page.

**HYSTER** UNIT CODE D001 NORTH AMERICA 06/2001

**TABLE OF CONTENTS**

DESCRIPTION	PAGE
AIR INTAKE AND FILTER DIESEL (→ D/B 11/98).....	3-22
AIR INTAKE AND FILTER DIESEL (D/B 11/96 →).....	
AIR INTAKE AND FILTER GASOLINE AND LPG.....	
ALTERNATOR GASOLINE, LPG, AND DIESEL.....	
ALTERNATOR TYPES GS, LPS, AND DS.....	
AUXILIARY FUNCTION TUBE TWO AND THREE STAGE FULL P.....	

**SECTION 13 NUMERICAL INDEX**

PART NO.	PAGE	ITEM NO.	PART NO.	PAGE	ITEM NO.	PART NO.	PAGE	ITEM NO.	PART NO.	PAGE	ITEM NO.
142	3-4	19	10-13	25	11-27	29	12-31	12	16719	3-36	5
12445	3-32	19	10-17	6	11-31	25	16751	3-16	16849	3-34	21
	3-34	1	10-27	11	8-4	29	16849	3-36	16849	3-36	20
			11-11	6	8-4	45	16863	3-28	16863	3-28	17
			14-21	11	8-8	34	16865	3-6	16865	3-6	18
			14	13	9-7	9	16882	4-27	16882	4-27	41
			12	6	9-7	19		9-7		9-7	30
			3	17	9-11	9		9-11		9-11	27
			9	10	9-11	17		10-10		10-10	36
			23	46	10-9	21		10-13		10-13	32
			27	46	10-9	28		11-7		11-7	24
			26	14	10-13	16		11-9		11-9	17
			28	14	11-7	19					
			50	14							

**SECTIONS**

- 1 FRAME
- 2 ELECTRICAL SYSTEM
- 3
- 4
- 5 BRAKE/ACC
- 6
- 7 MAST-TWO STAG
- 8 MAST-THREE STAG
- 9 MAST-TWO STAG
- 10
- 11

**TRANSMISSION HOUSING**  
S/N D001H-2628

**KEY:**  
A: Diesel  
B: Gasoline and LPG

ITEM	PART NO.	DESCRIPTION	QTY	
			A	B
		Transmission	1	1
	2022547	Transmission	1	1
	2023329	Case	2	2
1	2021670	Bearing Cap	4	4
2	2023418	Washer	1	1
3	296429	Bolt	2	2
4	293947	Cover	2	2
5	2021390	Colter Pin	4	4
6	1371656	O-Ring	1	1
7	2021329	Plug	4	4
8	2021915	Housing	22	22
9	2021675	Pin	39	39
10	2021336	Bolt	1	1
11	287860	Lockwasher	1	1
12	292682	Hydraulic Pump	1	1
13		Figure 5-3	8	8
14	2021345	Gasket	1	1
15	214364	Bolt	1	1
16	296418	Washer	1	1
17	2021388	Temperature Switch	1	1
18	2021389	Breather	9	9
19	2021383	Dipstick	9	9
20	292515	Bolt	2	2
21	136692	Nut	3	3
22	292527	Bolt	3	2
23	292531	Capscrew	4	4
24	292583	Lockwasher	4	4
25	293637	Bolt	1	1
26	296420	Washer	1	1
	996403	Transmission Kit (Includes Item 7)	1	1
	996405	Transmission Kit (Includes Item 14)	1	1

This Parts Manual is divided into 11 major sections which are listed above. Quick be made by placing the right thumb on the tab of the desired section, bending the pages to the corresponding tab.

© Copy Right Date HYSTER COMPANY See Service Manual for service procedures. 5-15

## HOW TO FIND THE DESIRED PART NUMBER

### WHEN THE PART NUMBER AND THE NEXT HIGHER ASSEMBLY IS NOT KNOWN:

1. Determine the function and application of the part required. Turn to the Sections Page. Choose the general area of reference most likely to include the part.
2. Turn to the section you chose. Use the Section Table of Contents to determine the assembly which would normally contain the part required. Then locate the part on the assembly breakdown page.

### WHEN THE PART NUMBER IS NOT KNOWN AND THE NEXT HIGHER ASSEMBLY IS KNOWN:

3. Determine the assembly the required part is used on. Turn to the Table of Contents (Page i).
4. Locate the assembly the required part is used on and turn to the page indicated for that assembly. Then locate the part on the assembly breakdown page.

### WHEN THE PART NUMBER IS KNOWN:

5. Use the Numerical Index (Page 16-1) to find the part number. Turn to the page listed and locate the part as indicated by the item number.

### GENERAL:

The assembly breakdowns include part numbers, descriptions, quantities required, keys and footnotes to help in selecting correct parts.

6. Parts Supersession Information. Part numbers that have this history will be displayed in the parts list in the order that they were superseded (from oldest to newest). The superseded part numbers will be shown with a line through them.

Five periods in the PART NO. column (. . . . .) indicate that the part is either *Not Serviced Separately* or there is a reference to another figure. A figure reference is denoted by a pointing hand followed by a figure number in the DESCRIPTION column (☞ Figure 10)

7. Keys are used to show two or more similar assemblies, RH and LH assembly parts, etc. Select the appropriate key, "A", "B", "C", "D", or "E" and the corresponding quantity column to find the required parts. Two periods in the QTY column (..) indicate that the part is not used for that assembly.
8. Indented descriptions under the DESCRIPTION column are used to indicate assemblies and

subparts of assemblies. In the example on the previous page, *BEARING CAP* (Item 2) is a subpart of the major assembly *CASE*.

9. Quantities shown are for one assembly. The quantities of the subpart *BEARING CAP* are indicated as two and two. This means two per *CASE* assembly.
10. Serial number breaks identify the most current parts information and are shown as follows:
  - **S/N D001H2628**  
Indicates last serial number affected.
  - S/N D001H2629** →  
Indicates the first serial number affected.
  - S/N D001H1553** ↔ **S/N D001H3291**  
Indicates a range of serial numbers affected.

ECN numbers for pending serial numbers are shown to allow for the inclusion of the most current parts information and are identified as follows:

- **S/N Pending Per ECN 63243**  
Indicates a pending serial number for last unit affected.
- S/N Pending Per ECN 63243** →  
Indicates a pending serial number for first unit affected.

Date breaks are used to indicate when a change occurred but a subsequent serial number break was not recorded. This is an arbitrary date usually based on the ECN release and are identified as follows:


- **D/B 3/00**  
Indicates that a change occurred sometime within that month for the item affected.
- D/B 3/00** →  
Indicates that a change occurred sometime within that month for the item affected.
- D/B 3/00** ↔ **D/B 4/00**  
Indicates a range of production dates of the item affected.

Contact your local dealer for Hyster lift trucks for serial number information for items with a ECN or a date break.

### ORDERING PARTS:


When ordering replacement parts, give the unit serial number, part number, name of part and quantity required.

For any further information on parts, service, or ordering, consult your local dealer for Hyster lift trucks.

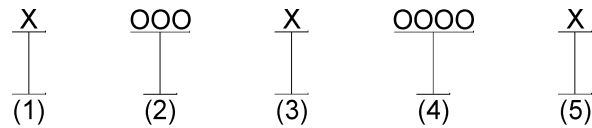**IDENTIFICATION OF TRUCK SERIAL NUMBERS**

- (1) and (2) The first letter and three numbers indicate the truck unit code.
- (3) The second letter indicates the plant of manufacture.
- (4) The four or five digit number indicates the production sequence number of the truck.
- (5) The final letter indicates the year of manufacture starting with "A" in 1957, 1980, and 2003.  
The letters "I", "O", and "Q" will not be used.

For pending serial numbers contact your local dealer for Hyster lift trucks.

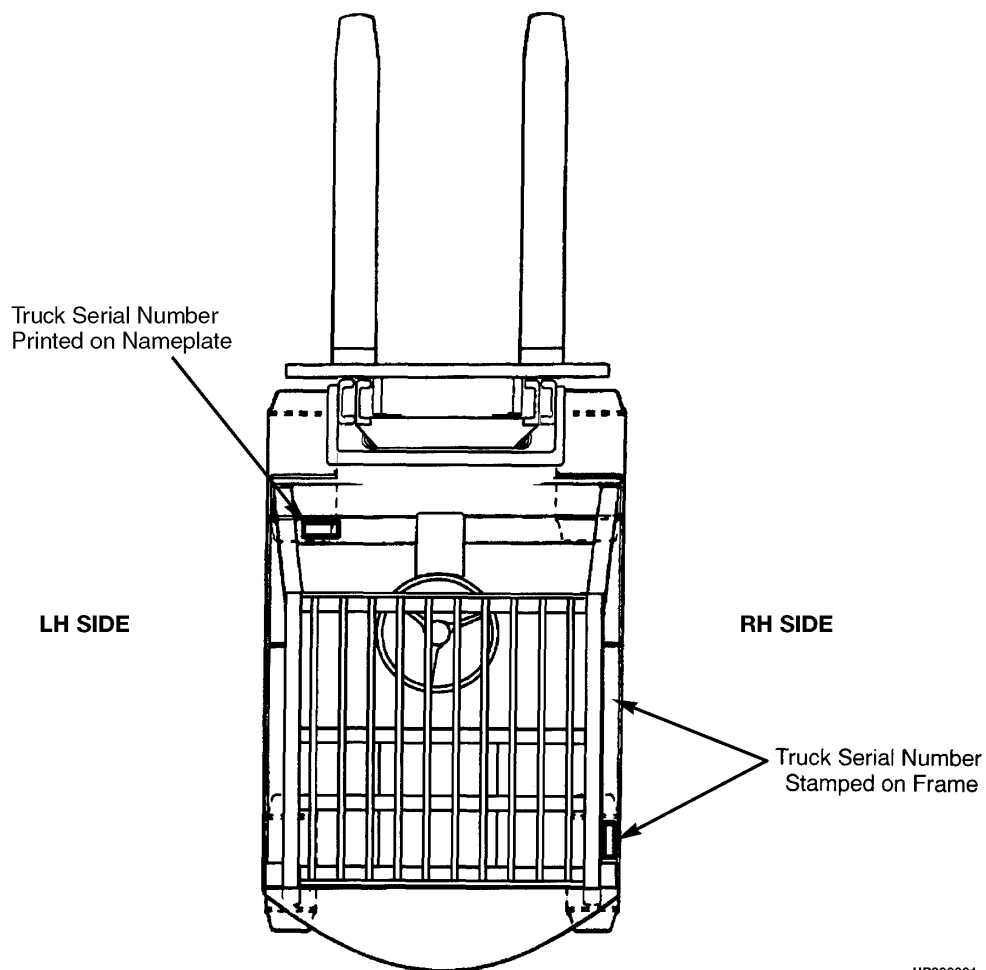

HP990001

Parts referred to in this book as right or left hand parts are in accordance with the illustration above.